


## SUPER MULTIPLE JUNCTION (SMJ)

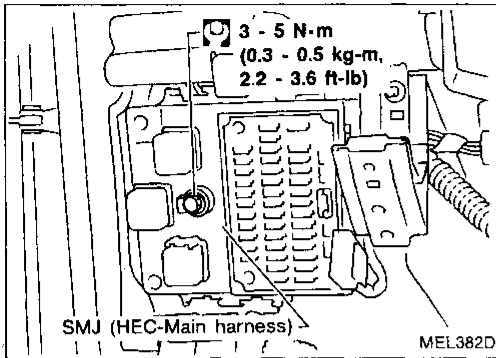


### INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m  
(0.3 - 0.5 kg-m, 2.2 - 3.6 ft-lb)

### CAUTION:




Do not overtighten bolts, otherwise, they may be damaged.

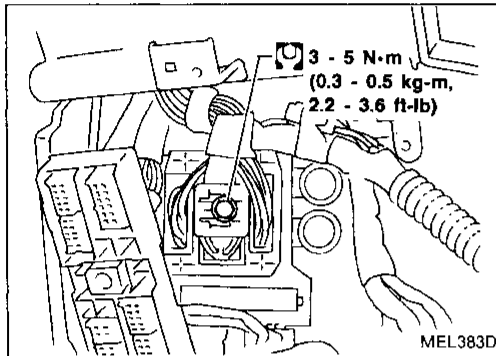

# SUPER MULTIPLE JUNCTION (SMJ)

## Terminal Arrangement

 
### MAIN HARNESS

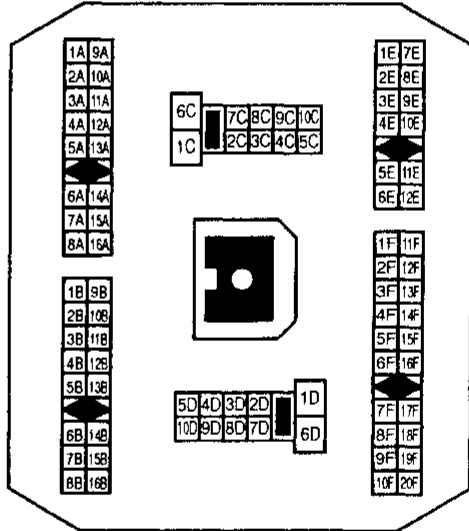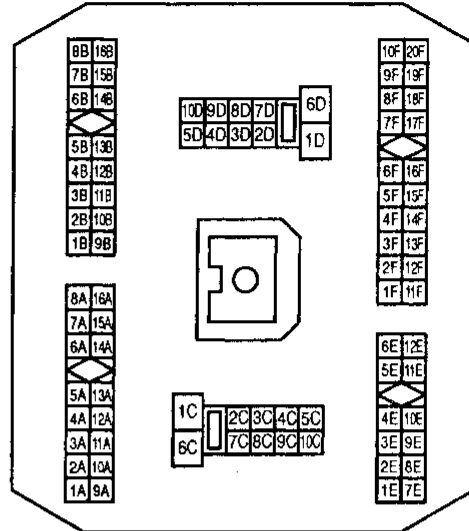

### BODY HARNESS

### ENGINE ROOM HARNESS


### ECM (ECCS CONTROL MODULE) (F101)

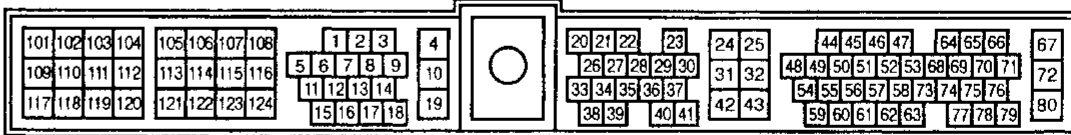

### A/T CONTROL UNIT (F103)



 
### ABS CONTROL UNIT (F114)



# SUPER MULTIPLE JUNCTION (SMJ)


## Terminal Arrangement (Cont'd)

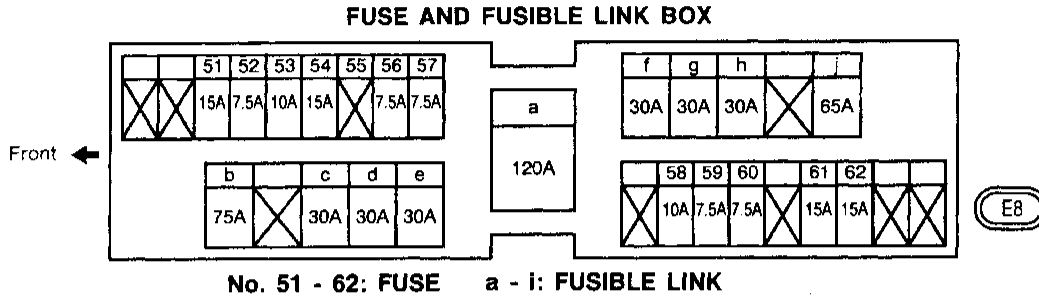

### BCM (BODY CONTROL MODULE)


 
### A/C AUTO AMP. (In BCM)




### AIR BAG DIAGNOSIS SENSOR UNIT











# HYBRID ELECTRIC CONTROL UNIT (HEC)

## Construction and Terminal Arrangement

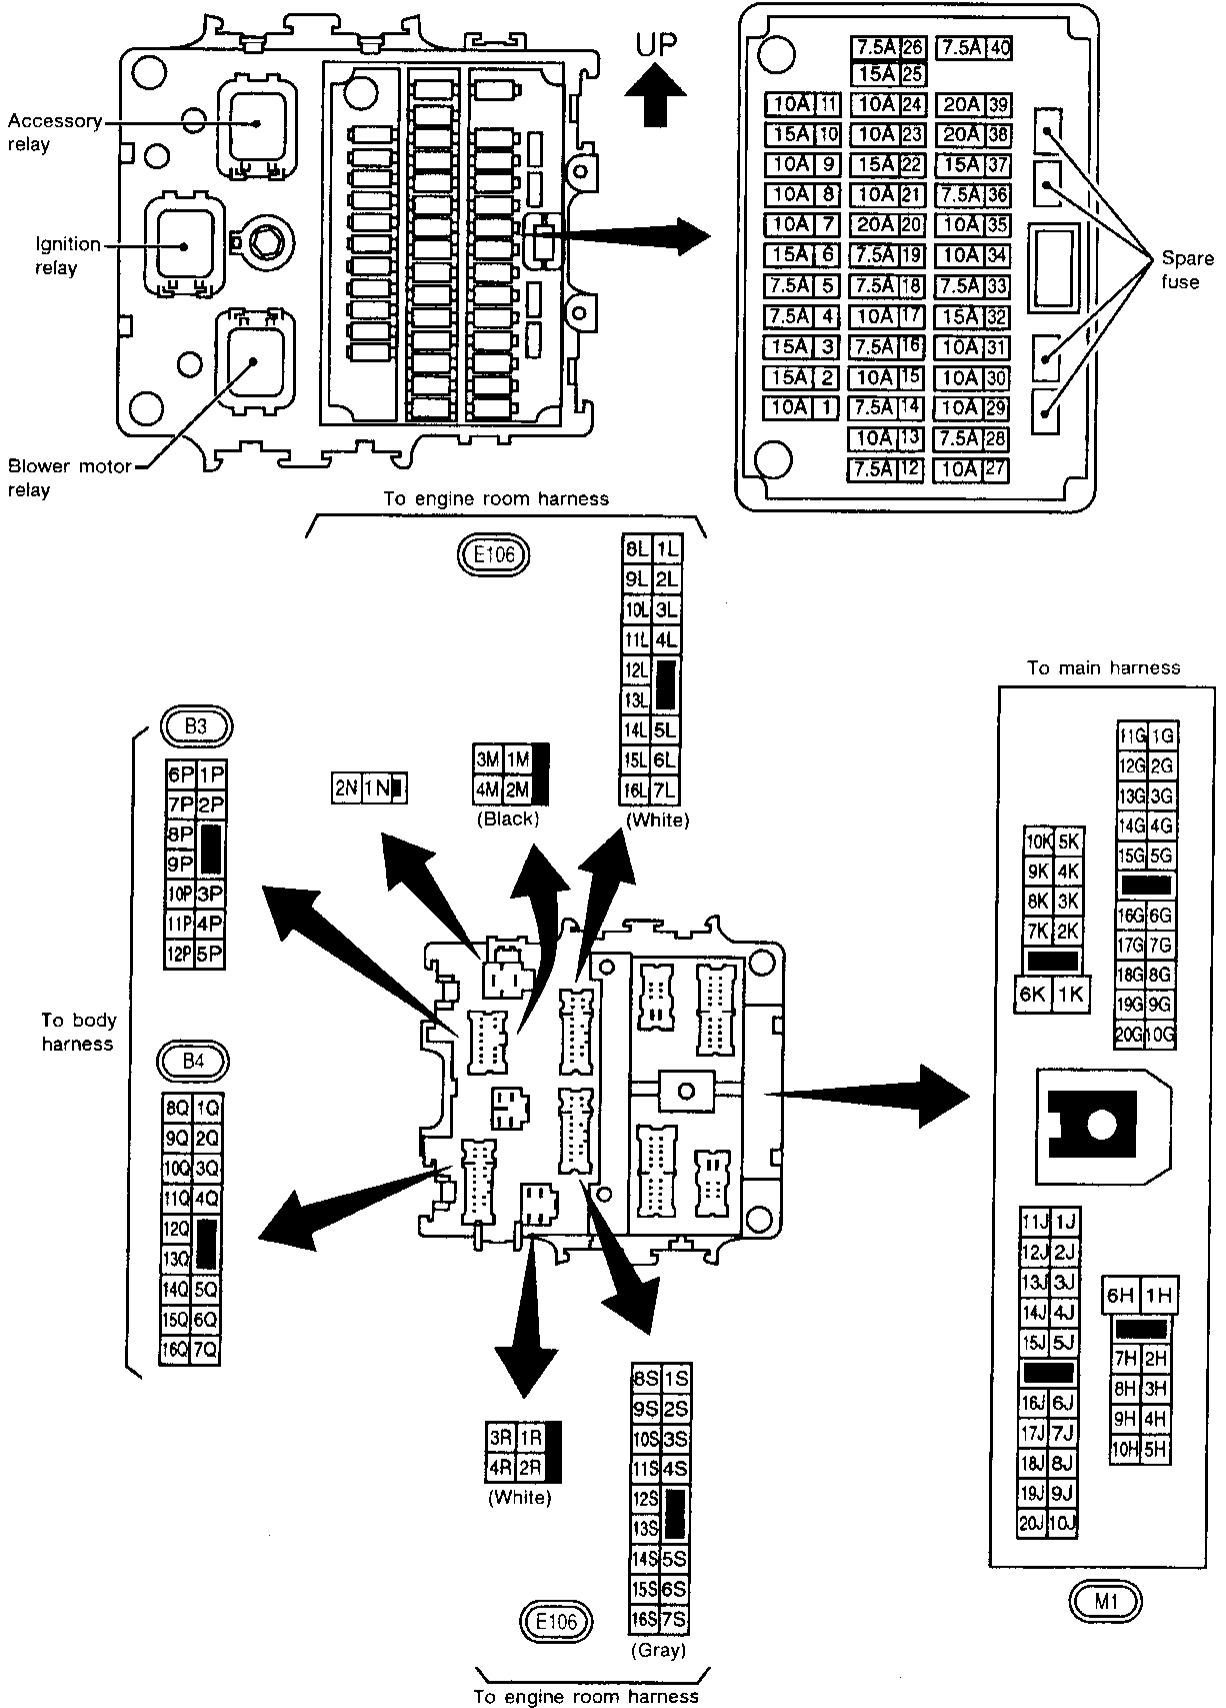

# JOINT CONNECTOR (J/C)
      
## Terminal Arrangement

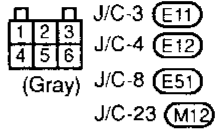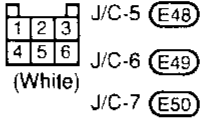






J/C-11 (E19)

J/C-12 (E20)

J/C-18 (E43)

J/C-20 (M66)

     J/C-21 (M67)



JUNCTION BOX (M36)

