

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system).....	BR-23
ABS actuator	BR-26
ABS circuit diagram.....	BR-44
ABS component parts and connector locations.....	BR-41
ABS control unit.....	BR-26
ABS hydraulic circuit.....	BR-23
ABS self-diagnosis.....	BR-32, 36
ABS symptom chart.....	BR-34
ABS system components.....	BR-24
ABS trouble diagnoses.....	BR-31
ABS wheel sensors.....	BR-25
ABS wiring diagram.....	BR-27
A/C air flow.....	HA-16
A/C circuit diagram (auto A/C).....	HA-90
A/C circuit diagram (manual A/C).....	HA-38
A/C component layout.....	HA-15
A/C compressor clutch removal and installation.....	HA-134
A/C compressor description.....	HA-11
A/C compressor mounting.....	HA-133
A/C compressor precaution.....	HA-5
A/C compressor special service tool.....	HA-5
A/C control linkage adjustment (auto A/C).....	HA-114
A/C control operation (manual A/C).....	HA-17
A/C diagnostic work flow (auto A/C).....	HA-64
A/C diagnostic work flow (manual A/C).....	HA-19
A/C harness layout (auto A/C).....	HA-88
A/C harness layout (manual A/C).....	HA-36
A/C HFC134a (R134a) system precaution.....	HA-3
A/C HFC134a (R134a) system service procedure.....	HA-128
A/C HFC134a (R134a) system service tools.....	HA-6
A/C lubricant (R134a).....	HA-130
A/C operational check (auto A/C).....	HA-65
A/C operational check (manual A/C).....	HA-20
A/C performance chart.....	HA-31
A/C performance test diagnoses.....	HA-29
A/C push control.....	HA-137
A/C relay (auto A/C).....	HA-113
A/C relay (manual A/C).....	HA-57
A/C self-dfiagnoses (auto A/C).....	HA-70
A/C switch.....	HA-56
A/C symptom chart (auto A/C).....	HA-68
A/C symptom chart (manual A/C).....	HA-22
A/C system description (auto A/C).....	HA-116
A/C trouble diagnoses (auto A/C).....	HA-62
A/C trouble diagnoses (manual A/C).....	HA-18
A/C wiring diagram (auto A/C).....	HA-91
A/C wiring diagram (manual A/C).....	HA-39
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2

Activated carbon canister.....	EC-20, 22
Activated carbon canister inspection... ..	EC-20, 22
Air bag.....	BF-45
Air bag precautions.....	GI-2
Air bag system trouble diagnoses.....	BF-58
Air bag-caution labels.....	BF-47
Air bag-disposal.....	BF-54
Air bag-removal and installation.....	BF-50
Air bleeding for brake system.....	BR-5
Air cleaner filter replacement.....	MA-13
Air conditioner cut control.....	EC-18
Air flow meter - See Mass air flow sensor.....	EC-103
Air mix door control linkage adjust- ment (auto A/C).....	HA-114
Air mix door control linkage adjust- ment (manual A/C).....	HA-58
Air mix. door motor.....	HA-121
Alternator.....	EL-34
Ambient sensor.....	HA-118
Angular tightening application.....	EM-2
Antenna.....	EL-105
Anti-freeze coolant.....	MA-8
ASCD (automatic speed control device)... ..	EL-112
AT control DTC:P0600.....	EC-176
AT control unit.....	AT-100
AT diagnosis communication line.....	EC-202
AT fluid temperature sensor.....	AT-104
AT removal and installation.....	AT-128
AT self-diagnoses.....	AT-46
AT Shift lock system.....	AT-115
AT trouble diagnoses.....	AT-14
Audio.....	EL-99
Automatic transaxle number.....	GI-35
Automatic transmission fluid.....	MA-8
Automatic transmission fluid replacement.....	MA-17
Auxiliary air control (AAC).....	EC-123

B

Back-up lamp.....	EL-53
Back-up lamp switch (MT).....	MT-5
Battery.....	EL-20
Bauik ring (MT).....	MT-10
Belt inspection (drive belt).....	MA-9
Bi-level door control linkage adjust- ment (auto A/C).....	HA-115
Bi-level door control linkage adjust- ment (manual A/C).....	HA-59
Blower motor (auto A/C).....	HA-113
Blower motor (manual A/C).....	HA-56
Blower resistor.....	HA-56
Body alignment.....	BF-41
Brake booster.....	BR-9
Brake control valve (Proportioning Valve)..	BR-4
Brake fluid.....	MA-8

ALPHABETICAL INDEX

Brake fluid change.....	BR-5
Brake fluid level	MA-18
Brake fluid level and line check	BR-5
Brake hydraulic line	BR-3
Brake inspection.....	MA-18
Brake lines and cables inspection	MA-18
Brake master cylinder	BR-7
Brake pedal	BR-6
Bumper (front)	BF-6
Bumper (rear).....	BF-8

C

Camshaft inspection	EM-37
Camshaft position sensor (PHASE).....	EC-99
Camshaft position sensor (PHASE) inspection	EC-102
Canister control solenoid valve	EC-210, 235
Canister purge control valve	EC-239
Charging system.....	EL-32
Cigarette lighter	EL-94
Clearance lamp.....	EL-54
Clock.....	EL-94
Closed loop control (Left bank)	EC-153
Closed loop control (Right bank).....	EC-153
Clutch cover.....	CL-9
Clutch disc	CL-9
Clutch fluid.....	MA-8
Clutch fluid level.....	MA-16
Clutch master cylinder	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal.....	CL-4
Clutch pedal free play.....	CL-4
Clutch pedal height.....	CL-4
Clutch release bearing.....	CL-8
Clutch withdrawal lever	CL-8
Coil spring (front)	FA-21
Coil spring (rear)	RA-9
Combination lamp (rear) removal and installation	BF-24
Combination meter	EL-76
Combination switch	EL-37
Compression pressure.....	EM-9
Compressor clutch removal and installation.....	HA-134
Compressor description	HA-11
Compressor mounting	HA-133
Compressor precaution.....	HA-5
Compressor special service tool	HA-5
Connecting rod	EM-56
Connecting rod bearing clearance	EM-60, 61
CONSULT for ABS.....	BR-35
CONSULT for ECCS.....	EC-48
CONSULT general information	GI-32
Control lever (MT)	MT-8
Control valve (AT)	AT-153
Converter housing installation.....	AT-129

Coolant replacement.....	MA-10
Cooling circuit (engine).....	LC-8
Cooling fan control	EC-257
Cooling fan control system	LC-14
Cooling fan motor inspection.....	EC-264
Cooling fan relay inspection.....	EC-264
Cornering lamp.....	EL-65
Coupling sleeve (MT)	MT-10
Crankshaft assembly	EM-63
Crankshaft bearing clearance.....	EM-59
Crankshaft inspection.....	EM-58
Crankshaft position sensor (POS)	EC-197
Crankshaft position sensor (POS) chipping.....	EC-218
Crankshaft position sensor (REF).....	EC-167
Cylinder block.....	EM-54
Cylinder head.....	EM-34
Cylinder head bolt tightening.....	EM-43

D

Daytime light system.....	EL-43
Detonation sensor - See Knock sensor ...	EC-144
Device (FICD) solenoid valve	EC-272
Diagnostic trouble code (DTC) for ECCS OBD system.....	EC-36
Differential gear (FF AT) (RE4F04A)	AT-196
Differential gear (FF AT) (RE4F04V)	AT-200
Differential gear (FF MT).....	MT-10
Dimensions	GI-36
Direct ignition system	EC-28
Dome light - See Interior lamp	EL-276
Door adjustment (front)	BF-11
Door adjustment (rear).....	BF-12
Door mirror	BF-38
Drive plate runout.....	EM-62
Drive shaft (front)	FA-12
Dropping resistor (AT).....	AT-106

E

ECCS basic inspection.....	EC-78
ECCS circuit diagram.....	EC-7
ECCS component parts location.....	EC-10
ECCS on-board diagnostic system.....	EC-36
ECCS symptom matrix chart.....	EC-81
ECCS system diagram and chart.....	EC-8
ECCS trouble diagnoses	EC-61
ECM input/output signal inspection	EC-88
EGR (&canister) control solenoid valve inspection	EC-238
EGR control (EGRC) - BPT valve.....	EC-151
EGR control (EGRC) - solenoid valve	EC-235
EGR temperature sensor	EC-147
EGR temperature sensor inspection	EC-150, 158

ALPHABETICAL INDEX

EGR valve inspection	EC-138
EGRC - BPT valve inspection	EC-152
Electrical load signal circuit	EC-276
Electrical units location	EL-283
Electronic ignition system.....	EC-17
Engine control module (ECM).....	EC-127
Engine coolant temperature sensor (ECTS)	EC-108
Engine coolant temperature sensor (ECTS) DTC13, P0115.....	EC-108
Engine coolant temperature sensor (ECTS) DTC13, P0115 inspection.....	EC-111
Engine coolant temperature sensor (ECTS) DTC98, P0125.....	EC-223
Engine coolant temperature sensor (ECTS) DTC98, P0125.....	EC-227
Engine mounting control (Front).....	EC-265
Engine oil.....	MA-8
Engine oil filter replacement	MA-13
Engine oil precautions	GI-4
Engine oil replacement.....	MA-13
Engine outer component parts	EM-6
Engine removal.....	EM-51
Engine serial number	GI-35
Evaporative emission system - for California models	EC-20
Evaporative emission system - for Non-California models.....	EC-22
Exhaust gas recirculation (EGR) system	EC-129
Exhaust gas recirculation (EGR) valve.....	EC-129
Exhaust system.....	FE-4
Exhaust system inspection	MA-16
Exterior lamp	EL-53

F

Fan switch	HA-56
Fast idle cam (FIC) inspection and adjustment.....	EC-27
Final drive (FF AT) (RE4F04A)	AT-196
Final drive (FF AT) (RE4F04V)	AT-200
Final drive (FF MT).....	MT-10
Fluid temperature sensor (AT)	AT-104
Fluids	MA-8
Flywheel runout	EM-62
Fog lamp, front.....	EL-57
Fork rod (MT)	MT-11
Forward clutch.....	AT-174
Freeze frame data.....	EC-38
Front axle.....	FA-8
Front bumper.....	BF-6
Front disc brake	BR-11
Front engine mounting control	EC-265
Front heated oxgen sensor (H02S) heater	EC-215

Front heated oxgen sensor monitor.....	EC-39
Front heated oxygen sensor (Left bank).....	EC-139
Front heated oxygen sensor (Right bank).....	EC-171
Front heated oxygen sensor heater (Left bank)	EC-228
Front heated oxygen sensor heater (Right bank).....	EC-215
Front heated oxygen sensor heater inspection	EC-217
Front suspension	FA-20
Fuel check valve inspection	EC-23
Fuel cut control (at no load & high engine speed)	EC-19
Fuel filler lid	BF-8
Fuel filter replacement.....	MA-12
Fuel gauge	EL-79
Fuel injection system (Left bank)	EC-205
Fuel injection system (Right bank).....	EC-187
Fuel line inspection	MA-12
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-25
Fuel pressure release.....	EC-25
Fuel pump control	EC-250
Fuel pump inspection.....	EC-256
Fuel pump relay inspection	EC-256
Fuel system.....	FE-3
Fuel tank vacuum relief valve inspection.....	EC-21, 23
Fuel temperature sensor	EC-159
Fuse	EL-19
Fusible link.....	EL-19

G

Gears (MT)	MT-10
Generic scan tool (GST)	EC-59

H

Harness connector	EL-5
Harness layout.....	EL-286
Hazard warning lamp	EL-60
Headlamp.....	EL-40
Heated oxgen sensor (H02S) heater (rear).....	EC-196
Heated oxgen sensor (rear).....	EC-192
Heated oxgen sensor heater (front) inspection	EC-217
Heated oxygen sensor (Front)(Left bank).....	EC-139
Heated oxygen sensor (Front)(Right bank).....	EC-171
Heated oxygen sensor heater (Front)(Left bank)	EC-228

ALPHABETICAL INDEX

Heated oxygen sensor heater (Front)(Right bank).....	EC-215
Height (Dimensions).....	GI-36
HFC134a (R134a) system precaution	HA-3
HFC134a (R134a) system service procedure.....	HA-128
HFC134a (R134a) system service tools	HA-6
High clutch	AT-170
Hood adjustment	BF-6
Horn.....	EL-94
How to erase DTC for ECCS OBD system	EC-36
How to follow flow chart in trouble diagnoses.....	GI-29
How to perform efficient diagnosis for an electrical incident	GI-18
How to read wiring diagrams.....	GI-8
How to use this manual	GI-6

I

IACV - FICD solenoid valve inspection	EC-275
IACV-AAC valve inspection.....	EC-126
Identification plate.....	GI-35
Idle air control valve (IACV)	EC-123
Idle mixture ratio inspection.....	EC-29
Idle speed inspection	EC-29
Ignition coil inspection	EC-122
Ignition timing inspection.....	EC-29
Illumination	EL-69
Illumination-IVMS.....	EL-273
In vehicle sensor.....	HA-117
Inhibitor switch	AT-105
Injector inspection.....	EC-247
Injector removal and installation.....	EC-26
Input shaft.....	MT-10
Instrument panel.....	BF-13
Intake air temperature sensor	EC-154
Intake air temperature sensor inspection.....	EC-158
Intake door control linkage adjust- ment (auto A/C)	HA-115
Intake door control linkage adjust- ment (manual A/C).....	HA-58
Intake sensor	HA-119
Interior.....	BF-16
Interior lamp	EL-69
Interior lamp on-off control-IVMS.....	EL-276
IVMS (In-Vehicle Multiplexing System)	EL-139
IVMS-System description	EL-139
IVMS-Trouble diagnoses	EL-163
IVMS-Trouble diagnoses system	EL-145

J

Jacking points.....	GI-38
---------------------	-------

Joint connector (J/C).....	Foldout page
----------------------------	--------------

K

Knock sensor (KS).....	EC-144
Knock sensor inspection.....	EC-146

L

Length (Dimensions)	GI-36
License lamp.....	EL-54
Lifting points.....	GI-39
Line pressure solenoid valve	AT-104
Line pressure test (AT)	AT-110
Liquid gasket application	EM-2
Low and reverse brake	AT-180
Lubricant (R134a) A/C.....	HA-130
Lubricants	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication-locks, hinges and hood latches.....	MA-20

M

Magnet clutch.....	HA-134
Main drive gear (MT).....	MT-10
Mainshaft (MT)	MT-10
Maintenance (engine)	MA-9
Maintenance	MA-1
Maintenance general	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-6
Maintenance schedule (2).....	MA-7
Malfunction indicator lamp (MIL)	EC-38
Manual transaxle number.....	GI-35
Manual transmission oil	MA-8
Manual transmission oil replacement.....	MA-16
Mass air flow sensor (MAFS)	EC-103
Mass air flow sensor inspection	EC-107
Master cylinder (brake)	BR-7
Master cylinder (clutch)	CL-6
Meter and gauges.....	EL-75
MIL & Data link connectors circuit	EC-280
Misfire	EC-180
Mode door control linkage adjust- ment (auto A/C)	HA-114
Mode door control linkage adjust- ment (manual A/C)	HA-58
Mode door motor.....	HA-123
Model variation	GI-33
Molding	BF-20
MT removal and installation	MT-5
Multi purpose grease.....	MA-8
Multi-remote control system-IVMS.....	EL-203

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

Multiport fuel injection (MFI) system EC-15
 Multiport fuel injection precautions GI-4

N

Neutral position switch (MT) MT-5

O

Oil pan (engine) EM-10
 Oil pressure (engine) LC-5
 Oil pump (AT) AT-149
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-7
 Oil seal replacement (engine) EM-31
 Operating cylinder (clutch) CL-7
 Overdrive switch AT-105
 Overrun clutch AT-174
 Overrun clutch solenoid valve AT-104

P

Park/Neutral position switch EC-231
 Parking brake control BR-21
 PCV (positive crankcase ventilation)
 inspection EC-24
 Piston assembly EM-62
 Piston pin inspection EM-55
 Piston ring inspection EM-56
 Piston to bore clearance EM-57
 Power antenna EL-105
 Power door lock-IVMS EL-190
 Power seat BF-25
 Power steering fluid MA-8
 Power steering fluid level MA-19, ST-5
 Power steering gear ST-12
 Power steering hydraulic pressure ST-7
 Power steering oil pressure switch EC-268
 Power steering oil pressure switch
 inspection EC-271
 Power steering oil pump ST-22
 Power steering system bleeding ST-5
 Power supply routing EL-8
 Power transistor & ignition coil EC-116, 153
 Power transistor inspection EC-122
 Power window-IVMS EL-179
 Precautions (General) GI-2
 Pressure plate - See Clutch cover CL-9
 Pressure test (AT) AT-110

R

Radiator LC-14

Rear axle RA-6
 Rear bumper BF-8
 Rear disc brake BR-15
 Rear heated oxygen sensor (H02S)
 heater EC-196
 Rear heated oxygen sensor EC-192
 Rear suspension RA-8
 Rear window defogger EL-96
 Refrigerant connection precaution HA-4
 Refrigerant discharging evacuating
 charging HA-128
 Refrigerant general precaution HA-3
 Refrigerant lines HA-132
 Release bearing (clutch) CL-8
 Reverse clutch AT-167
 Reverse gear (MT) MT-10
 Reverse idler shaft (MT) MT-10
 Revolution sensor (AT) AT-106
 Road wheel size GI-36
 Room lamp EL-276

S

SAE J1930 terminology list GI-42
 Seat (front) BF-25
 Seat (rear) BF-29
 Seat belt BF-30
 Seat belt inspection MA-20
 Self-diagnostic results EC-39
 Shift control (MT) MT-11
 Shift fork (MT) MT-11
 Shift lock system AT-115
 Shift schedule AT-36
 Shift solenoid valve (AT) AT-104
 Shock absorber (rear) RA-9
 SMJ (super multiple junction) Foldout page
 Spark plug replacement MA-14
 Speedometer EL-77
 Spot lamp EL-74
 Spring (Wheelarch) height FA-5
 Stabilizer bar (front) FA-22
 Stall test (AT) AT-107
 Standardized relay EL-6
 Starter EL-30
 Starting system EL-24
 Steering gear and linkage inspection MA-19
 Steering linkage ST-12
 Steering switch EL-39
 Steering wheel and column ST-8
 Steering wheel play ST-4
 Steering wheel turning force ST-6
 Step lamp-IVMS EL-279
 Stop lamp EL-54
 Striking rod (MT) MT-11
 Strut (front) FA-21
 Sun roof BF-32
 Sunload sensor HA-118

ALPHABETICAL INDEX

Supplemental restraint system..... BF-45
 Symbols and abbreviations GI-6
 Synchronizer (MT) MT-10

T

Tachometer EL-77
 Tail lamp EL-54
 Theft warning system-IVMS EL-242
 Thermo control amp HA-57
 Thermostat..... LC-13
 Three way catalyst function (Left bank) ... EC-184
 Three way catalyst function (Right bank)..... EC-184
 Three way catalyst precautions GI-4
 Throttle position sensor (TPS) EC-162, 201
 Throttle position sensor inspection.... EC-78, 166
 Throwout bearing - See Clutch
 release bearing CL-8
 Tie-rod..... ST-16
 Tie-rod ball joints ST-16
 Tightening torque of standard bolts..... GI-41
 Time control system-IVMS EL-218
 Timing chain EM-17
 Tire rotation MA-18
 Tire size..... GI-36
 Torque converter clutch solenoid
 valve AT-104
 Torque converter installation..... AT-128
 Tow truck towing GI-40
 Transmission case (MT)..... MT-9
 Transverse link (front)..... FA-23
 Tread-FR&RR (Dimensions)..... GI-36
 Trim - back door BF-20
 Trim - door..... BF-17
 Trim - roof..... BF-18
 Trim - side and floor BF-16
 Trim-trunk room..... BF-19
 Triple pressure switch (auto A/C)..... HA-113
 Triple pressure switch (manual A/C)..... HA-57
 Triple pressure switch..... HA-10
 Trunk lid..... BF-8
 Trunk room lamp..... EL-74
 Turn signal lamp..... EL-60
 Two trip detection logic EC-36

V

Vacuum hose (brake system)..... BR-10
 Vacuum hose drawing (ECCS) EC-13 GI
 Valve clearance EM-47
 Valve guide inspection EM-39
 Valve seat inspection EM-40 MA
 Valve spring inspection..... EM-41
 Vapor lines inspection MA-15 EM
 Vehicle identification number GI-34
 Vehicle speed sensor (VSS) EC-112, 184
 Viscosity number (SAE) MA-8 LC
 Viscous coupling (FF AT) (RE4F04V) AT-200
 Viscous coupling (FF MT)..... MT-10 EC

W

Warning buzzer EL-219
 Warning lamps..... EL-82 CL
 Washer, front..... EL-89
 Water cock control rod adjustment
 (auto A/C)..... HA-114 MT
 Water cock control rod adjustment
 (manual A/C) HA-58 AT
 Water pump LC-9
 Water temperature gauge EL-79
 Weatherstrip..... BF-20 FA
 Wheel alignment (front) FA-6
 Wheel alignment (rear)..... RA-5
 Wheel balance MA-17 RA
 Wheel bearing (front axle) FA-6
 Wheel bearing (rear) RA-4
 Wheel hub (rear)..... RA-6 BR
 Wheel hub and steering knuckle FA-8
 Wheel sensors (ABS)..... BR-25
 Wheelarch height FA-5 ST
 Wheelbase (Dimensions) GI-36
 Width (Dimensions) GI-36 BF
 Window antenna..... EL-111
 Windshield and windows BF-37
 Wiper and washer..... EL-87 HA
 Wiper, front EL-89
 Withdrawal lever (clutch) CL-8
 Wrist pin - See Piston pin inspection EM-55 EL