

SECTION **BT**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

CONTENTS

PRECAUTIONS	2	Roof Trim	20
Precaution	2	Trunk Room Trim	21
Supplemental Restraint System (SRS) "AIR BAG"	2	EXTERIOR	22
GENERAL SERVICING	3	SEAT	27
Clip and Fastener	3	Front Seat	27
BODY END	6	Heated Seat	29
Body Front End	6	Rear Seat	30
Body Rear End and Opener	9	SUNROOF	31
DOOR	11	WINDSHIELD AND WINDOWS	35
Front Door	11	Windshield and Rear Window	35
Rear Door	12	MIRROR	36
INSTRUMENT PANEL	13	Door Mirror	36
INTERIOR TRIM	16	BODY ALIGNMENT	37
Side and Floor Trim	16	Engine Compartment	37
Door Trim	19	Underbody	39

★ For seat belt, refer to MA and RS section.

★ For wiring diagrams of body electrical systems, refer to EL section.

PRECAUTIONS

Precaution

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removing or installing. Be careful not to soil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take rust prevention measures.

Supplemental Restraint System (SRS) “AIR BAG”

The Supplemental Restraint System “Air Bag”, used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and on the instrument panel on the passenger side), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.


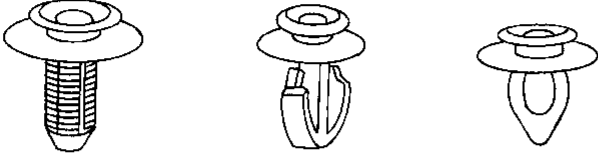
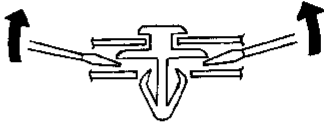

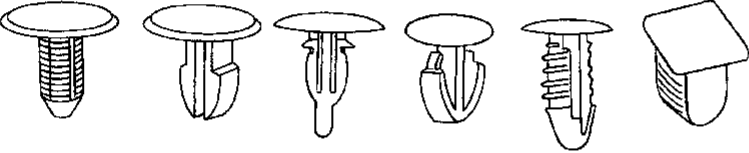
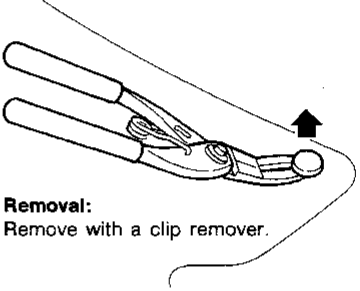

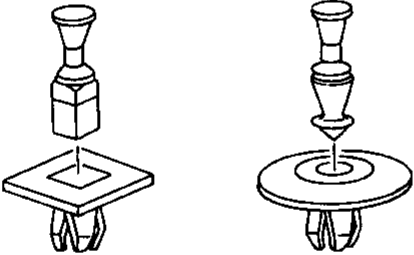
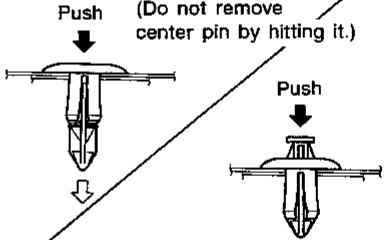

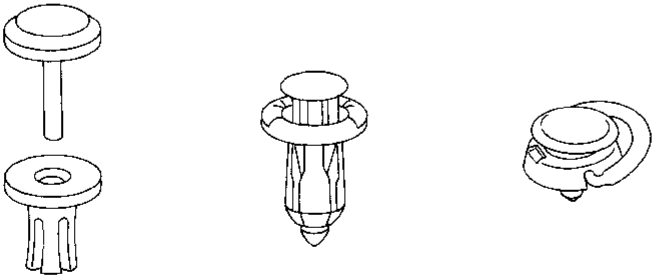
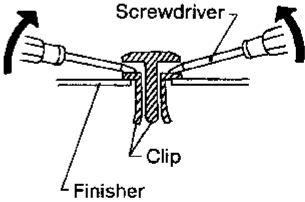
WARNING:

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation either just before the harness connectors or for the complete harness, for easy identification.**

GENERAL SERVICING

Clip and Fastener

- Clips and fasteners in BT section correspond to the following numbers and symbols.
- Replace any clips and/or fasteners which are damaged during removal or installation.

Symbol No.	Shapes	Removal & Installation
	 <p style="text-align: right;">SBF302H</p>	<p>Removal: Remove by bending up with flat-bladed screwdrivers or clip remover.</p>  <p style="text-align: right;">SBF367BA</p>
	 <p style="text-align: right;">SBF095</p>	 <p>Removal: Remove with a clip remover.</p> <p style="text-align: right;">SBF423H</p>
	 <p style="text-align: right;">SBF258G</p>	<p>Push center pin to catching position. (Do not remove center pin by hitting it.)</p>  <p>Installation:</p> <p style="text-align: right;">SBF708E</p>
	 <p style="text-align: right;">MBT080A</p>	<p>Removal:</p>  <p style="text-align: right;">SBF638C</p>

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT


 
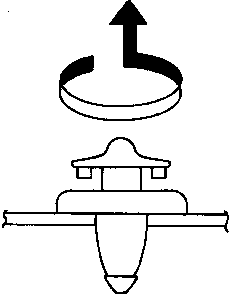

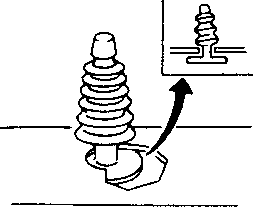
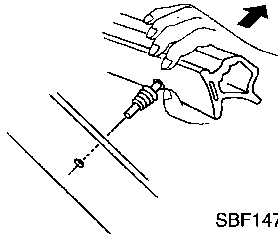

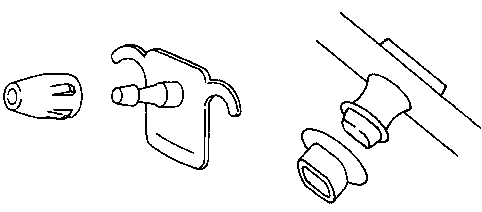
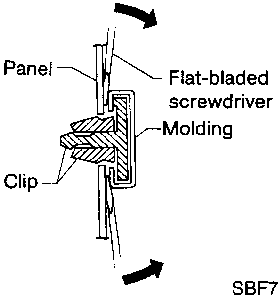

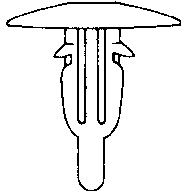
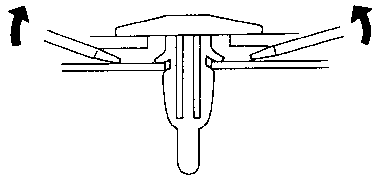

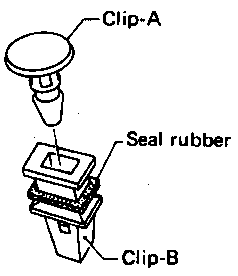
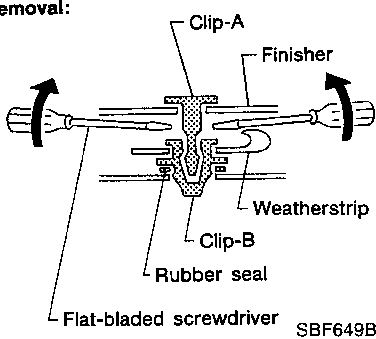
HA

EL

IDX


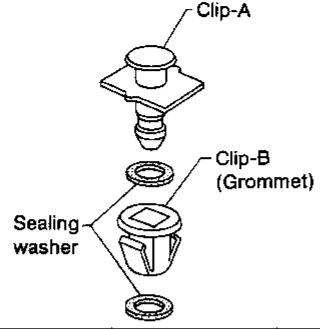
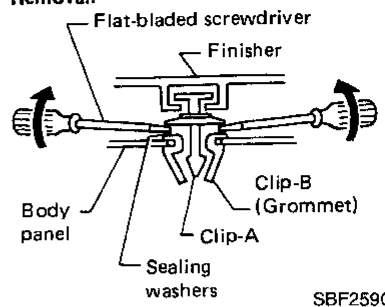

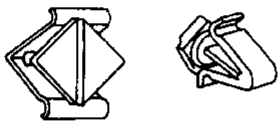
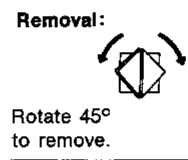
 

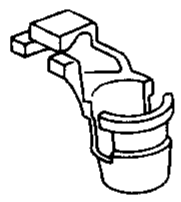
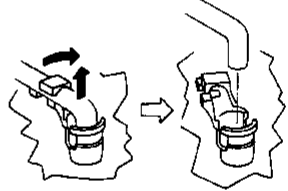
 
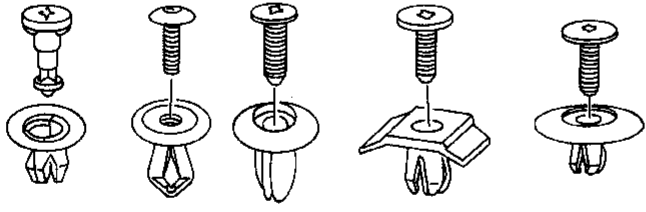
 
GENERAL SERVICING

Clip and Fastener (Cont'd)

Symbol No.	Shapes	Removal & Installation
 G206		 MBF519B MBF520B
 CE103		Removal:  SBF104B SBF147B
 CE107		 SBF411H SBF767B
 CE117		Removal: Remove by bending up with a flat-bladed screwdriver or pliers.  SBF174D SBF175DA
 CF110		Removal:  SBF648B SBF649B

GENERAL SERVICING

Clip and Fastener (Cont'd)

Symbol No.	Shapes	Removal & Installation
		<p>Removal:</p>  <p>SBF151D</p>
		<p>Removal:</p>  <p>Rotate 45° to remove.</p> <p>Installation:</p>  <p>SBF145B</p>
		<p>Removal:</p> <p>Holder portion of clip must be spread out to remove rod.</p>  <p>SBF768B</p>
		<p>Removal:</p> <ol style="list-style-type: none"> 1. Screw out with a Phillips screwdriver. 2. Remove female portion with flat-bladed screwdriver.  <p>SBF078B</p>

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

BODY END

Body Front End







- When removing or installing hood, place a cloth or other padding on hood. This prevents vehicle body from being scratched.
- Bumper fascia is made of plastic. Do not use excessive force and be sure to keep oil away from it.
- Hood adjustment: Adjust at hinge portion.
- Hood lock adjustment: After adjusting, check hood lock control operation. Apply a coat of grease to hood locks engaging mechanism.
- Hood opener: Do not attempt to bend cable forcibly. Doing so increases effort required to unlock hood.

WARNING:

- **Be careful not to scratch hood stay when installing hood. A scratched stay may cause gas leakage.**
- **The contents of the hood stay are under pressure. Do not take apart, puncture, apply heat or allow fire near it.**

REMOVAL — Front bumper assembly

- ① Remove bolts securing engine undercover from the front side. **A**
- ② Remove bolts, screws and clips (C205) securing fender protectors in the wheelhouse. Then remove left and right fender protectors. **B**
- ③ Remove clip (CG101) securing grille and remove the grille. **C**
- ④ Remove screws securing left and right side combination lamps and remove the lamps. **D**
- ⑤ Insert flat-bladed screwdriver between side marker lamps and turn signal lamps. Then remove side marker lamps. **E**
- ⑥ Remove screws securing left and right turn signal lamps and remove the lamps. **F**
- ⑦ Remove the clip (CS101) securing fog lamp finisher and remove the finisher. Then remove the bolts securing fog lamps and remove the lamps. **G**
- ⑧ Remove nuts and bolts securing headlamps. Then remove left and right headlamps. **H**
- ⑨ Remove bolts securing both bumper side brackets and remove the brackets. **I**
- ⑩ Remove bolts and clips (C203) securing bumper fascia. **J**
- ⑪ Remove nuts securing fascia from both bumper sides. Then pull bumper fascia out. **K**
- ⑫ Remove nuts and bolts securing retainer from center and both sides and remove retainer. **L**
- ⑬ Remove nuts securing bumper reinforcement and remove the reinforcement. **M**
- ⑭ Remove bolts and nuts securing bumper stay and remove the bumper stay. **N**

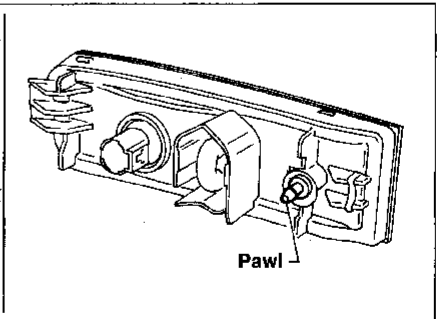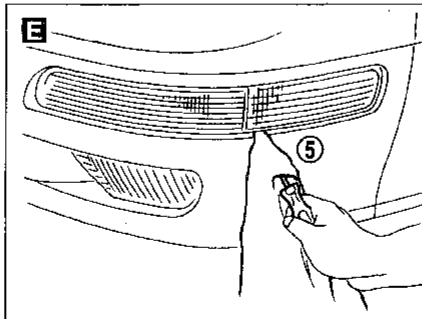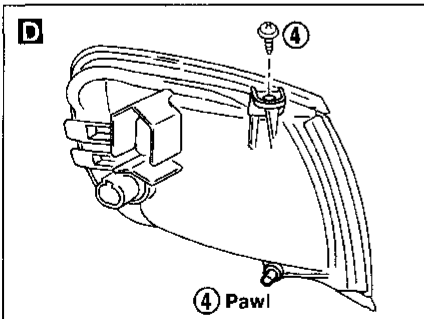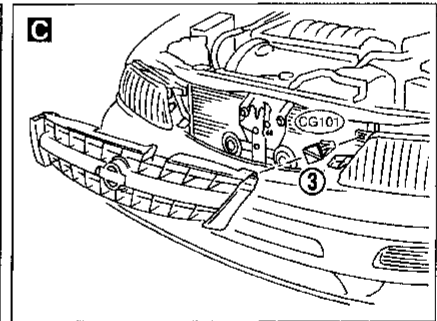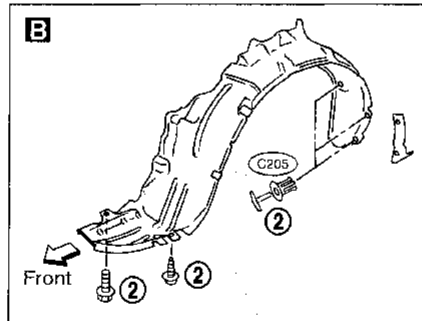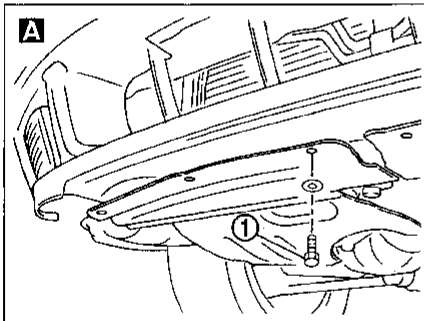

SBT338

BODY END

Body Front End (Cont'd)


SEC. 260•261•262•620•630•650

Hood lock adjustment

- Adjust hood so that hood primary lock meshes at a position 1 to 1.5 mm (0.039 to 0.059 in) lower than fender.
- After hood lock adjustment, adjust bumper rubber.
- When securing hood lock, ensure it does not tilt. Striker must be positioned at the center of hood primary lock.
- After adjustment, ensure that hood primary and secondary lock operate properly.

Hood lock secondary latch hooking length

More than 5.0 mm (0.197 in)

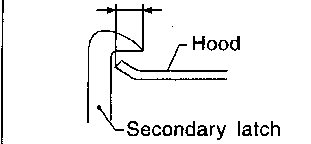


Bumper rubber adjustment

- Adjust so that hood is aligned with fender. At that time deflection is approx. 2 mm (0.08 in).

[Bumper rubber free height is approx. 13 mm (0.51 in)]

Hood adjustment and hood stay installation














21 - 26 N•m
(2.1 - 2.7 kg-m, 15 - 20 ft-lb)

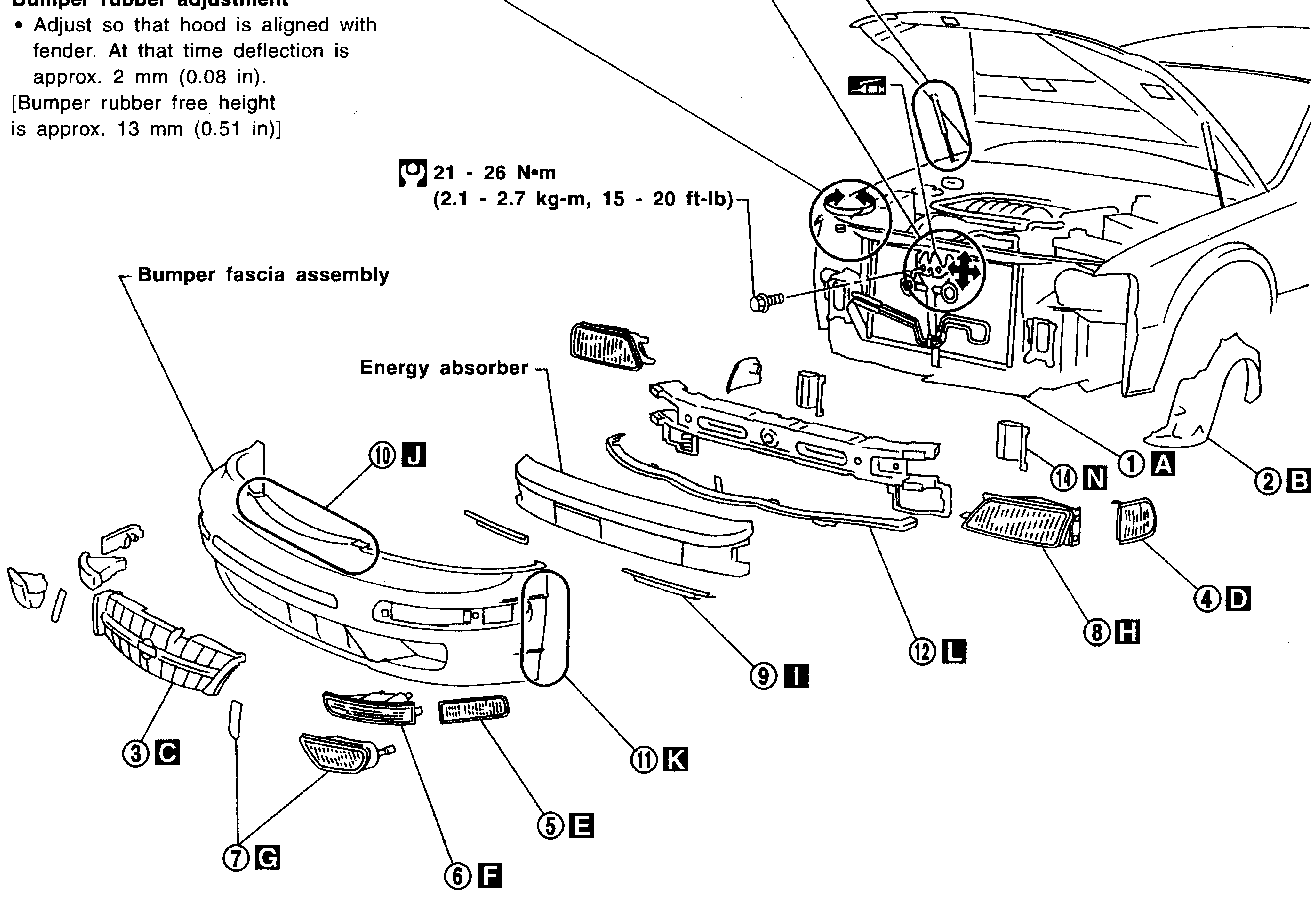

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

BODY END

Body Front End (Cont'd)

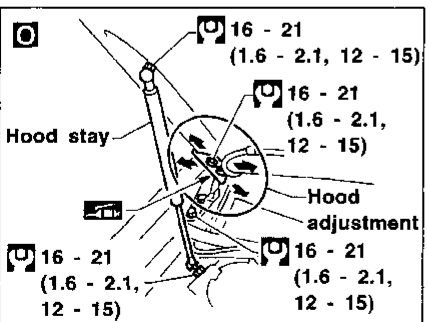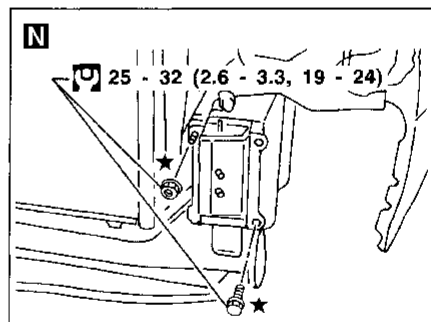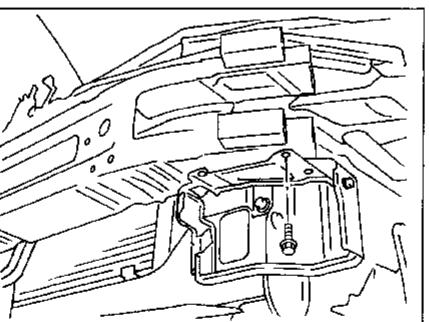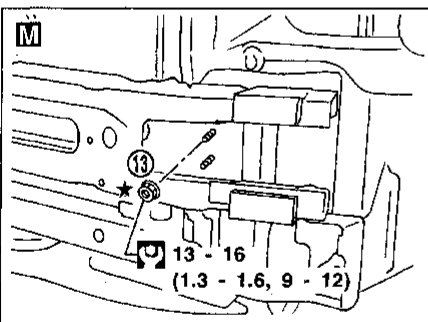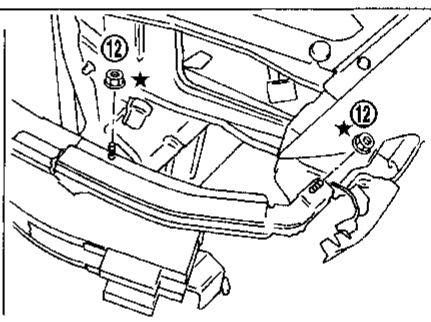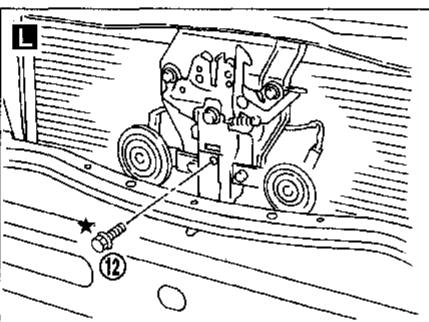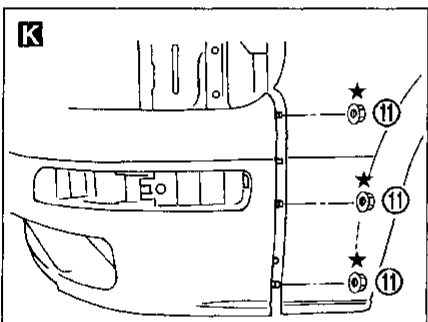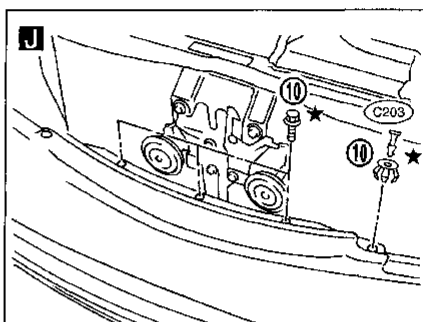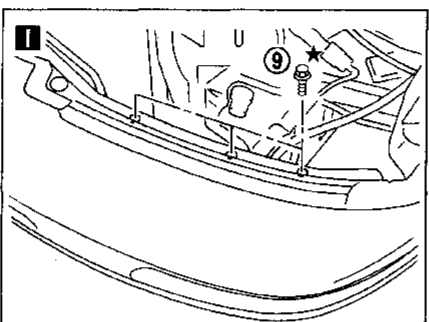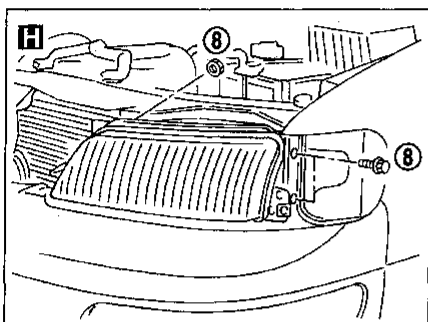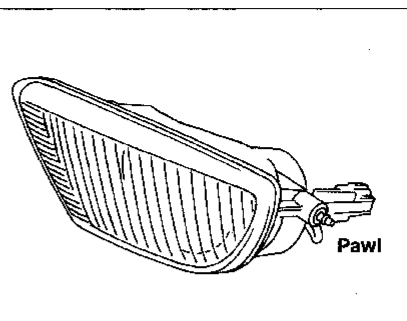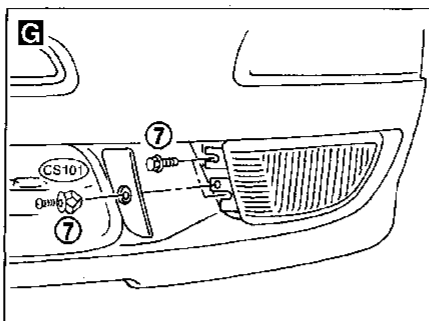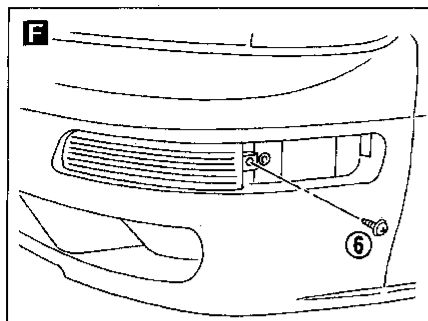

★ : Bumper assembly mounting clips, bolts & nuts
 □ : N·m (kg-m, ft-lb)


Body Rear End and Opener

- When removing or installing trunk lid, place a cloth or other padding on trunk lid. This prevents vehicle body from being scratched.
 - Bumper fascia is made of plastic. Do not use excessive force and be sure to keep oil away from it.
 - Trunk lid adjustment: Adjust at hinge-trunk lid portion for proper trunk lid fit.
 - Trunk lid lock system adjustment: Adjust striker so that it is in the center of the lock. After adjustment, check trunk lid lock operation.
 - After installation, make sure that trunk lid and fuel filler lid open smoothly.
- ★ For Wiring Diagram, refer to “TRUNK LID AND FUEL FILLER LID OPENER” in EL section.

REMOVAL — Rear bumper assembly

- 1 Remove bolts from lower side of rear bumper fascia. **A**
- 2 Remove trunk trim. Refer to “Trunk Room Trim” in “INTERIOR TRIM” for details, BT-21.
- 3 Remove clips **C205** securing upper side of bumper fascia. **B**
- 4 Remove nuts from each fender side. **C**
- 5 Remove nuts securing fascia bracket from trunk compartment. **D**
- 6 Pull bumper fascia out.
- 7 Remove left and right plugs from floor and then remove reinforcement mounting bolts. **E**
- 8 Pull reinforcement out.

SEC. 843•850

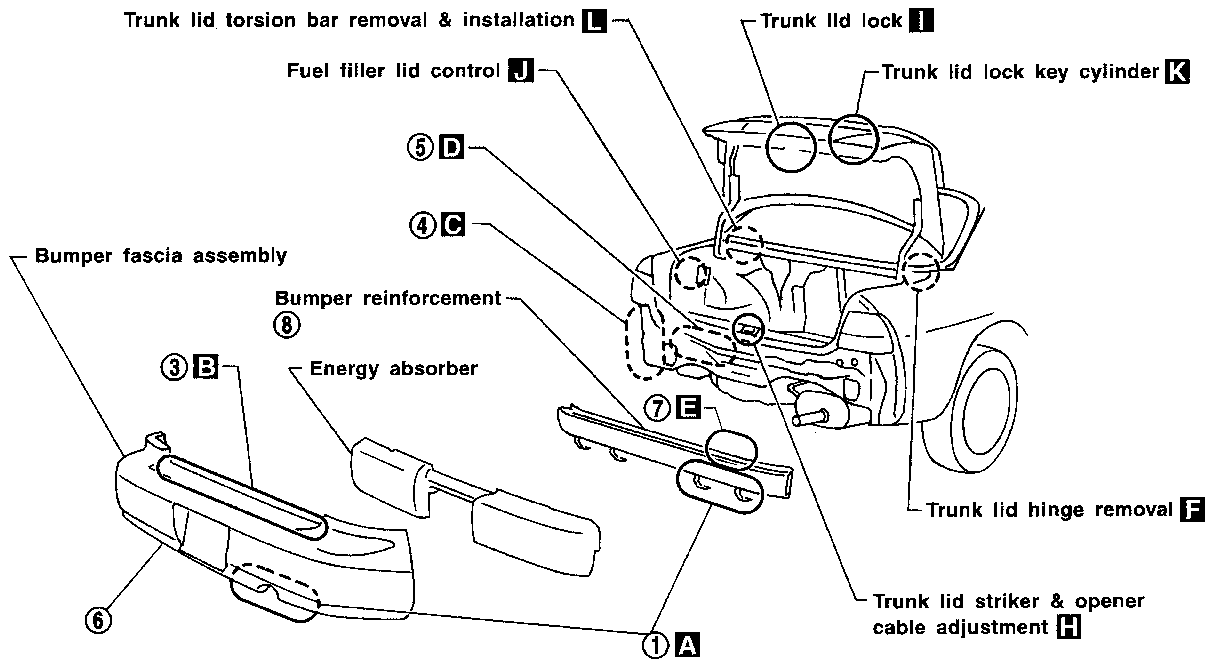













GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT

HA
EL
IDX

SBT340

BODY END

Body Rear End and Opener (Cont'd)

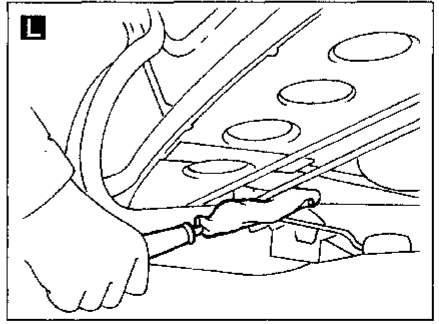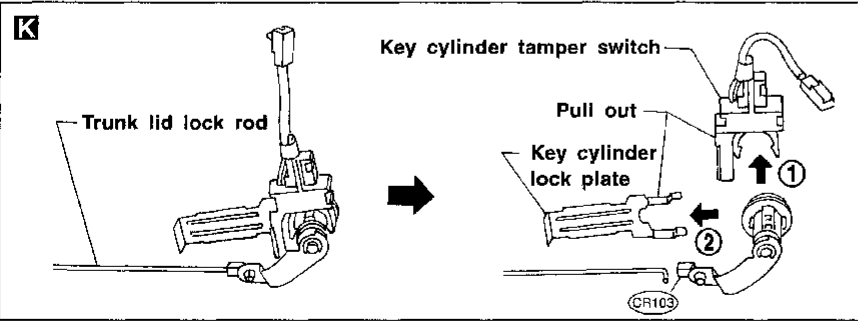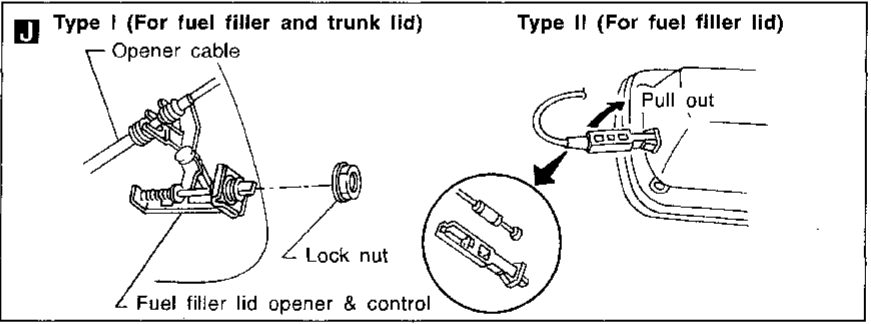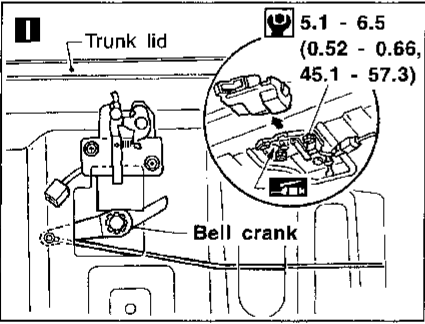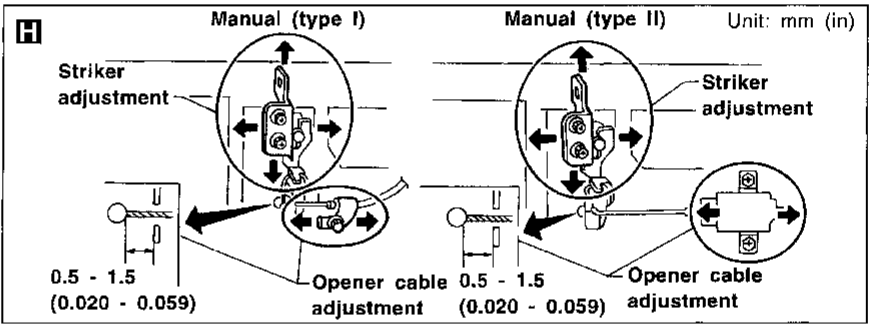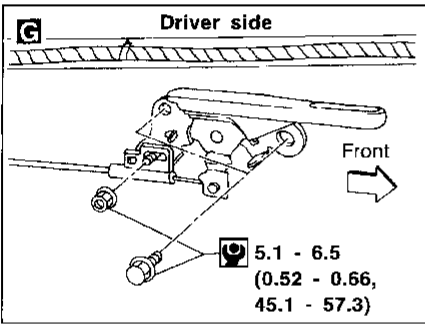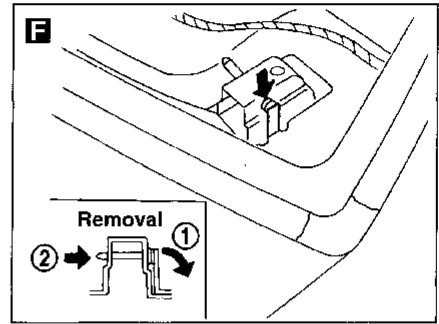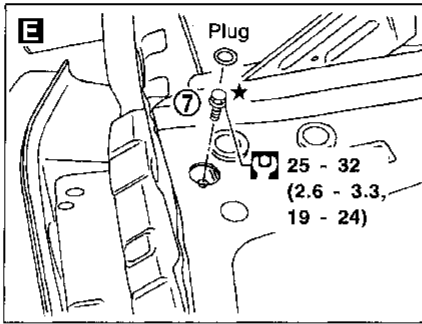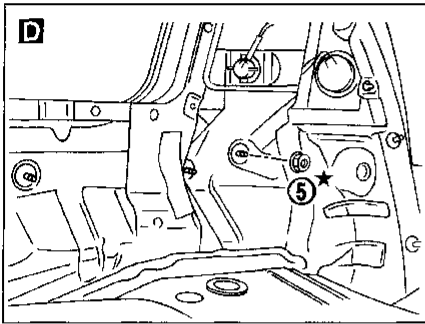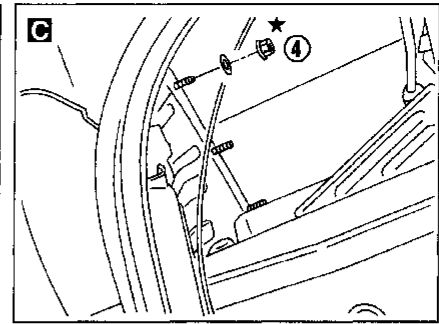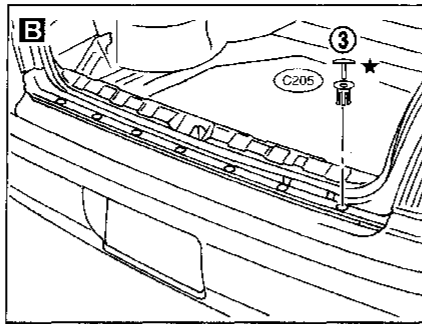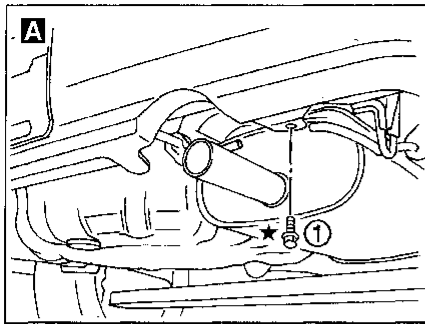

: N·m (kg-m, in-lb) : N·m (kg-m, ft-lb)






★ : Bumper assembly mounting bolts, nuts and clips

DOOR

Front Door

- For removal of door trim, refer to "Door Trim" in "INTERIOR TRIM" (BT-19).
- After adjusting door or door lock, check door lock operation.

SEC. 800-803-805-998

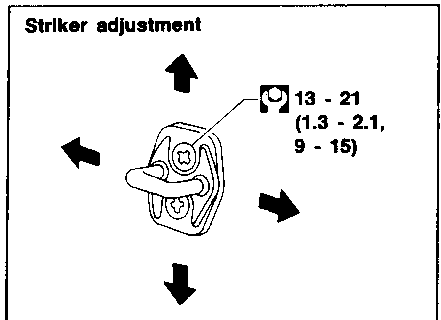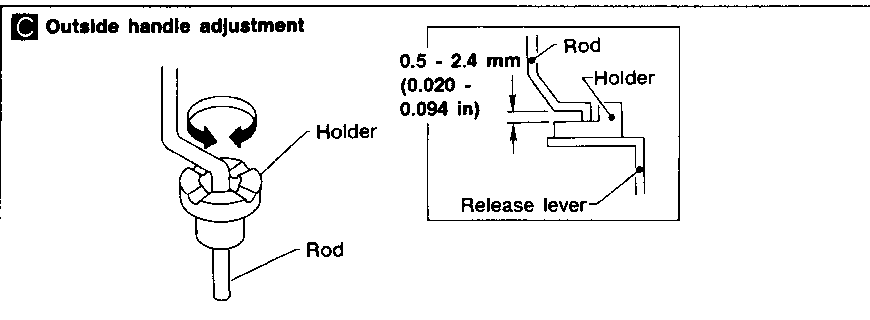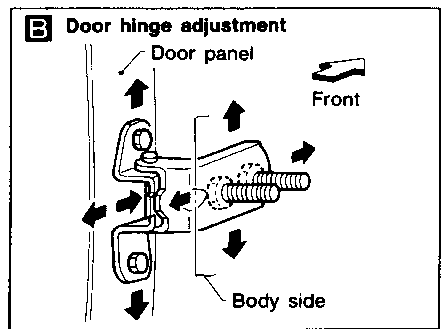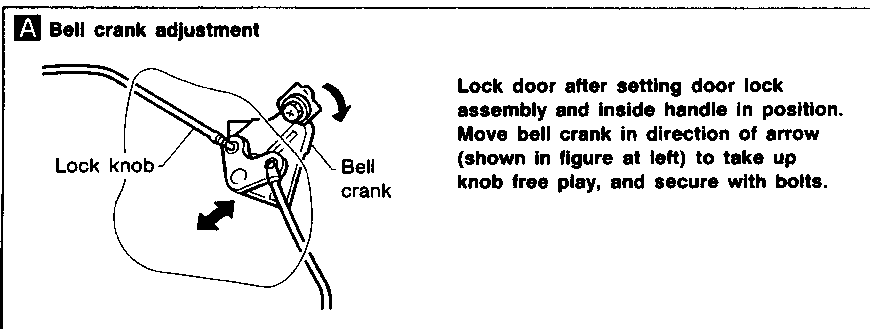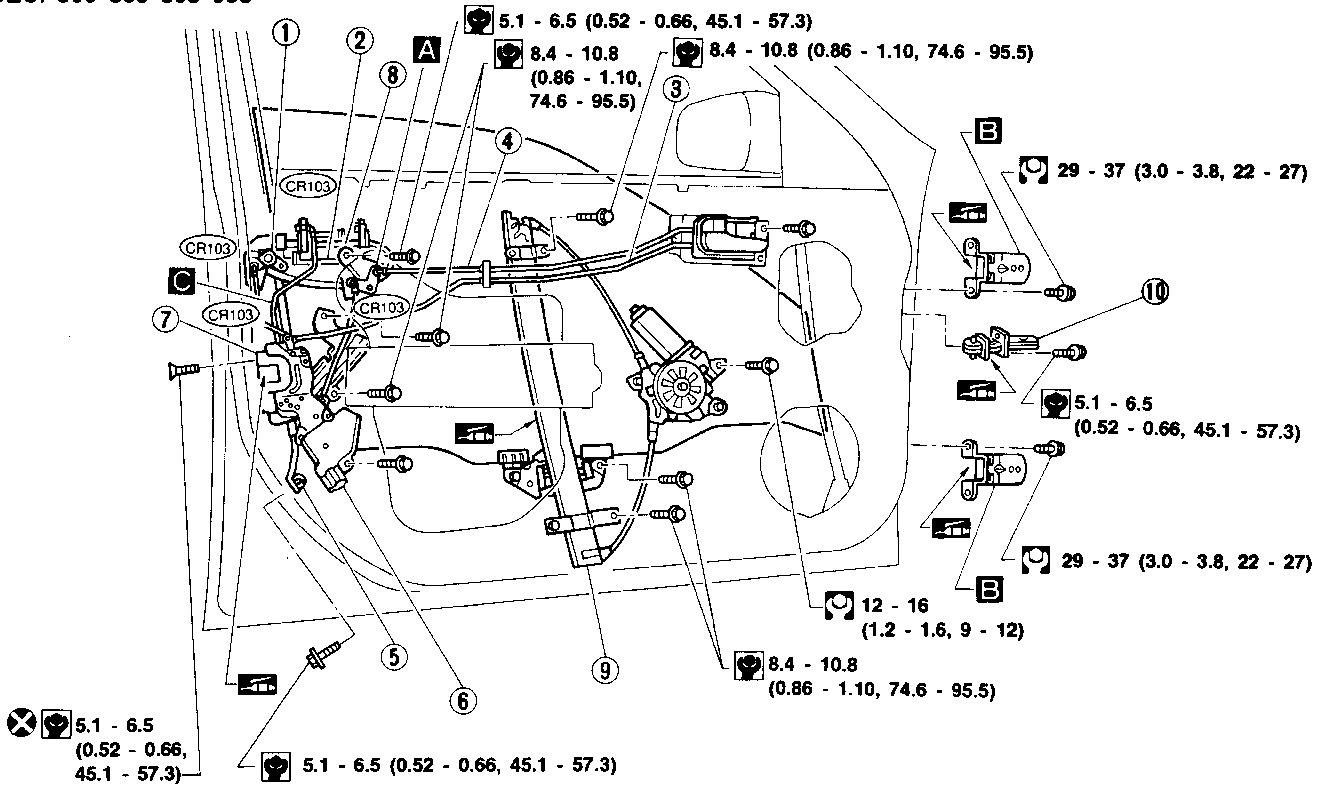

- : N·m (kg-m, ft-lb)
- : N·m (kg-m, in-lb)

SBF331HE





- ① Key cylinder
- ② Outside handle
- ③ Inside handle rod
- ④ Lock knob rod
- ⑤ Guide rail adjustment
- ⑥ Door lock actuator
- ⑦ Door lock assembly
- ⑧ Bell crank adjustment
- ⑨ Regulator assembly
- ⑩ Check link assembly

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

DOOR

Rear Door

SEC. 820-823-825

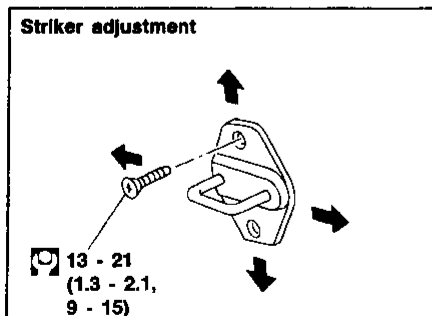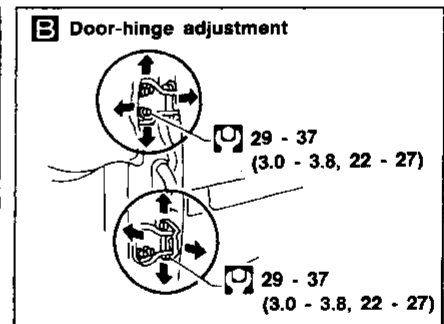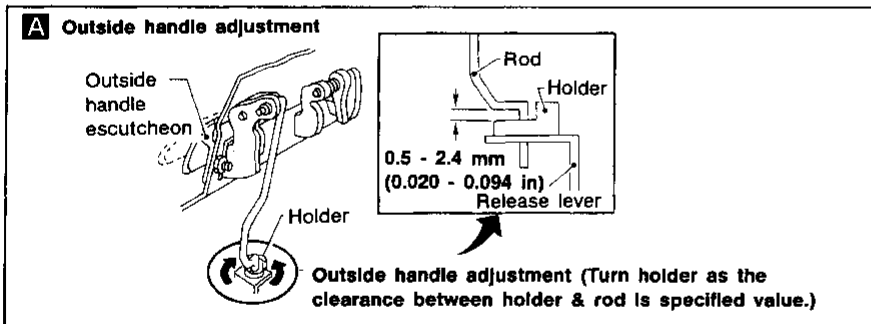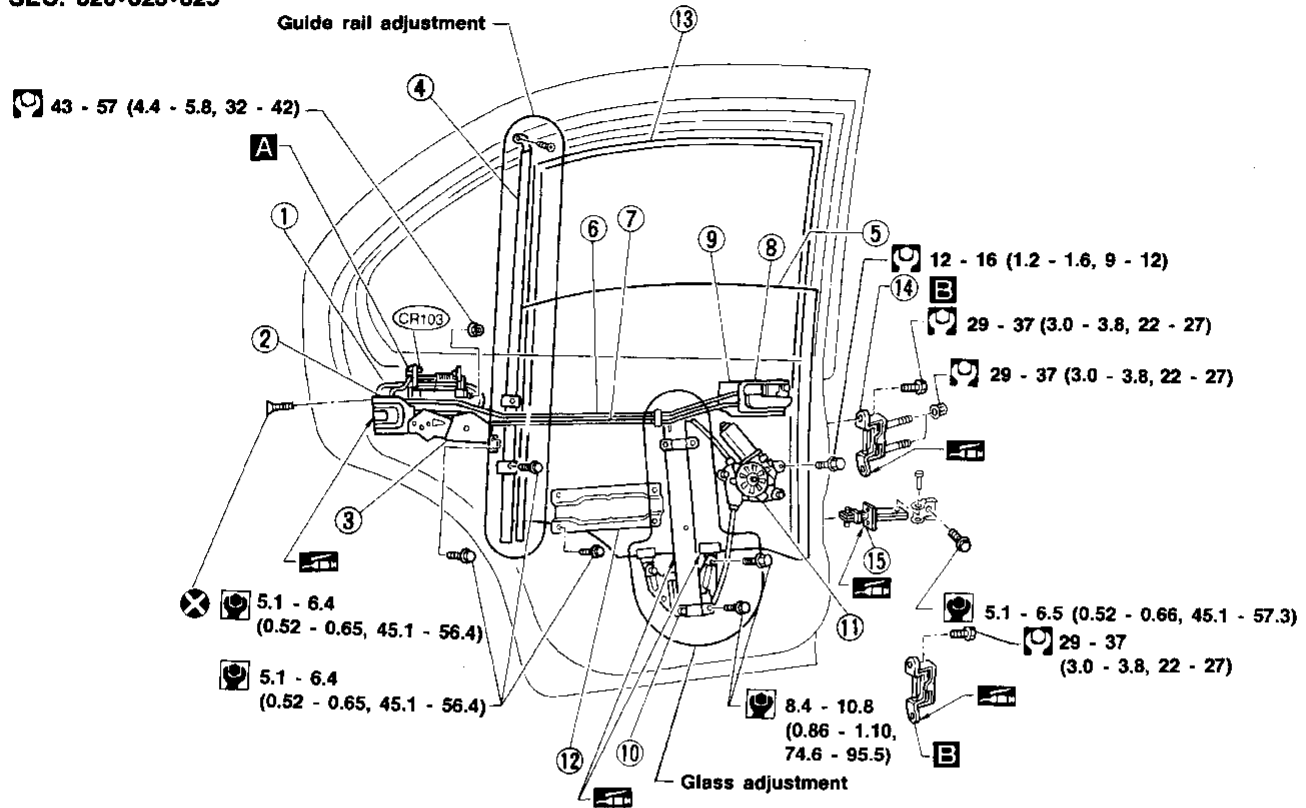

⊗ : N·m (kg·m, in·lb)
 ⊕ : N·m (kg·m, ft·lb)

SBF332HD


- | | | |
|----------------------|-------------------------|-----------------------|
| ① Outside handle | ⑥ Lock knob rod | ⑪ Motor |
| ② Door lock assembly | ⑦ Inside handle rod | ⑫ Inner bracket |
| ③ Door lock actuator | ⑧ Inside handle | ⑬ Glass run rubber |
| ④ Guide channel | ⑨ Inside handle bracket | ⑭ Door hinge |
| ⑤ Glass | ⑩ Regulator assembly | ⑮ Check link assembly |

INSTRUMENT PANEL

CAUTION:

- Disconnect ground terminal from battery in advance.
- Disconnect air bag system line in advance.
- Never tamper with or force air bag lid open, as this may adversely affect air bag performance.
- Be careful not to scratch pad and other parts.


REMOVAL — Instrument panel assembly

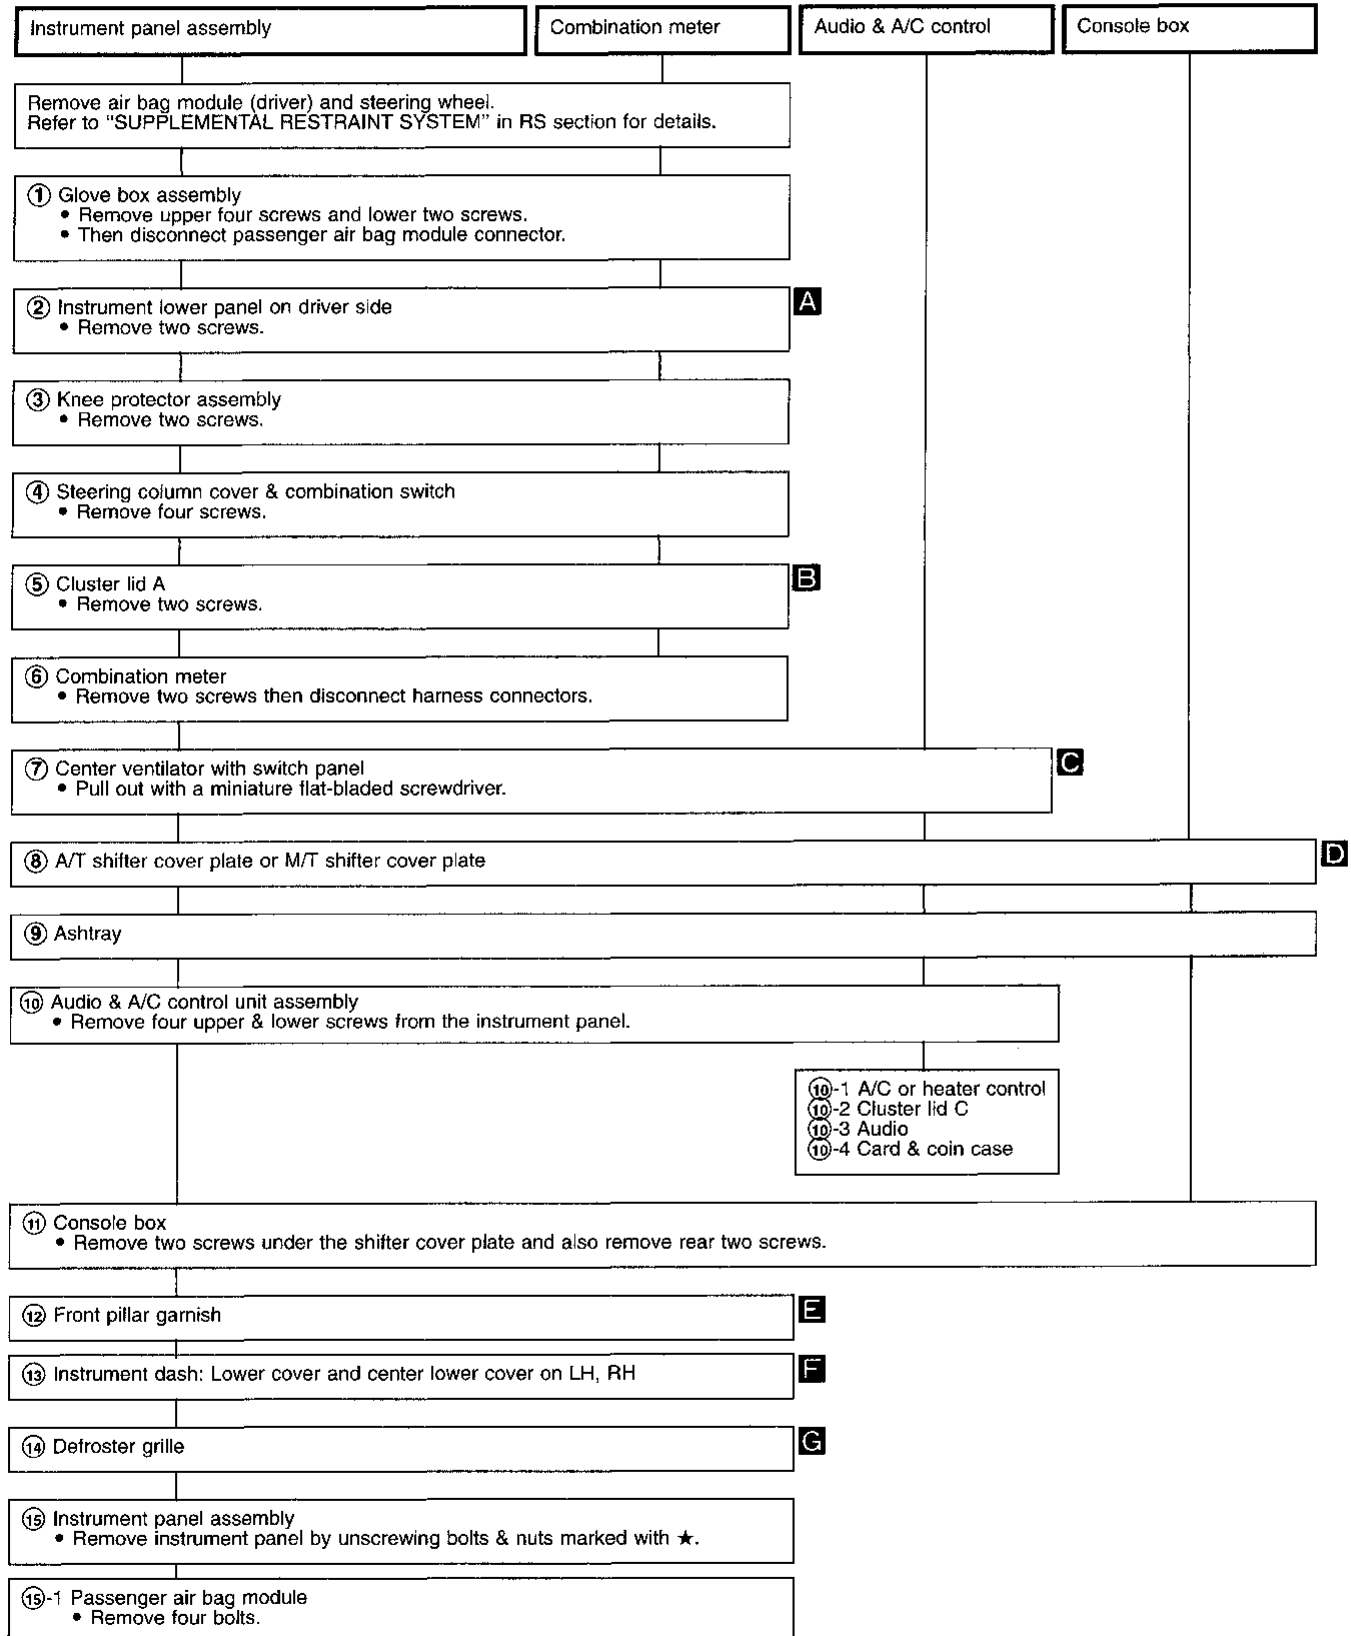

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX



INSTRUMENT PANEL

SEC. 248•280•487•680•685•769•969

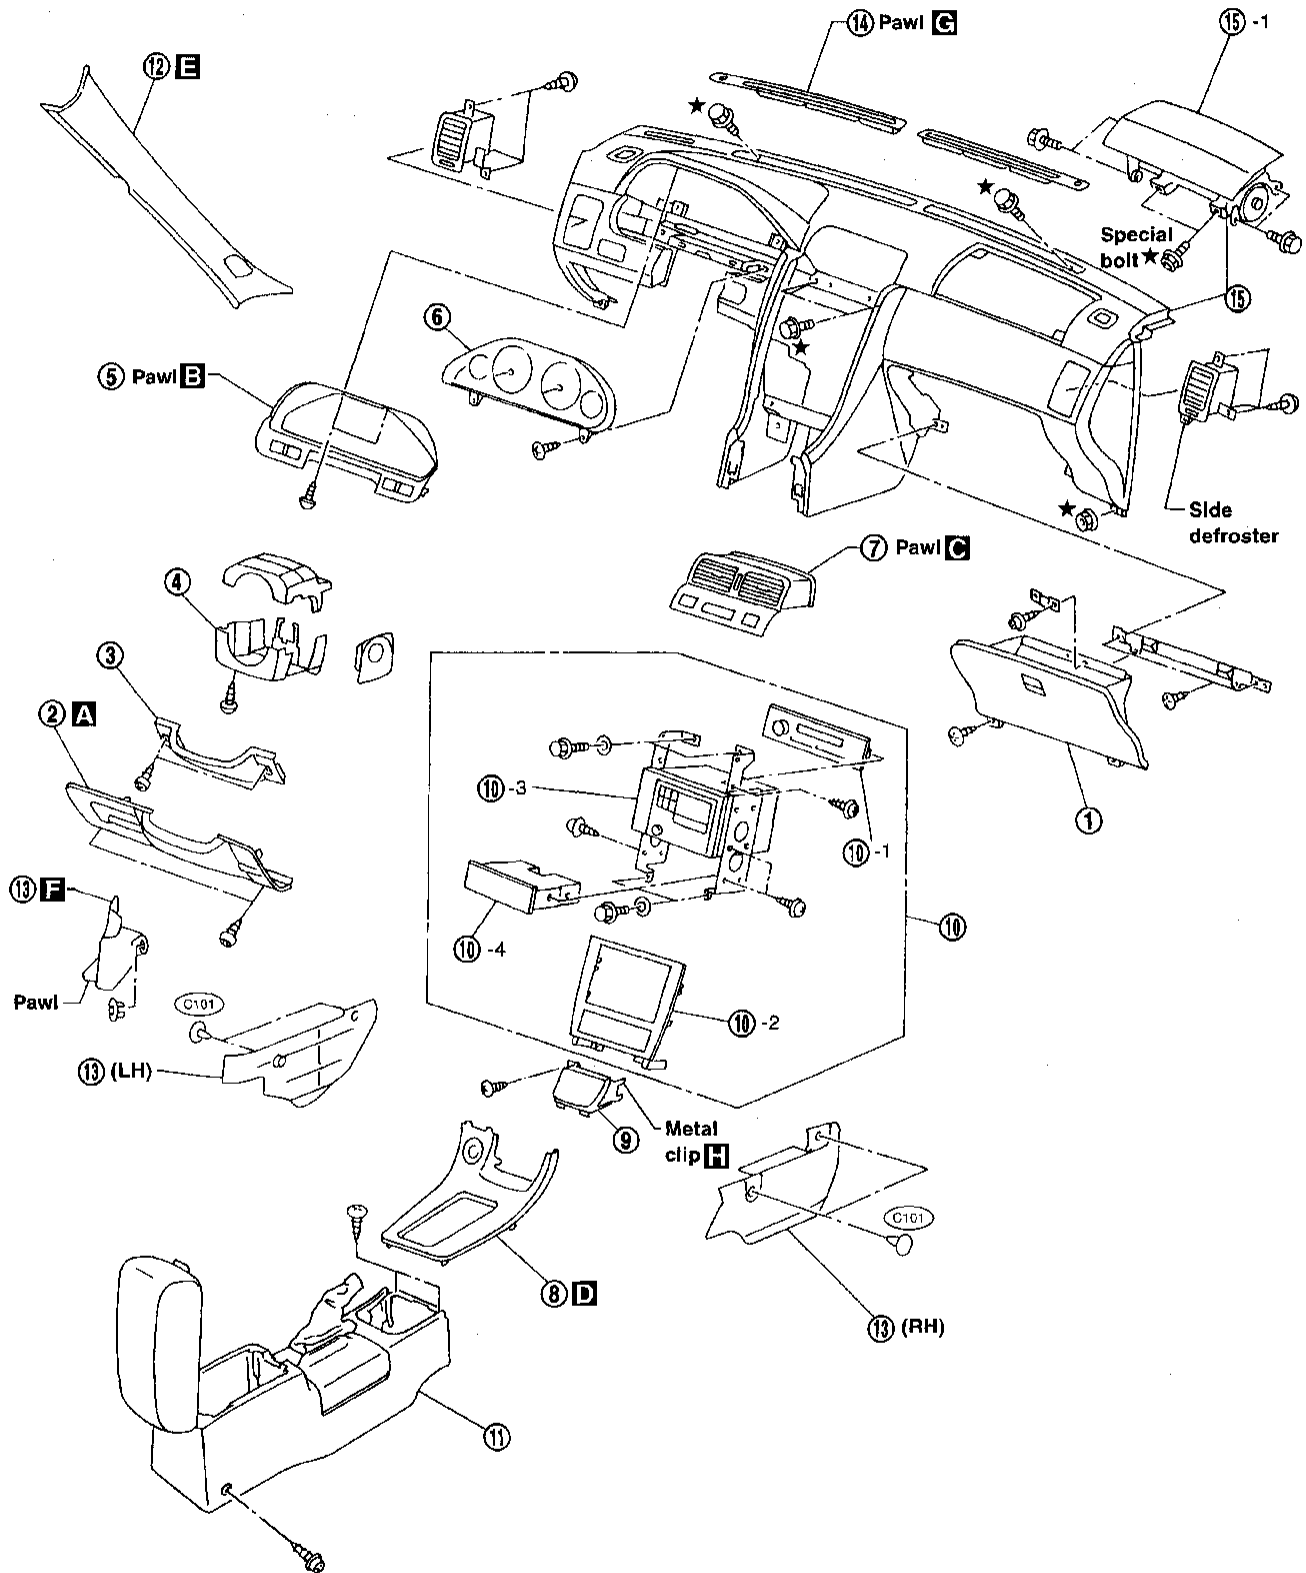






★: Instrument panel assembly mounting bolts and nuts

INSTRUMENT PANEL

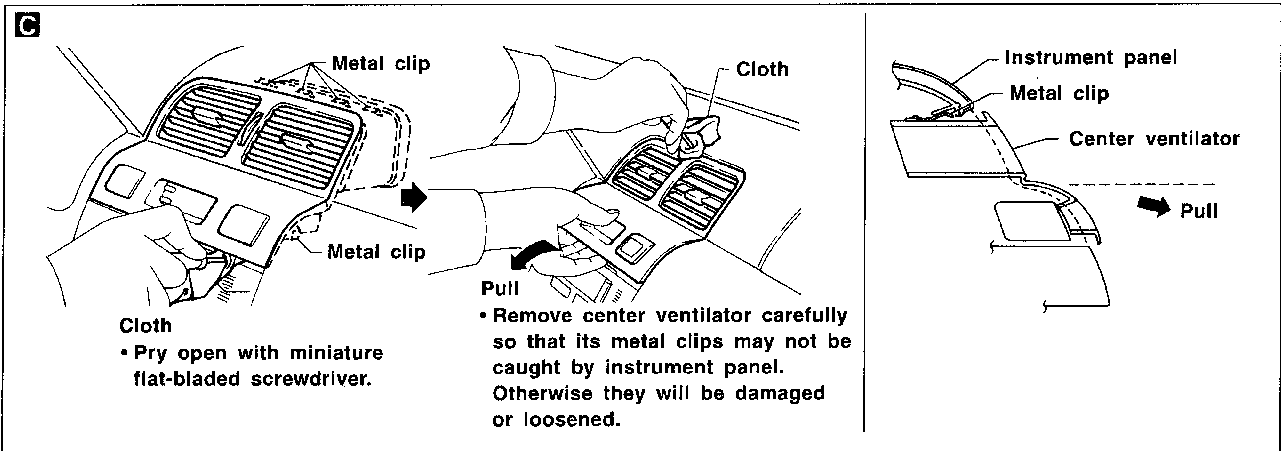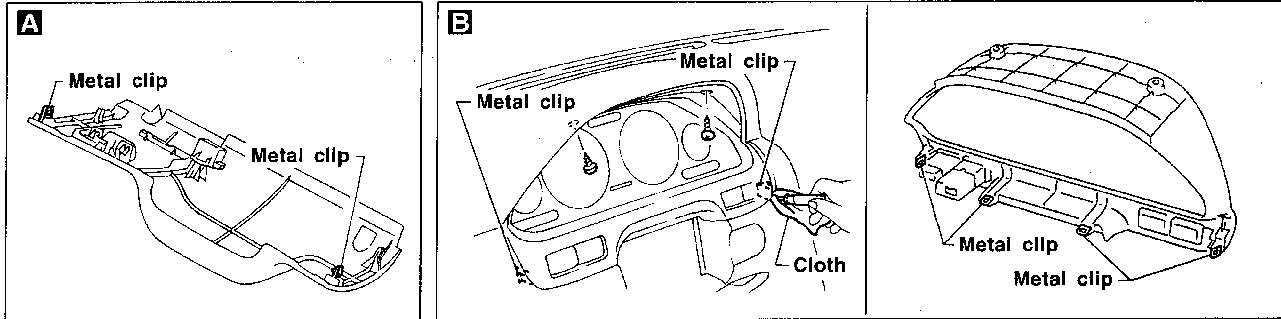

CAUTION:

- Do not pull the center ventilator horizontally, but do so slightly downwards.
- If it is pulled upwards, the metal clips on the upper side of the center ventilator can be caught by the instrument panel, and if it is pulled out forcefully, the clips may be loosened or damaged.
- If it is inadvertently pulled out in the upward direction, check the metal clips for any looseness or detachment.
- If the center ventilator is dropped or knocked, check it for damage, and looseness or detachment of defroster grille, before reinstalling it.

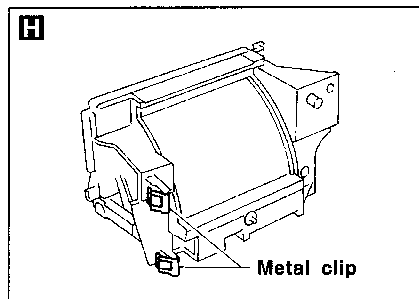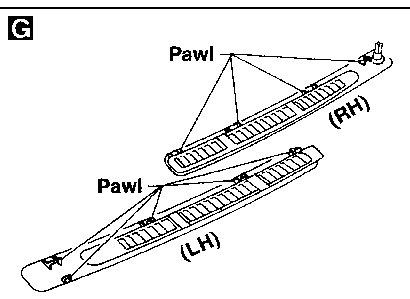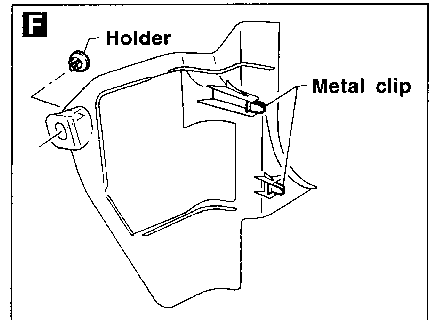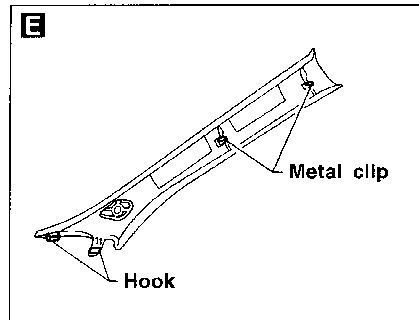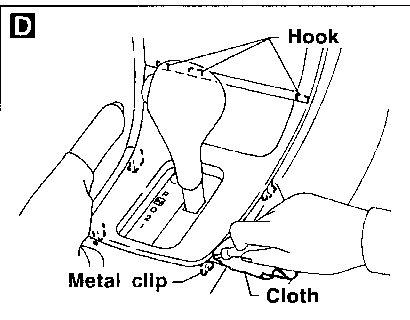

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

Side and Floor Trim

CAUTION:

Wrap the tip of flat-bladed screwdriver with a cloth when removing metal clips from garnishes.








REMOVAL — Body side trim

- ① Remove front and rear seats. Refer to "SEAT" for details, BT-27, 30.
- ② Remove front and rear kicking plates.
- ③ Remove dash side lower finishers.
- ④ Remove front and rear body side welts. Refer to "Body side welt" in "EXTERIOR" for details, BT-23.
- ⑤ Remove front pillar garnishes.
- ⑥ Remove center pillar upper garnishes.
- ⑦ Remove center pillar lower garnishes.
- ⑧ Remove rear pillar garnishes.
- ⑨ Remove high-mounted stop lamp.
- ⑩ Remove rear parcel shelf finisher.

INTERIOR TRIM

Side and Floor Trim (Cont'd)

SEC. 268•284•678•749•769•799

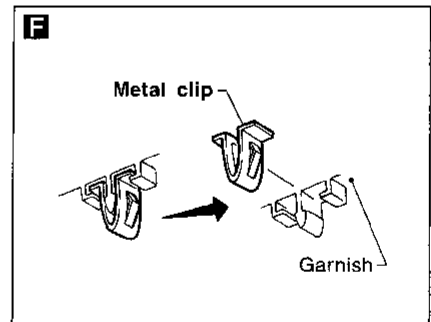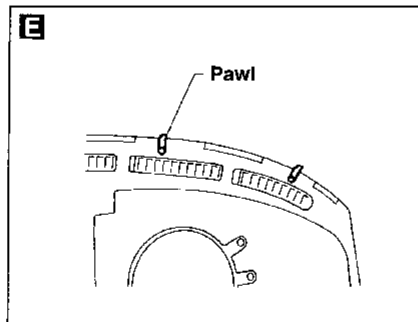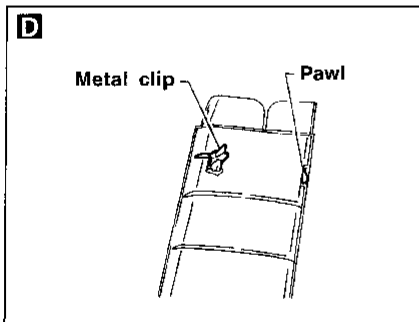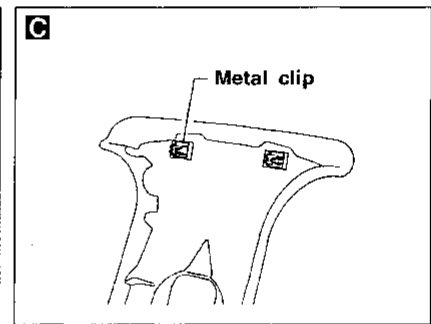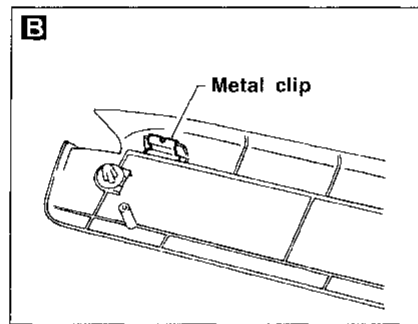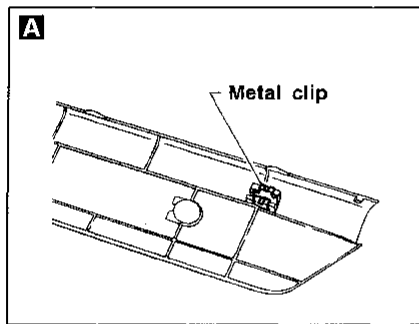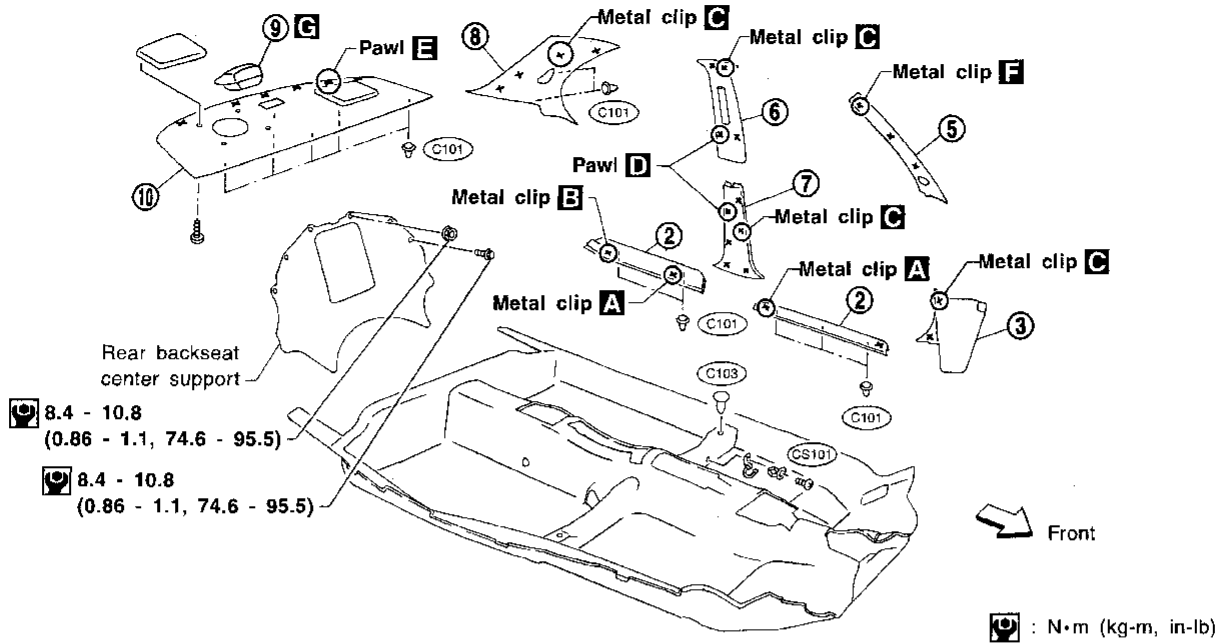

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS

SBT367

BT

HA



EL

IDX

INTERIOR TRIM


Side and Floor Trim (Cont'd)

Removal

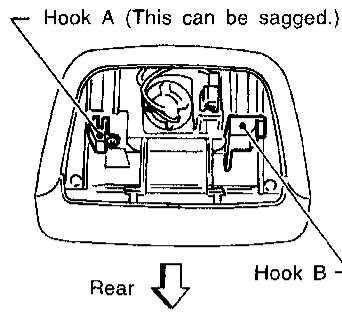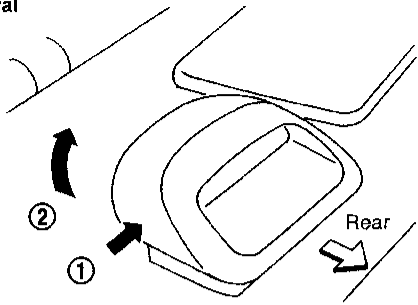

- Be careful not to break the hooks when removing the high-mounted stop lamp.
- When removing, disconnect the high-mounted stop lamp connector.

Installation

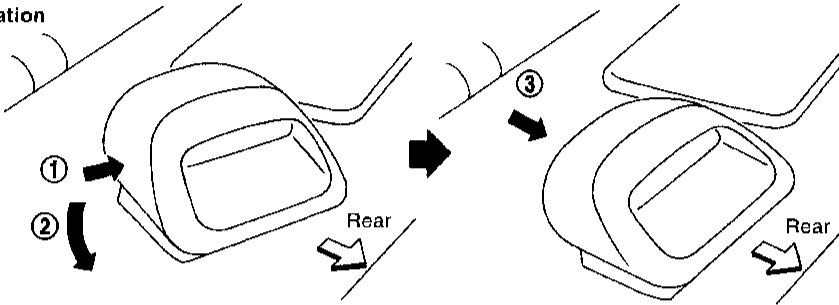

SBT366





INTERIOR TRIM

Door Trim

Removal — Door trim

- ① Remove inside handle escutcheon.
- ② Remove power window switches, then disconnect the connectors.
- ③ Remove screw securing pull handle, and then remove pull handle.
- ④ Remove step lamp lens and two screws securing step lamp, and then disconnect step lamp connector.
- ⑤ Remove two screws. (Front door only)
- ⑥ Remove clips (C101) securing door finisher.
- ⑦ Lift out door finisher. Disconnect harness connectors.

SEC. 251•267•809•828

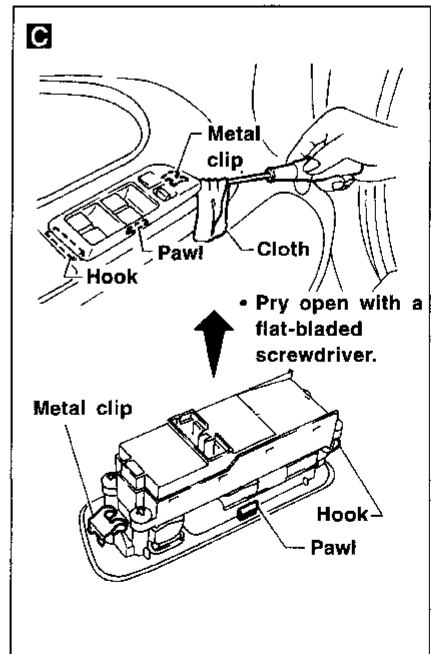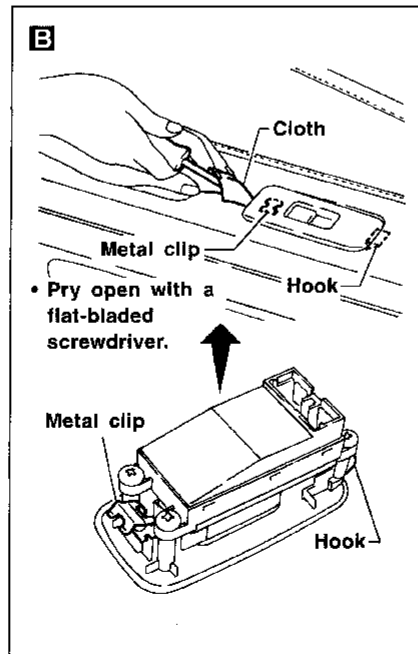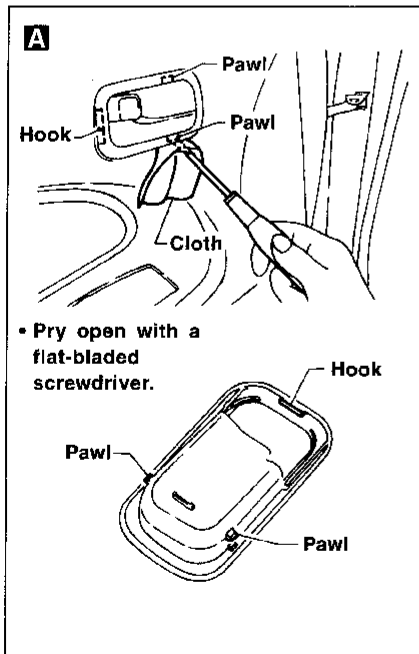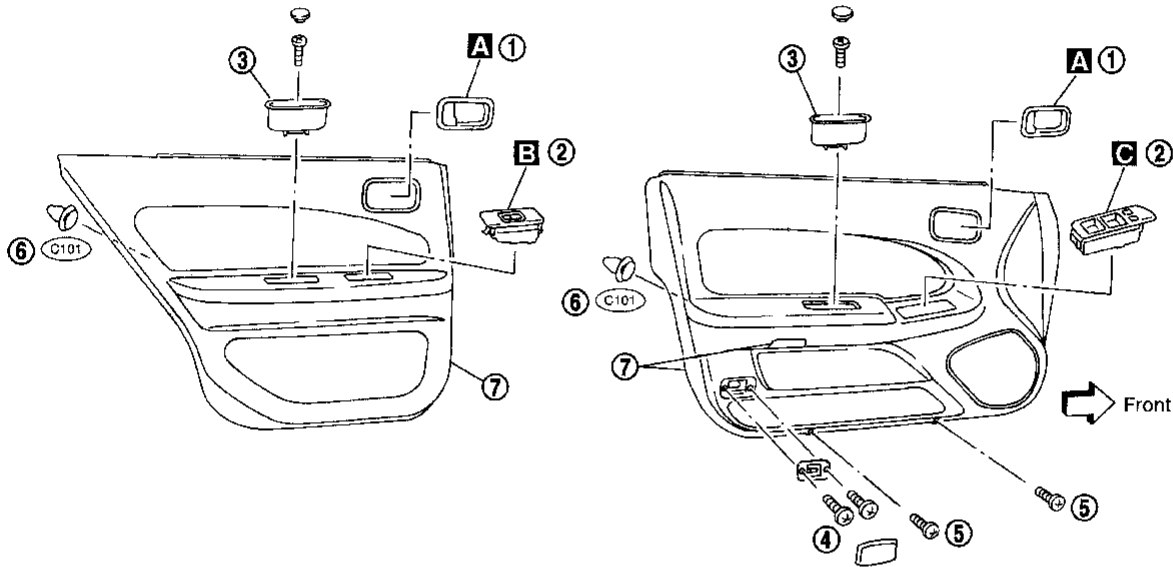

SBT368

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX


INTERIOR TRIM

Roof Trim

REMOVAL — Headlining

- ① Remove front and rear seats. Refer to "SEAT" for details, BT-27, 30.
- ② Remove front and rear seat belts. Refer to "SEAT BELTS" in RS section for details.
- ③ Remove body side trim. Refer to "Side and Floor Trim" for details, BT-16.
- ④ Remove sunroof switch or spot lamp switch.
- ⑤ Remove inside mirror assembly.
- ⑥ Remove sun visors.
- ⑦ Remove interior lamp assembly.
- ⑧ Remove assist grips.
- ⑨ Remove metal clips securing headlining.
- ⑩ Remove headlining from vehicle through front passenger side.

SEC. 264-738-963-964

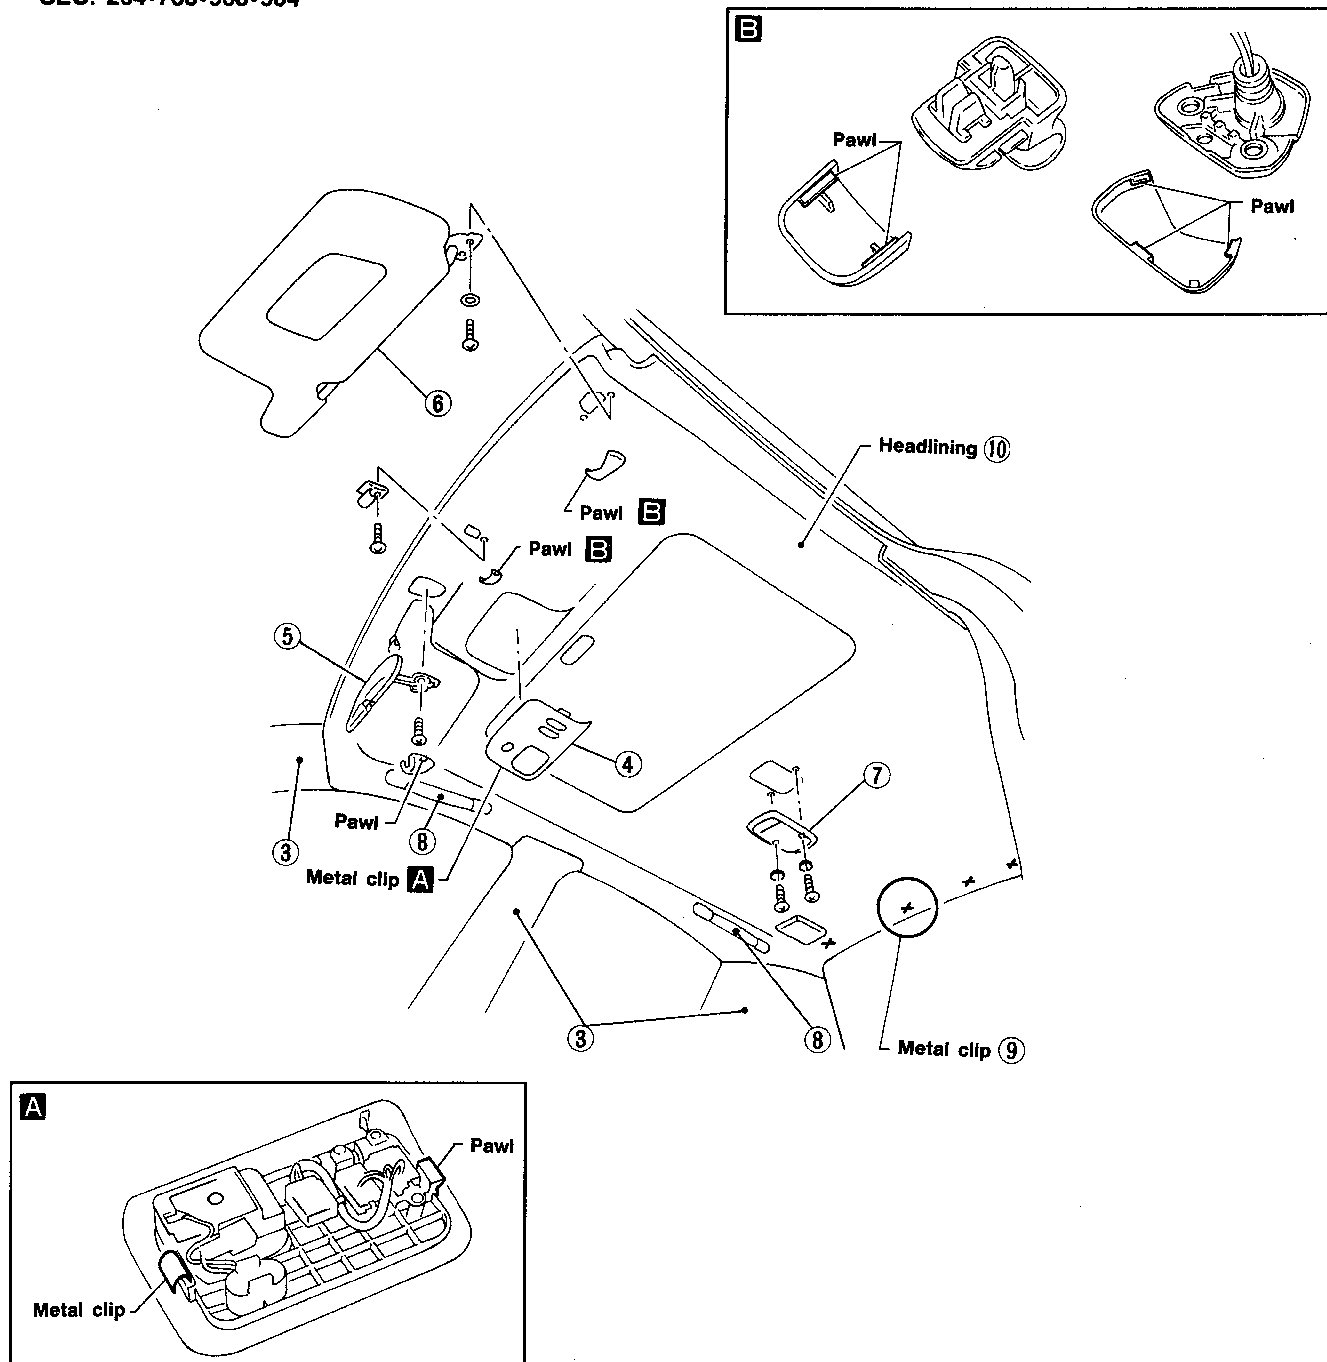


MBT060A

INTERIOR TRIM


Trunk Room Trim

SEC. 849

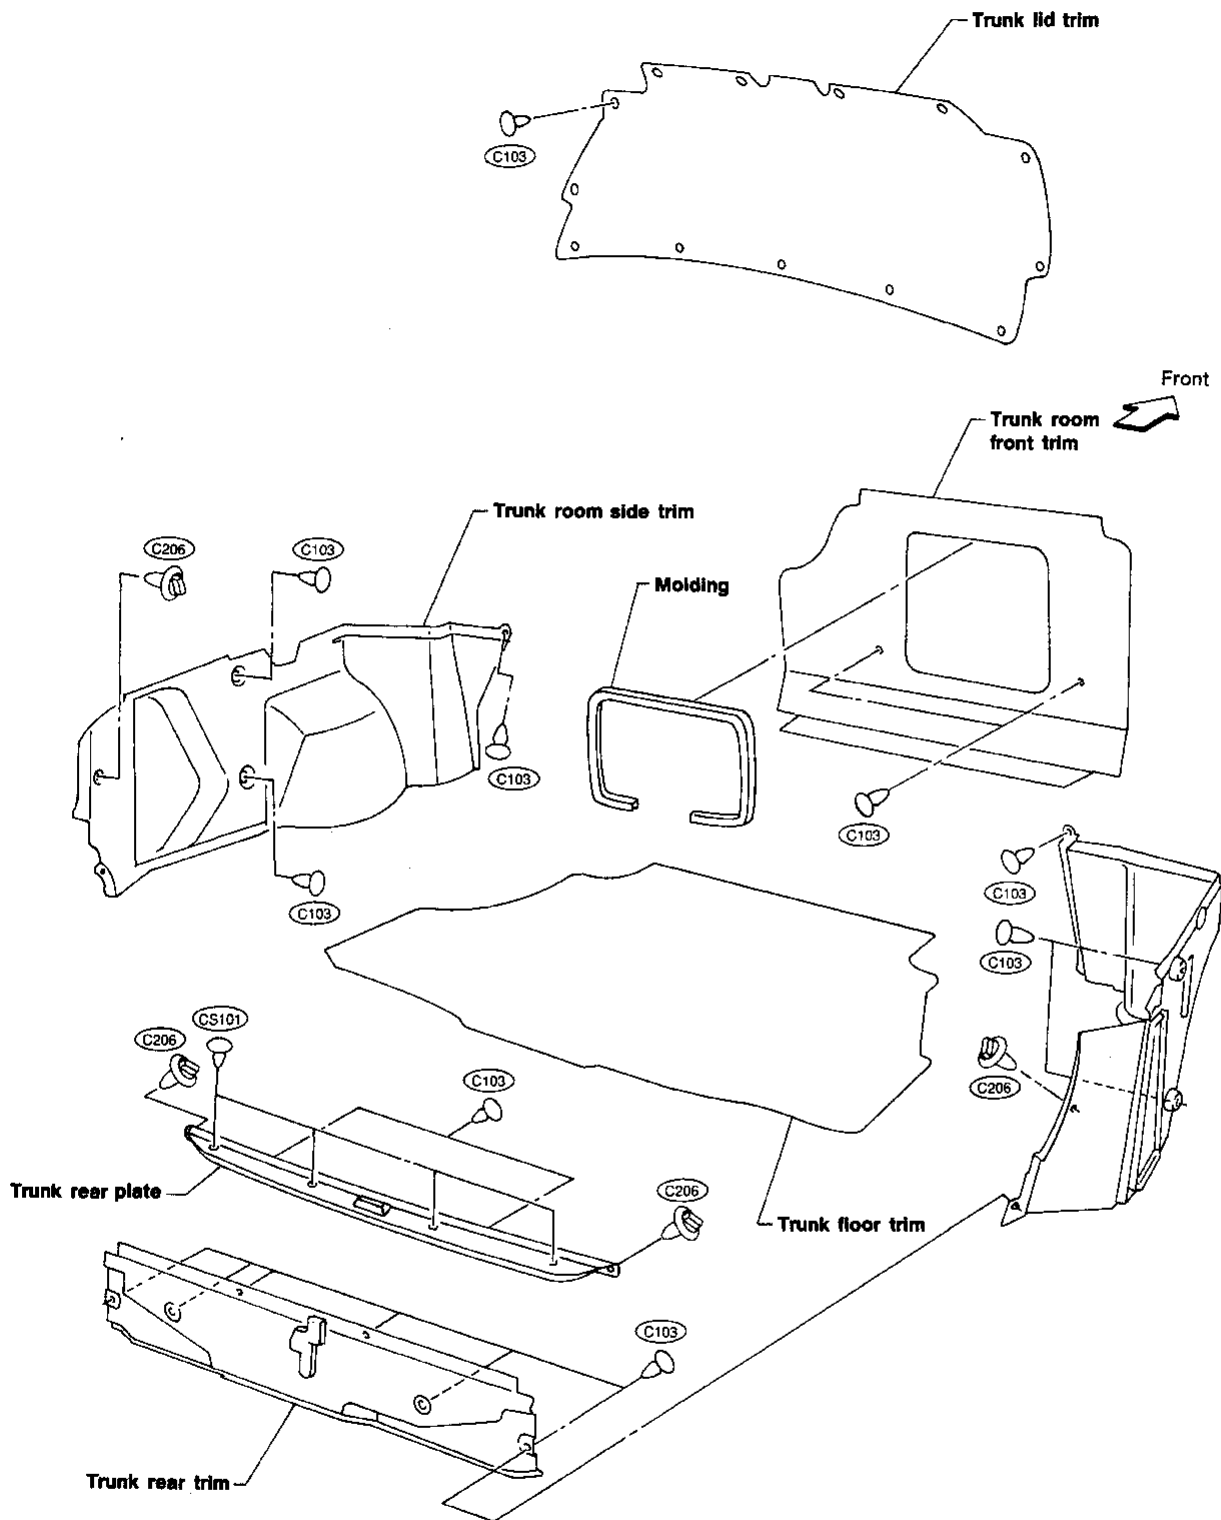


GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

EXTERIOR

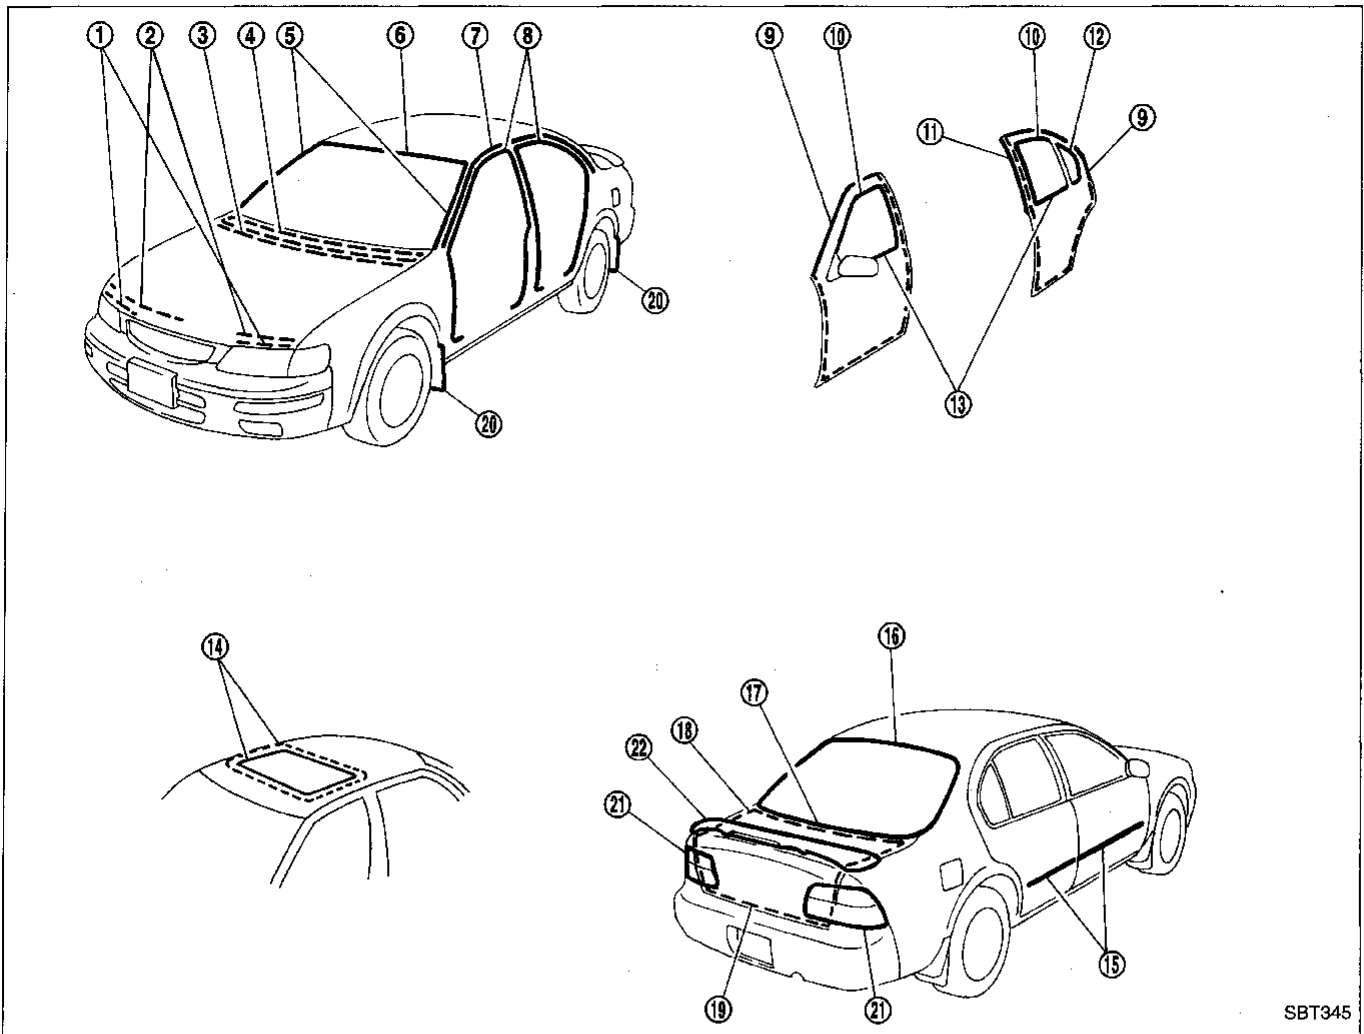


SBT345

① ② Hood molding and hood front seal

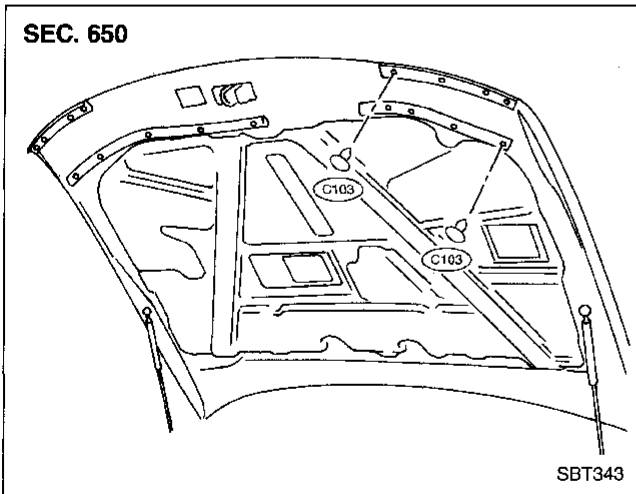

③ ④ Cowl top seal and cowl top grille

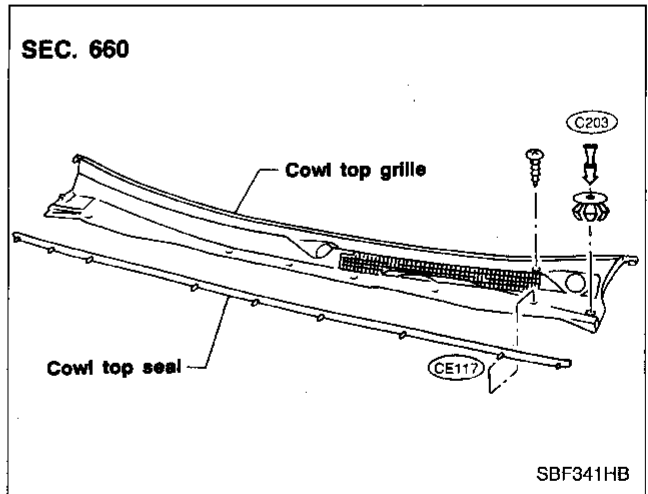



⑤ Windshield side molding

Mounted with screws.

⑥ Windshield upper molding

SEC. 720

1. Cut off sealant at glass end.
2. Remove old sealant from panel surface.
3. Set molding fastener and apply primer to body panel, and apply sealant to body.

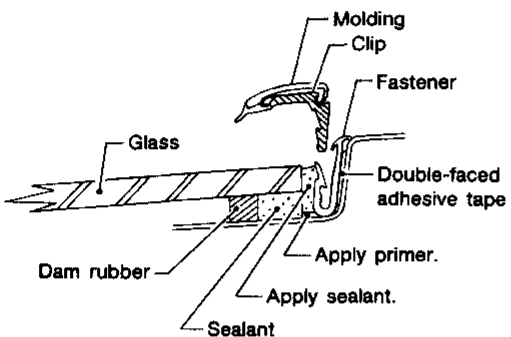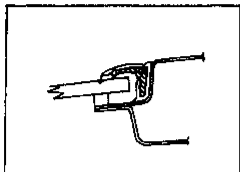


4. Install molding by aligning the molding mark located on center with vehicle center. Be sure to install tightly so that there is no gap around the corner.

SBF342HA

⑧ Body side welt




SEC. 767

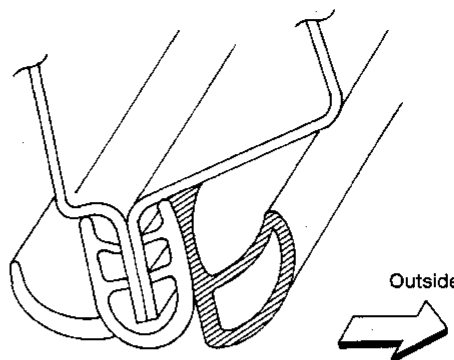

SBF454EA

⑨ Door weatherstrip



SEC. 800-820

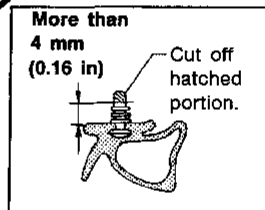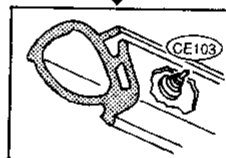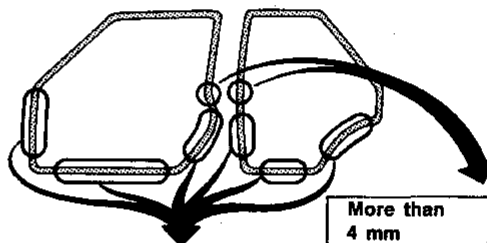

SBF455EA

⑦ Drip weatherstrip


SEC. 767

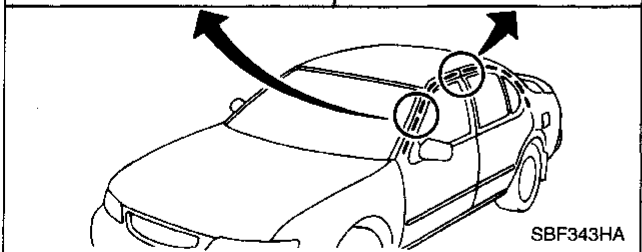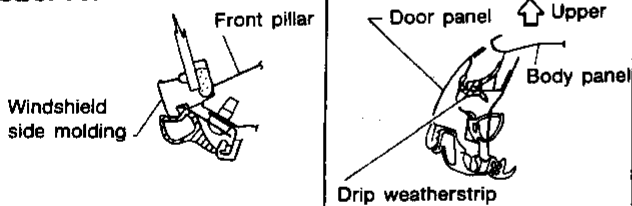


SBF343HA

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX


⑩ Door sash molding

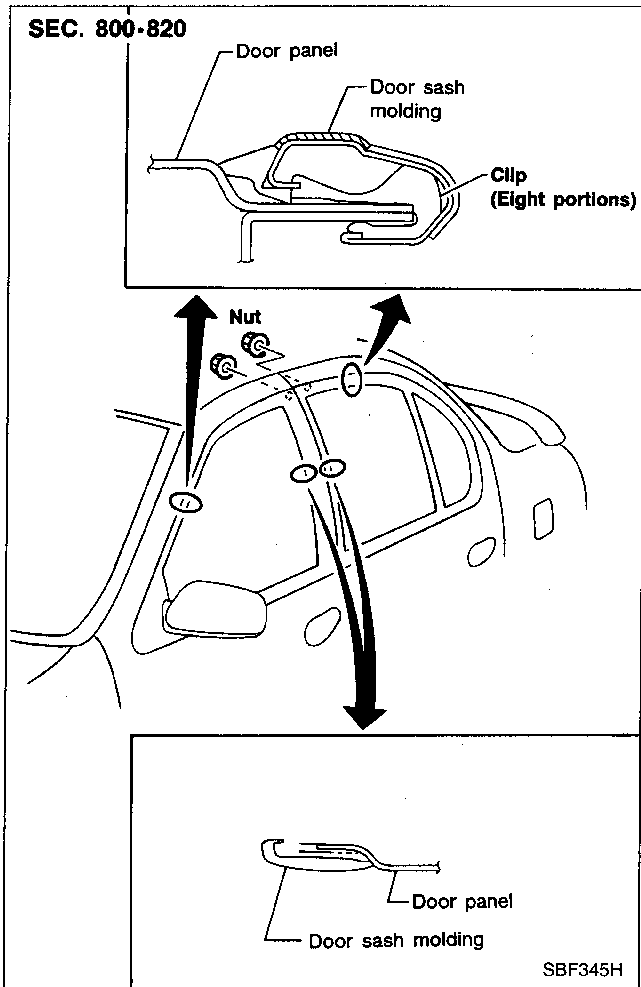


⑫ Rear door corner molding

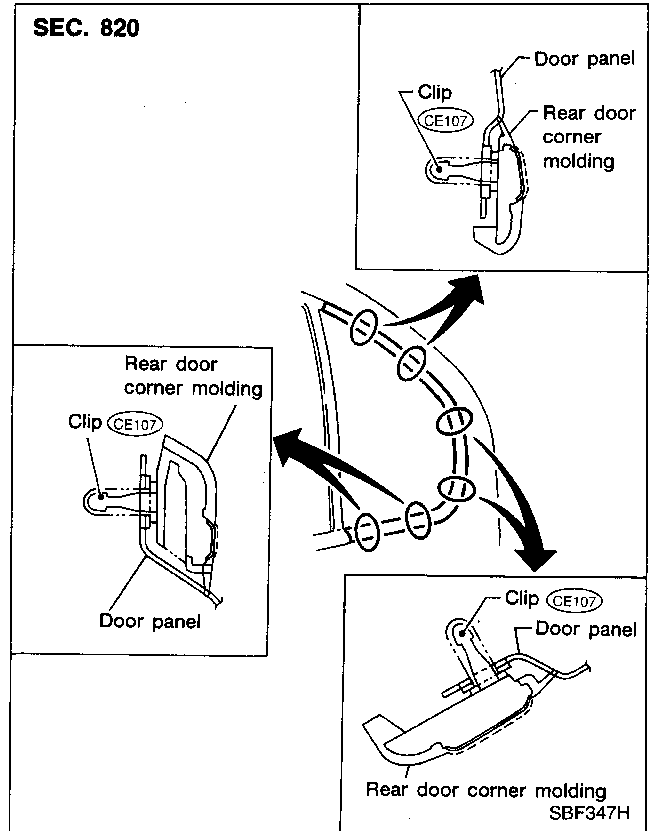


⑪ Front door parting seal

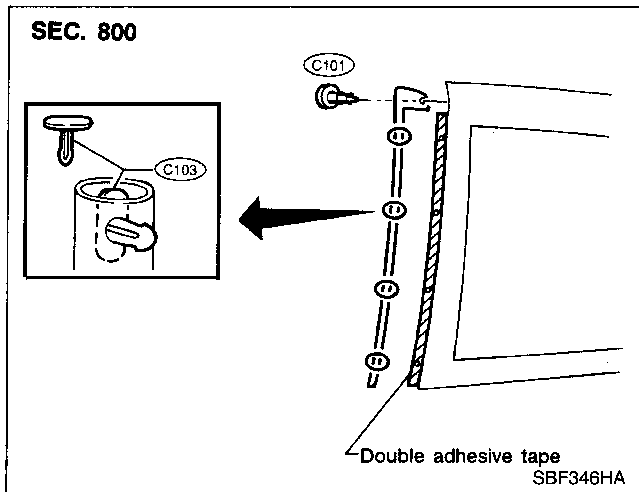


⑬ Door outside molding

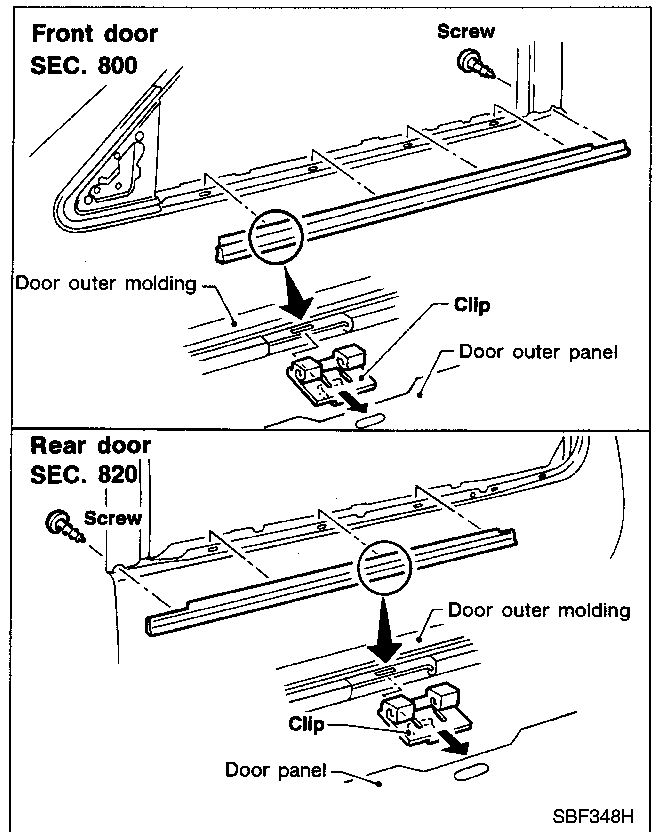


14 Sunroof lid weatherstrip

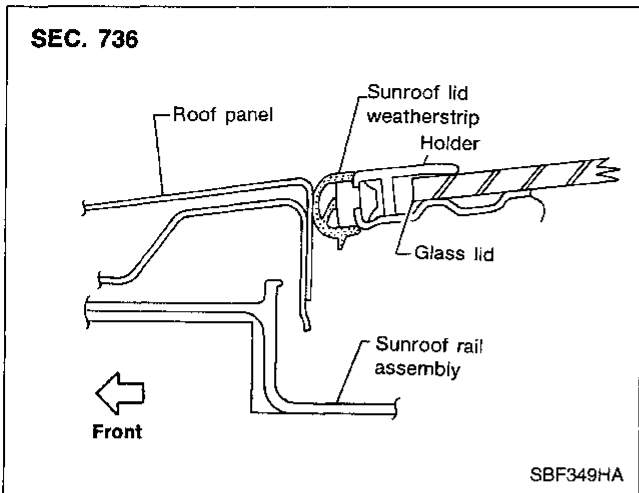


18 Rear window lower molding

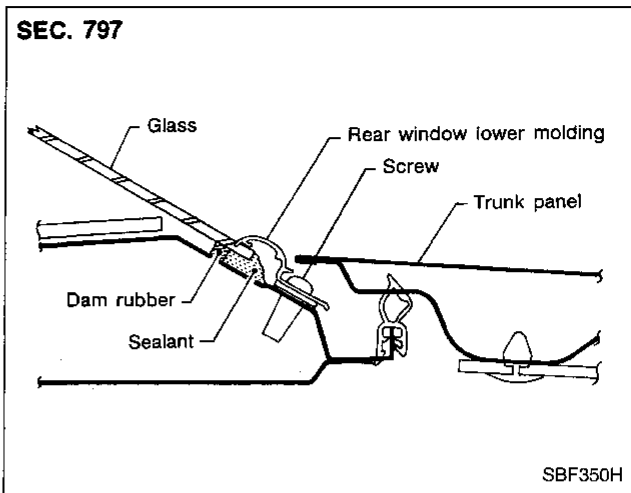


15 Side guard molding

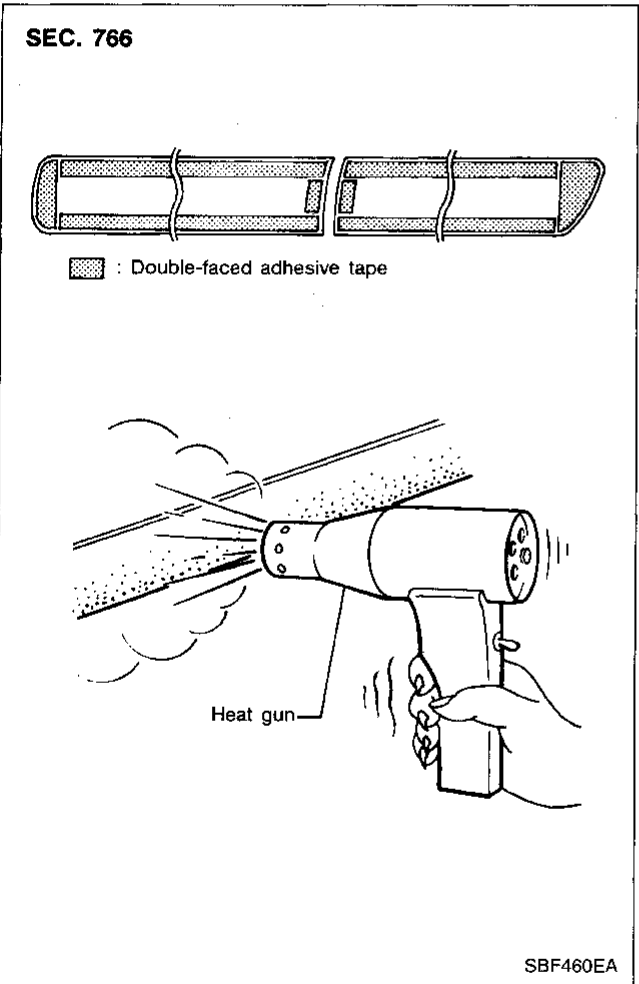

19 Trunk lid weatherstrip

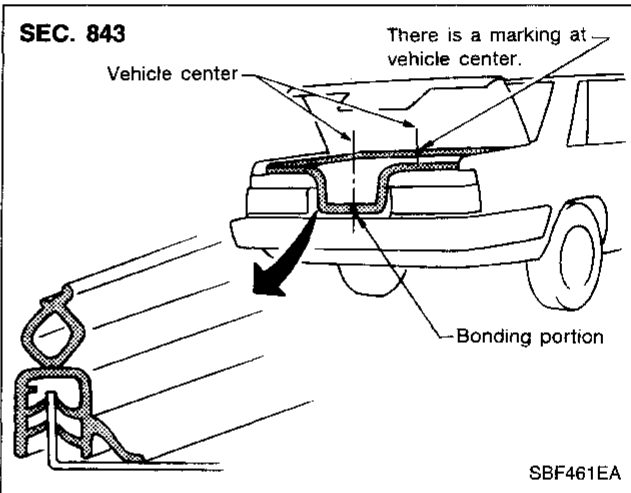

20 Mudguard

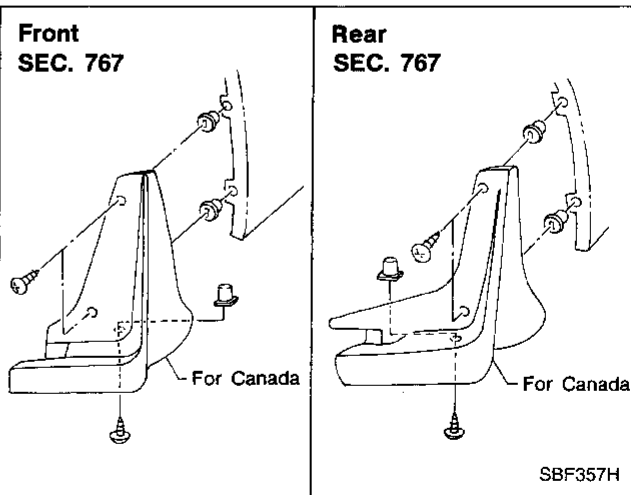

16 17 Rear window upper molding and side molding


Basically the same as windshield upper molding. Refer to 6 Windshield upper molding.

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

EXTERIOR


21 Rear combination lamp

- Rear combination lamps are installed with nuts and butyl seal.

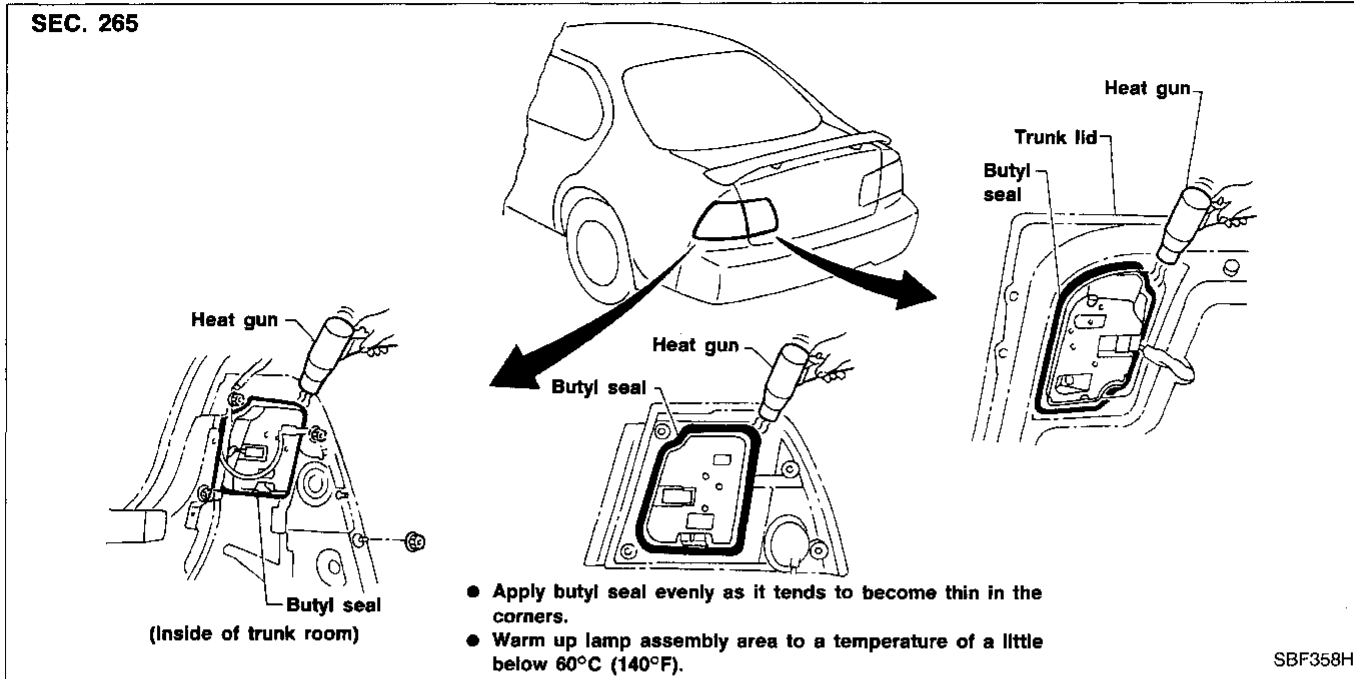

22 Rear air spoiler

- When removing, first disconnect high-mounted stop lamp connector located on the back of trunk lid, then remove air spoiler taking care the stop lamp harness does not get caught.
- When installing, make sure that there are not gaps or waves at ends of air spoiler.
- Before installing spoiler, clean and remove oil from surface where spoiler will be mounted.

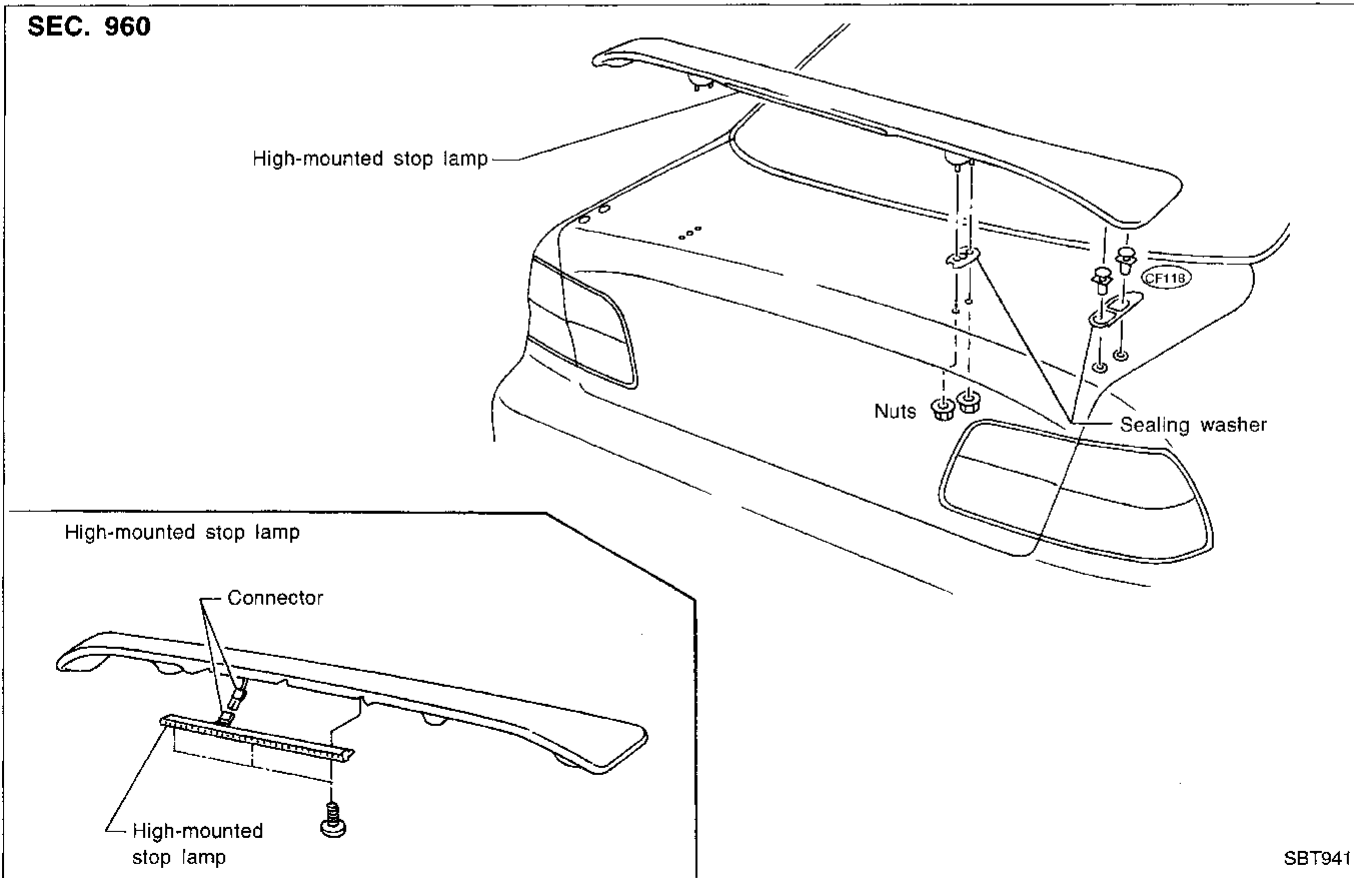


SEAT

- When removing or installing the seat trim, carefully handle it to keep dirt out and avoid damage.
- ★ For Wiring Diagram, refer to "POWER SEAT" in EL section.

Front Seat

POWER SEAT

SEC. 870

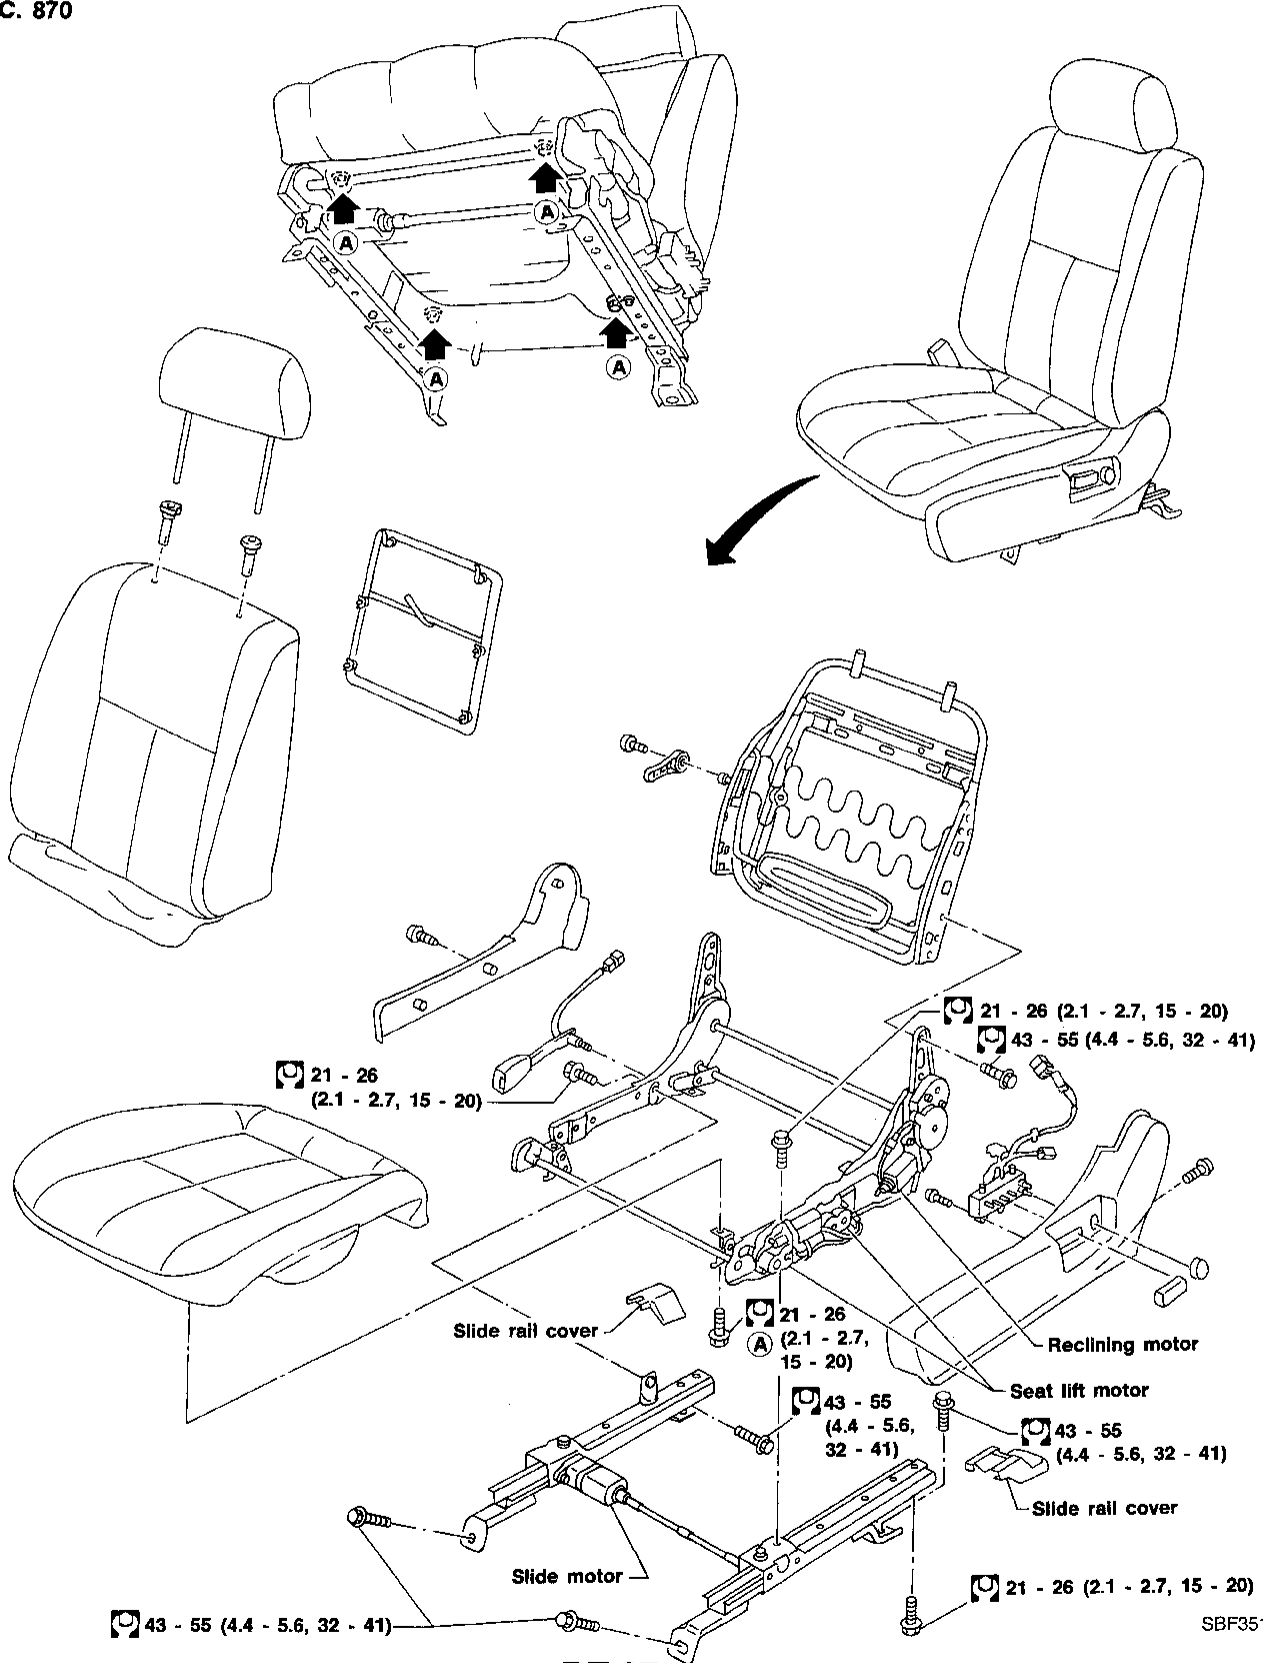

: N·m (kg-m, ft-lb)

BT-27

SBF351H


GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

SEAT

Front Seat (Cont'd)

MANUAL SEAT

SEC. 870

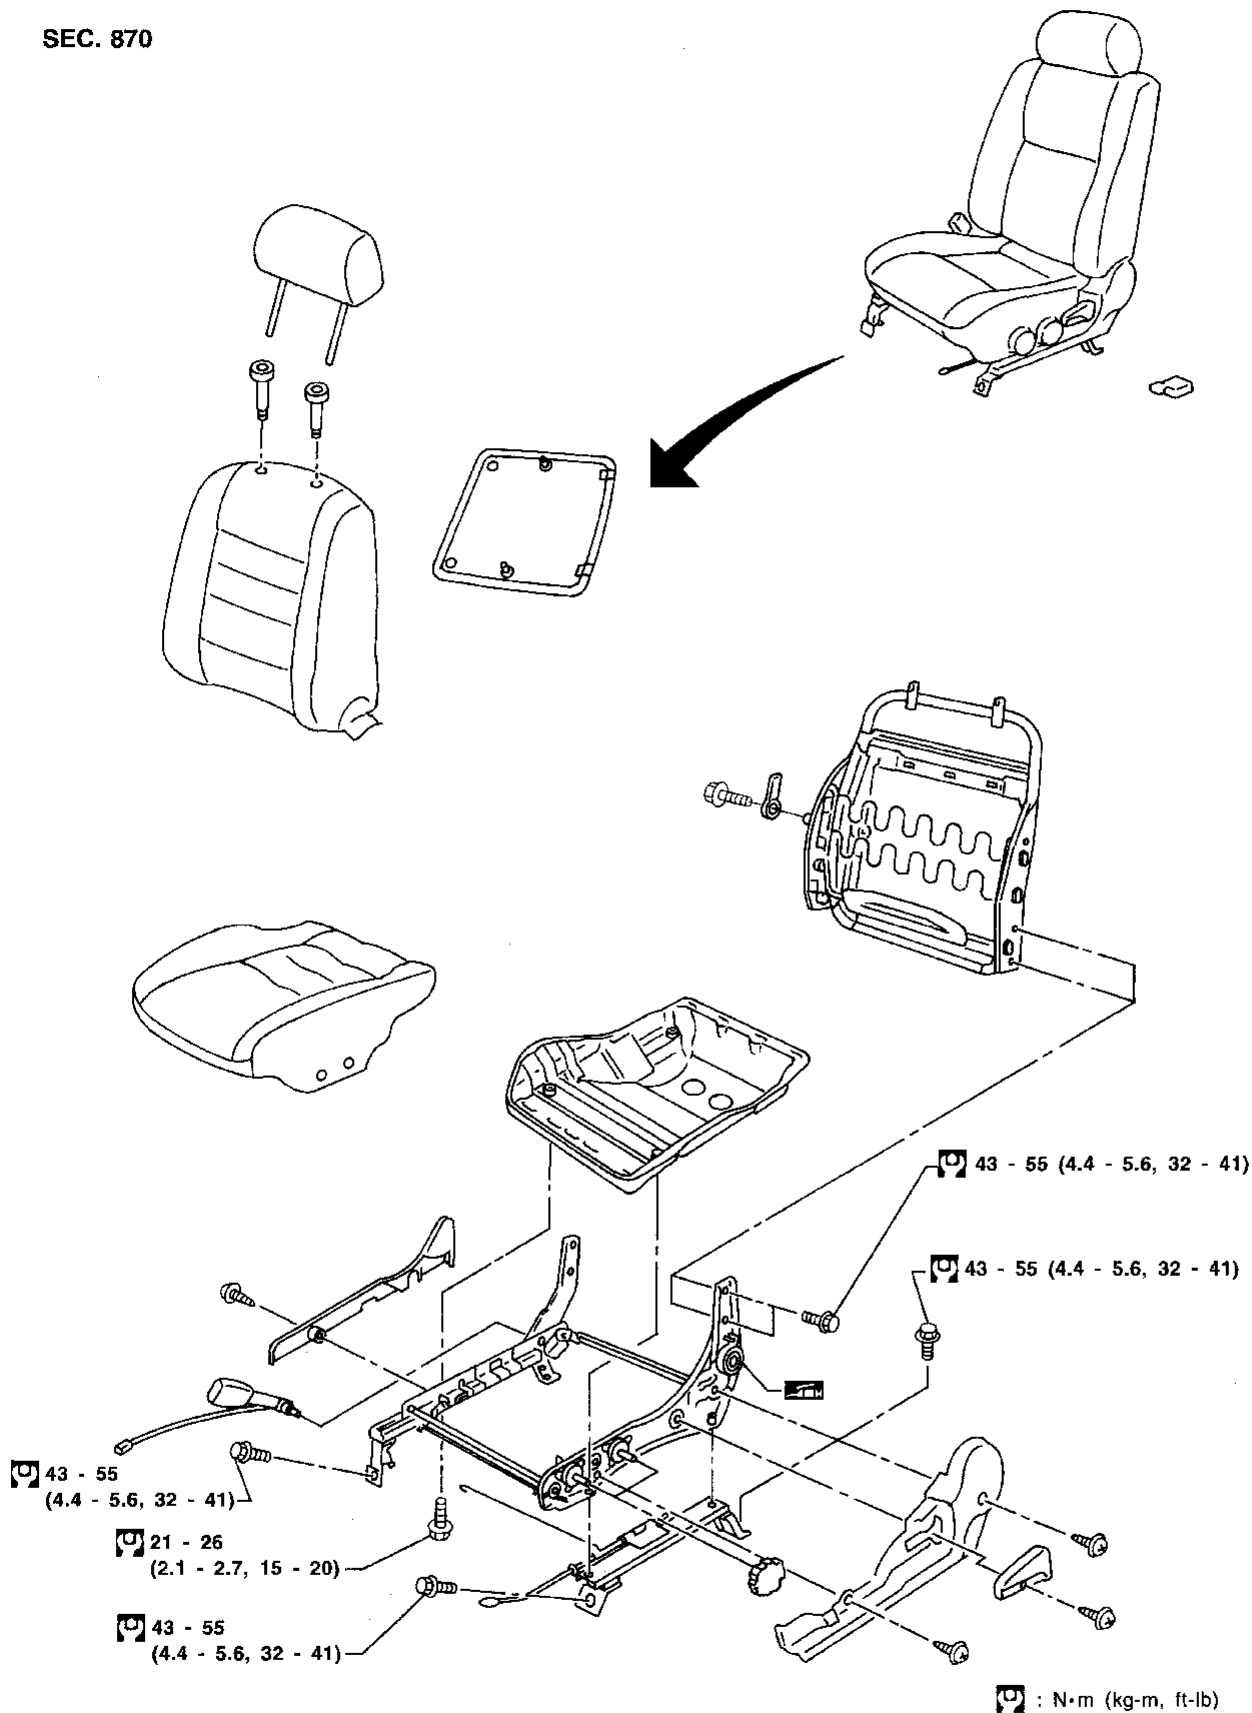

Heated Seat

- When handling seat, be extremely careful not to scratch heating unit.
- To replace heating unit, seat trim and pad should be separated.
- Do not use any organic solvent, such as thinner, benzene, alcohol, gasoline, etc. to clean trims.
- ★ For Wiring Diagram, refer to "HEATED SEAT" in EL section.

Seatback heating unit removal & installation

SEC. 870

Trim temperature °C (°F)	Increasing to 35 - 45 (95 - 113)	Decreasing to 15 - 25 (59 - 77)
Thermostat operation	OFF	ON


SBF424HA


GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX


SEAT


Rear Seat


SEC. 880

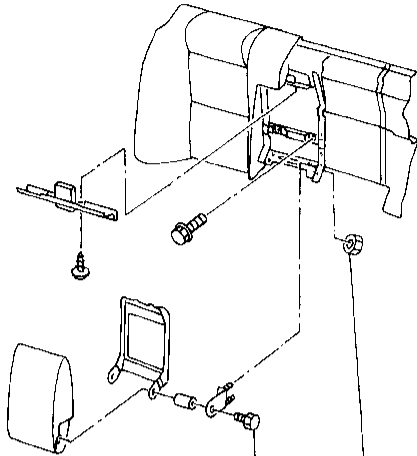

 5.1 - 6.5 (0.52 - 0.66, 45.1 - 57.3)

 5.1 - 6.5 (0.52 - 0.66, 45.1 - 57.3)

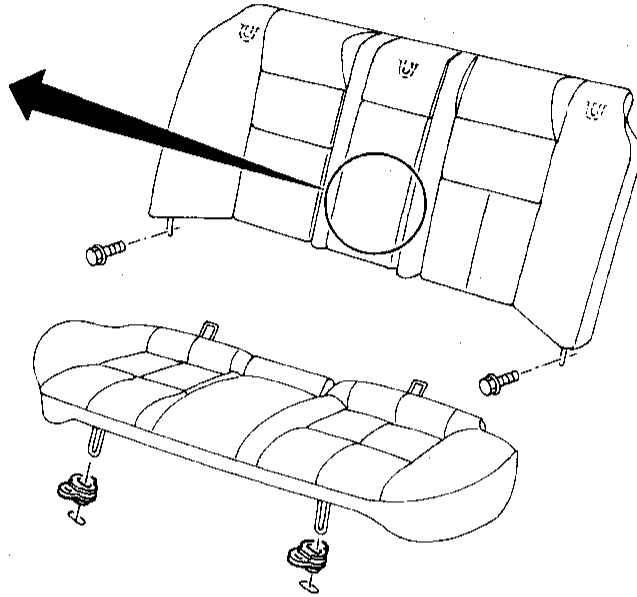

 : N·m (kg-m, in-lb)


MBT077AA

SUNROOF

ADJUSTMENT

Install motor & limit SW assembly and sunroof rail assembly in the following sequence:

1. Arrange equal lengths of link and wire assemblies on both sides of sunroof opening.
2. Connect sunroof connector to sunroof switch and positive (+) power supply.
3. Set lid assembly to fully closed position **A** by operating OPEN switch and TILT switch.
4. Fit outer side of lid assembly to the surface of roof on body outer panel.
5. Remove motor, and keep OPEN switch pressed until motor pinion gear reaches the end of its rotating range.
6. Install motor.
7. Check that motor drive gear fits properly in wires.
8. Press TILT-UP switch to check lid assembly for normal tilting.
9. Check sunroof lid assembly for normal operations (tilt-up, tilt-down, open, and close).

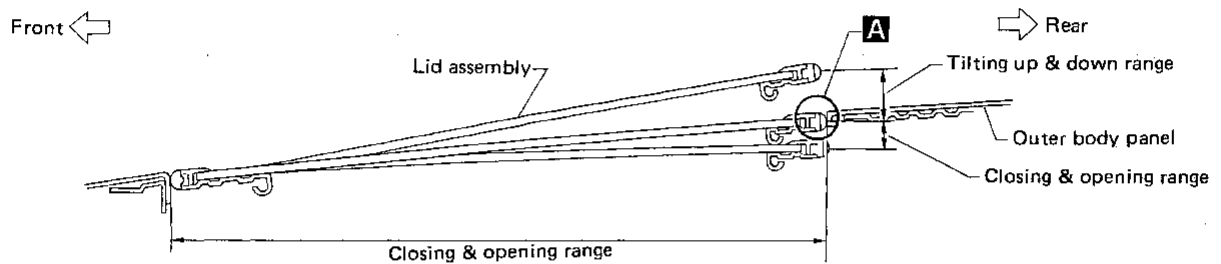

SBF920F

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX


SUNROOF

REMOVAL

- After any adjustment, check sunroof operation and lid alignment.
- Handle finisher plate and glass lid with care so not to cause damage.
- It is desirable for easy installation to mark each point before removal.

CAUTION:


Always work with a helper.

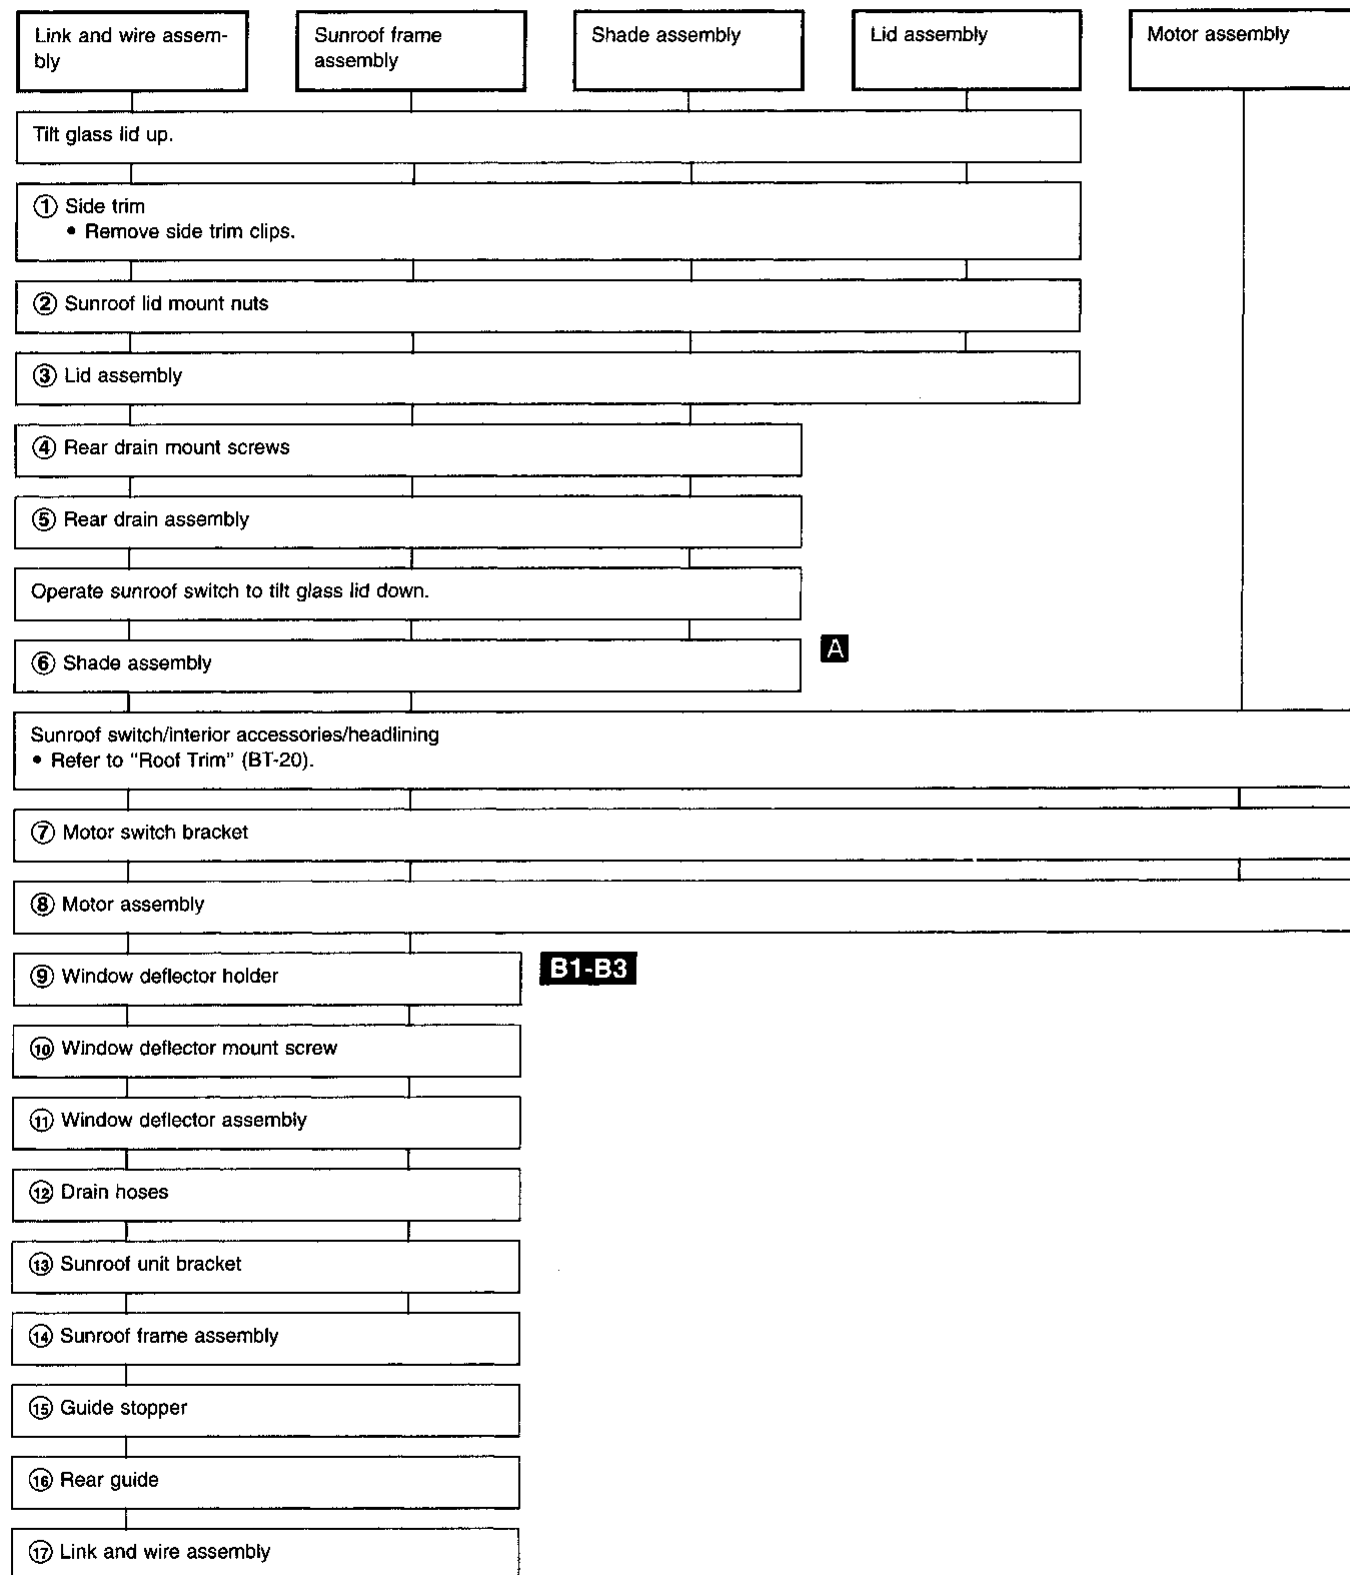

SUNROOF


★ For Wiring Diagram, refer to "ELECTRIC SUNROOF" in EL section.

SEC. 736

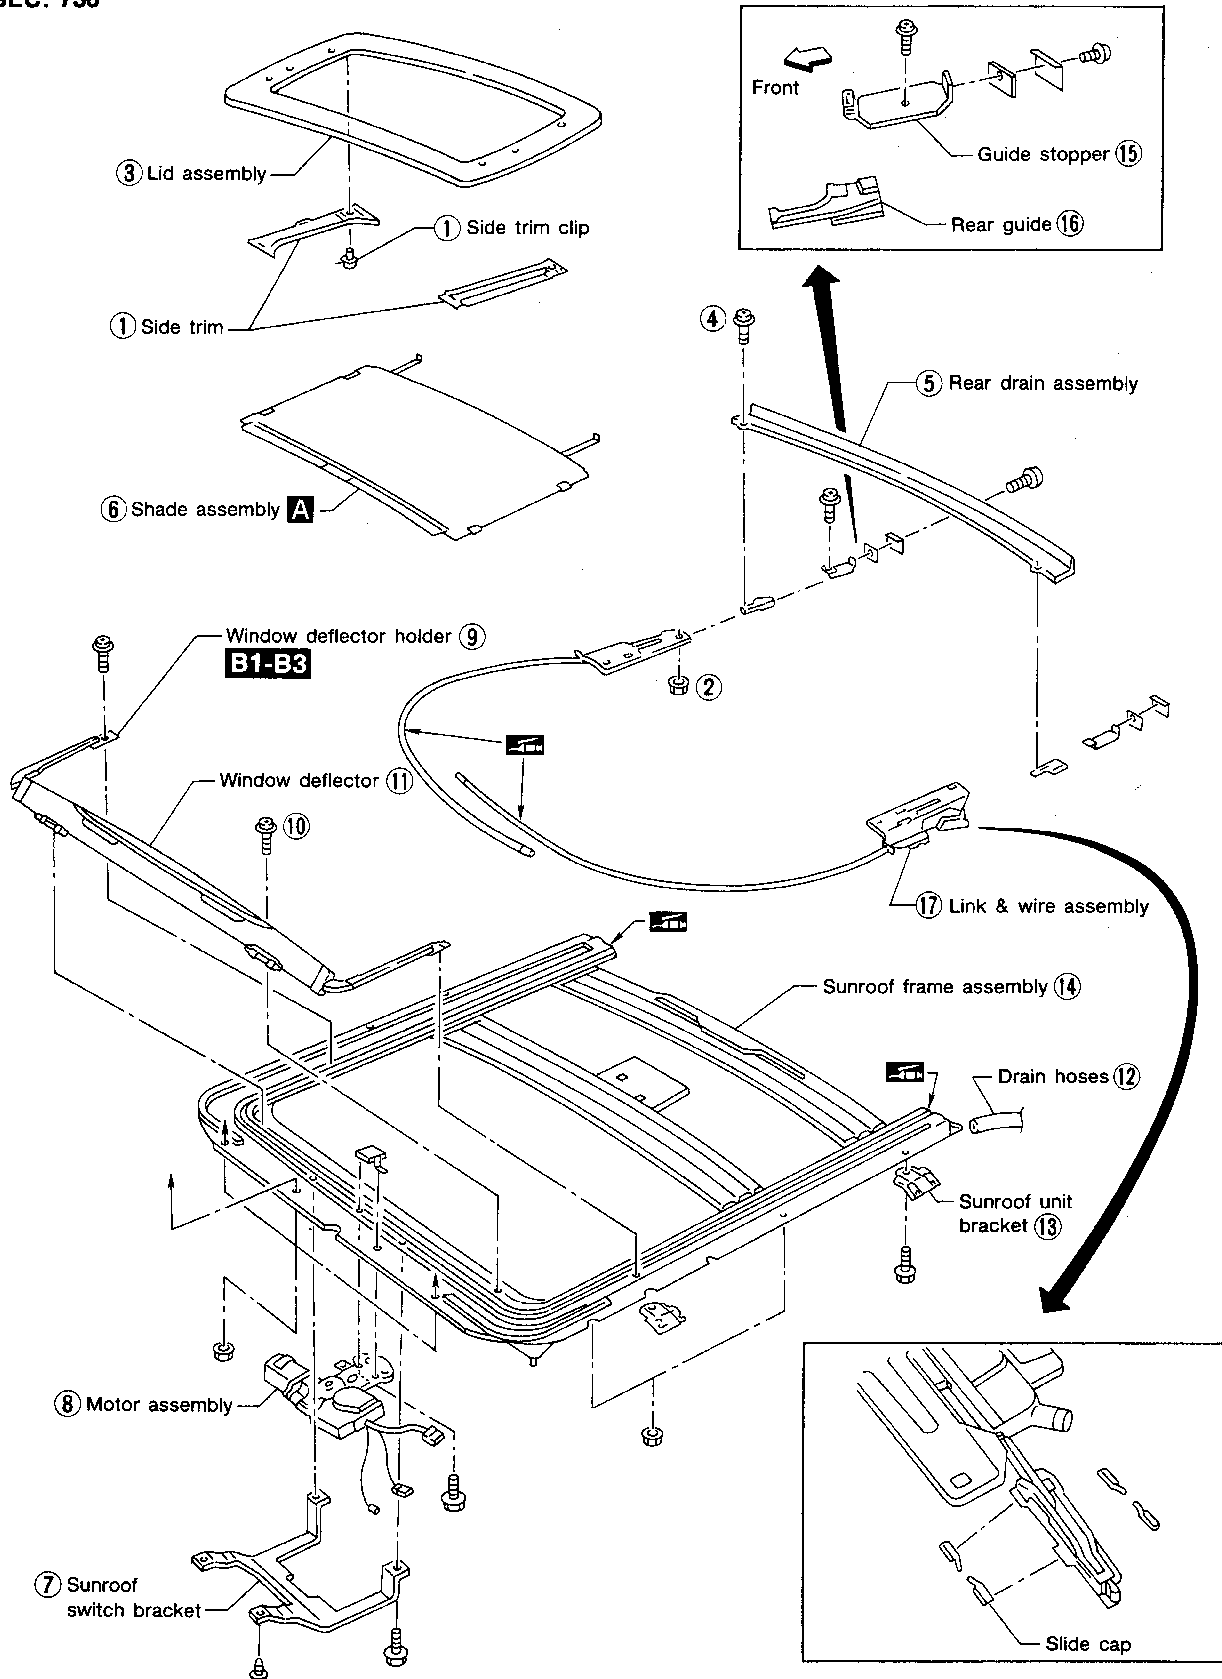


GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX


SUNROOF

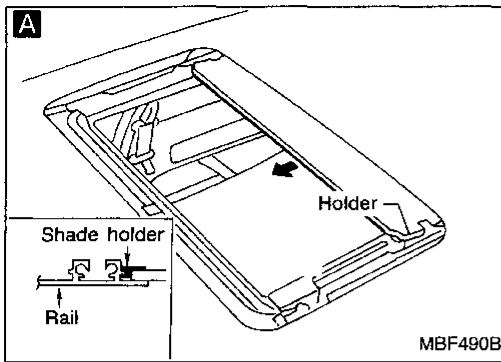


- A** Using flat-bladed screwdriver, pry shade assembly holder off rail. Then pull shade assembly forward to remove it from rail.

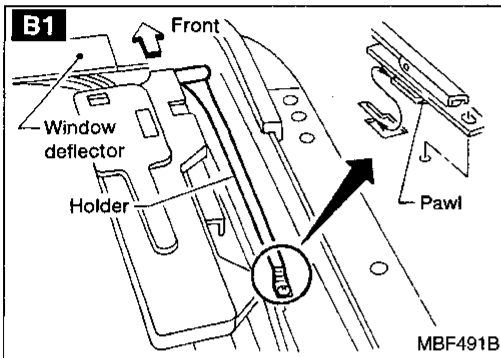

- B1** Disengage pawls from rail, then remove window deflector holder.

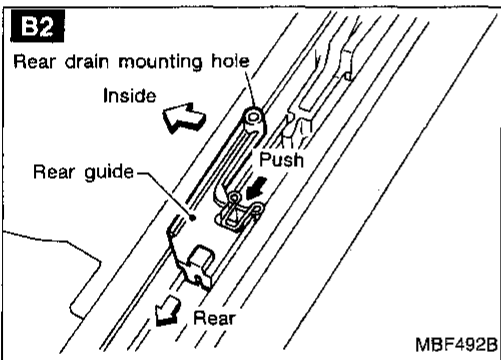


- B2** Using flat-bladed screwdriver, pry stopper spring off rail groove. Then slide rear guide backward to remove it from rail.

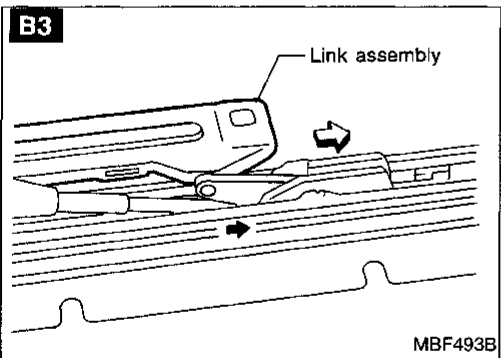

- B3** Remove wire and link assembly from rail while pushing link back with flat-bladed screwdriver.

WINDSHIELD AND WINDOWS

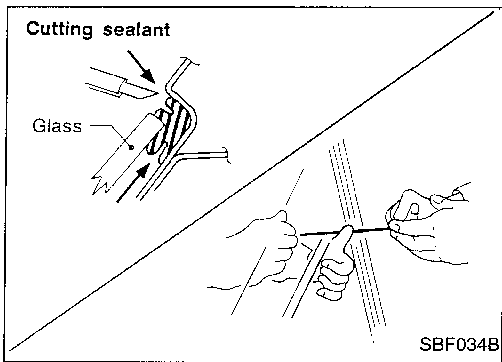

REMOVAL

After removing moldings, remove glass.

CAUTION:

Be careful not to scratch glass when removing.

INSTALLATION

- Use genuine Nissan Sealant kit or equivalent. Follow instructions furnished with it.
- After installing the glass, the vehicle should remain stationary until the sealant hardens.

WARNING:

Keep heat and open flames away as primers are flammable.

CAUTION:

Advise user not to drive the vehicle on rough roads until sealant has properly vulcanized.

- Do not use sealant which is past its usable term.
- Do not leave cartridge unattended with its cap open.
- Keep primers and sealant in a cool, dry place. Ideally, they should be stored in a refrigerator.
- Molding must be installed securely so that it is in position and leaves no gap.

Windshield and Rear Window

<p>Body side Install spacer to panel. Windshield</p> <p>400 (15.75)</p>		<p>Glass side Install dam rubber.</p> <p>Windshield Vehicle center 8 (0.31)</p> <p>Rear window Vehicle center 8 (0.31)</p> <p>Joint portion 15 (0.59)</p> <p>Joint portion 8 (0.31)</p>
<p>Rear window</p> <p>400 (15.75)</p>		<p>Apply sealant evenly. Windshield and rear window</p> <p>7 - 8 (0.28 - 0.31)</p> <p>12 - 15 (0.47 - 0.59)</p> <p>Unit: mm (in)</p>
<p>Install molding fastener. When installing it, heat body panel and fastener to approx. 30 to 40°C (86 to 104°F).</p> <p>Upper & side molding fasteners</p>		

REPAIRING WATER LEAKS FOR WINDSHIELD

Leaks can be repaired without removing and reinstalling glass.

If water is leaking between caulking material and body or glass, determine the extent of leakage. This can be determined by applying water while pushing glass outward.

To stop the leak, apply primer and then sealant to the leak point.

MIRROR

Door Mirror

CAUTION:



Be careful not to scratch door rearview mirror body.

★ For Wiring Diagram, refer to "POWER DOOR MIRROR" in EL section.

REMOVAL — Door mirror

1. Remove door trim. Refer to "Door Trim" in "INTERIOR TRIM" for details, BT-19.
2. Remove inner cover front corner of door.
3. Disconnect door mirror harness connector.
4. Remove door mirror harness clips.
5. Remove three bolts securing door mirror assembly.
6. Remove the mirror glass. Do not insert screwdriver too far.

SEC. 963

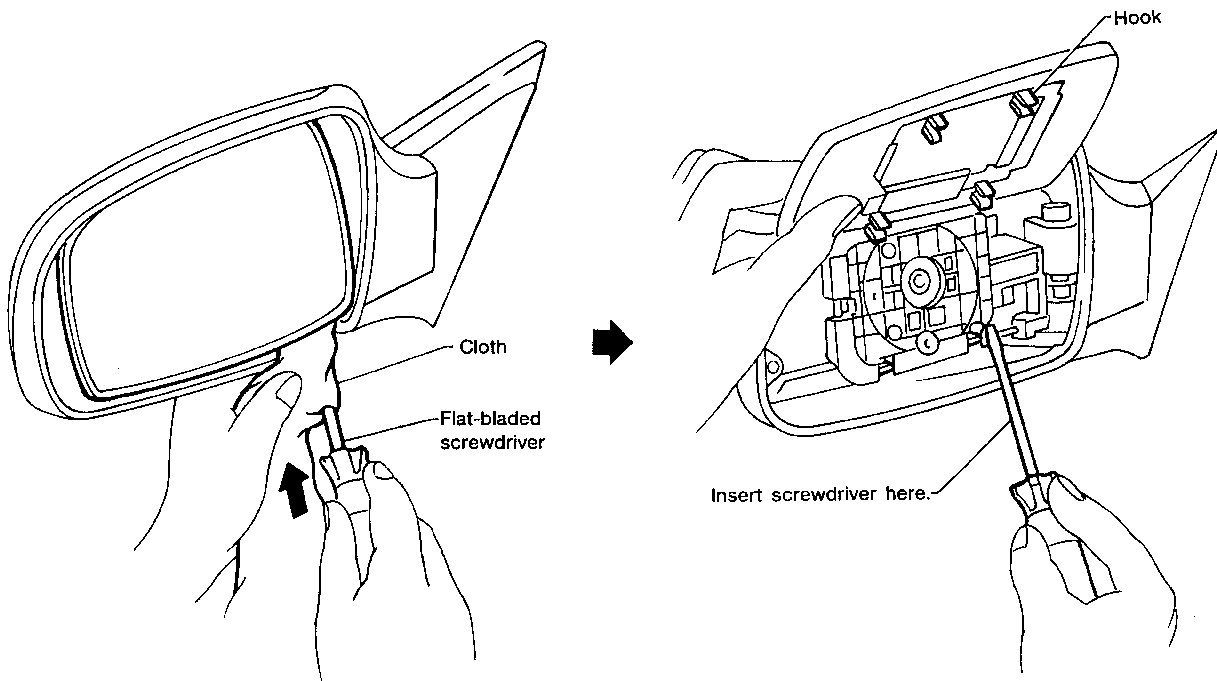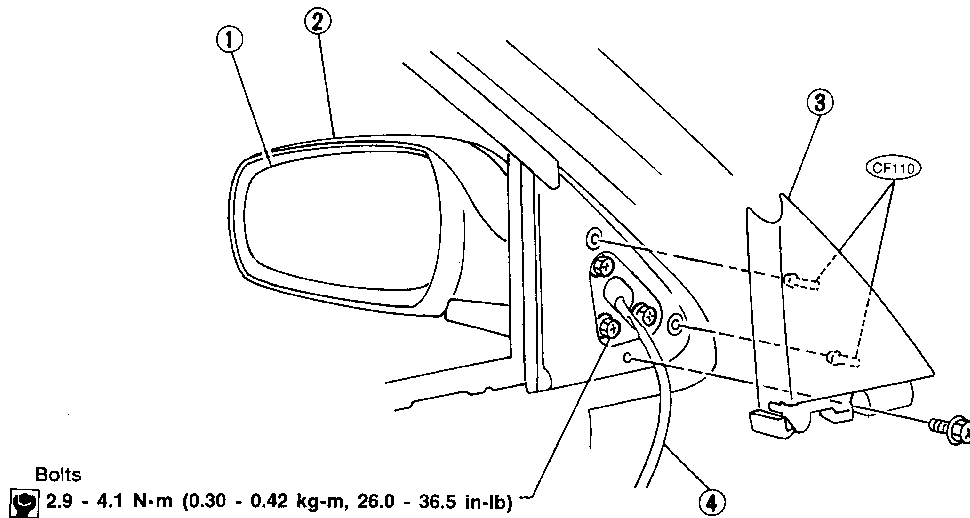

SBF356HA


- ① Mirror glass
- ② Mirror body

③ Inner cover

④ Door mirror harness

BODY ALIGNMENT


- All dimensions indicated in figures are actual ones.
- When using a tracking gauge, adjust both pointers to equal length. Then check the pointers and gauge itself to make sure there is no free play.
- When a measuring tape is used, check to be sure there is no elongation, twisting or bending.
- Measurements should be taken at the center of the mounting holes.
- An asterisk (*) following the value at the measuring point indicates that the measuring point on the other side is symmetrically the same value.
- The coordinates of the measurement points are the distances measured from the standard line of "X", "Y" and "Z".

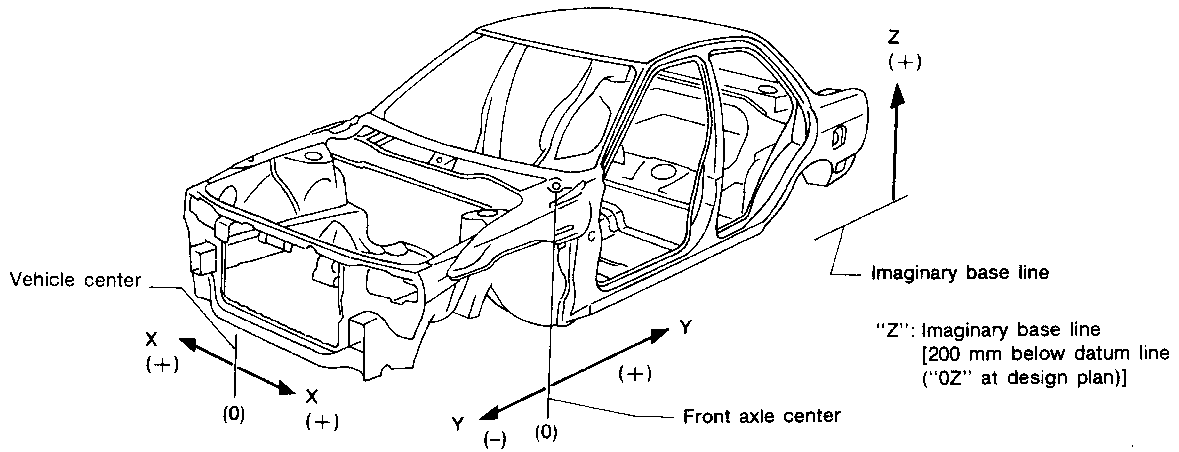

SBF874GB

Engine Compartment

MEASUREMENT








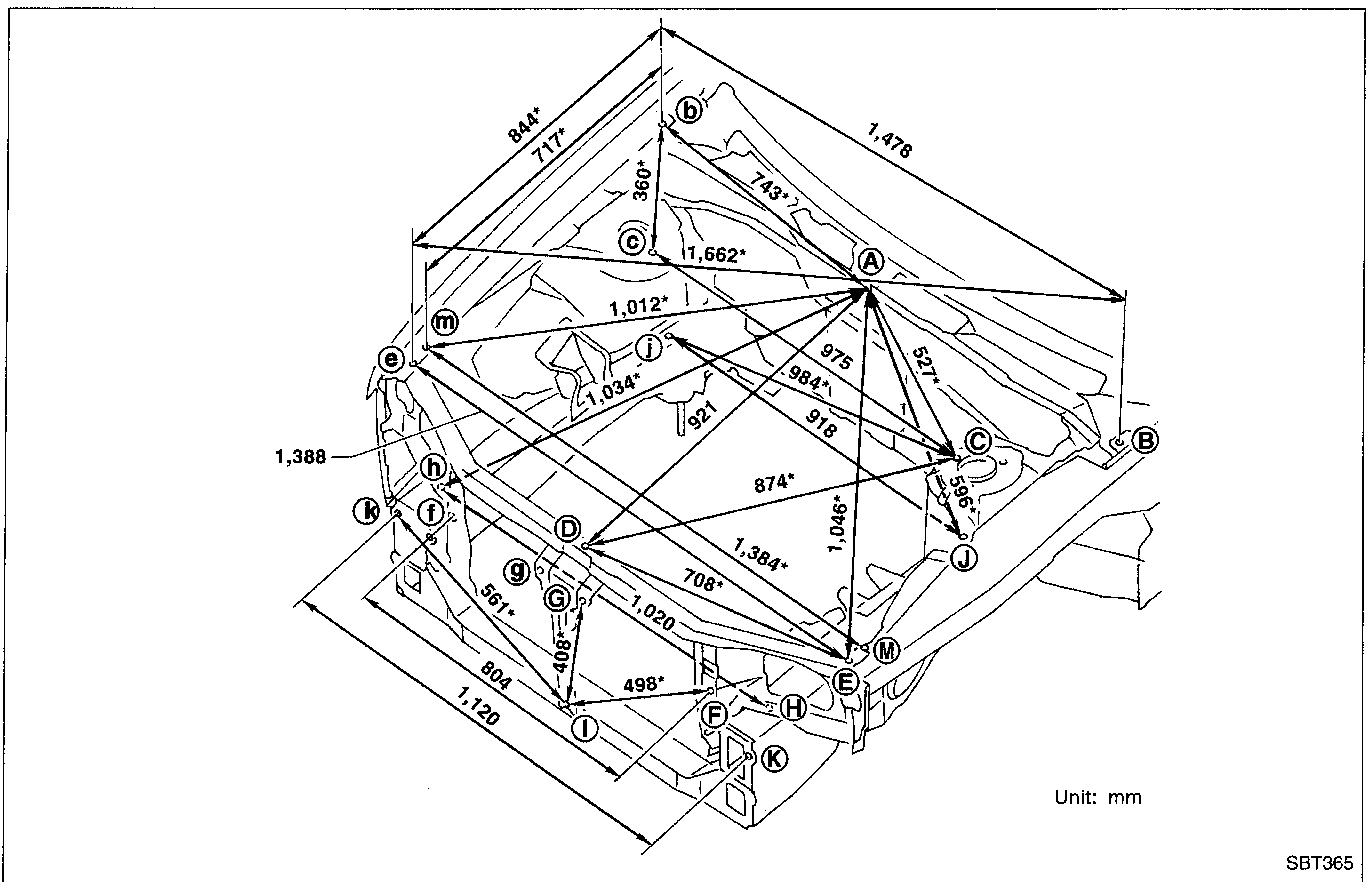


SBT365

BODY ALIGNMENT

Engine Compartment (Cont'd)

MEASUREMENT POINTS

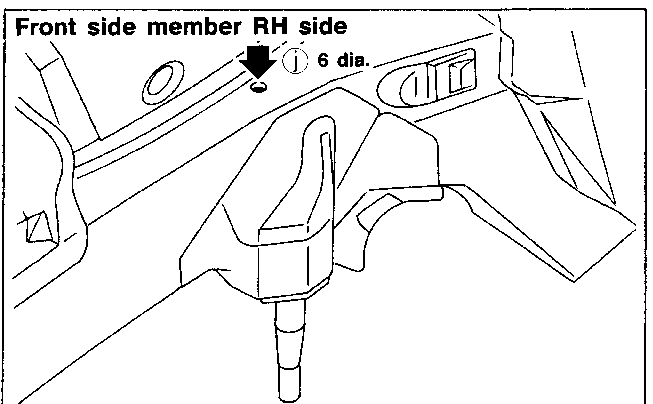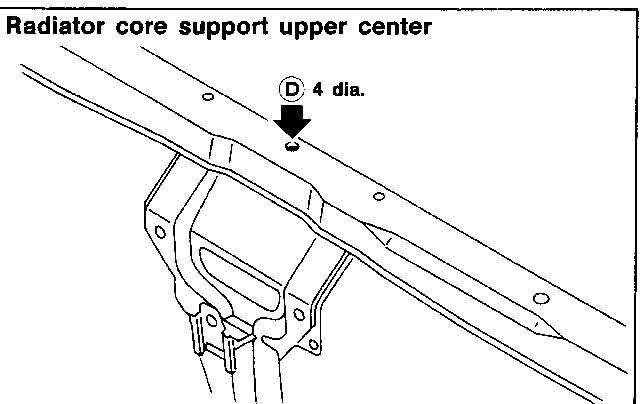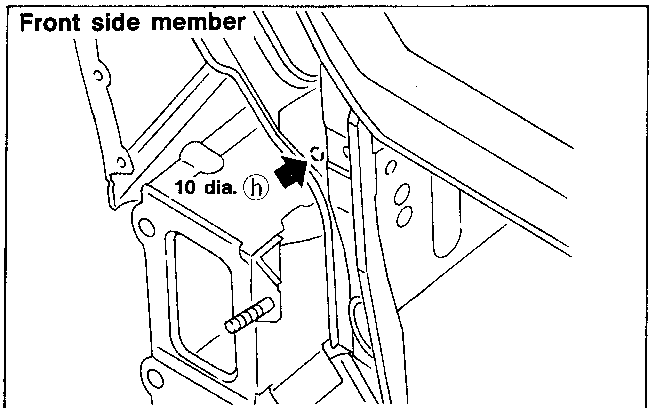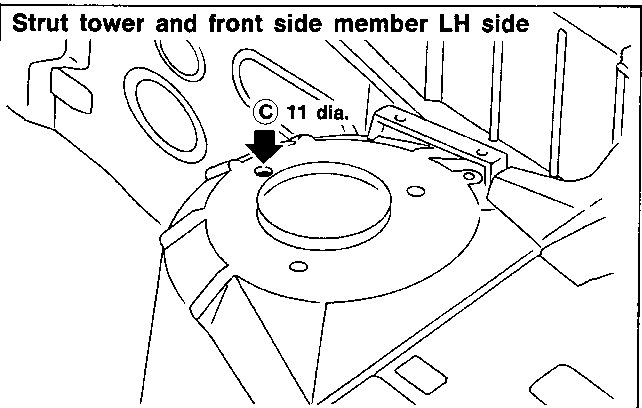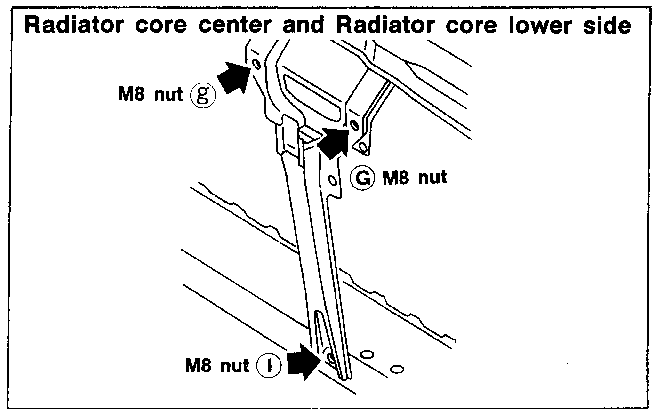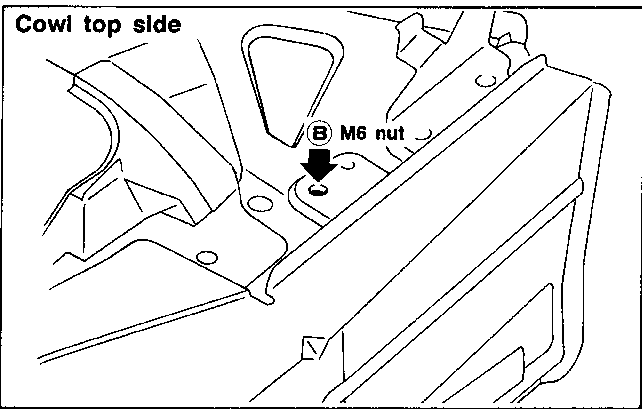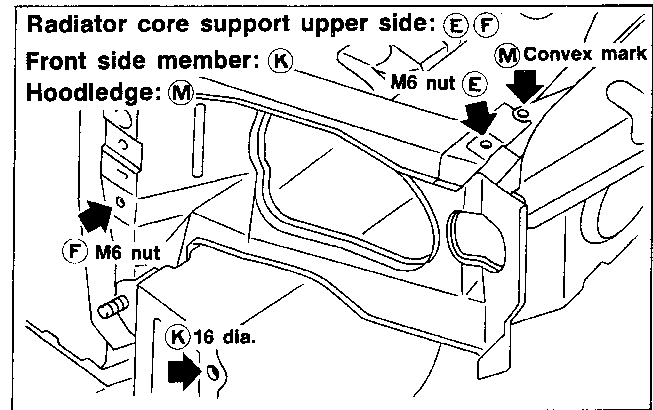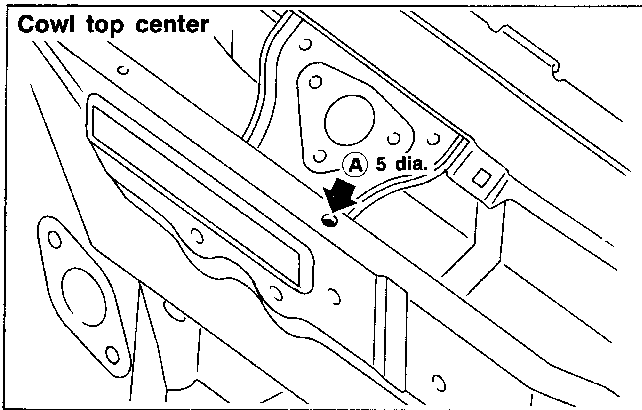

BODY ALIGNMENT


Underbody

MEASUREMENT

This figure is under view.

All dimensions indicated in this figure are actual ones. (There are no projected dimensions.)

★ : Bolt head

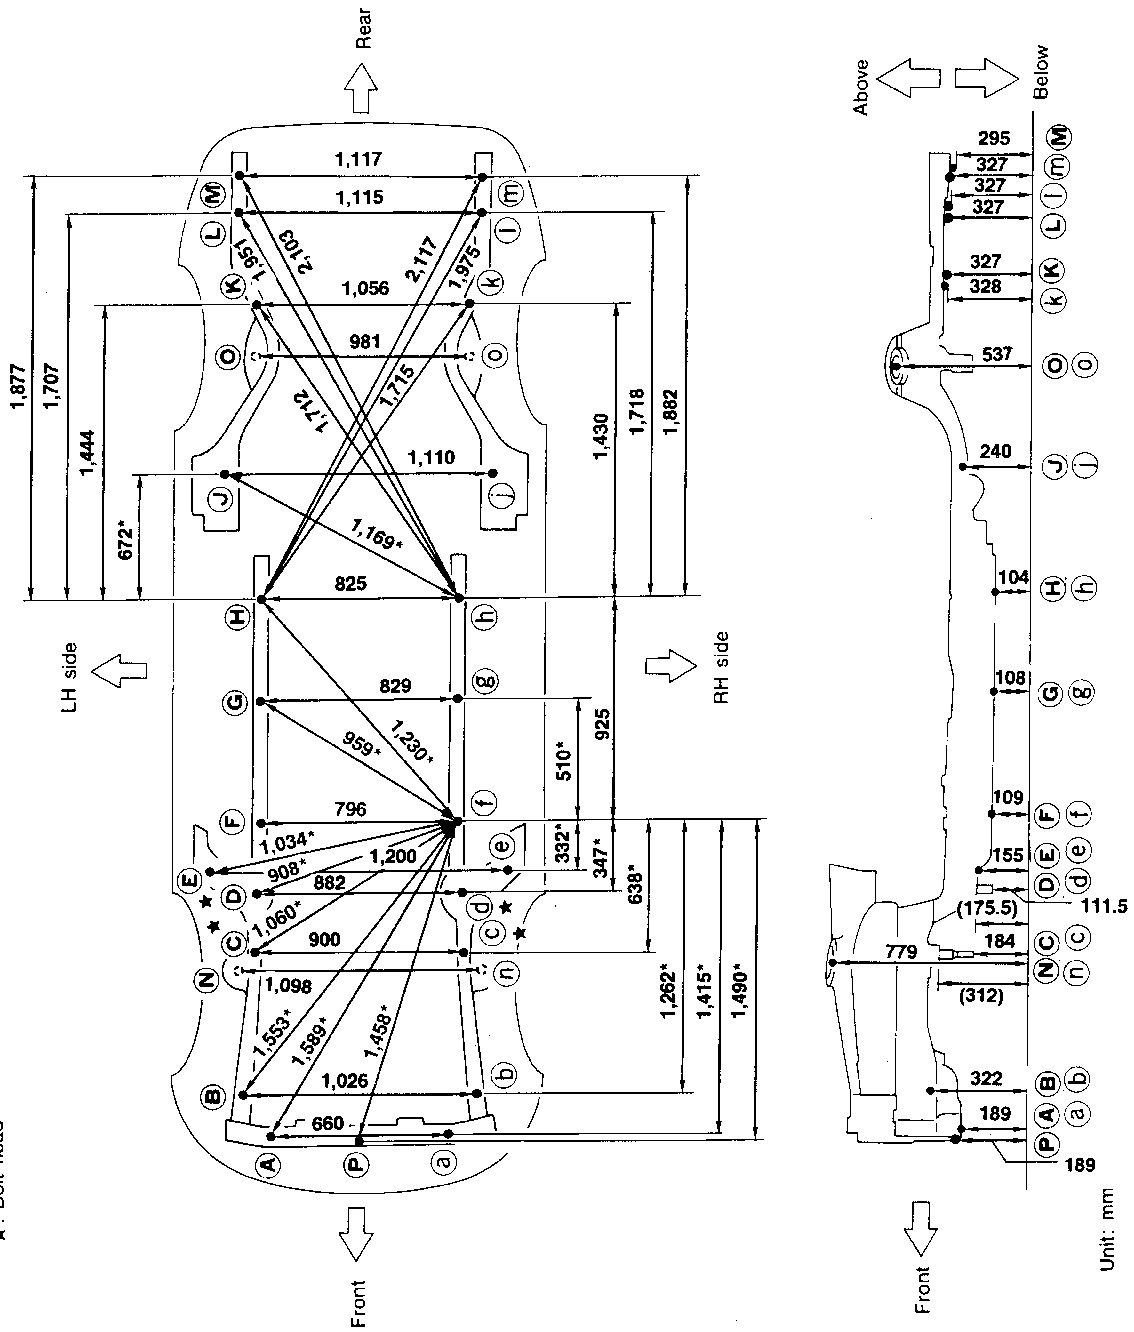


- GI
- HA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- FA
- RA
- BR
- ST
- RS
- BT**
- HA
- EL
- IDX

BODY ALIGNMENT



Underbody (Cont'd)

MEASUREMENT POINTS

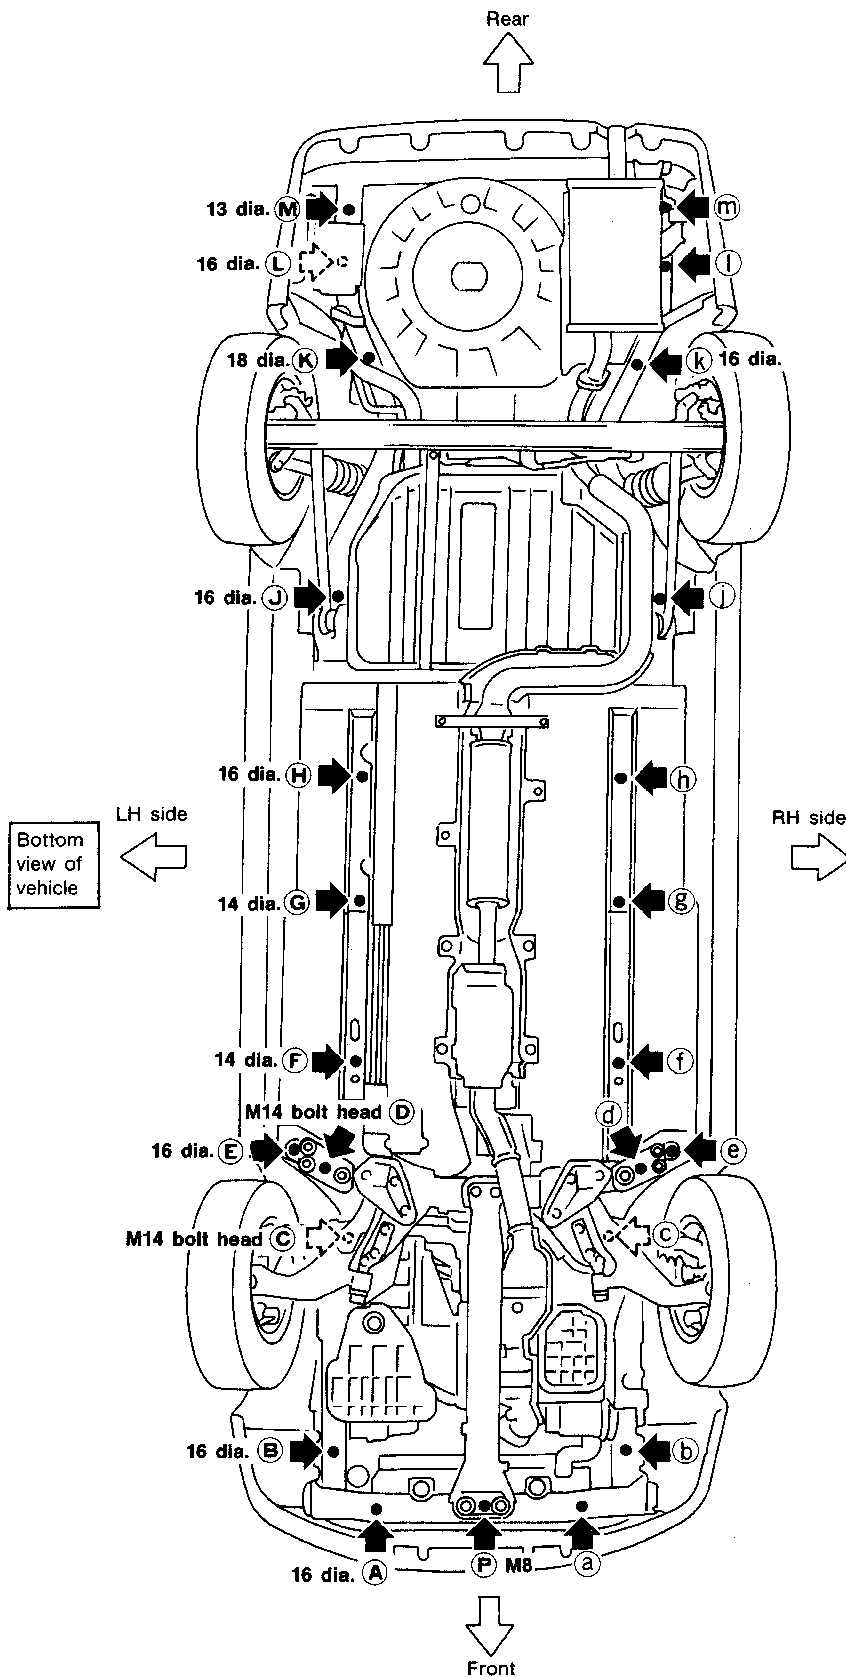

Coordinates:

(A) (a)	(J) (j)
X : 330	Radius rod
Y : -710	bracket mounting
Z : 188.8	hole
(B) (b)	X : 555
X : 513	Y : 2,185
Y : -540	Z : 239.5
Z : 322	(K) (k)
(C) (c)	X : 512
X : 450	Y : 3,000
Y : 68	Z : 326.6
Z : 184	(K) (k)
(D) (d)	X : 544
X : 441	Y : 2,982
Y : 354	Z : 328.2
Z : 111.5	(L) (l)
(E) (e)	X : 540
X : 600	Y : 3,272
Y : 430	Z : 326.6
Z : 154.9	(I) (i)
(F) (f)	X : 575
X : 398	Y : 3,280
Y : 700	Z : 326.6
Z : 109	(M) (m)
(G) (g)	X : 546
X : 414.5	Y : 3,454
Y : 1,210	Z : 295.4
Z : 108.4	(T) (t)
(H) (h)	X : 570.5
X : 412.5	Y : 3,450
Y : 1,625	Z : 326.6
Z : 104	(P) (p)
	X : 0
	Y : -700.5
	Z : 188.5

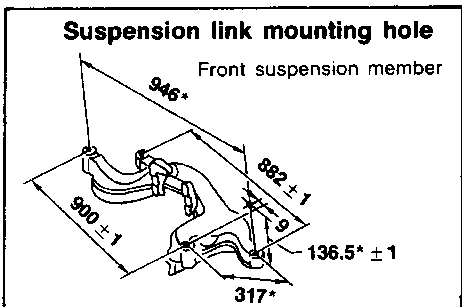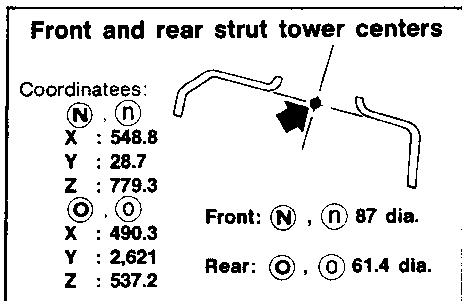

Unit: mm