

### Installation

NFEL0146


To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

9: 3 - 5 N·m (0.3 - 0.5 kg-m, 26 - 43 in-lb)

### **CAUTION:**


Do not overtighten bolts, otherwise, they may be damaged.

NFEL0147

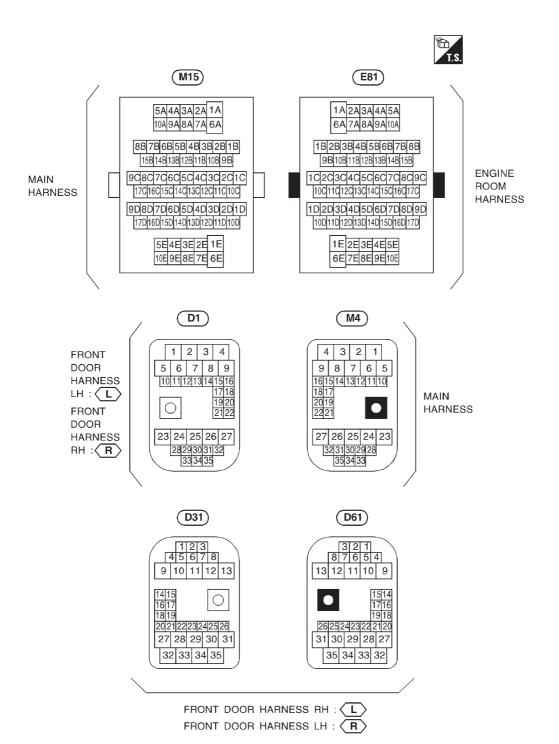



L : LHD MODELS
R : RHD MODELS

NFEL0148

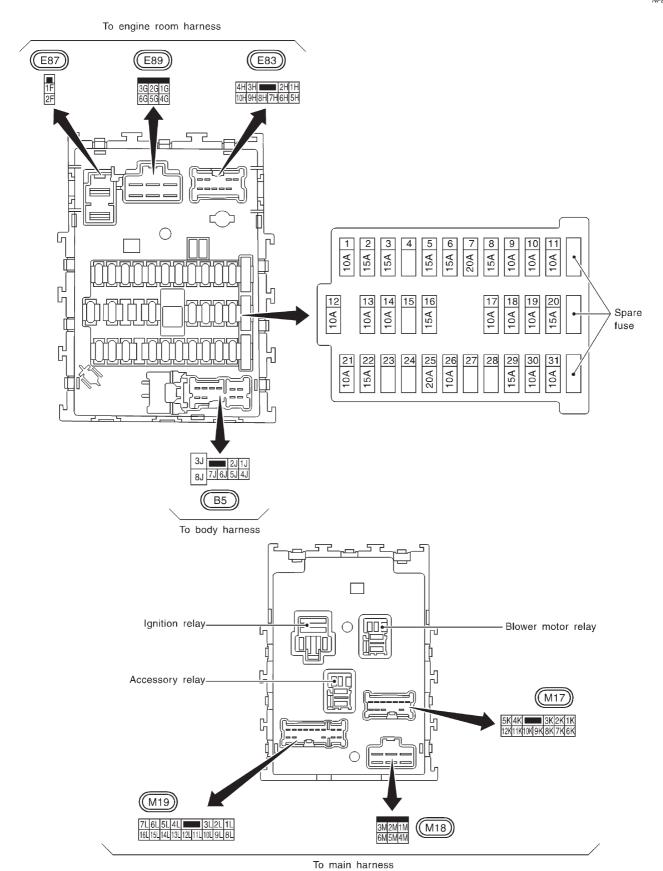

NFEL0149

 

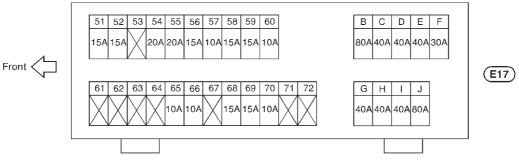


No. 51 - 72: FUSE A - J: FUSIBLE LINK

MEL171M

NFEL0150


#### ECM F48

 



#### TCM (TRANSMISSION CONTROL MODULE)



 





ABS ACTUATOR AND ELECTRIC UNIT (E9)

16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

#### A/C AUTO AMP.

 

 



(M59)

NFEL0160

