

ALPHABETICAL INDEX

SECTION **IDX**

ALPHABETICAL INDEX

A

A/C HFC134a (R134a) system
precaution HA-3, 130
A/C HFC134a (R134a) system service
procedure HA-109, 200
A/C HFC134a (R134a) system service
tools HA-12, 139
A/C HFC134a system service equipment
precaution HA-8, 135
A/C air flow HA-28, 150
A/C component layout HA-21, 148
A/C compressor clutch removal and
installation HA-114, 205
A/C compressor description HA-142
A/C compressor precaution HA-8, 135
A/C compressor special service
tool HA-11, 138
A/C control linkage adjustment
(manual A/C) HA-168, 172, 176
A/C control operation (auto A/C) HA-25
A/C control operation (manual A/C) HA-149
A/C diagnostic work flow (auto A/C) HA-50
A/C diagnostic work flow (manual
A/C) HA-160
A/C harness layout (auto A/C) HA-31
A/C harness layout (manual A/C) HA-152
A/C lubricant (R134a) HA-111, 202
A/C operational check HA-51, 161
A/C performance chart HA-86, 193
A/C performance test diagnoses HA-84, 191
A/C relay HA-82, 189
A/C self-diagnoses (auto A/C) HA-40
A/C service data specification HA-129, 220
A/C system description (auto A/C) HA-25
A/C trouble diagnoses (auto A/C) HA-31
A/C trouble diagnoses (manual A/C) HA-152
A/C, A - Wiring diagram HA-34
A/C, M - Wiring diagram HA-156
A/T - Wiring diagram - AT - 1ST AT-147
A/T - Wiring diagram - AT - 2ND AT-153
A/T - Wiring diagram - AT - 3RD AT-159
A/T - Wiring diagram - AT - 4TH AT-166
A/T - Wiring diagram - AT -
BA/FTS AT-208, 258
A/T - Wiring diagram - AT -
ENG SS AT-141, 264
A/T - Wiring diagram - AT - FTS AT-130
A/T - Wiring diagram - AT - LPSV ... AT-178, 269
A/T - Wiring diagram - AT - MAIN AT-119
A/T - Wiring diagram - AT -
NONDTC AT-277
A/T - Wiring diagram - AT -
OVRCSV AT-203, 248
A/T - Wiring diagram - AT - PNP/SW AT-124
A/T - Wiring diagram - AT - SSV/A .. AT-184, 238
A/T - Wiring diagram - AT - SSV/B .. AT-189, 243
A/T - Wiring diagram - AT - TCV AT-173, 253
A/T - Wiring diagram - AT - TPS AT-195, 230

A/T - Wiring diagram - AT -
VSS/AT AT-136, 220
A/T - Wiring diagram - AT -
VSSMTR AT-215, 225
A/T - Wiring diagram AT-16
A/T IND - Wiring diagram EL-151
A/T control EC-482
A/T diagnosis communication line .. EC-395, 506
A/T fluid temperature sensor AT-128
A/T self-diagnoses AT-40, 49, 55, 60
A/T shift lock system - Wiring
diagram AT-337
A/T shift lock system AT-336
A/T trouble diagnoses AT-66, 73
AAC/V - Wiring diagram EC-327, 471
ABS (anti-lock brake system) BR-40
ABS - Wiring diagram BR-45
ABS sensor rotor AX-19
AP/SEN - Wiring diagram EC-405
ASCD (automatic speed control
device) EL-216
ASCD - Wiring diagram EL-220
AT indicator lamp EL-151
AT/C - Wiring diagram EC-483
ATDIAG - Wiring diagram EC-396, 507
AUDIO - Wiring diagram EL-187
Absolute pressure sensor EC-404
Accelerator control system FE-3
Air bag disposal RS-22
Air bag precautions GI-3
Air bag RS-10
Air bleeding (hydraulic clutch) CL-6
Air bleeding for brake system BR-8
Air cleaner filter replacement MA-20
Air conditioner cut control EC-31
Air flow meter - See Mass air flow
sensor EC-134
Air mix door control linkage
adjustment HA-65, 172
Air mix. door motor HA-63, 108, 169
Air spoiler, rear BT-32
Alternator SC-22
Ambient sensor HA-95
Angular tightening application EM-3
Antenna - See Power antenna EL-198
Anti-lock brake system - Wiring
diagram BR-45
Audio and A/C control removal and
installation - See Instrument panel BT-20
Audio EL-183
Auto air conditioner - Wiring diagram HA-34
Automatic amplifier HA-38, 54
Automatic speed control system - See
ASCD EL-216
Automatic transmission fluid
replacement MA-27
Automatic transmission number GI-41
Auxiliary air control (AAC) valve EC-324, 469

ALPHABETICAL INDEX

B

B/COMP - Wiring diagram	EL-141
BACK/L - Wiring diagram	EL-89
Back-up lamp switch (M/T)	MT-9
Back-up lamp	EL-89
Ball joint (front)	SU-13
Basic inspection	EC-90
Battery	SC-3
Baulk ring (M/T)	MT-14
Blower motor	HA-69, 178
Blower resistor	HA-178
Board computer	EL-139
Board-on lift	GI-42
Body alignment	BT-54
Brake booster	BR-22
Brake control valve (Proportioning valve)	BR-11
Brake fluid change	BR-7
Brake fluid level and line check	BR-7
Brake fluid level	MA-29
Brake hydraulic line	BR-9
Brake inspection	MA-30
Brake lines and cables inspection	MA-29
Brake master cylinder	BR-14
Brake pedal	BR-12
Bulb specifications	EL-417
Bumper, front	BT-5
Bumper, rear	BT-8

C

CHARGE - Wiring diagram	SC-20
CHIME - Wiring diagram	EL-155
CIGAR - Wiring diagram	EL-172
CKPS - Wiring diagram	EC-295, 452
CLOCK - Wiring diagram	EL-173
CONSULT for ABS	BR-50
CONSULT for engine	EC-70
COOL/F - Wiring diagram	EC-355
Camshaft inspection	EM-40
Camshaft position sensor (PHASE)	EC-303
Canister - See EVAP canister	EC-32
Charging system	SC-19
Chassis and body maintenance	MA-25
Cigarette lighter	EL-172
Circuit breaker	EL-17
Clearance lamp	EL-85
Clock	EL-173
Closed throttle position switch	EC-333, 477
Clutch cover	CL-18
Clutch disc	CL-18
Clutch fluid level	MA-25
Clutch master cylinder	CL-9
Clutch operating cylinder	CL-12
Clutch pedal	CL-6
Clutch release bearing	CL-16
Clutch release mechanism	CL-16
Clutch withdrawal lever	CL-16

Coil spring (front)	SU-9
Coil spring (rear)	SU-22
Collision diagnosis	RS-59
Combination lamp, rear, removal and installation	BT-32
Combination meter removal and installation - See Instrument panel	BT-20
Combination meter	EL-123
Combination switch	EL-36
Compression pressure	EM-11
Compressor clutch removal and installation	HA-114, 205
Compressor description	HA-142
Compressor precaution	HA-8, 135
Compressor special service tool	HA-11, 138
Connecting rod bearing clearance	EM-67
Connecting rod bushing clearance	EM-67
Connecting rod	EM-62
Console box - See Instrument panel	BT-20
Control valve (A/T)	AT-378
Converter housing installation	AT-350, 444
Coolant mixture ratio	MA-14
Coolant replacement	MA-16
Cooling circuit (engine)	LC-10
Cooling fan control system	LC-19
Cooling fan control	EC-351
Coupling sleeve (M/T)	MT-14
Crankcase emission control system - See Positive crankcase ventilation	EC-35

Crankshaft position sensor (POS) chipping	EC-387
Crankshaft position sensor (POS)	EC-295, 451
Crankshaft position sensor (REF)	EC-380
Crankshaft	EM-64
Cruise control - See ASCD	EL-216
Cylinder block	EM-59
Cylinder head bolt tightening	EM-47
Cylinder head	EM-37

D

DEF - Wiring diagram	EL-175
DTC work support	EC-82
Data link connector for Consult	EC-70
Detonation sensor - See Knock sensor	EC-289
Diagnosis sensor unit	RS-15
Diagnostic trouble code (DTC) for OBD system	EC-7, 58
Diagnostic trouble code (DTC) inspection priority chart	EC-103
Differential gear (FF A/T)	AT-423
Differential gear (FF M/T)	MT-14, 28
Dimensions	GI-41
Dome light - See Interior lamp	EL-109
Door glass	BT-12
Door lock	BT-16
Door mirror	BT-52
Door trim	BT-27

ALPHABETICAL INDEX

Door, front	BT-11
Door, rear	BT-11
Drive plate runout	EM-68
Drive shaft (front)	AX-9
Dropping resistor (A/T)	AT-176, 267

E

ECM input/output signal	EC-114
ECTS - Wiring diagram	EC-148
EMNT - Wiring diagram	EC-540
EVAP canister purge volume control solenoid valve	EC-32, 314, 459
EVAP canister	EC-33
EVAP vapor lines inspection	MA-24
Electric sunroof	EL-202
Electrical diagnoses	GI-21
Electrical ignition system	EC-30
Electrical unit	EL-425
Electrical units location	EL-369
Engine compartment	BT-55
Engine control circuit diagram	EC-24
Engine control component parts location	EC-20
Engine control module (ECM)	EC-341
Engine control system diagram and chart	EC-25
Engine coolant temperature sensor (ECTS)	EC-146
Engine fail-safe system	EC-104
Engine mounting control (Front)	EC-539
Engine oil filter replacement	MA-21
Engine oil precautions	GI-7
Engine oil replacement	MA-21
Engine outer component parts	EM-8
Engine removal	EM-56
Engine room - See Engine compartment	BT-55
Engine serial number	GI-40
Evaporative emission (EVAP) system	EC-32
Exhaust system inspection	MA-25
Exhaust system	FE-9
Exterior	BT-32

F

F/FOG - Wiring diagram	EL-91
F/PUMP - Wiring diagram	EC-534
F02H-L - Wiring diagram	EC-208, 417, 426
F02H-R - Wiring diagram	EC-207, 416, 425
FR02LH - Wiring diagram	EC-162, 188, 200
FR02RH - Wiring diagram	EC-161, 187, 199
FUELLH - Wiring diagram	EC-264, 272
FUELRH - Wiring diagram	EC-263, 271
Fan control amp.	HA-71
Fan switch	HA-178
Final drive (FF A/T)	AT-423
Final drive (FF M/T)	MT-14, 28

Finisher, interior - See Trim	BT-24
Finisher, trunk lid	BT-31
Floor trim	BT-24
Fluid temperature sensor (A/T)	AT-128
Fluids	MA-13
Flywheel (clutch)	CL-18
Flywheel runout	EM-68
Fog lamp, front, removal and installation	BT-5
Fog lamp, front	EL-90
Fork rod (M/T)	MT-15
Forward clutch	AT-401
Freeze frame data	EC-46, 59
Front axle	AX-2
Front bumper	BT-5
Front combination lamp removal and installation	BT-5
Front disc brake	BR-25
Front door	BT-11
Front fog lamp removal and installation	BT-5
Front fog lamp	EL-90
Front heated oxygen sensor (HO2S) (Left bank)	EC-158, 168, 176, 184, 197, 415
Front heated oxygen sensor (HO2S) (Right bank)	EC-158, 168, 176, 184, 197, 415
Front heated oxygen sensor heater (Left bank)	EC-205, 424
Front heated oxygen sensor heater (Right bank)	EC-205, 424
Front seat belt	RS-5
Front seat	BT-38
Front suspension	SU-2
Front washer	EL-163
Front wiper	EL-163
Fuel cut control (at no load & high engine speed)	EC-32
Fuel gauge	EL-123
Fuel injection system (Left bank)	EC-261, 269
Fuel injection system (Right bank)	EC-261, 269
Fuel line inspection	MA-20
Fuel precautions	GI-8
Fuel pressure check	EC-37
Fuel pressure regulator	EC-37
Fuel pressure release	EC-36
Fuel pump	EC-533
Fuel system	FE-4
Fuel tank vacuum relief valve	EC-33
Fuse block	EL-423
Fuse	EL-17
Fusible link	EL-17

G

Garage jack and safety stand	GI-43
Gauges	EL-123
Gear components (M/T)	MT-14

ALPHABETICAL INDEX

Generator - See Alternator	SC-22
Generic scan tool (GST)	EC-84
Glass	BT-12
Grease	MA-13
Ground distribution	EL-18

H

H/LAMP - Wiring diagram	EL-42, 49
HFC134a.(R134a).system.precaution..	HA-3, 130
HFC134a (R134a) system service procedure	HA-109, 200
HFC134a (R134a) system service tools	HA-12, 139
HFC134a system service equipment precaution	HA-8, 135
HLC - Wiring diagram	EL-169
HORN - Wiring diagram	EL-171
HSEAT - Wiring diagram	EL-213
Harness connector	EL-5
Harness layout	EL-377
Hazard warning lamp	EL-95
Headlamp aiming control	EL-71
Headlamp removal and installation	BT-5
Headlamp washer	EL-168
Headlamp	EL-41, 47
Headlining - See Roof trim	BT-29
Heated seat	BT-40, EL-213
Height (Dimensions)	GI-41
High clutch	AT-396
Hood	BT-5
Horn	EL-171
How to erase DTC for OBD system ...	EC-56, 59

I

IACV-AAC valve	EC-324, 469
IATS - Wiring diagram	EC-143, 411
IGN/SG - Wiring diagram	EC-371, 496
ILL - Wiring diagram	EL-104
INJECT - Wiring diagram	EC-524
Identification plate	GI-40
Idle air control valve (IACV)	EC-324, 469
Ignition control system	EC-369, 495
Illumination	EL-102
In vehicle sensor	HA-98
Injector removal and installation	EC-38
Injector	EC-523
Input shaft (FF M/T)	MT-14, 19
Instrument panel	BT-20
Intake air temperature sensor	EC-141, 410
Intake door control linkage adjustment	HA-68, 176
Intake door motor	HA-66, 173
Intake manifold	EM-10
Intake sensor	HA-105
Interior lamp on-off control	EL-110
Interior lamp	EL-109

Interior	BT-24
----------------	-------

J

Jacking points	GI-43
Joint connector (J/C)	EL-426
Junction box (J/B)	EL-423

K

KS - Wiring diagram	EC-291
Keyless entry system - See Multi-re- mote control system	EL-271
Knock sensor (KS)	EC-289
Knuckle spindle	AX-5

L

LOAD - Wiring diagram	EC-552
Length (Dimensions)	GI-41
License lamp	EL-85
Lifting points	GI-44
Line pressure solenoid valve	AT-176, 267
Line pressure test (A/T)	AT-82
Liquid gasket application	EM-3
Location of electrical units	EL-369
Lock, door	BT-16
Low and reverse brake	AT-406
Lubricant (R134a) A/C	HA-111, 202
Lubricants	MA-13
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-31

M

M/T major overhaul	MT-12
M/T removal and installation	MT-10
MAFS - Wiring diagram	EC-137
MAIN - Wiring diagram	EC-127
MAJOR OVERHALL	AT-352
METER - Wiring diagram	EL-130
MIL & Data link connectors circuit	EC-558
MIL/DL - Wiring diagram	EC-558
MIRROR - Wiring diagram	EL-204
Magnet clutch	HA-77, 114, 205
Mainshaft (M/T)	MT-14, 24
Maintenance (engine)	MA-15
Malfunction indicator lamp (MIL)	EC-60
Manual air conditioner - Wiring diagram	HA-156
Manual transmission oil replacement	MA-26
Mass air flow sensor (MAFS)	EC-134
Master cylinder (brake)	BR-14
Master cylinder (clutch)	CL-9
Meter	EL-123

ALPHABETICAL INDEX

Mirror defogger	EL-174
Mirror, door	BT-52
Misfire	EC-281
Mode door control linkage adjustment	HA-62, 168
Mode door motor	HA-57, 166
Model variation	GI-38
Molding - See Exterior	BT-32
Multi-remote control system	EL-271
Multiport fuel injection (MFI) system	EC-28
Multiport fuel injection precautions	GI-6

N

NATS (Nissan Anti-theft System) precautions	GI-3
NATS (Nissan Anti-theft System)	EL-287
NATS - Wiring diagram	EL-290
NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR)	BR-6
NVH troubleshooting (MT)	MT-6
NVH troubleshooting (ST)	ST-5
NVH troubleshooting (SU)	SU-16
NVH troubleshooting CL	CL-4
NVIS (Nissan vehicle immobiliser sys- tem) precautions	GI-3

O

Oil change (capacity)	MA-13
Oil pan (engine)	EM-12
Oil pressure (engine)	LC-4
Oil pump (A/T)	AT-374
Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-6
Oil seal replacement (engine)	EM-34
On board diagnostic system	EC-44
Operating cylinder (clutch)	CL-12
Overdrive control switch	AT-323
Overrun clutch solenoid valve	AT-201, 246
Overrun clutch	AT-401

P

P/ANT - Wiring diagram	EL-199
PCV (positive crankcase ventilation)	EC-35
PGC/V - Wiring diagram	EC-316, 460
PHASE - Wiring diagram	EC-305
PNP/SW - Wiring diagram	EC-400, 511
POS - Wiring diagram	EC-297, 389
POWER - Wiring diagram	EL-10
PST/SW - Wiring diagram	EC-544
Park/Neutral position switch	EC-398, 510
Park/neutral position switch (A/T)	AT-122
Park/neutral position switch (M/T)	MT-9
Parking brake control	BR-38
Parking lamp	EL-85

Piston assembly	EM-68
Piston pin inspection	EM-60
Piston ring inspection	EM-61
Piston to bore clearance	EM-63
Power antenna	EL-198
Power door mirror	EL-204
Power seat	EL-209
Power steering fluid level	MA-31, ST-7
Power steering gear	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-543
Power steering oil pump	ST-25
Power steering system bleeding	ST-7
Power supply routing	EL-9
Power transistor & ignition coil	EC-369, 495
Power window	EL-241
Precautions (General)	GI-4
Pressure plate - See Clutch cover	CL-18
Pressure test (A/T)	AT-82

R

R/FOG - Wiring diagram	EL-93
R02H-L - Wiring diagram	EC-257
REF - Wiring diagram	EC-383
RO2H-R - Wiring diagram	EC-256
ROOM/L - Wiring diagram	EL-112
RR02LH - Wiring diagram	EC-217, 228, 239, 249, 433, 442
RR02RH - Wiring diagram	EC-216, 227, 238, 248, 432, 441
Radiator	LC-18, 20
Radio - See Audio	EL-183
Rear air spoiler	BT-32
Rear axle (disc brake type)	AX-19
Rear axle	AX-17
Rear bumper	BT-8
Rear combination lamp removal and installation	BT-32
Rear disc brake	BR-29
Rear door	BT-11
Rear fog lamp	EL-93
Rear heated oxygen sensor (HO2S) heater	EC-254, 440
Rear heated oxygen sensor (HO2S)	EC-212, 223, 234, 245, 431
Rear seat belt	RS-7
Rear seat	BT-41
Rear suspension	SU-16
Rear window defogger	EL-174
Rear window	BT-50
Refrigerant connection precaution	HA-5, 132
Refrigerant discharging evacuating charging	HA-109
Refrigerant general precaution	HA-4, 131
Refrigerant lines	HA-121, 212
Refrigeration cycle	HA-15, 142
Release bearing (clutch)	CL-16
Removal and installation (A/T)	AT-349

ALPHABETICAL INDEX

Reverse clutch	AT-393	Steering wheel turning force	ST-8	
Reverse idler shaft (M/T)	MT-14	Stop lamp	EL-88	
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-9	Striking rod (M/T)	MT-15	
Reverse main gear (M/T)	MT-14	Strut (front)	SU-9	
Revolution sensor (A/T)	AT-134, 218	Strut (rear)	SU-20	
Road wheel size	GI-41	Sunload sensor	HA-102	
Roof trim	BT-29	Sunroof, electric	EL-202	
Room lamp - See Interior lamp	EL-109	Sunroof	BT-42	
 <table border="1" style="width: 100%;"><tr><td style="text-align: center; padding: 2px;">s</td></tr></table>				s
s				
S/LOCK - Wiring diagram	EL-254	Super lock	EL-251	
S/SIG - Wiring diagram	EC-530	Supplemental Restraint System	RS-10	
SAE J1930 terminology list	GI-48	Supplemental restraint system - Wiring diagram	RS-35	
SEAT - Wiring diagram	EL-210	Swirl control valve control solenoid valve	EC-344, 486	
SHIFT - Wiring diagram	AT-337	Symbols and abbreviations	GI-9	
SMJ (super multiple junction)	EL-421	Symptom matrix chart	EC-105	
SROOF - Wiring diagram	EL-202	Synchronizer (M/T)	MT-14	
SRS - See Supplemental Restraint System	RS-10	System readiness test (SRT) code	EC-47	
START - Wiring diagram	SC-13	 <table border="1" style="width: 100%;"><tr><td style="text-align: center; padding: 2px;">T</td></tr></table>	T	
T				
STOP/L - Wiring diagram	EL-88	TAIL/L - Wiring diagram	EL-86	
SWL/V - Wiring diagram	EC-344, 488	TCM circuit diagram	AT-16	
Seal - See Exterior	BT-32	TCM inspection table	AT-115	
Seat belt inspection	MA-32	TFTS - Wiring diagram	EC-278, 448	
Seat belt pre-tensioner disposal	RS-22	TP/SW - Wiring diagram	EC-336, 478	
Seat belt pre-tensioner	RS-3	TPS - Wiring diagram	EC-154	
Seat belt, front	RS-5	TURN - Wiring diagram	EL-98	
Seat belt, rear	RS-7	Tachometer	EL-123	
Seat, front	BT-38	Tail lamp	EL-85	
Seat, rear	BT-41	Tank fuel temperature sensor	EC-276, 447	
Shift control components (M/T)	MT-15	Thermostat	LC-16	
Shift fork (M/T)	MT-15	Three way catalyst function (Left bank)	EC-309	
Shift lever	MT-12	Three way catalyst function (Right bank)	EC-309	
Shift lock system	AT-336	Three way catalyst precautions	GI-6	
Shift schedule	AT-450	Throttle bodies	EM-10	
Shift solenoid valve A (A/T)	AT-182, 236	Throttle position sensor (TPS)	EC-151	
Shift solenoid valve B (A/T)	AT-187, 241	Throttle position sensor adjustment	EC-90	
Shock absorber (front)	SU-10	Throttle position switch	AT-192, 228, 323, EC-333, 477	
Shock absorber (rear)	SU-22	Throwout bearing - See Clutch release bearing	CL-16	
Side air bag	RS-21	Tie-rod ball joints	ST-19	
Side trim	BT-24	Tie-rod	ST-15	
Spare tire size	GI-41	Tightening torque of standard bolts	GI-47	
Spark plug replacement	MA-22	Timing chain	EM-18	
Speedometer	EL-123	Tire rotation	MA-29	
Spiral cable	RS-17	Tire size	GI-41	
Spring (Wheelarch) height	SU-6	Torque converter clutch solenoid valve	AT-171, 251	
Stabilizer bar (front)	SU-11	Torque converter installation	AT-350, 444	
Stall test (A/T)	AT-78	Tow truck towing	GI-45	
Standardized relay	EL-7	Transaxle serial number	GI-41	
Start signal	EC-529	Transmission case (M/T)	MT-13	
Starter	SC-15	Tread-FR&RR (Dimensions)	GI-41	
Starting system	SC-12	Trim	BT-24	
Steering gear and linkage inspection	MA-31	Trouble diagnoses	GI-31	
Steering linkage	ST-15			
Steering switch	EL-39			
Steering wheel and column	ST-10			
Steering wheel play	ST-6			

ALPHABETICAL INDEX

Trunk lid finisher	BT-31
Trunk lid opener - See Trunk lid	BT-8
Trunk lid trim	BT-31
Trunk lid	BT-8
Trunk room trim	BT-31
Turn signal lamp	EL-95
Two trip detection logic	EC-44
Two-pole lift	GI-44

U

Under body	BT-57
------------------	-------

V

VIAS - Wiring diagram	EC-519
VIAS	EC-517
VSS - Wiring diagram	EC-322, 466
Vacuum hose (brake system)	BR-24
Vacuum hose drawing (Engine control)	EC-26
Valve clearance	EM-51
Valve guide	EM-42
Valve seat	EM-43
Valve spring	EM-44
Variable induction air control system (VIAS)	EC-517
Vehicle speed sensor (VSS)	EC-320, 465
Viscosity number (SAE)	MA-14
Viscous coupling (FF A/T)	AT-423
Viscous coupling (FF M/T)	MT-9

W

WARN - Wiring diagram	EL-146
WINDOW - Wiring diagram	EL-244
WIPER - Wiring diagram	EL-165
Warning chime	EL-153
Warning lamps	EL-145
Washer, front	EL-163
Water pump	LC-12
Water temperature gauge	EL-123
Weatherstrip - See Exterior	BT-32
Wheel alignment (front)	SU-6
Wheel alignment (rear)	SU-18
Wheel balance	MA-27
Wheel bearing (front)	AX-3
Wheel bearing (rear)	AX-18
Wheel hub (front)	AX-5
Wheel hub (rear)	AX-19
Wheelarch height	SU-6
Wheelbase (Dimensions)	GI-41
Wide open & closed throttle position switch	EC-151
Width (Dimensions)	GI-41
Window, rear	BT-50
Windshield	BT-50
Wiper, front	EL-163
Wiring diagram (cell code) list	EL-418
Wiring diagrams	GI-11
Withdrawal lever (clutch)	CL-16
Wrist pin - See Piston pin inspection	EM-60