

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system).....BR-39
 ABS - Wiring diagramBR-44
 ABS sensor rotorAX-18
 Absolute pressure sensorEC-201
 A/C air flow.....HA-26, 175
 A/C component layout.....HA-20, 173
 A/C compressor clutch removal and
 installation.....HA-143, 230
 A/C compressor descriptionHA-168
 A/C compressor precautionHA-8, 161
 A/C compressor special service tool.....HA-11, 164
 A/C control linkage adjustment (manual
 A/C)HA-193, 212, 215
 A/C control operation (auto A/C).....HA-24
 A/C control operation (manual A/C)HA-174
 A/C diagnostic work flow (auto A/C)HA-64
 A/C diagnostic work flow (manual A/C).....HA-184
 A/C HFC134a (R134a) system
 precautionHA-3, 156
 A/C HFC134a (R134a) system service
 procedure.....HA-138, 224
 A/C HFC134a (R134a) system service
 toolsHA-12, 165
 A/C HFC134a system service equip-
 ment precautionHA-8, 161
 A/C lubricant (R134a)HA-140, 226
 A/C operational checkHA-65, 185
 A/C performance chartHA-112, 203
 A/C performance test diagnoses.....HA-110, 201
 A/C relayHA-107, 222
 A/C self-diagnoses (auto A/C).....HA-43
 A/C service data specification.....HA-155, 242
 A/C system description (auto A/C)HA-24
 A/C trouble diagnoses (auto A/C)HA-28
 A/C trouble diagnoses (manual A/C)HA-177
 A/C, A - Wiring diagramHA-31, 35
 A/C, M - Wiring diagramHA-180
 Accelerator control systemFE-3
 Accelerator pedal position (APP)
 sensorEC-304, 311, 561
 Air bagRS-13
 Air bag disposalRS-26
 Air bag precautionsGI-3
 Air bleeding (hydraulic clutch)CL-7
 Air bleeding for brake systemBR-9
 Air cleaner filter replacementMA-16
 Air conditioner cut controlEC-35
 Air flow meter - See Mass air flow
 sensorEC-188, 195, 465
 Air mix door control linkage
 adjustmentHA-86, 212
 Air mix. door motorHA-83, 135, 209
 Air spoiler, rearBT-42
 AlternatorSC-31
 Ambient sensorHA-123
 Angular tightening application.....EM-3
 Antenna - See Power antennaEL-193

Anti-lock brake system - See ABSBR-39
 Anti-lock brake system - Wiring
 diagramBR-44
 ASCD (automatic speed control device)EL-246
 A/T - Wiring diagramAT-16
 A/T - Wiring diagram - AT - FTSAT-112
 A/T - Wiring diagram - AT - MAINAT-101
 A/T - Wiring diagram - AT - PNP/SWAT-106
 A/T - Wiring diagram - AT - VSS A/TAT-118, 214
 A/T fluid temperature sensorAT-110
 A/T self-diagnosesAT-41, 51
 A/T shift lock systemAT-271
 A/T shift lock system - Wiring diagramAT-272
 A/T trouble diagnosesAT-57
 A/T Wiring diagram - AT - ENG SSAT-123
 A/T Wiring diagram AT - 1STAT-129
 A/T Wiring diagram AT - 2NDAT-135
 A/T Wiring diagram AT - 3RDAT-141
 A/T Wiring diagram AT - 4THAT-148
 A/T Wiring diagram AT - BA/FTSAT-198
 A/T Wiring diagram AT - CANAT-210
 A/T Wiring diagram AT - LPSVAT-170
 A/T Wiring diagram AT - NONDTCAT-221
 A/T Wiring diagram AT - OVRCSVAT-193
 A/T Wiring diagram AT - SSV/AAT-176
 A/T Wiring diagram AT - SSV/BAT-181
 A/T Wiring diagram AT - TCCSIGAT-161
 A/T Wiring diagram AT - TCVAT-155
 A/T Wiring diagram AT - TPSAT-187
 A/T Wiring diagram AT - VSSMTRAT-205
 AudioEL-180
 AUDIO - Wiring diagramEL-183
 Audio and A/C control removal and
 installation - See Instrument panelBT-29
 AUT/DP - Wiring diagramEL-215
 Auto air conditioner - Wiring diagramHA-31, 35
 Auto anti-dazzling inside mirrorEL-202
 Automatic amplifierHA-39, 71
 Automatic drive positionerEL-210
 Automatic speed control system - See
 ASCDEL-246
 Automatic transmission fluid
 replacementMA-21
 Automatic transmission numberGI-44

B

Back-up lampEL-74
 Back-up lamp switch (M/T)MT-10
 BACK/L - Wiring diagramEL-74
 Ball joint (front)SU-13
 Basic inspectionEC-123
 BatterySC-4
 Battery/Starting/Charging System
 TesterSC-7, 13, 24
 Baulk ring (M/T)MT-16
 B/COMP - Wiring diagramEL-132
 Blower and cooling unitHA-148, 235
 Blower motorHA-91, 195
 Blower resistorHA-195

ALPHABETICAL INDEX

Board computer	EL-130
Board-on lift	GI-46
Body alignment	BT-65
Brake booster	BR-20
Brake fluid change	BR-8
Brake fluid level	MA-24
Brake fluid level and line check	BR-8
Brake hydraulic line	BR-10
Brake inspection	MA-24
Brake lines and cables inspection	MA-24
Brake master cylinder	BR-14, 17
Brake pedal	BR-12
Brake switch	EC-693
BRK/SW - Wiring diagram	EC-694
Bulb specifications	EL-476
Bumper, front	BT-13
Bumper, rear	BT-16
BYPS/V - Wiring diagram	EC-639, 646

C

Camshaft inspection	EM-48
Camshaft position sensor (PHASE)	EC-337
CAN (Controller Area Network)	EL-429, 430, 437
CAN - Wiring diagram	EL-431, 438
CAN communication	AT-100, BR-109,
	EL-429, 430, 437
Canister-See EVAP canister	EC-36
CHARGE - Wiring diagram	SC-23
Charging system	SC-22
Chassis and body maintenance	MA-20
CHIME - Wiring diagram	EL-146
CIGAR - Wiring diagram	EL-165
Cigarette lighter.....	EL-165
Circuit breaker.....	EL-18
Closed loop control (Bank 1)	EC-526
Closed loop control (Bank 2)	EC-526
Clutch cover.....	CL-15
Clutch disc	CL-15
Clutch fluid level.....	MA-20
Clutch master cylinder	CL-8
Clutch operating cylinder	CL-10
Clutch pedal.....	CL-6
Clutch release bearing.....	CL-13
Clutch release mechanism	CL-13
Clutch withdrawal lever.....	CL-13
Coil spring (front).....	SU-9
Coil spring (rear)	SU-22
Collision diagnosis.....	RS-62
Combination lamp, front, removal and installation	BT-13
Combination lamp, rear, removal and installation	BT-42
Combination meter	EL-117
Combination meter removal and instal- lation - See Instrument panel.....	BT-29
Combination switch	EL-31
Component Location (auto A/C).....	HA-28
Component Location (manual A/C)	HA-177
Compression pressure.....	EM-13

Compressor clutch removal and installation.....	HA-143, 230
Compressor description	HA-168
Compressor precaution	HA-8, 161
Compressor special service tool	HA-11, 164
Connecting rod.....	EM-69
Connecting rod bearing clearance.....	EM-73
Connecting rod bushing clearance	EM-74
Connector inspection	GI-21
Console box - See Instrument panel.....	BT-29
CONSULT for ABS	BR-48
CONSULT for engine	EC-101
CONSULT for TCS	BR-95
Control lever (M/T).....	MT-11
Control valve (A/T)	AT-309
Controller Area Network (CAN)	EL-429, 430, 437
Converter housing installation.....	AT-370
COOL/F - Wiring diagram	EC-536
Coolant mixture ratio.....	MA-12
Coolant replacement.....	MA-14
Cooling circuit (engine).....	LC-12
Cooling fan control	EC-532
Cooling fan control system	LC-21
Coupling sleeve (M/T)	MT-16
Crankcase emission control system - See positive crankcase ventilation	EC-51
Crankshaft	EM-71
Crankshaft position sensor (POS)	EC-330
Crash zone sensor	RS-18
Cruise control - See ASCD	EL-246
Cylinder block	EM-66
Cylinder head	EM-44
Cylinder head bolt tightening	EM-55

D

Data link connector for Consult.....	EC-101
Daytime light system.....	EL-51
Daytime running light - See Daytime light system	EL-51
DEF - Wiring diagram	EL-169
Detonation sensor - See Knock sensor	EC-325
Diagnosis sensor unit	RS-17
Diagnostic trouble code (DTC) for OBD system	EC-9, 76
Diagnostic trouble code (DTC) inspec- tion priority chart.....	EC-128
Differential gear (FF A/T)	AT-353
Differential gear (FF M/T).....	MT-19, 38
Dimensions	GI-45
DLC - Wiring diagram	EC-763
D/LOCK - Wiring diagram	EL-263
Dome light - See Interior lamp	EL-92
Door glass	BT-21
Door lock	BT-25
Door mirror	BT-63
Door trim	BT-37
Door, front	BT-20
Door, rear	BT-20
Drive plate runout	EM-75

ALPHABETICAL INDEX

Drive shaft (front).....	AX-9
Dropping resistor (A/T).....	AT-168
DTC work support.....	EC-114
DTRL - Wiring diagram.....	EL-55

E

ECM input/output signal	EC-141
ECM power supply	EC-461
ECM/PW - Wiring diagram	EC-462
ECTS - Wiring diagram	EC-209
Electric sun roof	EL-196
Electric throttle control actuator	EC-471, 473
Electrical diagnoses.....	GI-24
Electrical ignition system.....	EC-34
Electrical unit	Foldout
Electrical units location	EL-449
EMNT - Wiring diagram.....	EC-736
Engine compartment.....	BT-66
Engine control circuit diagram.....	EC-28
Engine control component parts location	EC-24
Engine control module (ECM)	EC-455
Engine control system diagram and chart.....	EC-29
Engine coolant temperature sensor (ECTS).....	EC-207, 213
Engine fail-safe system	EC-129
Engine mounting control (Front)	EC-735
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine oil replacement	MA-16
Engine outer component parts	EM-9
Engine removal	EM-62
Engine room - See Engine compartment.....	BT-66
Engine serial number	GI-44
EVAP canister.....	EC-37
EVAP canister purge volume control solenoid valve.....	EC-36, 376, 588
EVAP canister vent control valve	EC-383, 601, 609
EVAP control system (small leak) diagnosis	EC-361, 417, 573, 618
EVAP control system pressure sensor	EC-390, 396
EVAP control system purge flow moni- toring diagnosis.....	EC-351
EVAP vapor lines inspection.....	MA-19
Evaporative emission (EVAP) system.....	EC-36
Exhaust system	FE-9
Exhaust system inspection	MA-20
Exterior	BT-42

F

Fan control amp.	HA-94
Fan switch	HA-195

F/FOG - Wiring diagram	EL-76
Final drive (FF A/T)	AT-353
Final drive (FF M/T)	MT-19, 38
Finisher, interior - See Trim	BT-34
Finisher, trunk lid.....	BT-41
Floor trim.....	BT-34
FLS1 - Wiring diagram	EC-433
FLS2 - Wiring diagram	EC-439
Fluid temperature sensor (A/T)	AT-110
Fluids	MA-11
Flywheel (clutch)	CL-15
Flywheel runout.....	EM-75
Fog lamp, front.....	EL-75
Fog lamp, front, removal and installation	BT-13
Fork rod (M/T)	MT-18
Forward clutch.....	AT-331
F/PUMP - Wiring diagram	EC-729
Freeze frame data.....	EC-77
Front axle.....	AX-2
Front bumper	BT-13
Front combination lamp removal and installation	BT-13
Front disc brake	BR-23
Front door	BT-20
Front fog lamp	EL-75
Front fog lamp removal and installation	BT-13
Front seat.....	BT-48
Front seat belt	RS-4
Front suspension	SU-2
Front washer	EL-159
Front wiper	EL-159
FTTS - Wiring diagram.....	EC-287
Fuel cut control (at no load & high engine speed)	EC-36
Fuel gauge	EL-117
Fuel injection system (Bank 1)	EC-267, 275
Fuel injection system (Bank 2)	EC-267, 275
Fuel level sensor	EC-432, 436
Fuel line inspection	MA-15
Fuel precautions	GI-8
Fuel pressure check	EC-56
Fuel pressure release	EC-56
Fuel pump	EC-728
Fuel system	FE-4
Fuel tank temperature sensor	EC-282, 285
Fuel tank vacuum relief valve	EC-37
FUELBI - Wiring diagram	EC-269, 277
FUELBI - Wiring diagram	EC-270, 278
Fuse	EL-18
Fuse and fusible link box	Foldout
Fuse block	Foldout
Fusible link	EL-18

G

Garage jack and safety stand	GI-47
Gauges	EL-117
Gear components (M/T)	MT-16
Generator - See Alternator	SC-31

ALPHABETICAL INDEX

Generic scan tool (GST).....	EC-117
Glass	BT-21
Grease.....	MA-11
Ground distribution.....	EL-19

H

Harness connector	EL-6
Harness connector inspection	GI-21
Harness layout	EL-453
Hazard warning lamp	EL-80
Headlamp	EL-37
Headlamp removal and installation	BT-13
Headlining - See Roof trim	BT-39
Heated oxygen sensor 1 (bank 1).....	EC-220, 228, 240, 492, 499
Heated oxygen sensor 1 (bank 2).....	EC-220, 228, 240, 492, 499
Heated oxygen sensor 1 heater (bank 1).....	EC-175
Heated oxygen sensor 1 heater (bank 2).....	EC-175
Heated oxygen sensor 2 (bank 1).....	EC-249, 257, 506, 516
Heated oxygen sensor 2 (bank 2).....	EC-249, 257, 506, 516
Heated oxygen sensor 2 heater (bank 1).....	EC-181
Heated oxygen sensor 2 heater (bank 2).....	EC-181
Heated seat.....	BT-51, EL-208
Heated steering.....	EL-34
Heater unit (heater core)	HA-147, 234
Height (Dimensions)	GI-45
HFC134a (R134a) system precaution	HA-3, 156
HFC134a (R134a) system service procedure.....	HA-138, 224
HFC134a (R134a) system service tools	HA-12, 165
HFC134a system service equipment precaution.....	HA-8, 161
High clutch.....	AT-326
H/LAMP - Wiring diagram	EL-41
Homelink universal transceiver	EL-353
Hood.....	BT-13
Horn	EL-164
HORN - Wiring diagram.....	EL-164
How to erase DTC for OBD system.....	EC-91
HSEAT - Wiring diagram.....	EL-208
H/STRG - Wiring diagram.....	EL-36

I

IATS - Wiring diagram	EC-204
Identification plate.....	GI-44
Idle mixture ratio.....	EC-59
Idle speed.....	EC-59
Ignition control system	EC-707

Ignition timing	EC-59
IGNSYS - Wiring diagram	EC-708
ILL - Wiring diagram	EL-87
ILLUMINATION	EL-85
I/MIRR - Wiring diagram	EL-202
In vehicle sensor	HA-126
INJECT - Wiring diagram	EC-719
Injector.....	EC-718
Injector removal and installation	EC-57
Input shaft (FF M/T)	MT-16, 24
Instrument panel	BT-29
Intake air temparature sensor	EC-203, 216
Intake door control linkage adjustment	HA-90, 193
Intake door motor	HA-87, 190
Intake manifold	EM-11
Intake sensor	HA-133
Integrated homelink transmitter	EL-353
Interior	BT-34
Interior lamp	EL-92
Interior lamp on-off control.....	EL-94
IVIS (Infiniti vehicle immobilizer system)	EL-356

J

Jacking points	GI-47
Joint connector (J/C)	Foldout
Junction box (J/B).....	Foldout

K

KEYLES - Wiring diagram	EL-282
Knock sensor (KS)	EC-325
Knuckle spindle	AX-5
KS - Wiring diagram.....	EC-326

L

Length (Dimensions)	GI-45
License lamp	EL-65
Lifting points	GI-48
Line pressure solenoid valve	AT-168
Line pressure test (A/T)	AT-67
Liquid gasket application	EM-3
LOAD - Wiring diagram	EC-759
Location of electrical units	EL-449
Lock, door	BT-25
Low and reverse brake	AT-336
Lubricant (R134a) A/C	HA-140, 226
Lubricants	MA-11
Lubrication circuit (engine)	LC-4
Lubrication-locks, hinges and hood latches	MA-26

ALPHABETICAL INDEX

M

- MAFS - Wiring diagram EC-191, 197, 467
Magnet clutch HA-101, 143, 230
MAIN - Wiring diagram EC-157
Mainshaft (M/T) MT-16, 29
Maintenance (engine) MA-13
MAJOR OVERHALL AT-283
Malfunction indicator lamp (MIL) EC-457
Manual air conditioner - Wiring diagram HA-180
Manual transmission oil replacement MA-20
Mass air flow sensor (MAFS) EC-188, 195, 465
Master cylinder (brake) BR-14, 17
Master cylinder (clutch) CL-8
Meter EL-117
METER - Wiring diagram EL-121
MIL - Wiring diagram EC-458
MIRROR - Wiring diagram EL-201
Mirror defogger EL-167
Mirror, door BT-63
Misfire EC-317
Mode door control linkage adjustment HA-81, 215
Mode door motor HA-75, 213
Model variation GI-42
Molding - See Exterior BT-42
M/T major overhaul MT-15
M/T removal and installation MT-13
MULTI - Wiring diagram EL-282
Multi-remote control system EL-277
Multiplex communication HA-136
Multiport fuel injection (MFI) system EC-32
Multiport fuel injection precautions GI-6

N

- NATS (Nissan anti-theft system)
 precautions GI-3
NATS - Wiring diagram EL-358
NAVI - wiring diagram EL-384
Navigation System EL-376
NVH troubleshooting (AX) AX-3
NVH troubleshooting (BR) BR-7
NVH troubleshooting (CL) CL-4
NVH troubleshooting (M/T) MT-7
NVH troubleshooting (ST) ST-5
NVH troubleshooting (SU) SU-4
NVIS (Nissan vehicle immobilizer
 system) EL-356
NVIS (Nissan vehicle immobilizer sys-
 tem) precautions GI-3

O

- O2H1B1 - Wiring diagram EC-177
O2H1B2 - Wiring diagram EC-178
O2H2B1 - Wiring diagram EC-183
O2H2B2 - Wiring diagram EC-184

- O2S1B1 - Wiring diagram EC-222, 231, 243
O2S1B2 - Wiring diagram EC-223, 232, 244
O2S2B1 - Wiring diagram EC-251, 260, 509, 519
O2S2B2 - Wiring diagram EC-252, 261, 510, 520
Oil change (capacity) MA-11
Oil cooler (engine) LC-9
Oil pan (engine) EM-14
Oil pressure (engine) LC-6
Oil pump (A/T) AT-305
Oil pump (engine) LC-6
Oil pump regulator valve (engine) LC-8
Oil seal replacement (engine) EM-41
On board diagnostic system EC-75
Operating cylinder (clutch) CL-10
ORVR (On-board Refueling Vapor
 Recovery) EC-42
Overheat EC-532
Overrun clutch AT-331
Overrun clutch solenoid valve AT-191

P

- P/ANT - Wiring diagram EL-193
Park/Neutral position switch EC-682
Park/neutral position switch (A/T) AT-104
Park/neutral position switch (M/T) MT-10
Parking brake control BR-35, 37
Parking lamp EL-65
PCV (positive crankcase ventilation) EC-51
PGC/V - Wiring diagram EC-378, 591
PHASE - Wiring diagram EC-339
Piston assembly EM-76
Piston pin inspection EM-68
Piston ring inspection EM-68
Piston to bore clearance EM-70
PNP/SW - Wiring diagram EC-684
POS - Wiring diagram EC-332
POWER - Wiring diagram EL-11
Power antenna EL-193
Power door lock EL-261
Power door mirror EL-201
Power seat EL-205
Power steering fluid level MA-25, ST-7
Power steering gear ST-14
Power steering hydraulic pressure ST-9
Power steering oil pump ST-24
Power steering pressure (PSP) sensor EC-450
Power steering system bleeding ST-7
Power supply routing EL-10
Power transistor & ignition coil EC-707
Power window EL-247
PRE/SE - Wiring diagram EC-392, 398
Precations for Leak detection dye HA-4, 157
Precautions (General) GI-4
Pressure plate - See Clutch cover CL-15
Pressure test (A/T) AT-67
PS/SEN - Wiring diagram EC-451

ALPHABETICAL INDEX

R

- RadiatorLC-20, 21
 Radio - See AudioEL-180
 Rear air spoilerBT-42
 Rear axleAX-16
 Rear axle (disc brake type)AX-18
 Rear bumperBT-16
 Rear combination lamp removal and
 installationBT-42
 Rear disc brakeBR-27
 Rear doorBT-20
 Rear seatBT-52
 Rear seat beltRS-6
 Rear suspensionSU-16
 Rear windowBT-61
 Rear window defoggerEL-167
 Refrigerant pressure sensorHA-107, 222
 Refrigerant connection precautionHA-5, 158
 Refrigerant discharging evacuating
 chargingHA-138
 Refrigerant general precautionHA-4, 157
 Refrigerant linesHA-149, 236
 Refrigerant pressure sensorEC-739
 Refrigeration cycleHA-15, 168
 Release bearing (clutch)CL-13
 Remote keyless entry systemEL-277
 Removal and installation (A/T)AT-280
 Reverse clutchAT-323
 Reverse idler shaft (M/T)MT-16, 37
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T)MT-10
 Reverse main gear (M/T)MT-16, 37
 Revolution sensor (A/T)AT-116
 Road wheel sizeGI-45
 Roof trimBT-39
 Room lamp - See Interior lampEL-92
 ROOM/L - Wiring diagramEL-96
 RP/SEN - Wiring diagramEC-740

S

- SAE J1930 terminology listGI-52
 Seal - See ExteriorBT-42
 SEAT - Wiring diagramEL-205
 Seat belt inspectionMA-27, RS-8
 Seat belt pre-tensionerRS-3
 Seat belt pre-tensioner disposalRS-26
 Seat belt, frontRS-4
 Seat belt, rearRS-6
 Seat, frontBT-48
 Seat, rearBT-52
 SHIFT - Wiring diagramAT-272
 Shift control components (M/T)MT-18
 Shift fork (M/T)MT-18
 Shift leverMT-11
 Shift lock systemAT-271
 Shift scheduleAT-376

- Shift solenoid valve A (A/T)AT-174
 Shift solenoid valve B (A/T)AT-179
 Shock absorber (front)SU-10
 Shock absorber (rear)SU-22
 Side air bagRS-24
 Side trimBT-34
 Smart entrance control unitEL-342
 SMJ (super multiple junction)Foldout
 Spare tire sizeGI-45
 Spark plug replacementMA-17
 SpeedometerEL-117
 Spiral cableRS-20
 Spring (Wheelarch) heightSU-6
 SROOF - Wiring diagramEL-197
 SRS - See Supplemental Restraint
 SystemRS-13
 SRS - Wiring diagramRS-38
 S/SIG - Wiring diagramEC-725
 Stabilizer bar (front)SU-11
 Stall test (A/T)AT-63
 Standardized relayEL-8
 START - Wiring diagramSC-11
 Start signalEC-724
 StarterSC-19
 Starting systemSC-10
 Steering gear and linkage inspectionMA-25
 Steering linkageST-14
 Steering switchEL-33
 Steering wheel and columnST-10
 Steering wheel playST-6
 Steering wheel turning forceST-8
 Stop lampEL-73
 STOP/L - Wiring diagramEL-73
 Strut (front)SU-9
 Strut (rear)SU-20
 Sun roof, electricEL-196
 Sunload sensorHA-129
 SunroofBT-53
 Supplemental Restraint SystemRS-13
 Supplemental restraint system - Wiring
 diagramRS-38
 Symbols and abbreviationsGI-10
 Symptom matrix chartEC-131
 Synchronizer (M/T)MT-16
 System readiness test (SRT) codeEC-77

T

- TachometerEL-117
 Tail lampEL-65
 TAIL/L - Wiring diagramEL-68
 TCM circuit diagramAT-16
 TCM inspection tableAT-97
 TCS (traction control system)BR-86
 TCS - Wiring diagramBR-90
 TCS component parts and connector
 locationBR-89
 TCS control unitBR-88
 TCS system componentsBR-87
 TCS trouble diagnosesBR-103

ALPHABETICAL INDEX

TCS wheel sensors	BR-89
THEFT - Wiring diagram	EL-316
Theft warning system.....	EL-308
Thermostat.....	LC-18
Three way catalyst precautions.....	GI-6
Throttle body	EM-11
Throttle control motor	EC-487
Throttle control motor relay	EC-481
Throttle position sensor (TPS).....	EC-290, 297, 550, 557, 559
Throttle position switch	AT-184, 264
Throwout bearing - See Clutch release bearing	CL-13
Tie-rod	ST-14
Tie-rod ball joints.....	ST-18
Tightening torque of standard bolts.....	GI-50
Timing chain.....	EM-21
Tire rotation	MA-23
Tire size	GI-45
Torque converter installation	AT-281, 370
Torque convertor clutch solenoid valve.....	AT-153
Tow truck towing	GI-49
Traction control system - See TCS	BR-86
Traction control system - Wiring diagram	BR-90
Transaxle serial number	GI-44
Transmission case (M/T)	MT-15
TRANSMT - Wiring diagram	EL-353
Tread-FR&RR (Dimensions).....	GI-45
Trim	BT-34
TRNSCV - Wiring diagram	EL-353
Trouble diagnoses	GI-34
Trunk lid	BT-16
Trunk lid finisher.....	BT-41
Trunk lid opener - See Trunk lid	BT-16
Trunk lid trim	BT-41
Trunk room trim	BT-41
Turbine revolution sensor.....	AT-212
TURN - Wiring diagram	EL-82
Turn signal lamp	EL-80
Two trip detection logic	EC-75
Two-pole lift	GI-48

U

Under body	BT-68
------------------	-------

V

Vacuum cut valve	EC-36
------------------------	-------

Vacuum cut valve bypass valve.....	EC-36, 637, 643
Vacuum hose (brake system).....	BR-22
Vacuum hose drawing (Engine control)	EC-30
Valve clearance	EM-58
Valve guide	EM-50
Valve seat	EM-51
Valve spring	EM-52
Vehicle recovery (freeing a stuck vehicle).....	GI-49
VEHICLE SECURITY (THEFT WARN- ING) SYSTEM	EL-308
Vehicle speed sensor (VSS)	EC-442
VENT/V - Wiring diagram	EC-385, 603, 612
Ventilation air filter.....	HA-154, 241
VIAS	EC-688, 699
VIAS - Wiring diagram	EC-701
Viscosity number (SAE)	MA-11
VSS - Wiring diagram	EC-444

W

WARN - Wiring diagram	EL-137
Warning chime	EL-144
Warning lamps	EL-136
Washer, front.....	EL-159
Water pump	LC-14
Water temperature gauge	EL-117
Weatherstrip - See Exterior	BT-42
Wheel alignment (front)	SU-6
Wheel alignment (rear).....	SU-18
Wheel balance	MA-22
Wheel bearing (front).....	AX-4
Wheel bearing (rear)	AX-17
Wheel hub (front).....	AX-5
Wheel hub (rear)	AX-18
Wheel sensors (ABS)	BR-138
Wheel sensors (TCS)	BR-138
Wheelarch height	SU-6
Wheelbase (Dimensions)	GI-45
Width (Dimensions)	GI-45
WINDOW - Wiring diagram	EL-251
Window, rear	BT-61
Windshield.....	BT-61
WIPER - Wiring diagram	EL-161
Wiper, front.....	EL-159
Wiring Diagram (Cell code) list	EL-477
Wiring Diagram - VEHSEC -	EL-316
Wiring diagrams	GI-11
Withdrawal lever (clutch)	CL-13
Wrist pin - See Piston pin inspection.....	EM-68