

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system).....BR-37
 ABS - Wiring diagramBR-41, 42, 46
 ABS sensor rotorAX-19
 Absolute pressure sensorEC-201
 A/C air flow.....HA-26, 176
 A/C component layout.....HA-20, 174
 A/C compressor clutch removal and
 installation.....HA-144, 231
 A/C compressor descriptionHA-169
 A/C compressor precautionHA-8, 162
 A/C compressor special service tool.....HA-11, 165
 A/C control linkage adjustment (manual
 A/C)HA-194, 204, 207
 A/C control operation (auto A/C).....HA-24
 A/C control operation (manual A/C).....HA-175
 A/C diagnostic work flow (auto A/C)HA-64
 A/C diagnostic work flow (manual A/C).....HA-185
 A/C HFC134a (R134a) system
 precautionHA-3, 157
 A/C HFC134a (R134a) system service
 procedure.....HA-139, 225
 A/C HFC134a (R134a) system service
 toolsHA-12, 166
 A/C HFC134a system service equip-
 ment precaution.....HA-8, 162
 A/C lubricant (R134a)HA-141, 227
 A/C operational check.....HA-65, 186
 A/C performance chart.....HA-112, 218
 A/C performance test diagnoses.....HA-110, 216
 A/C relayHA-107, 214
 A/C self-diagnoses (auto A/C).....HA-43
 A/C service data specification.....HA-156, 243
 A/C system description (auto A/C).....HA-24
 A/C trouble diagnoses (auto A/C)HA-28
 A/C trouble diagnoses (manual A/C)HA-178
 A/C, A - Wiring diagramHA-31, 35
 A/C, M - Wiring diagramHA-181
 Accelerator control systemFE-3
 Accelerator pedal position (APP)
 sensor.....EC-649, 656, 669
 Air bagRS-14
 Air bag disposal.....RS-26
 Air bag precautionsGI-3
 Air bleeding (hydraulic clutch)CL-6
 Air bleeding for brake systemBR-9
 Air cleaner filter replacement.....MA-16
 Air conditioner cut controlEC-36
 Air flow meter - See Mass air flow
 sensor.....EC-188, 195, 450
 Air mix door control linkage
 adjustmentHA-86, 204
 Air mix. door motorHA-83, 136, 201
 Air spoiler, rear.....BT-42
 AlternatorSC-31
 Ambient sensorHA-124
 Angular tightening application.....EM-3
 Antenna - See Power antennaEL-197

Anti-lock brake system - See ABS.....BR-37
 Anti-lock brake system - Wiring
 diagram.....BR-42, 46
 ASCD (automatic speed control device)EL-250
 A/T - Wiring diagramAT-16
 A/T - Wiring diagram - AT - FTSAT-117
 A/T - Wiring diagram - AT - MAIN.....AT-102
 A/T - Wiring diagram - AT - PNP/SWAT-111
 A/T - Wiring diagram - AT - VSS A/T...AT-123, 215
 A/T fluid temperature sensor.....AT-115
 A/T IND - Wiring diagramEL-146
 AT indicator lampEL-146
 A/T self-diagnosesAT-42, 53
 A/T shift lock system.....AT-276
 A/T shift lock system - Wiring diagram.....AT-277
 A/T trouble diagnosesAT-59
 A/T Wiring diagram - AT - ENG SSAT-128
 A/T Wiring diagram AT - 1STAT-134
 A/T Wiring diagram AT - 2NDAT-140
 A/T Wiring diagram AT - 3RDAT-146
 A/T Wiring diagram AT - 4TH.....AT-153
 A/T Wiring diagram AT - BA/FTS.....AT-203
 A/T Wiring diagram AT - CAN.....AT-107
 A/T Wiring diagram AT - LPSVAT-175
 A/T Wiring diagram AT - NONDTCAT-222
 A/T Wiring diagram AT - OVRCSVAT-198
 A/T Wiring diagram AT - SSV/AAT-181
 A/T Wiring diagram AT - SSV/BAT-186
 A/T Wiring diagram AT - TCCSIGAT-166
 A/T Wiring diagram AT - TCVAT-160
 A/T Wiring diagram AT - TPS.....AT-192
 A/T Wiring diagram AT - VSSMTR.....AT-210
 AudioEL-184
 AUDIO - Wiring diagram.....EL-187
 Audio and A/C control removal and
 installation - See Instrument panelBT-29
 AUT/DP - Wiring diagramEL-219
 Auto air conditioner - Wiring diagramHA-31, 35
 Auto anti-dazzling inside mirrorEL-206
 Automatic amplifier.....HA-39, 71
 Automatic drive positionerEL-214
 Automatic speed control system - See
 ASCDEL-250
 Automatic transmission fluid
 replacement.....MA-21
 Automatic transmission numberGI-44

B

Back-up lampEL-75
 Back-up lamp switch (M/T).....MT-11
 BACK/L - Wiring diagram.....EL-75
 Ball joint (front)SU-13
 Basic inspectionEC-122
 BatterySC-4
 Battery/Starting/Charging System
 Tester.....SC-7, 13, 24
 Baulk ring (M/T).....MT-17
 B/COMP - Wiring diagramEL-133
 Blower and cooling unit.....HA-149, 236

ALPHABETICAL INDEX

Blower motor	HA-91, 196
Blower resistor.....	HA-196
Board computer	EL-131
Board-on lift	GI-46
Body alignment	BT-65
Brake booster	BR-20
Brake fluid change	BR-8
Brake fluid level	MA-24
Brake fluid level and line check	BR-8
Brake hydraulic line	BR-10
Brake inspection	MA-24
Brake lines and cables inspection	MA-24
Brake master cylinder	BR-14, 17
Brake pedal	BR-12
Brake switch	EC-643
BRK/SW - Wiring diagram	EC-644
Bulb specifications	EL-480
Bumper, front	BT-13
Bumper, rear	BT-16
BYPS/V - Wiring diagram	EC-594, 601

C

Camshaft inspection	EM-55
Camshaft position sensor (PHASE).....	EC-322
CAN (Controller Area Network)	EL-433, 434, 440
CAN - Wiring diagram	EL-435, 441
CAN communication.....	AT-105, BR-111, EL-433, 434, 440
Canister - See EVAP canister	EC-37
CHARGE - Wiring diagram	SC-23
Charging system	SC-22
Chassis and body maintenance	MA-20
CHIME - Wiring diagram.....	EL-150
CIGAR - Wiring diagram.....	EL-169
Cigarette lighter.....	EL-169
Circuit breaker.....	EL-19
CLOCK - Wiring diagram.....	EL-170
Closed loop control (Bank 1)	EC-509
Closed loop control (Bank 2)	EC-509
Clutch cover.....	CL-15
Clutch disc	CL-15
Clutch fluid level.....	MA-20
Clutch master cylinder	CL-8
Clutch operating cylinder	CL-10
Clutch release bearing.....	CL-13
Clutch release mechanism	CL-13
Clutch withdrawal lever.....	CL-13
Coil spring (front).....	SU-9
Coil spring (rear).....	SU-22
Collision diagnosis.....	RS-63
Combination lamp, front, removal and installation	BT-13
Combination lamp, rear, removal and installation	BT-42
Combination meter	EL-118
Combination meter removal and instal- lation - See Instrument panel.....	BT-29
Combination switch.....	EL-32
COMPAS - Wiring diagram	EL-139

Compass	EL-137
Component Location (auto A/C).....	HA-28
Component Location (manual A/C).....	HA-178
Compression pressure	EM-13
Compressor clutch removal and installation.....	HA-144, 231
Compressor description	HA-169
Compressor precaution.....	HA-8, 162
Compressor special service tool	HA-11, 165
Connecting rod.....	EM-76
Connecting rod bearing clearance.....	EM-80
Connecting rod bushing clearance	EM-81
Connector inspection.....	GI-21
Console box - See Instrument panel.....	BT-29
CONSULT for ABS	BR-50
CONSULT for engine	EC-101
CONSULT for TCS	BR-97
Control lever (M/T)	MT-12
Control valve (A/T)	AT-314
Controller Area Network (CAN)	EL-433, 434, 440
Converter housing installation.....	AT-375
COOL/F - Wiring diagram	EC-519
Coolant mixture ratio.....	MA-12
Coolant replacement.....	MA-14
Cooling circuit (engine).....	LC-12
Cooling fan control	EC-515
Cooling fan control system	LC-21
Coupling sleeve (M/T)	MT-17
Crankcase emission control system - See positive crankcase ventilation	EC-52
Crankshaft.....	EM-78
Crankshaft position sensor (POS)	EC-315
Crash zone sensor	RS-19
Cruise control - See ASCD.....	EL-250
Cylinder block	EM-73
Cylinder head.....	EM-50
Cylinder head bolt tightening	EM-62

D

Data link connector for Consult.....	EC-101
Daytime light system.....	EL-52
Daytime running light - See Daytime light system	EL-52
DEF - Wiring diagram	EL-173
Detonation sensor - See Knock sensor	EC-310
Diagnosis sensor unit.....	RS-18
Diagnostic trouble code (DTC) for OBD system	EC-9, 77
Diagnostic trouble code (DTC) inspec- tion priority chart.....	EC-128
Differential gear (FF A/T)	AT-358
Differential gear (FF M/T).....	MT-20, 40
Dimensions	GI-45
DLC - Wiring diagram	EC-736
D/LOCK - Wiring diagram.....	EL-267
Dome light - See Interior lamp	EL-93
Door glass.....	BT-21
Door lock.....	BT-25
Door mirror.....	BT-63

ALPHABETICAL INDEX

Door trim	BT-37
Door, front	BT-20
Door, rear	BT-20
Drive plate runout	EM-82
Drive shaft (front).....	AX-9
Dropping resistor (A/T).....	AT-173
DTC work support.....	EC-113
DTRL - Wiring diagram.....	EL-56

E

ECM input/output signal	EC-140
ECM power supply	EC-446
ECM/PW - Wiring diagram.....	EC-447
ECTS - Wiring diagram	EC-209
Electric sun roof.....	EL-200
Electric throttle control actuator	EC-456, 458
Electrical diagnoses.....	GI-24
Electrical ignition system.....	EC-35
Electrical unit	Foldout
Electrical units location	EL-453
EMNT - Wiring diagram.....	EC-713
Engine compartment.....	BT-66
Engine control circuit diagram.....	EC-28
Engine control component parts location	EC-24
Engine control module (ECM).....	EC-440
Engine control system diagram and chart.....	EC-30
Engine coolant temperature sensor (ECTS).....	EC-207, 219
Engine fail-safe system	EC-129
Engine mounting control (Front)	EC-712
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine oil replacement	MA-16
Engine outer component parts	EM-9
Engine removal	EM-69
Engine room - See Engine compartment.....	BT-66
Engine serial number	GI-44
EVAP canister.....	EC-38
EVAP canister purge volume control solenoid valve.....	EC-37, 361, 543
EVAP canister vent control valve	EC-368, 556, 564
EVAP control system (small leak) diagnosis	EC-346, 402, 573
EVAP control system pressure sensor.....	EC-375, 381
EVAP control system purge flow moni- toring diagnosis.....	EC-336
EVAP vapor lines inspection.....	MA-19
Evaporative emission (EVAP) system.....	EC-37
Exhaust system	FE-9
Exhaust system inspection	MA-20
Exterior.....	BT-42

F

Fan control amp.	HA-94
Fan switch	HA-196
F/FOG - Wiring diagram	EL-77
Final drive (FF A/T)	AT-358
Final drive (FF M/T)	MT-20, 40
Finisher, interior - See Trim	BT-34
Finisher, trunk lid.....	BT-41
Floor trim.....	BT-34
FLS1 - Wiring diagram	EC-418
FLS2 - Wiring diagram	EC-424
Fluid temperature sensor (A/T)	AT-115
Fluids.....	MA-11
Flywheel (clutch).....	CL-15
Flywheel runout.....	EM-82
Fog lamp, front.....	EL-76
Fog lamp, front, removal and installation	BT-13
Fork rod (M/T)	MT-19
Forward clutch.....	AT-336
F/PUMP - Wiring diagram	EC-706
Freeze frame data.....	EC-78
Front axle.....	AX-2
Front bumper	BT-13
Front combination lamp removal and installation	BT-13
Front disc brake	BR-23
Front door	BT-20
Front fog lamp.....	EL-76
Front fog lamp removal and installation	BT-13
Front seat.....	BT-48
Front seat belt	RS-5
Front suspension.....	SU-2
Front washer	EL-163
Front wiper	EL-163
FTTS - Wiring diagram.....	EC-292
Fuel cut control (at no load & high engine speed).....	EC-37
Fuel gauge	EL-118
Fuel injection system (Bank 1)	EC-272, 280
Fuel injection system (Bank 2)	EC-272, 280
Fuel level sensor.....	EC-417, 421
Fuel line inspection	MA-16
Fuel precautions	GI-8
Fuel pressure check.....	EC-56
Fuel pressure release	EC-56
Fuel pump	EC-705
Fuel system	FE-4
Fuel tank temperature sensor.....	EC-287, 290
Fuel tank vacuum relief valve	EC-38
FUELB1 - Wiring diagram.....	EC-274, 282
FUELB2 - Wiring diagram.....	EC-275, 283
Fuse	EL-19
Fuse and fusible link box	Foldout
Fuse block	Foldout
Fusible link.....	EL-19

ALPHABETICAL INDEX

G

Garage jack and safety standGI-47
 GaugesEL-118
 Gear components (M/T)MT-17
 Generator - See Alternator.....SC-31
 Generic scan tool (GST).....EC-116
 GlassBT-21
 Grease.....MA-11
 Ground distribution.....EL-20

H

Harness connectorEL-7
 Harness connector inspectionGI-21
 Harness layoutEL-457
 Hazard warning lampEL-81
 HeadlampEL-38
 Headlamp removal and installationBT-13
 Headlining - See Roof trimBT-39
 Heated oxygen sensor 1
 (bank 1).....EC-226, 234, 246, 477, 484
 Heated oxygen sensor 1
 (bank 2).....EC-226, 234, 246, 477, 484
 Heated oxygen sensor 1 heater
 (bank 1).....EC-175
 Heated oxygen sensor 1 heater
 (bank 2).....EC-175
 Heated oxygen sensor 2
 (bank 1).....EC-255, 263, 491, 500
 Heated oxygen sensor 2
 (bank 2).....EC-255, 263, 491, 500
 Heated oxygen sensor 2 heater
 (bank 1).....EC-182
 Heated oxygen sensor 2 heater
 (bank 2).....EC-182
 Heated seat.....BT-51, EL-212
 Heated steering.....EL-35
 Heater unit (heater core).....HA-148, 235
 Height (Dimensions)GI-45
 HFC134a (R134a) system precautionHA-3, 157
 HFC134a (R134a) system service
 procedure.....HA-139, 225
 HFC134a (R134a) system service
 toolsHA-12, 166
 HFC134a system service equipment
 precaution.....HA-8, 162
 High clutch.....AT-331
 H/LAMP - Wiring diagramEL-42
 Homelink universal transceiverEL-357
 Hood.....BT-13
 HornEL-168
 HORN - Wiring diagram.....EL-168
 How to erase DTC for OBD system.....EC-90
 HSEAT - Wiring diagram.....EL-212
 H/STRG - Wiring diagram.....EL-37

I

IATS - Wiring diagramEC-204
 Identification plate.....GI-44
 Idle mixture ratio.....EC-59
 Idle speed.....EC-59
 Ignition control systemEC-684
 Ignition timingEC-59
 IGNSYS - Wiring diagramEC-685
 ILL - Wiring diagramEL-88
 IlluminationEL-86
 I/MIRR - Wiring diagramEL-206
 In vehicle sensorHA-127
 In-cabin MicrofilterHA-155, 242
 INJECT - Wiring diagramEC-696
 InjectorEC-695
 Injector removal and installationEC-57
 Input shaft (FF M/T)MT-17, 26
 Instrument panelBT-29
 Intake air temperature sensor.....EC-203, 222
 Intake door control linkage
 adjustmentHA-90, 194
 Intake door motorHA-87, 191
 Intake manifoldEM-11
 Intake sensorHA-134
 Integrated homelink transmitterEL-357
 InteriorBT-34
 Interior lampEL-93
 Interior lamp on-off control.....EL-95
 IVIS (Infiniti vehicle immobilizer
 system)EL-360

J

Jacking pointsGI-47
 Joint connector (J/C)Foldout
 Junction box (J/B).....Foldout

K

KEYLES - Wiring diagramEL-286
 Knock sensor (KS)EC-310
 Knuckle spindleAX-5
 KS - Wiring diagramEC-311

L

Length (Dimensions)GI-45
 License lampEL-66
 Lifting pointsGI-48
 Line pressure solenoid valveAT-173
 Line pressure test (A/T)AT-69
 Liquid gasket applicationEM-3
 LOAD - Wiring diagramEC-732
 Location of electrical unitsEL-453

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Lock, doorBT-25
 Low and reverse brakeAT-341
 Lubricant (R134a) A/CHA-141, 227
 LubricantsMA-11
 Lubrication circuit (engine)LC-4
 Lubrication-locks, hinges and hood
 latchesMA-26

M

MAFS - Wiring diagramEC-191, 197, 452
 Magnet clutch.....HA-101, 144, 231
 MAIN - Wiring diagram.....EC-156
 Mainshaft (M/T)MT-17, 31
 Maintenance (engine)MA-13
 MAJOR OVERHALL.....AT-288
 Malfunction indicator lamp (MIL).....EC-442
 Manual air conditioner - Wiring diagram.....HA-181
 Manual transmission oil replacementMA-20
 Mass air flow sensor (MAFS)EC-188, 195, 450
 Master cylinder (brake)BR-14, 17
 Master cylinder (clutch)CL-8
 MeterEL-118
 METER - Wiring diagram.....EL-122
 MIL - Wiring diagram.....EC-443
 MIRROR - Wiring diagram.....EL-205
 Mirror defoggerEL-171
 Mirror, door.....BT-63
 MisfireEC-302
 Mode door control linkage adjustment...HA-81, 207
 Mode door motor.....HA-75, 205
 Model variationGI-42
 Molding - See ExteriorBT-42
 M/T major overhaulMT-16
 M/T removal and installationMT-14
 MULTI - Wiring diagram.....EL-286
 Multi-remote control system.....EL-281
 Multiplex communicationHA-137
 Multiport fuel injection (MFI) systemEC-33
 Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system)
 precautionsGI-4
 NATS - Wiring diagramEL-362
 NAVI - wiring diagram.....EL-388
 Navigation SystemEL-380
 NVH troubleshooting (AX)AX-3
 NVH troubleshooting (BR).....BR-7
 NVH troubleshooting (CL)CL-4
 NVH troubleshooting (M/T)MT-7
 NVH troubleshooting (ST).....ST-5
 NVH troubleshooting (SU).....SU-16
 NVIS (Nissan vehicle immobilizer
 system)EL-360

NVIS (Nissan vehicle immobilizer sys-
 tem) precautionsGI-4

O

O2H1B1 - Wiring diagramEC-177
 O2H1B2 - Wiring diagramEC-178
 O2H2B1 - Wiring diagramEC-184
 O2H2B2 - Wiring diagramEC-185
 O2S1B1 - Wiring diagram.....EC-228, 237, 249
 O2S1B2 - Wiring diagram.....EC-229, 238, 250
 O2S2B1 - Wiring diagram ...EC-257, 266, 494, 503
 O2S2B2 - Wiring diagram ...EC-258, 267, 495, 504
 Oil change (capacity)MA-11
 Oil cooler (engine)LC-9
 Oil pan (engine)EM-14
 Oil pressure (engine)LC-6
 Oil pump (A/T).....AT-310
 Oil pump (engine)LC-6
 Oil pump regulator valve (engine)LC-8
 Oil seal replacement (engine).....EM-47
 On board diagnostic systemEC-76
 Operating cylinder (clutch).....CL-10
 ORVR (On-board Refueling Vapor
 Recovery).....EC-43
 OverheatEC-515
 Overrun clutchAT-336
 Overrun clutch solenoid valve.....AT-196

P

P/ANT - Wiring diagramEL-197
 Park/Neutral position switchEC-632
 Park/neutral position switch (A/T)AT-109
 Park/neutral position switch (M/T)MT-11
 Parking brake controlBR-35
 Parking lampEL-66
 PCV (positive crankcase ventilation)EC-52
 PGC/V - Wiring diagramEC-363, 546
 PHASE - Wiring diagramEC-324
 PHONE - Wiring diagramEL-208
 Piston assemblyEM-83
 Piston pin inspectionEM-75
 Piston ring inspection.....EM-75
 Piston to bore clearanceEM-77
 PNP/SW - Wiring diagramEC-634
 POS - Wiring diagramEC-317
 POWER - Wiring diagram.....EL-12
 Power antennaEL-197
 Power door lockEL-265
 Power door mirrorEL-205
 Power seatEL-209
 Power steering fluid levelMA-25, ST-7
 Power steering gearST-14
 Power steering hydraulic pressureST-9
 Power steering oil pumpST-24
 Power steering pressure (PSP) sensorEC-435
 Power steering system bleeding.....ST-7

ALPHABETICAL INDEX

Power supply routing.....EL-11
 Power transistor & ignition coil.....EC-684
 Power windowEL-251
 PRE/SE - Wiring diagramEC-377, 383
 Precautions for Leak detection dyeHA-4, 158
 Precautions (General)GI-4
 Pressure plate - See Clutch coverCL-15
 Pressure test (A/T).....AT-69
 PS/SEN - Wiring diagramEC-436

R

RadiatorLC-20, 21
 Radio - See Audio.....EL-184
 Rear air spoilerBT-42
 Rear axleAX-17
 Rear axle (disc brake type)AX-19
 Rear bumperBT-16
 Rear combination lamp removal and
 installationBT-42
 Rear disc brakeBR-27
 Rear doorBT-20
 Rear seatBT-52
 Rear seat belt.....RS-7
 Rear suspensionSU-16
 Rear windowBT-61
 Rear window defogger.....EL-171
 Refrigerant pressure sensorHA-107, 214
 Refrigerant connection precautionHA-5, 159
 Refrigerant discharging evacuating
 chargingHA-139
 Refrigerant general precautionHA-4, 158
 Refrigerant linesHA-150, 237
 Refrigerant pressure sensor.....EC-716
 Refrigeration cycleHA-15, 169
 Release bearing (clutch).....CL-13
 Remote keyless entry system.....EL-281
 Removal and installation (A/T).....AT-285
 Reverse clutch.....AT-328
 Reverse idler shaft (M/T)MT-17, 39
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T)MT-11
 Reverse main gear (M/T)MT-17, 39
 Revolution sensor (A/T)AT-121
 Road wheel sizeGI-45
 Roof trimBT-39
 Room lamp - See Interior lampEL-93
 ROOM/L - Wiring diagramEL-97
 RP/SEN - Wiring diagramEC-717

S

SAE J1930 terminology listGI-52
 Seal - See ExteriorBT-42
 SEAT - Wiring diagramEL-209
 Seat belt inspectionMA-27, RS-9
 Seat belt pre-tensionerRS-3
 Seat belt pre-tensioner disposalRS-26

Seat belt, front.....RS-5
 Seat belt, rear.....RS-7
 Seat, frontBT-48 GI
 Seat, rearBT-52
 SHIFT - Wiring diagramAT-277
 Shift control components (M/T)MT-19 MA
 Shift fork (M/T)MT-19
 Shift leverMT-12
 Shift lock systemAT-276 EM
 Shift schedule.....AT-381
 Shift solenoid valve A (A/T).....AT-179
 Shift solenoid valve B (A/T)AT-184 LG
 Shock absorber (front)SU-10
 Shock absorber (rear)SU-22 EC
 Side air bagRS-25
 Side trim.....BT-34
 Smart entrance control unitEL-346 FE
 SMJ (super multiple junction).....Foldout
 Spare tire sizeGI-45
 Spark plug replacement.....MA-18 CL
 Speedometer.....EL-118
 Spiral cable.....RS-21
 Spring (Wheelarch) heightSU-6 MT
 SROOF - Wiring diagramEL-201
 SRS - See Supplemental Restraint
 SystemRS-14 AT
 SRS - Wiring diagramRS-39
 S/SIG - Wiring diagramEC-702
 Stabilizer bar (front)SU-11 AX
 Stall test (A/T)AT-65
 Standardized relayEL-9
 START - Wiring diagram.....SC-11 SU
 Start signalEC-701
 StarterSC-19
 Starting system.....SC-10 BR
 Steering gear and linkage inspectionMA-25
 Steering linkageST-14
 Steering switch.....EL-34 ST
 Steering wheel and columnST-10
 Steering wheel playST-6
 Steering wheel turning force.....ST-8 RS
 Stop lamp.....EL-74
 STOP/L - Wiring diagram.....EL-74
 Strut (front)SU-9 BT
 Strut (rear)SU-20
 Sunload sensorHA-130 HA
 Sunroof.....BT-53
 Sunroof, electric.....EL-200
 Supplemental Restraint SystemRS-14
 Supplemental restraint system - Wiring
 diagramRS-39 SC
 Symbols and abbreviationsGI-10
 Symptom matrix chartEC-130 EL
 Synchronizer (M/T)MT-17
 System readiness test (SRT) codeEC-78

T

Tachometer.....EL-118
 Tail lamp.....EL-66

ALPHABETICAL INDEX

TAIL/L - Wiring diagram	EL-69
TCM circuit diagram	AT-16
TCM inspection table	AT-99
TCS (traction control system)	BR-88
TCS - Wiring diagram	BR-92, 93
TCS component parts and connector location	BR-91
TCS control unit	BR-90
TCS system components	BR-89
TCS trouble diagnoses	BR-105
TCS wheel sensors	BR-91
Telephone	EL-208
THEFT - Wiring diagram	EL-320
Theft warning system	EL-312
Thermometer	EL-137
Thermostat	LC-18
Three way catalyst precautions	GI-6
Throttle body	EM-11
Throttle control motor	EC-472
Throttle control motor relay	EC-466
Throttle position sensor (TPS)	EC-212, 295, 533, 535, 662
Throttle position switch	AT-189
Throwout bearing - See Clutch release bearing	CL-13
Tie-rod	ST-14
Tie-rod ball joints	ST-18
Tightening torque of standard bolts	GI-50
Timing chain	EM-29
Tire rotation	MA-23
Tire size	GI-45
Torque converter clutch solenoid valve	AT-158
Torque converter installation	AT-286, 375
Tow truck towing	GI-49
Traction control system - See TCS	BR-88
Traction control system - Wiring diagram	BR-92
Transaxle serial number	GI-44
Transmission case (M/T)	MT-16
TRANSMT - Wiring diagram	EL-357
Tread-FR&RR (Dimensions)	GI-45
Trim	BT-34
TRNSCV - Wiring diagram	EL-357
Trouble diagnoses	GI-34
Trunk lid	BT-16
Trunk lid finisher	BT-41
Trunk lid opener - See Trunk lid	BT-16
Trunk lid trim	BT-41
Trunk room trim	BT-41
Turbine revolution sensor	AT-213
TURN - Wiring diagram	EL-83
Turn signal lamp	EL-81
Two trip detection logic	EC-76
Two-pole lift	GI-48

U

Under body	BT-68
------------------	-------

V

Vacuum cut valve	EC-37
Vacuum cut valve bypass valve	EC-37, 592, 598
Vacuum hose (brake system)	BR-22
Vacuum hose drawing (Engine control)	EC-31
Valve clearance	EM-66
Valve guide	EM-57
Valve seat	EM-58
Valve spring	EM-59
Vehicle recovery (freeing a stuck vehicle)	GI-49
Vehicle security (theft warning) system	EL-312
Vehicle speed sensor (VSS)	EC-427
VEHSEC - Wiring Diagram	EL-320
VENT/V - Wiring diagram	EC-370, 558, 567
VIAS	EC-638, 676
VIAS - Wiring diagram	EC-678
Viscosity number (SAE)	MA-11
VSS - Wiring diagram	EC-429

W

WARN - Wiring diagram	EL-141
Warning chime	EL-148
Warning lamps	EL-140
Washer, front	EL-163
Water pump	LC-14
Water temperature gauge	EL-118
Weatherstrip - See Exterior	BT-42
Wheel alignment (front)	SU-6
Wheel alignment (rear)	SU-18
Wheel balance	MA-22
Wheel bearing (front)	AX-4
Wheel bearing (rear)	AX-18
Wheel hub (front)	AX-5
Wheel hub (rear)	AX-19
Wheel sensors (ABS)	BR-140
Wheel sensors (TCS)	BR-140
Wheelarch height	SU-6
Wheelbase (Dimensions)	GI-45
Width (Dimensions)	GI-45
WINDOW - Wiring diagram	EL-255
Window, rear	BT-61
Windshield	BT-61
WIPER - Wiring diagram	EL-165
Wiper, front	EL-163
Wiring Diagram (Cell code) list	EL-481
Wiring diagrams	GI-11
Withdrawal lever (clutch)	CL-13
Wrist pin - See Piston pin inspection	EM-75