

**SECTION** **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## A

- A/C air flow ..... [ATC-27](#)
- A/C compressor clutch removal and installation .. [ATC-120](#)
- A/C compressor mounting ..... [ATC-119](#)
- A/C compressor precaution ..... [ATC-9](#)
- A/C compressor special service tool ..... [ATC-12](#)
- A/C control operation (auto A/C) ..... [ATC-24](#)
- A/C diagnostic work flow (auto A/C) ..... [ATC-87](#)
- A/C evaporator ..... [ATC-124](#)
- A/C HFC134a (R134a) system identification ..... [ATC-6](#)
- A/C HFC134a (R134a) system precaution ..... [ATC-4](#)
- A/C HFC134a (R134a) system service procedure [ATC-116](#)
- A/C HFC134a (R134a) system service tools ... [ATC-12](#)
- A/C HFC134a system service equipment precaution ... [ATC-9](#)
- A/C lubricant (R134a) ..... [ATC-18](#)
- A/C lubrication oil ..... [ATC-18](#)
- A/C operational check ..... [ATC-50](#)
- A/C self-diagnoses (auto A/C) ..... [ATC-42](#), [ATC-87](#)
- A/C service data specification ..... [ATC-130](#)
- A/C system description (auto A/C) ..... [ATC-21](#)
- A/C trouble diagnoses (auto A/C) ..... [ATC-30](#)
- A/C, A - Wiring diagram ..... [ATC-36](#)
- A/T - Wiring diagram ..... [AT-18](#)
- A/T fluid checking ..... [AT-393](#), [AT-432](#)
- A/T fluid replacement ..... [AT-393](#)
- A/T fluid temperature sensor [AT-111](#), [AT-471](#), [AT-476](#)
- A/T IND - Wiring diagram ..... [DI-54](#)
- A/T indicator ..... [DI-54](#)
- A/T self-diagnoses [AT-43](#), [AT-53](#), [AT-54](#), [AT-452](#), [AT-457](#)
- A/T shift lock system ..... [AT-260](#), [AT-592](#)
- A/T shift lock system - Wiring diagram [AT-261](#), [AT-593](#)
- A/T trouble diagnoses ..... [AT-422](#)
- A/T Wiring diagram AT - 1ST ..... [AT-128](#), [AT-492](#)
- A/T Wiring diagram AT - 2ND ..... [AT-133](#), [AT-496](#)
- A/T Wiring diagram AT - 3RD ..... [AT-138](#), [AT-501](#)
- A/T Wiring diagram AT - 4TH ..... [AT-143](#), [AT-505](#)
- A/T Wiring diagram AT - 5TH ..... [AT-509](#)
- A/T Wiring diagram AT - BA/FTS ..... [AT-193](#)
- A/T Wiring diagram AT - CAN ..... [AT-189](#), [AT-460](#)
- A/T Wiring diagram AT - ENG SS ..... [AT-123](#)
- A/T Wiring diagram AT - FTS ..... [AT-113](#), [AT-472](#)
- A/T Wiring diagram AT - FTSP ..... [AT-477](#)
- A/T Wiring diagram AT - LPSV ..... [AT-163](#)
- A/T Wiring diagram AT - MAIN ..... [AT-102](#)
- A/T Wiring diagram AT - MMSW ..... [AT-561](#)
- A/T Wiring diagram AT - NONDTC ..... [AT-211](#)
- A/T Wiring diagram AT - OVRCSV ..... [AT-185](#)
- A/T Wiring diagram AT - PNP/SW .... [AT-107](#), [AT-467](#)
- A/T Wiring diagram AT - SSV/A ..... [AT-169](#), [AT-519](#)
- A/T Wiring diagram AT - SSV/B ..... [AT-174](#), [AT-523](#)
- A/T Wiring diagram AT - SSV/C ..... [AT-527](#)
- A/T Wiring diagram AT - SSV/CS ..... [AT-532](#)
- A/T Wiring diagram AT - SSV/D ..... [AT-537](#)
- A/T Wiring diagram AT - SSV/E ..... [AT-542](#)
- A/T Wiring diagram AT - TCCSIG ..... [AT-155](#), [AT-512](#)
- A/T Wiring diagram AT - TCV ..... [AT-150](#)
- A/T Wiring diagram AT - TPS ..... [AT-180](#)
- A/T Wiring diagram AT - VSS A/T ..... [AT-119](#)
- A/T Wiring diagram AT ? PC/A ..... [AT-515](#)
- A/T Wiring diagram AT ? PC/B ..... [AT-546](#)
- A/T Wiring diagram AT ? PC/C ..... [AT-553](#)
- A/T Wiring diagram AT ? PC/CS ..... [AT-557](#)
- A/T Wiring diagram AT ? PWR/IN ..... [AT-567](#)
- A/T Wiring diagram AT ? SFTFNC ..... [AT-550](#)
- A/T Wiring diagram AT ? TRSC ..... [AT-482](#)
- A/T Wiring diagram AT ? VSSATC ..... [AT-486](#)
- A/T Wiring diagram AT - VSSMTR .. [AT-199](#), [AT-204](#)
- Accelerator control system ..... [ACC-2](#)
- Accelerator pedal position (APP) sensor [EC-589](#), [EC-595](#), [EC-607](#)
- Accelerator pedal released position learning .... [EC-45](#)
- Active damper suspension system - Wiring diagram .... [FSU-4](#)
- AF1B1-Wiring diagram [EC-469](#), [EC-476](#), [EC-483](#), [EC-492](#), [EC-502](#), [EC-509](#), [EC-520](#)
- AF1B2-Wiring diagram [EC-471](#), [EC-478](#), [EC-485](#), [EC-494](#), [EC-504](#), [EC-511](#), [EC-522](#)
- AF1HB1-Wiring diagram ..... [EC-386](#)
- AF1HB2-Wiring diagram ..... [EC-388](#)
- Aiming adjustment ..... [LT-39](#)
- Air bag ..... [SRS-3](#)
- Air bag disposal ..... [SRS-52](#)
- Air bag precautions ..... [GI-3](#)
- Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch) ..... [CL-7](#)
- Air bleeding for brake systemAir bleeding for brake system ..... [BR-8](#)
- Air cleaner and air duct ..... [EM-15](#)
- Air cleaner filter replacement ..... [MA-16](#)
- Air conditioner cut control ..... [EC-30](#)
- Air flow meter - See Mass air flow sensor [EC-160](#), [EC-168](#)
- Air fuel ratio sensor 1 .. [EC-467](#), [EC-474](#), [EC-481](#), [EC-490](#), [EC-499](#), [EC-507](#), [EC-518](#)
- Air fuel ratio sensor 1 heater ..... [EC-384](#)
- Air mix. door motor ..... [ATC-61](#)
- Ambient sensor ..... [ATC-89](#), [ATC-101](#)
- Angular tightening application ..... [EM-4](#)
- APPS1 - Wiring diagram ..... [EC-591](#)
- APPS2 - Wiring diagram ..... [EC-597](#)
- APPS3 - Wiring diagram ..... [EC-609](#)
- ASC/BS - Wiring diagram ..... [EC-560](#)
- ASC/SW - Wiring diagram ..... [EC-553](#)
- ASCBOF - Wiring diagram ..... [EC-657](#)
- ASCD ..... [EC-686](#)
- ASCD brake switch ..... [EC-558](#), [EC-656](#)
- ASCD clutch switch ..... [EC-558](#), [EC-656](#)
- ASCD indicator lamp ..... [EC-666](#)
- ASCD steering switch ..... [EC-551](#)
- ASCIND - Wiring diagram ..... [EC-667](#)
- AUDIO - Wiring diagram ..... [AV-13](#)
- AUT/DP - Wiring diagram ..... [SE-18](#)
- Auto air conditioner - Wiring diagram ..... [ATC-36](#)

# ALPHABETICAL INDEX

Auto anti-dazzling inside mirror .....	<a href="#">GW-92</a> , <a href="#">GW-93</a>	<a href="#">BRC-96</a> , <a href="#">LAN-8</a> , <a href="#">LAN-21</a> , <a href="#">LAN-39</a> , <a href="#">LAN-58</a> , <a href="#">LAN-77</a> , <a href="#">LAN-97</a> , <a href="#">LAN-119</a> , <a href="#">LAN-141</a> , <a href="#">LAN-165</a> , <a href="#">LAN-189</a> , <a href="#">LAN-209</a> , <a href="#">LAN-231</a> , <a href="#">LAN-253</a> , <a href="#">LAN-277</a> , <a href="#">LAN-301</a> , <a href="#">LAN-321</a> , <a href="#">LAN-343</a>	A
Automatic amplifier .....	<a href="#">ATC-40</a> , <a href="#">ATC-52</a>		
Automatic transaxle number .....	<a href="#">GI-44</a>		
Automatic transmission fluid replacement .....	<a href="#">MA-22</a>		
AV and NAVI control unit .....	<a href="#">AV-95</a>	CAN communication .	B
AV communication line .....	<a href="#">AV-75</a> , <a href="#">AV-118</a>	<a href="#">EC-31</a> , <a href="#">EC-145</a> , <a href="#">AT-31</a> , <a href="#">AT-188</a> , <a href="#">AT-413</a> , <a href="#">AT-459</a> , <a href="#">BRC-11</a> , <a href="#">BRC-52</a> , <a href="#">BRC-96</a> , <a href="#">LAN-8</a> , <a href="#">LAN-21</a> , <a href="#">LAN-39</a> , <a href="#">LAN-58</a> , <a href="#">LAN-77</a> , <a href="#">LAN-97</a> , <a href="#">LAN-119</a> , <a href="#">LAN-141</a> , <a href="#">LAN-165</a> , <a href="#">LAN-189</a> , <a href="#">LAN-209</a> , <a href="#">LAN-231</a> , <a href="#">LAN-253</a> , <a href="#">LAN-277</a> , <a href="#">LAN-301</a> , <a href="#">LAN-321</a> , <a href="#">LAN-343</a>	
<b>B</b>			
Back door trim .....	<a href="#">EI-30</a>	Canister-See EVAP canister .....	<a href="#">EC-674</a>
BACK/L - Wiring diagram .....	<a href="#">LT-132</a>	CHARGE - Wiring diagram .....	<a href="#">SC-25</a>
Back-up lamp .....	<a href="#">LT-132</a>	Charging system .....	<a href="#">SC-24</a>
Back-up lamp switch (M/T)Back-up lamp switch	<a href="#">MT-12</a>	Chassis and body maintenance .....	<a href="#">MA-20</a>
Basic inspection .....	<a href="#">EC-82</a>	Chassis and body maintenanceSchedule 1 .....	<a href="#">MA-7</a>
Battery .....	<a href="#">SC-4</a>	Chassis and body maintenanceSchedule 2 .....	<a href="#">MA-8</a>
Battery/Starting/Charging System Tester	<a href="#">SC-6</a> , <a href="#">SC-14</a> , <a href="#">SC-26</a>	CHIME - Wiring diagram .....	<a href="#">DI-61</a>
Baulk ring (M/T) .....	<a href="#">MT-20</a>	CIGAR - Wiring diagram .....	<a href="#">WW-31</a>
BCM (Body control module) .....	<a href="#">BCS-3</a>	Cigarette lighter .....	<a href="#">WW-31</a>
Block heater .....	<a href="#">EM-118</a>	Circuit breaker .....	<a href="#">PG-60</a>
Blower motor .....	<a href="#">ATC-67</a> , <a href="#">ATC-106</a>	Closed loop control .....	<a href="#">EC-28</a>
Blower unit .....	<a href="#">ATC-105</a>	Closed loop control (Bank 1) .....	<a href="#">EC-445</a>
Board computer .....	<a href="#">AV-65</a>	Closed loop control (Bank 2) .....	<a href="#">EC-445</a>
Board-on lift .....	<a href="#">GI-38</a>	Clutch coverClutch cover .....	<a href="#">CL-15</a>
Body alignment .....	<a href="#">BL-133</a>	Clutch discClutch disc .....	<a href="#">CL-15</a>
Body component parts .....	<a href="#">BL-122</a>	Clutch fluid level .....	<a href="#">MA-20</a>
Body construction .....	<a href="#">BL-132</a>	Clutch master cylinderClutch master cylinder .....	<a href="#">CL-8</a>
Body exterior paint color .....	<a href="#">BL-121</a>	Clutch operating cylinderClutch operating cylinder	<a href="#">CL-10</a>
Body repair .....	<a href="#">BL-121</a>	Clutch pedalClutch pedal .....	<a href="#">CL-5</a>
Body sealing .....	<a href="#">BL-129</a>	Clutch release mechanismClutch release mechanism .	<a href="#">CL-13</a>
Bose speaker amp. ....	<a href="#">AV-8</a>	Coil spring (front) .....	<a href="#">FSU-9</a>
Brake boosterBrake booster .....	<a href="#">BR-18</a>	Coil spring (rear)Coil spring .....	<a href="#">RSU-9</a>
Brake control valve (Proportioning valve)Brake control valve (Proportioning valve) .....	<a href="#">BR-36</a>	Collision diagnosis .....	<a href="#">SRS-59</a>
Brake fluid changeBrake fluid change .....	<a href="#">BR-8</a>	Combination lamp, front, removal and installation ..	<a href="#">LT-41</a>
Brake fluid level .....	<a href="#">MA-25</a>	Combination lamp, rear, removal and installation ..	<a href="#">LT-148</a>
Brake fluid level and line checkBrake fluid level and line check .....	<a href="#">BR-8</a>	Combination meter .....	<a href="#">DI-5</a>
Brake hydraulic lineBake hydraulic line .....	<a href="#">BR-9</a>	Combination switch .....	<a href="#">LT-123</a>
Brake inspection .....	<a href="#">MA-26</a>	COMM - Wiring diagram .....	<a href="#">AV-75</a> , <a href="#">AV-118</a>
Brake lines and cables inspection .....	<a href="#">MA-25</a>	COMPAS - Wiring diagram .....	<a href="#">DI-42</a>
Brake master cylinderBrake master cylinder .....	<a href="#">BR-12</a>	Component Location (auto A/C) .....	<a href="#">ATC-33</a>
Brake pedalBrake pedal .....	<a href="#">BR-6</a>	Compressor clutch removal and installation ..	<a href="#">ATC-120</a>
Brake switch .....	<a href="#">EC-558</a> , <a href="#">EC-584</a> , <a href="#">EC-656</a>	Compressor mounting .....	<a href="#">ATC-119</a>
BRK/SW - Wiring diagram .....	<a href="#">EC-585</a>	Compressor precaution .....	<a href="#">ATC-9</a>
Bulb specifications .....	<a href="#">LT-187</a>	Compressor special service tool .....	<a href="#">ATC-12</a>
Bumper, front .....	<a href="#">EI-14</a>	Condenser .....	<a href="#">ATC-123</a>
Bumper, rear .....	<a href="#">EI-16</a>	Connector inspection .....	<a href="#">GI-22</a>
<b>C</b>			
Camshaft .....	<a href="#">EM-77</a>	Console box - See Instrument panel .....	<a href="#">IP-10</a>
Camshaft inspection .....	<a href="#">EM-83</a>	CONSULT for VDC .....	<a href="#">BRC-24</a> , <a href="#">BRC-65</a> , <a href="#">BRC-112</a>
Camshaft position sensor (PHASE) .....	<a href="#">EC-270</a>	CONSULT general information .....	<a href="#">GI-35</a>
CAN - Wiring diagram	<a href="#">EC-146</a> , <a href="#">LAN-23</a> , <a href="#">LAN-41</a> , <a href="#">LAN-60</a> , <a href="#">LAN-79</a> , <a href="#">LAN-99</a> , <a href="#">LAN-121</a> , <a href="#">LAN-143</a> , <a href="#">LAN-167</a> , <a href="#">LAN-191</a> , <a href="#">LAN-211</a> , <a href="#">LAN-233</a> , <a href="#">LAN-255</a> , <a href="#">LAN-279</a> , <a href="#">LAN-303</a> , <a href="#">LAN-323</a> , <a href="#">LAN-345</a>	CONSULT-áU for engine .....	<a href="#">EC-110</a>
CAN (Controller Area Network) .....	<a href="#">BRC-11</a> , <a href="#">BRC-52</a> , <a href="#">BRC-96</a> , <a href="#">LAN-8</a> , <a href="#">LAN-21</a> , <a href="#">LAN-39</a> , <a href="#">LAN-58</a> , <a href="#">LAN-77</a> , <a href="#">LAN-97</a> , <a href="#">LAN-119</a> , <a href="#">LAN-141</a> , <a href="#">LAN-165</a> , <a href="#">LAN-189</a> , <a href="#">LAN-209</a> , <a href="#">LAN-231</a> , <a href="#">LAN-253</a> , <a href="#">LAN-277</a> , <a href="#">LAN-301</a> , <a href="#">LAN-321</a> ,	Control unit .....	<a href="#">ATC-100</a>
		Control units (terminal arrangement) .....	<a href="#">PG-64</a>
		Controller Area Network (CAN) .....	<a href="#">BRC-11</a> , <a href="#">BRC-52</a> , <a href="#">BRC-96</a> , <a href="#">LAN-8</a> , <a href="#">LAN-21</a> , <a href="#">LAN-39</a> , <a href="#">LAN-58</a> , <a href="#">LAN-77</a> , <a href="#">LAN-97</a> , <a href="#">LAN-119</a> , <a href="#">LAN-141</a> , <a href="#">LAN-165</a> , <a href="#">LAN-189</a> , <a href="#">LAN-209</a> , <a href="#">LAN-231</a> , <a href="#">LAN-253</a> , <a href="#">LAN-277</a> , <a href="#">LAN-301</a> , <a href="#">LAN-321</a> ,

# ALPHABETICAL INDEX

## [LAN-343](#)

Converter housing installation ..... [AT-370](#)  
COOL/F - Wiring diagram ..... [EC-451](#)  
Coolant mixture ratio ..... [MA-11](#)  
Coolant replacementVQ35DE ..... [MA-14](#)  
Cooling fan control ..... [EC-448](#)  
Cooling fan motor ..... [EC-448](#)  
Cooling unit (A/C evaporator) ..... [ATC-109](#), [ATC-124](#)  
Cornering lamp ..... [LT-108](#)  
Corrosion protection ..... [BL-126](#)  
Coupling sleeve (M/T) ..... [MT-20](#)  
Crankcase ventilation system - See Positive crankcase ventilation ..... [EC-684](#)  
Crankshaft position sensor (POS) ..... [EC-264](#)  
Crash zone sensor ..... [SRS-48](#)  
Cylinder block ..... [EM-118](#)  
Cylinder head ..... [EM-96](#)

## D

Data link connector for Consult ..... [EC-112](#), [EC-124](#)  
Daytime light system ..... [LT-43](#)  
Daytime running light - See Daytime light system .. [LT-43](#)  
Diagnosis sensor unit ..... [SRS-51](#)  
Diagnostic trouble code (DTC) for OBD system . [EC-8](#), [EC-55](#)  
Diagnostic trouble code (DTC) inspection priority chart [EC-79](#)  
Differential gear (FF M/T) ..... [MT-24](#)  
Dimensions ..... [GI-44](#)  
Display and amp.assembly ..... [ATC-40](#), [ATC-52](#)  
Door glass ..... [GW-87](#), [GW-90](#)  
Door glass Fitting Adjustment(Front) ..... [GW-88](#)  
Door glass Fitting Adjustment(Rear) ..... [GW-91](#)  
Door lock ..... [BL-68](#)  
Door trim ..... [EI-30](#)  
Door, front ..... [BL-65](#), [GW-87](#)  
Door, rear ..... [BL-65](#), [GW-90](#)  
Drive shaft (front) ..... [FAX-11](#)  
Driver air bag ..... [SRS-40](#)  
Dropping resistor (A/T) ..... [AT-161](#)  
DTC work support ..... [EC-122](#)  
DTRL - Wiring diagram ..... [LT-46](#)  
Duct and grilles ..... [ATC-114](#)

## E

ECM input/output signal ..... [EC-101](#), [EC-127](#)  
ECM power supply ..... [EC-138](#), [EC-392](#)  
ECM/PW - Wiring diagram ..... [EC-393](#)  
ECTS - Wiring diagram ..... [EC-181](#)  
EGR function ..... [EC-278](#), [EC-529](#)  
EGR temperature sensor ..... [EC-293](#)  
EGR volume control valve ..... [EC-286](#)  
EGR/TS - Wiring diagram ..... [EC-296](#)  
EGRC1 - Wiring diagram ..... [EC-282](#), [EC-533](#)  
EGVC/V - Wiring diagram ..... [EC-288](#)  
Electric sunroof ..... [RF-10](#)

Electric throttle control actuator ..... [EC-403](#), [EC-405](#)  
Electrical diagnoses ..... [GI-22](#)  
Electrical load signal circuit ..... [EC-655](#)  
Electronic ignition (EI) system ..... [EC-29](#)  
EMNT - Wiring diagram ..... [EC-646](#)  
Engine control circuit diagram ..... [EC-99](#)  
Engine control component parts location ..... [EC-91](#)  
Engine control module (ECM) ..... [EC-381](#)  
Engine control system diagram and chart ..... [EC-24](#)  
Engine coolant temperature sensor (ECTS) .. [EC-179](#), [EC-190](#)  
Engine mounting control (Front) ..... [EC-645](#)  
Engine oil ..... [LU-6](#)  
Engine oil filter replacementQR25DE ..... [MA-17](#)  
Engine oil precautions ..... [GI-3](#), [GI-6](#)  
Engine oil replacementQR25DE ..... [MA-16](#)  
Engine removal ..... [EM-113](#)  
Engine serial number ..... [GI-44](#)  
ETC1 - Wiring diagram ..... [EC-406](#)  
ETC2 - Wiring diagram ..... [EC-413](#)  
ETC3 - Wiring diagram ..... [EC-417](#)  
EVAP canister ..... [EC-674](#)  
EVAP canister purge volume control solenoid valve .... [EC-318](#), [EC-536](#)  
EVAP canister vent control valve ..... [EC-325](#), [EC-544](#)  
EVAP control system (small leak) diagnosis .. [EC-308](#), [EC-346](#), [EC-354](#)  
EVAP control system pressure sensor [EC-332](#), [EC-338](#)  
EVAP control system purge flow monitoring diagnosis . [EC-303](#)  
EVAP vapor lines inspection ..... [MA-19](#)  
Evaporative emission (EVAP) system ..... [EC-671](#)  
Evaporator ..... [ATC-124](#)  
Exhaust manifold ..... [EM-27](#)  
Exhaust system inspection ..... [EX-3](#), [MA-20](#)  
Expansion valve ..... [ATC-125](#)

## F

F/FOG - Wiring diagram ..... [LT-79](#)  
F/PUMP - Wiring diagram ..... [EC-640](#)  
Fan control amp. .... [ATC-113](#)  
Final drive (FF M/T) ..... [MT-24](#)  
Flow charts ..... [GI-25](#)  
Fluid temperature sensor (A/T) .. [AT-111](#), [AT-471](#), [AT-476](#)  
Fluids ..... [MA-10](#)  
Fluorescent leak detector ..... [ATC-126](#)  
Flywheel (clutch)Flywheel (clutch) ..... [CL-15](#)  
Fog lamp, front ..... [LT-77](#)  
Fork rod (M/T) ..... [MT-22](#)  
Freeze frame data ..... [EC-56](#), [EC-114](#)  
Front bumper ..... [EI-14](#)  
Front combination lamp removal and installation [LT-41](#)  
Front disc brakeFront disc brake ..... [BR-23](#)  
Front door ..... [BL-65](#), [BL-68](#), [GW-87](#)  
Front Door Trim ..... [EI-30](#)  
Front fog lamp ..... [LT-77](#)  
Front passenger air bag ..... [SRS-44](#)

# ALPHABETICAL INDEX

Front seat ..... [SE-103](#)  
Front seat belt ..... [SB-4](#)  
Front seat belt pre-tensioner .... [SB-2](#), [SRS-3](#), [SRS-50](#)  
Front side air bag ..... [SRS-45](#)  
FTTS - Wiring diagram ..... [EC-239](#), [EC-243](#)  
Fuel cut control (at no load high engine speed) [EC-30](#)  
Fuel gauge ..... [DI-5](#)  
Fuel injection system (Bank 1) ..... [EC-220](#), [EC-229](#)  
Fuel injection system (Bank 2) ..... [EC-220](#), [EC-229](#)  
Fuel injector and fuel tube ..... [EM-40](#)  
Fuel level sensor ..... [EC-364](#), [EC-366](#), [EC-368](#)  
Fuel line inspection ..... [FL-3](#), [MA-16](#)  
Fuel precautions ..... [GI-3](#), [GI-5](#)  
Fuel pressure check ..... [EC-48](#)  
Fuel pressure release ..... [EC-48](#)  
Fuel pump ..... [EC-639](#)  
Fuel system ..... [FL-3](#)  
Fuel systemCommercial Service Tools ..... [FL-2](#)  
Fuel systemPREPARATION ..... [FL-2](#)  
Fuel tank temperature sensor ..... [EC-237](#), [EC-242](#)  
Fuel tank vacuum relief valve ..... [EC-674](#)  
FUELB1 - Wiring diagram ..... [EC-222](#), [EC-231](#)  
FUELB2 - Wiring diagram ..... [EC-223](#), [EC-232](#)  
Fuse ..... [PG-60](#), [PG-68](#)  
Fuse block ..... [PG-67](#)  
Fusible link ..... [PG-60](#), [PG-68](#)

## G

Garage jack and safety stand ..... [GI-38](#)  
Gauges ..... [DI-5](#)  
Gear components (M/T) ..... [MT-20](#)  
Generic scan tool (GST) ..... [EC-124](#)  
Glass ..... [GW-11](#), [GW-14](#), [GW-87](#), [GW-90](#)  
GPS antenna ..... [AV-94](#)  
Grease ..... [MA-10](#)  
Ground distribution ..... [PG-27](#)

## H

H/LAMP - Wiring diagram ..... [LT-11](#)  
Handling precautions for plastics ..... [BL-144](#)  
Harness connector ..... [PG-61](#)  
Harness connector inspection ..... [GI-22](#)  
Harness layout ..... [PG-36](#)  
Hazard warning lamp ..... [LT-90](#), [LT-108](#)  
Headlamp ..... [LT-6](#)  
Headlamp removal and installation ..... [LT-41](#)  
Heated oxygen sensor 2 (bank 1) .... [EC-198](#), [EC-208](#),  
[EC-421](#), [EC-433](#)  
Heated oxygen sensor 2 (bank 2) .... [EC-198](#), [EC-208](#),  
[EC-421](#), [EC-433](#)  
Heated oxygen sensor 2 heater (bank 1) ..... [EC-151](#)  
Heated oxygen sensor 2 heater (bank 2) ..... [EC-151](#)  
Heated seat ..... [SE-92](#)  
Heater and cooling unit (Heater core) . [ATC-109](#), [ATC-110](#)  
Heater unit (heater core) ..... [ATC-109](#), [ATC-110](#)  
Height (Dimensions) ..... [GI-44](#)

HFC134a (R134a) system identification ..... [ATC-6](#)  
HFC134a (R134a) system precaution ..... [ATC-4](#)  
HFC134a (R134a) system service procedure [ATC-116](#)  
HFC134a (R134a) system service tools ..... [ATC-12](#)  
HFC134a system service equipment precaution [ATC-9](#)  
Horn ..... [WW-35](#)  
HORN - Wiring diagram ..... [WW-35](#)  
How to erase DTC for OBD system ..... [EC-65](#)  
HSEAT - Wiring diagram ..... [SE-93](#), [SE-95](#)

## I

IATS - Wiring diagram ..... [EC-176](#)  
Identification plate ..... [GI-44](#)  
Idle air volume learning ..... [EC-46](#)  
Idle mixture ratio ..... [EC-34](#)  
Idle speed ..... [EC-34](#), [EC-82](#)  
Idle speed control (ISC) ..... [EC-372](#), [EC-374](#)  
Ignition coil ..... [EM-37](#), [EC-613](#)  
Ignition control system ..... [EC-613](#)  
Ignition timing ..... [EC-34](#), [EC-82](#)  
IGNSYS - Wiring diagram ..... [EC-614](#)  
Illumination control ..... [LT-186](#)  
In vehicle sensor ..... [ATC-92](#), [ATC-102](#)  
INF/D - Wring diagram ..... [AV-70](#)  
INJECT - Wiring diagram ..... [EC-634](#)  
Injector ..... [EC-633](#)  
Input shaft (FF M/T) ..... [MT-20](#)  
Instrument panel ..... [IP-10](#)  
Intake air temperature sensor ..... [EC-175](#), [EC-193](#)  
Intake door control linkage adjustment ..... [ATC-66](#)  
Intake door motor ..... [ATC-64](#), [ATC-107](#)  
Intake manifold ..... [EM-25](#)  
Intake sensor ..... [ATC-98](#), [ATC-104](#)  
Intake valve timing control (Bank 1) ..... [EC-148](#)  
Intake valve timing control (Bank 2) ..... [EC-148](#)  
Intake valve timing control solenoid valve (Bank 1) [EC-396](#)  
Intake valve timing control solenoid valve (Bank 2) [EC-396](#)  
Interior ..... [EI-32](#)  
Interior lamp ..... [LT-149](#)  
IPDM (Intelligent power distribution module engine room) ..... [PG-14](#)  
IVCB1 - Wiring diagram ..... [EC-397](#)  
IVCB2 - Wiring diagram ..... [EC-399](#)

## J

Jacking points ..... [GI-38](#)  
Junction box (J/B) ..... [PG-67](#)

## K

Keyless entry system - See Multi-remote control system [BL-37](#)  
Knock sensor (KS) ..... [EC-259](#)  
KS - Wiring diagram ..... [EC-260](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

# ALPHABETICAL INDEX

## L

LAN system circuit .....	<a href="#">ATC-55</a>
Length (Dimensions) .....	<a href="#">GI-44</a>
Lifting points .....	<a href="#">GI-38</a>
Line pressure solenoid valve .....	<a href="#">AT-161</a>
Line pressure test (A/T) .....	<a href="#">AT-71</a> , <a href="#">AT-434</a>
Liquid gasket application .....	<a href="#">EM-4</a>
Location of electrical units .....	<a href="#">PG-57</a>
Lubricant (R134a) A/C .....	<a href="#">ATC-18</a>
Lubricants .....	<a href="#">MA-10</a>
Lubrication circuit (engine) .....	<a href="#">LU-4</a>
Lubrication oil A/C .....	<a href="#">ATC-18</a>
Lubrication-locks, hinges and hood latches .....	<a href="#">MA-30</a>
Luggage compartment trim .....	<a href="#">EI-42</a>

## M

M/T major overhaul .....	<a href="#">MT-24</a>
M/T oil replacementM/T oil replacement .....	<a href="#">MT-10</a>
MAFS - Wiring diagram .....	<a href="#">EC-163</a> , <a href="#">EC-170</a>
Magnet clutch .....	<a href="#">ATC-72</a> , <a href="#">ATC-120</a>
MAIN - Wiring diagram .....	<a href="#">EC-138</a>
Mainshaft (M/T) .....	<a href="#">MT-20</a>
Maintenance .....	<a href="#">MA-4</a>
Malfunction indicator lamp (MIL) .....	<a href="#">EC-67</a>
Manual transaxle number .....	<a href="#">GI-44</a>
Manual transmission oil replacement .....	<a href="#">MA-20</a>
Mass air flow sensor (MAFS) .....	<a href="#">EC-160</a> , <a href="#">EC-168</a>
Master cylinder (brake)Master cylinder (brake) .	<a href="#">BR-12</a>
Master cylinder (clutch)Master cylinder (clutch) ..	<a href="#">CL-8</a>
Meter .....	<a href="#">DI-5</a>
METER - Wiring diagram .....	<a href="#">DI-11</a>
MIL data link connectors circuit .....	<a href="#">EC-669</a>
MIL/DL - Wiring diagram .....	<a href="#">EC-669</a>
Misfire .....	<a href="#">EC-252</a>
Mode door control linkage adjustment .....	<a href="#">ATC-60</a>
Mode door motor .....	<a href="#">ATC-58</a> , <a href="#">ATC-111</a>
Model variation .....	<a href="#">GI-44</a>
Multipoint fuel injection (MFI) system .....	<a href="#">EC-27</a>
Multipoint fuel injection precautions .....	<a href="#">GI-3</a> , <a href="#">GI-5</a>
Multi-remote control system .....	<a href="#">BL-37</a>

## N

NATS - Wiring diagram .....	<a href="#">BL-102</a>
NAVI - Wiring diagram .....	<a href="#">AV-110</a>
Navigation system .....	<a href="#">AV-93</a>
NVH troubleshooting (BR)NVH troubleshooting (BR) ...	<a href="#">BR-5</a>
NVH troubleshooting (CL)NVH troubleshooting (CL) ...	<a href="#">CL-4</a>
NVH troubleshooting (EM) .....	<a href="#">EM-10</a>
NVH troubleshooting (FA) .....	<a href="#">FAX-4</a>
NVH troubleshooting (RA) .....	<a href="#">RAX-4</a>
NVH troubleshooting (RSU)NVH Troubleshooting (RSU)	<a href="#">RSU-4</a>
NVH troubleshooting (ST) .....	<a href="#">PS-5</a>
NVH troubleshooting (WT)NVH troubleshooting (WT) .	

## WT-2

## O

O2H2B1 - Wiring diagram .....	<a href="#">EC-153</a>
O2H2B2 - Wiring diagram .....	<a href="#">EC-155</a>
O2S2B1 - Wiring diagram ..	<a href="#">EC-200</a> , <a href="#">EC-211</a> , <a href="#">EC-424</a> , <a href="#">EC-436</a>
O2S2B2 - Wiring diagram ..	<a href="#">EC-202</a> , <a href="#">EC-213</a> , <a href="#">EC-426</a> , <a href="#">EC-438</a>
Oil filter .....	<a href="#">LU-8</a>
Oil pump (engine) .....	<a href="#">LU-9</a>
Oil seal replacement (engine) .....	<a href="#">EM-90</a>
On board diagnostic system .....	<a href="#">EC-50</a>
Operating cylinder (clutch)Operating cylinder (clutch) ..	<a href="#">CL-10</a>
ORVR (On-board Refueling Vapor Recovery) .....	<a href="#">EC-678</a>
Overdrive control switch .....	<a href="#">AT-255</a>
Overheat .....	<a href="#">EC-448</a>
Overrun clutch solenoid valve .....	<a href="#">AT-183</a>

## P

Park/Neutral position switch .....	<a href="#">EC-571</a>
Park/neutral position switch (A/T) .....	<a href="#">AT-105</a> , <a href="#">AT-466</a>
Park/neutral position switch (M/T)Park/neutral position switch (M/T) .....	<a href="#">MT-12</a>
Parking brake controlParking brake control .....	<a href="#">PB-2</a>
Parking drum brakeParking drum brake .....	<a href="#">PB-5</a>
PCV (positive crankcase ventilation) .....	<a href="#">EC-684</a>
Periodic maintenance .....	<a href="#">MA-6</a>
PGC/V - Wiring diagram .....	<a href="#">EC-320</a> , <a href="#">EC-538</a>
PHSB1 - Wiring diagram .....	<a href="#">EC-271</a>
PHSB2 - Wiring diagram .....	<a href="#">EC-273</a>
Piston ring inspection .....	<a href="#">EM-136</a>
PNP/SW - Wiring diagram .....	<a href="#">EC-573</a>
POS - Wiring diagram .....	<a href="#">EC-265</a>
POWER - Wiring diagram .....	<a href="#">PG-5</a>
Power seat .....	<a href="#">SE-88</a>
Power steering fluid level .....	<a href="#">MA-27</a>
Power steering pressure (PSP) sensor .....	<a href="#">EC-376</a>
Power supply routing .....	<a href="#">PG-3</a>
Power transistor .....	<a href="#">EC-613</a>
Power window .....	<a href="#">GW-19</a>
PRE/SE - Wiring diagram .....	<a href="#">EC-334</a> , <a href="#">EC-340</a>
Precautions (General) .....	<a href="#">GI-3</a>
Precautions in repairing high strength steel .....	<a href="#">BL-147</a>
Pressure control solenoid valve A .....	<a href="#">AT-514</a>
Pressure control solenoid valve B .....	<a href="#">AT-545</a>
Pressure control solenoid valve C .....	<a href="#">AT-552</a>
Pressure test (A/T) .....	<a href="#">AT-71</a> , <a href="#">AT-434</a>
PS/SEN - Wiring diagram .....	<a href="#">EC-377</a>

## R

Rear bumper .....	<a href="#">EI-16</a>
Rear combination lamp removal and installation ...	<a href="#">LT-148</a>
Rear disc brakeRear disc brake .....	<a href="#">BR-29</a>

# ALPHABETICAL INDEX

Rear door ..... [BL-65](#), [GW-90](#)  
 Rear seat ..... [SE-108](#)  
 Rear seat belt ..... [SB-5](#)  
 Rear suspensionRear suspension ..... [RSU-5](#)  
 Rear window ..... [GW-14](#)  
 Rear window defogger ..... [GW-94](#)  
 Refrigerant connection precaution ..... [ATC-6](#)  
 Refrigerant discharging evacuating charging [ATC-116](#)  
 Refrigerant general precaution ..... [ATC-5](#)  
 Refrigerant lines ..... [ATC-116](#)  
 Refrigerant pressure sensor ... [EC-650](#), [ATC-77](#), [ATC-123](#)  
 Remote keyless entry system ..... [BL-37](#)  
 Removal and installation (A/T) ..... [AT-274](#), [AT-600](#)  
 Reverse idler shaft (M/T) ..... [MT-20](#)  
 Reverse main gear (M/T) ..... [MT-20](#)  
 Revolution sensor (A/T) ..... [AT-117](#), [AT-485](#)  
 Road wheel size ..... [GI-44](#)  
 Rocker cover ..... [EM-43](#)  
 Room lamp - See Interior lamp ..... [LT-149](#)  
 ROOM/L - Wiring diagram ..... [LT-154](#)  
 RP/SEN - Wiring diagram ..... [EC-651](#)

## S

SAE J1930 terminology list ..... [GI-48](#)  
 SEAT - Wiring diagram ..... [SE-88](#), [SE-89](#)  
 Seat belt inspection ..... [SB-6](#), [MA-30](#)  
 Seat belt pre-tensioner disposal ..... [SRS-52](#)  
 Seat belt, front ..... [SB-4](#)  
 Seat belt, rear ..... [SB-5](#)  
 Seat, front ..... [SE-103](#)  
 Seat, rear ..... [SE-108](#)  
 SEN/PW - Wiring diagram ..... [EC-464](#)  
 SHIFT - Wiring diagram ..... [AT-261](#), [AT-593](#)  
 Shift control components (M/T) ..... [MT-22](#)  
 Shift control components (M/T)Shift control components (M/T) ..... [MT-13](#)  
 Shift fork (M/T) ..... [MT-22](#)  
 Shift lock system ..... [AT-260](#), [AT-592](#)  
 Shift schedule ..... [AT-377](#), [AT-441](#)  
 Shift solenoid valve A (A/T) ..... [AT-167](#), [AT-518](#)  
 Shift solenoid valve B (A/T) ..... [AT-172](#), [AT-522](#)  
 Shift solenoid valve C (A/T) ..... [AT-526](#)  
 Shift solenoid valve D (A/T) ..... [AT-536](#)  
 Shift solenoid valve E (A/T) ..... [AT-541](#)  
 Shock absorber (front) ..... [FSU-10](#)  
 Shock absorber (rear)Shock absorber (rear) ... [RSU-9](#)  
 Side air bag (satellite) sensor ..... [SRS-49](#)  
 Side curtain air bag ..... [SRS-46](#)  
 Side trim ..... [EI-32](#)  
 Spare tire size ..... [GI-44](#)  
 Spark plug ..... [EM-38](#)  
 Spark plug replacementQR25DE ..... [MA-18](#)  
 Specification value ..... [EC-133](#)  
 Speedometer ..... [DI-5](#)  
 Spiral cable ..... [SRS-42](#)  
 SROOF - Wiring diagram ..... [RF-12](#)  
 SRS - See Supplemental Restraint System ..... [SRS-6](#)

SRS - Wiring diagram ..... [SRS-13](#)  
 SRS Trouble diagnoses ..... [SRS-9](#)  
 Stabilizer bar (front) ..... [FSU-11](#)  
 Stall test (A/T) ..... [AT-68](#), [AT-432](#)  
 Standardized relay ..... [PG-65](#)  
 START - Wiring diagram ..... [SC-11](#)  
 Starting system ..... [SC-10](#)  
 Steering gear and linkage inspection ..... [MA-27](#)  
 Steering knuckle ..... [FAX-6](#)  
 Stop lamp ..... [LT-129](#)  
 Stop lamp switch ..... [EC-558](#), [EC-584](#), [EC-656](#)  
 STOP/L - Wiring diagram ..... [LT-130](#)  
 Strut (front) ..... [FSU-9](#)  
 Sun roof, electric ..... [RF-10](#)  
 Sunload sensor ..... [ATC-95](#), [ATC-103](#)  
 Sunroof ..... [RF-21](#)  
 Supplemental Restraint System ..... [SRS-6](#)  
 Supplemental restraint system - Wiring diagram . [SRS-13](#)  
 Symbols and abbreviations ..... [GI-8](#), [GI-9](#), [GI-20](#)  
 Symptom matrix chart ..... [EC-87](#)  
 Synchronizer (M/T) ..... [MT-20](#)  
 System readiness test (SRT) code ..... [EC-57](#)

## T

Tachometer ..... [DI-5](#)  
 TCM circuit diagram ..... [AT-18](#), [AT-431](#)  
 TCM inspection table ..... [AT-99](#), [AT-448](#)  
 TCS - Wiring diagram ..... [BRC-16](#), [BRC-57](#), [BRC-101](#)  
 TCS component parts and connector location [BRC-15](#), [BRC-56](#), [BRC-100](#)  
 TCS wheel sensors ..... [BRC-15](#), [BRC-56](#), [BRC-100](#)  
 Three way catalyst ..... [EM-27](#)  
 Three way catalyst function (Bank 1) ..... [EC-299](#)  
 Three way catalyst function (Bank 2) ..... [EC-299](#)  
 Three way catalyst precautions ..... [GI-3](#), [GI-5](#)  
 Throttle control motor ..... [EC-416](#)  
 Throttle control motor relay ..... [EC-411](#)  
 Throttle position sensor (TPS) ... [EC-184](#), [EC-246](#), [EC-459](#), [EC-461](#), [EC-601](#)  
 Throttle position switch ..... [AT-255](#)  
 Throttle valve closed position learning ..... [EC-45](#)  
 Tightening torque of standard bolts ..... [GI-42](#)  
 Time lag test ..... [AT-433](#)  
 Timing chain ..... [EM-55](#)  
 Tire rotation ..... [MA-25](#)  
 Tire size ..... [GI-44](#)  
 Torque converter installation [AT-275](#), [AT-370](#), [AT-600](#)  
 Torque convertor clutch solenoid valve ... [AT-148](#), [AT-511](#)  
 Tow truck towing ..... [GI-41](#)  
 Towing point ..... [GI-41](#)  
 TPS1 - Wiring diagram ..... [EC-248](#)  
 TPS2 - Wiring diagram ..... [EC-186](#)  
 TPS3 - Wiring diagram ..... [EC-603](#)  
 Traction control system - Wiring diagram ..... [BRC-16](#), [BRC-57](#), [BRC-101](#)  
 Transaxle serial number ..... [GI-44](#)

# ALPHABETICAL INDEX

---

Transmission case (M/T) .....	<a href="#">MT-19</a>	Wiring diagrams .....	<a href="#">GI-8</a> , <a href="#">GI-12</a>
TRANSMT - Wiring diagram .....	<a href="#">BL-118</a>		
Tread-FR&RR (Dimensions) .....	<a href="#">GI-44</a>		
Trim .....	<a href="#">EI-32</a>		
Trouble diagnoses .....	<a href="#">GI-9</a>		
Trunk lid trim .....	<a href="#">EI-42</a>		
Trunk room trim .....	<a href="#">EI-42</a>		
Turbine revolution sensor .....	<a href="#">AT-481</a>		
TURN - Wiring diagram .....	<a href="#">LT-94</a> , <a href="#">LT-111</a>		
Turn signal lamp .....	<a href="#">LT-90</a> , <a href="#">LT-108</a>		
Two trip detection logic .....	<a href="#">EC-50</a>		
Two-pole lift .....	<a href="#">GI-38</a>		

---

## U

Unified meter and A/C amp. ....	<a href="#">DI-32</a>
---------------------------------	-----------------------

---

## V

Vacuum hose (brake system)Vacuum hose (brake system) .....	<a href="#">BR-21</a>
Vacuum hose drawing (Engine control) .....	<a href="#">EC-25</a>
Valve clearance .....	<a href="#">EM-86</a>
Valve guide .....	<a href="#">EM-108</a> , <a href="#">EM-109</a>
Valve seat .....	<a href="#">EM-110</a>
Valve spring .....	<a href="#">EM-111</a>
Variable induction air control system (VIAS) ..	<a href="#">EC-579</a> , <a href="#">EC-625</a>
Vehicle identification number .....	<a href="#">GI-44</a>
Vehicle recovery (freeing a stuck vehicle) .....	<a href="#">GI-41</a>
Vehicle speed sensor (VSS) .....	<a href="#">EC-370</a>
VENT/V - Wiring diagram .....	<a href="#">EC-327</a> , <a href="#">EC-546</a>
VIAS - Wiring diagram .....	<a href="#">EC-627</a>
VIAS/V - Wiring diagram .....	<a href="#">EC-580</a>
Viscosity number (SAE) .....	<a href="#">MA-11</a>

---

## W

W/ANT - Wiring diagram .....	<a href="#">AV-61</a>
WARN - Wiring diagram .....	<a href="#">DI-46</a>
Warning chime .....	<a href="#">DI-59</a>
Warning lamps .....	<a href="#">DI-45</a>
Water temperature gauge .....	<a href="#">DI-5</a>
Wheel alignment (rear)Wheel alignment (rear) .	<a href="#">RSU-6</a>
Wheel balance .....	<a href="#">MA-23</a>
Wheel bearing (front axle) .....	<a href="#">FAX-5</a>
Wheel bearing (rear) .....	<a href="#">RAX-5</a>
Wheel hub (front) .....	<a href="#">FAX-5</a> , <a href="#">FAX-6</a>
Wheel hub (rear) .....	<a href="#">RAX-5</a>
Wheel size .....	<a href="#">GI-44</a>
Wheelarch heightWheelarch height .....	<a href="#">RSU-12</a>
Wheelbase (Dimensions) .....	<a href="#">GI-44</a>
Width (Dimensions) .....	<a href="#">GI-44</a>
WINDOW - Wiring diagram .....	<a href="#">GW-28</a>
Window, door .....	<a href="#">GW-87</a> , <a href="#">GW-90</a>
Window, rear .....	<a href="#">GW-14</a>
Windshield .....	<a href="#">GW-11</a>
Wiper and washer .....	<a href="#">WW-4</a>
Wiring Diagram (Cell code) list .....	<a href="#">PG-54</a>