

SECTION **BCS**

BODY CONTROL SYSTEM

A
B
C

CONTENTS

BCM		
BASIC INSPECTION	COMMON ITEM	18
	COMMON ITEM : CONSULT-III Function (BCM -	
	COMMON ITEM)	18
DIAGNOSIS AND REPAIR WORKFLOW	DOOR LOCK	18
Work Flow	DOOR LOCK : CONSULT-III Function (BCM -	
	DOOR LOCK)	19
ADDITIONAL SERVICE WHEN REPLACING	REAR DEFOGGER	19
CONTROL UNIT	REAR DEFOGGER : CONSULT-III Function	
ADDITIONAL SERVICE WHEN REPLACING	(BCM - REAR DEFOGGER)	19
CONTROL UNIT : Description		
ADDITIONAL SERVICE WHEN REPLACING	BUZZER	20
CONTROL UNIT : Special Repair Requirement	BUZZER : CONSULT-III Function (BCM - BUZZ-	
	ER)	20
CONFIGURATION (BCM)	INT LAMP	20
CONFIGURATION (BCM) : Description	INT LAMP : CONSULT-III Function (BCM - INT	
CONFIGURATION (BCM) : Special Repair Re-	LAMP)	20
quirement		
CONFIGURATION (BCM) : Configuration list	HEADLAMP	21
	HEADLAMP : CONSULT-III Function (BCM -	
SYSTEM DESCRIPTION	HEAD LAMP)	21
BODY CONTROL SYSTEM	WIPER	22
System Description	WIPER : CONSULT - III Function (BCM - WIPER)...	23
Component Parts Location		
	FLASHER	23
COMBINATION SWITCH READING SYSTEM	FLASHER : CONSULT-III Function (BCM -	
.....	FLASHER)	23
System Diagram		
System Description	INTELLIGENT KEY	24
	INTELLIGENT KEY : CONSULT-III Function	
SIGNAL BUFFER SYSTEM	(BCM - INTELLIGENT KEY)	24
System Diagram		
System Description	COMB SW	26
	COMB SW : CONSULT-III Function (BCM-COMB	
POWER CONSUMPTION CONTROL SYS-	SW)	27
TEM		
System Diagram	BCM	27
System Description	BCM : CONSULT-III Function (BCM - BCM)	27
Component Parts Location		
	IMMU	27
DIAGNOSIS SYSTEM (BCM)	IMMU : CONSULT-III Function (BCM - IMMU)	27

D
E
F
G
H
I
J
K
L
BCS

BATTERY SAVER	28	COMBINATION SWITCH INPUT CIRCUIT	38
BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)	28	Diagnosis Procedure	38
TRUNK	29	Special Repair Requirement	39
TRUNK : CONSULT-III Function (BCM - TRUNK)..	29	COMBINATION SWITCH OUTPUT CIRCUIT ...	40
THEFT ALM	29	Diagnosis Procedure	40
THEFT ALM : CONSULT-III Function (BCM - THEFT ALM)	29	Special Repair Requirement	41
RETAINED PWR	30	ECU DIAGNOSIS INFORMATION	42
RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)	30	BCM (BODY CONTROL MODULE)	42
SIGNAL BUFFER	30	Reference Value	42
SIGNAL BUFFER : CONSULT-III Function (BCM - SIGNAL BUFFER)	30	Terminal Layout	47
AIR PRESSURE MONITOR	30	Physical Values	47
AIR PRESSURE MONITOR : CONSULT-III Func- tion (BCM - AIR PRESSURE MONITOR)	30	Fail Safe	63
DTC/CIRCUIT DIAGNOSIS	32	DTC Inspection Priority Chart	64
U1000 CAN COMM CIRCUIT	32	DTC Index	65
Description	32	WIRING DIAGRAM	68
DTC Logic	32	BCM (BODY CONTROL MODULE)	68
Diagnosis Procedure	32	Wiring Diagram	68
U1010 CONTROL UNIT (CAN)	33	SYMPTOM DIAGNOSIS	77
DTC Logic	33	COMBINATION SWITCH SYSTEM SYMP- TOMS	77
Diagnosis Procedure	33	Symptom Table	77
U0415 VEHICLE SPEED SIG	34	PRECAUTION	78
Description	34	PRECAUTIONS	78
DTC Logic	34	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	78
Diagnosis Procedure	34	PREPARATION	79
B2562 LOW VOLTAGE	35	PREPARATION	79
DTC Logic	35	Commercial Service Tools	79
Diagnosis Procedure	35	REMOVAL AND INSTALLATION	80
Special Repair Requirement	35	BCM (BODY CONTROL MODULE)	80
POWER SUPPLY AND GROUND CIRCUIT	36	Removal and Installation	80
Diagnosis Procedure	36		
Special Repair Requirement	37		

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[BCM]

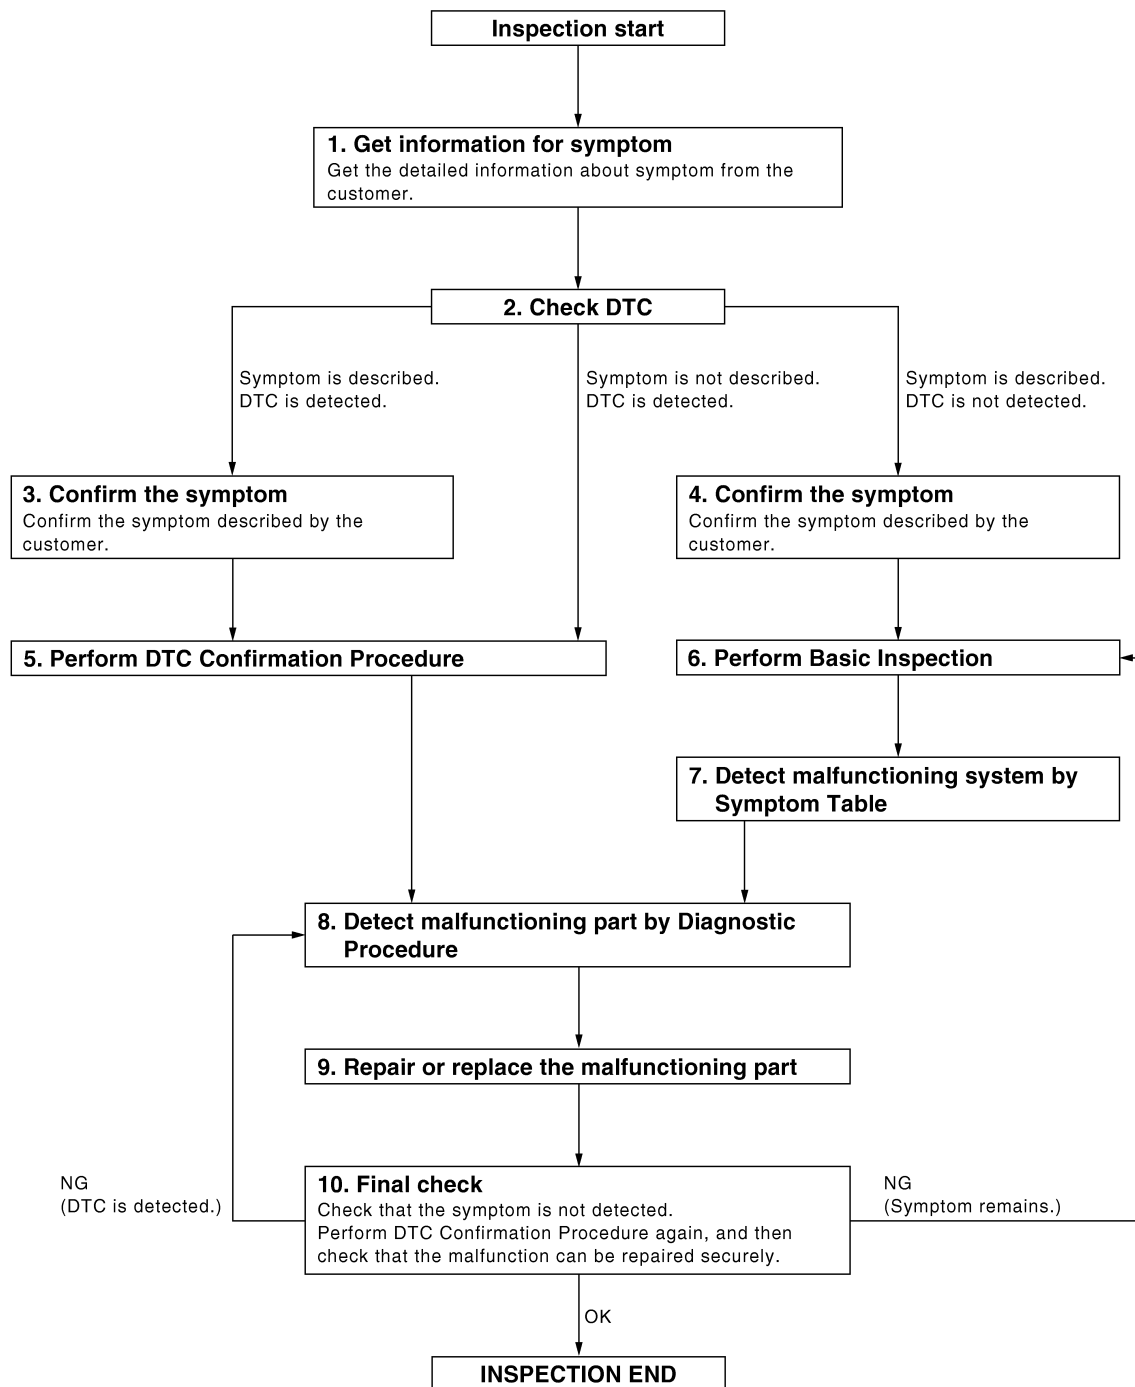
BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000006234190

OVERALL SEQUENCE



DETAILED FLOW

Revision: January 2012

BCS-3

JMKIA0101GB

2011 Maxima

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[BCM]

1. GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is displayed.
 - Record DTC and freeze frame data.
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3

Symptom is described, DTC is not displayed>>GO TO 4

Symptom is not described, DTC is displayed>>GO TO 5

3. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5

4. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.

At this time, always connect CONSULT-III to the vehicle, and check diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-64. "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC Confirmation Procedure is not included in Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check. If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC Confirmation Procedure.

Is DTC detected?

YES >> GO TO 8

NO >> Refer to [BCS-65. "DTC Index"](#).

6. PERFORM BASIC INSPECTION

Perform [BCS-3. "Work Flow"](#).

Inspection End>>GO TO 7

7. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to [BCS-8. "System Description"](#) based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 8

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[BCM]

8. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

NOTE:

The Diagnostic Procedure described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

Is malfunctioning part detected?

YES >> GO TO 9

NO >> Check voltage of related BCM terminals using CONSULT-III.

9. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

>> GO TO 10

10. FINAL CHECK

When DTC was detected in step 2, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunction have been repaired securely.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 8

YES (Symptom remains)>>GO TO 6

NO >> Inspection End.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000006234191

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT-III configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

- When replacing BCM, you must perform "WRITE CONFIGURATION" with CONSULT-III.
- Complete the procedure of "WRITE CONFIGURATION" in order.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- When replacing BCM, perform the system initialization (NATS).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000006234192

1. SAVING VEHICLE SPECIFICATION

CONSULT-III Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-6. "CONFIGURATION \(BCM\) : Description"](#).

NOTE:

If "READ CONFIGURATION" cannot be used, use the "WRITE CONFIGURATION - Manual setting" after replacing BCM.

DIAGNOSIS AND REPAIR WORKFLOW

[BCM]

< BASIC INSPECTION >

>> GO TO 2

2. REPLACE BCM

Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

>> GO TO 3

3. WRITING VEHICLE SPECIFICATION

ⓅCONSULT-III Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual setting" to write vehicle specification. Refer to [BCS-6, "CONFIGURATION \(BCM\) : Special Repair Requirement"](#).

>> GO TO 4

4. INITIALIZE BCM (NATS)

Perform BCM initialization (NATS). Refer to CONSULT-III Operation Manual NATS-IVIS/NVIS.

>> Inspection End.

CONFIGURATION (BCM)

CONFIGURATION (BCM) : Description

INFOID:000000006234193

Vehicle specification needs to be written with CONSULT-III because it is not written after replacing BCM. Configuration has three functions as follows

Function	Description
READ CONFIGURATION	<ul style="list-style-type: none">• Reads the vehicle configuration of current BCM.• Saves the read vehicle configuration.
WRITE CONFIGURATION - Manual setting	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION - Config file	Writes the vehicle configuration with saved data.

NOTE:

Manual setting item: Items which need selection by vehicle specifications

Automatic setting item: Items which are written in automatically (Setting cannot be changed)

CAUTION:

- **When replacing BCM, you must perform "WRITE CONFIGURATION" with CONSULT-III.**
- **Complete the procedure of "WRITE CONFIGURATION" in order.**
- **If you set incorrect "WRITE CONFIGURATION", incidents might occur.**
- **Configuration is different for each vehicle model. Confirm configuration of each vehicle model.**
- **Never perform "WRITE CONFIGURATION" except for new BCM.**

CONFIGURATION (BCM) : Special Repair Requirement

INFOID:000000006234194

1. WRITING MODE SELECTION

ⓅCONSULT-III Configuration

Select "CONFIGURATION" of BCM.

When writing saved data>>GO TO 2

When writing manually>>GO TO 3

2. PERFORM "WRITE CONFIGURATION - CONFIG FILE"

ⓅCONSULT-III Configuration

Perform "WRITE CONFIGURATION - Config File".

>> Inspection End.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[BCM]

3. PERFORM "WRITE CONFIGURATION - MANUAL SETTING"

CONSULT-III Configuration

1. Select "WRITE CONFIGURATION - Manual setting".
2. Identify the correct model and configuration list. Refer to [BCS-7, "CONFIGURATION \(BCM\) : Configuration list"](#).
3. Confirm and/or change setting value for each item.
4. Select "Setting change".

CAUTION:

Make sure to select "Setting change" even if the indicated configuration of brand new BCM is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model cannot be memorized.

5. When "COMMAND FINISHED", select "END".

>> GO TO 4

4. OPERATION CHECK

Confirm that each function controlled by BCM operates normally.

>> Inspection End.

CONFIGURATION (BCM) : Configuration list

INFOID:000000006234195

MANUAL SETTING ITEM	
Items	Setting value
AUTO LIGHT	WITH↔WITHOUT
DTRL	WITH↔WITHOUT
AV C/U	WITH↔WITHOUT

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

SYSTEM DESCRIPTION

BODY CONTROL SYSTEM

System Description

INFOID:000000006234196

OUTLINE

- BCM (body control module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.
- BCM has combination switch reading function for reading the operation status of combination switches (light, turn signal, wiper and washer) in addition to a function for controlling the operation of various electrical components. It also has the signal transmission function as the passed point of signal and the power saving control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with the diagnosis function that performs the diagnosis with CONSULT-III and various settings.

CAN communication control

In CAN communication, control units are connected with 2 communication lines (CAN-L, CAN-H) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives the data but selectively reads required information only.

CAN communication signal

Refer to the [LAN-24, "CAN Communication Signal Chart"](#).

BCM control function list

System	Refer to
Combination switch reading system	BCS-10, "System Description"
Signal buffer system	BCS-14, "System Description"
Power consumption control system	BCS-15, "System Description"
Auto light system	EXL-13, "System Description"
Turn signal and hazard warning lamp system	EXL-17, "System Description"
Headlamp system (xenon type)	EXL-9, "System Description"
Headlamp system (halogen type)	EXL-171, "System Description"
Front fog lamp system (if equipped)	EXL-15, "System Description"
Exterior lamp battery saver system	EXL-19, "System Description"
Daytime running light system (Canada only)	EXL-11, "System Description"
Interior room lamp control system	INL-6, "System Description"
Step lamp system	
Interior room lamp battery saver system	INL-6, "System Description"
Front wiper and washer system	WW-6, "System Description"
Warning chime system	WCS-4, "WARNING CHIME SYSTEM : System Description"
Door lock system	DLK-13, "DOOR LOCK AND UNLOCK SWITCH : System Description"
Trunk open system	DLK-26, "TRUNK LID OPENER SWITCH : System Description"
Automatic drive positioner system	ADP-10, "AUTOMATIC DRIVE POSITIONER SYSTEM : System Description"
Nissan vehicle immobilizer system	SEC-15, "System Description"
Vehicle security system	SEC-19, "System Description"
Panic alarm	
Rear window defogger system	DEF-6, "System Description"

BODY CONTROL SYSTEM


[BCM]

< SYSTEM DESCRIPTION >

System	Refer to
Intelligent Key system/engine start system	Door lock function <ul style="list-style-type: none"> • DLK-15, "DOOR REQUEST SWITCH : System Description" (door request switch) • DLK-20, "INTELLIGENT KEY : System Description" (Intelligent Key)
	Trunk open function <ul style="list-style-type: none"> • DLK-28, "TRUNK REQUEST SWITCH : System Description" (trunk request switch) • DLK-20, "INTELLIGENT KEY : System Description" (Intelligent Key)
	Warning function <ul style="list-style-type: none"> • DLK-38, "System Description"
	Key reminder function <ul style="list-style-type: none"> • DLK-45, "System Description"
	Engine start function <ul style="list-style-type: none"> • SEC-10, "System Description"
Power window system	<ul style="list-style-type: none"> • PWC-11, "System Description" (LH and RH front window anti-pinch) • PWC-115, "System Description" (front and rear window anti-pinch)
RAP (retained accessory power) system	BCS-30, "RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)"
TPMS (tire pressure monitor system)	WT-8, "System Description"

Component Parts Location

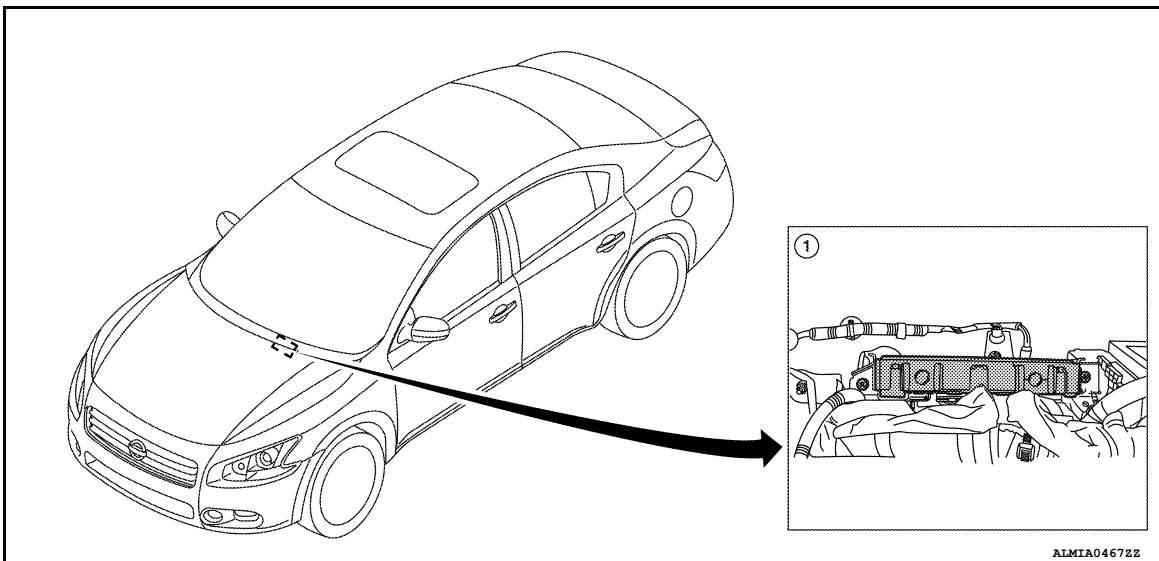INFOID:000000006234197



1. BCM M16, M17, M18, M19, M20, M21 (view with instrument panel removed)

BCS

COMBINATION SWITCH READING SYSTEM

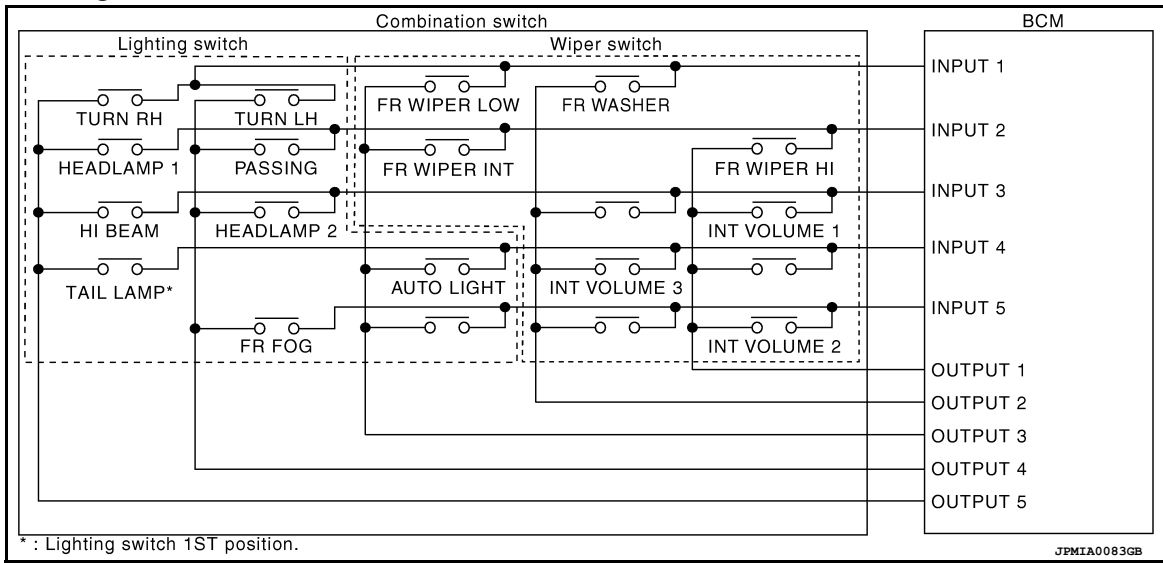
[BCM]

< SYSTEM DESCRIPTION >

COMBINATION SWITCH READING SYSTEM

System Diagram

INFOID:000000006234198



System Description

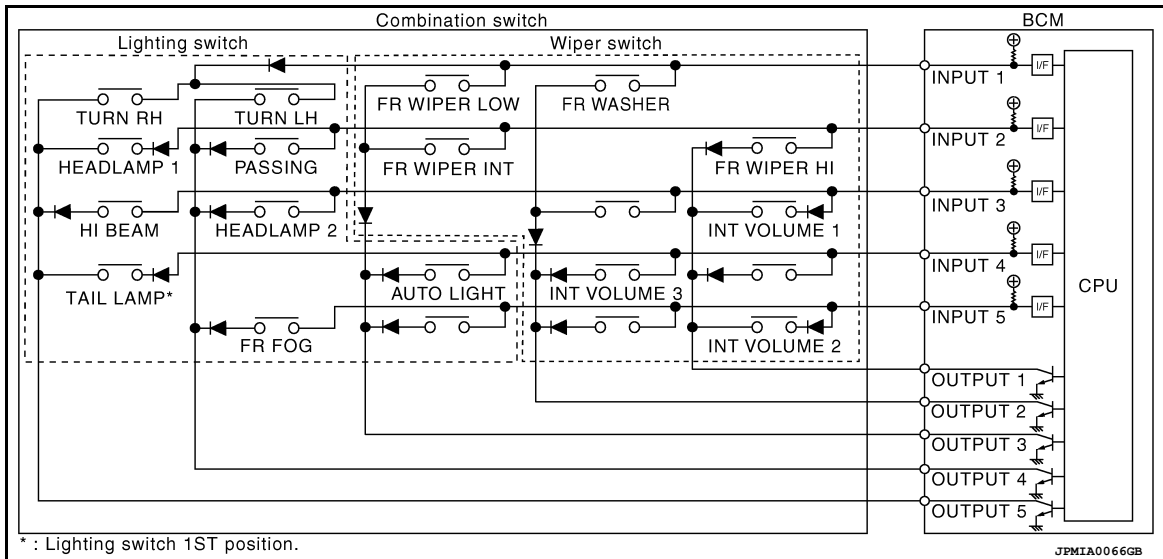
INFOID:000000006234199

OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM is a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch status.

COMBINATION SWITCH MATRIX

Combination switch circuit



Combination switch INPUT-OUTPUT system list

System	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	OUTPUT 5
INPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
INPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
INPUT 3	INT VOLUME 1	—	—	HEADLAMP 2	HI BEAM

COMBINATION SWITCH READING SYSTEM

[BCM]

< SYSTEM DESCRIPTION >

System	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	OUTPUT 5
INPUT 4	—	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INPUT 5	INT VOLUME 2	—	—	FR FOG	—

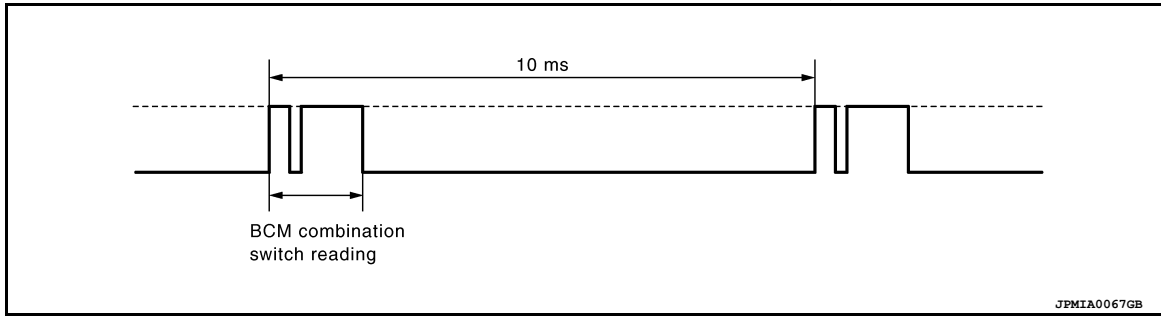
NOTE:

Headlamp has a dual system switch.

COMBINATION SWITCH READING FUNCTION

Description


- BCM reads the status of the combination switch at 10ms interval normally.



NOTE:

BCM reads the status of the combination switch at 60ms interval when BCM is controlled at low power consumption mode.

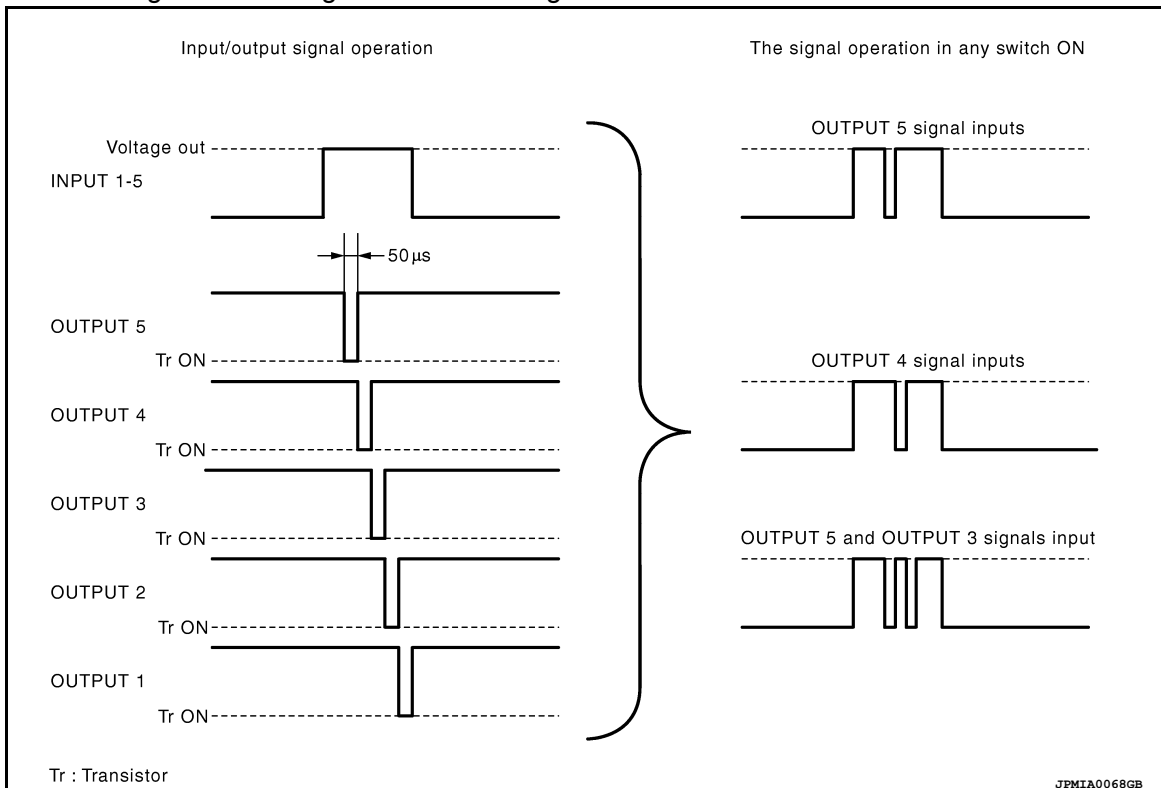- BCM operates as follows and judges the status of the combination switch.
- INPUT 1 - 5 outputs the voltage waveforms of 5 systems simultaneously.
- It operates the transistor on OUTPUT side in the following order: OUTPUT 5 → 4 → 3 → 2 → 1.
- The voltage waveform of INPUT corresponding to the formed circuit changes according to the operation of the transistor on OUTPUT side if any (1 or more) switches are ON.
- It reads this change of the voltage as the status signal of the combination switch.



Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".


Example 1: When a switch (TURN RH switch) is turned ON

COMBINATION SWITCH READING SYSTEM

[BCM]

< SYSTEM DESCRIPTION >

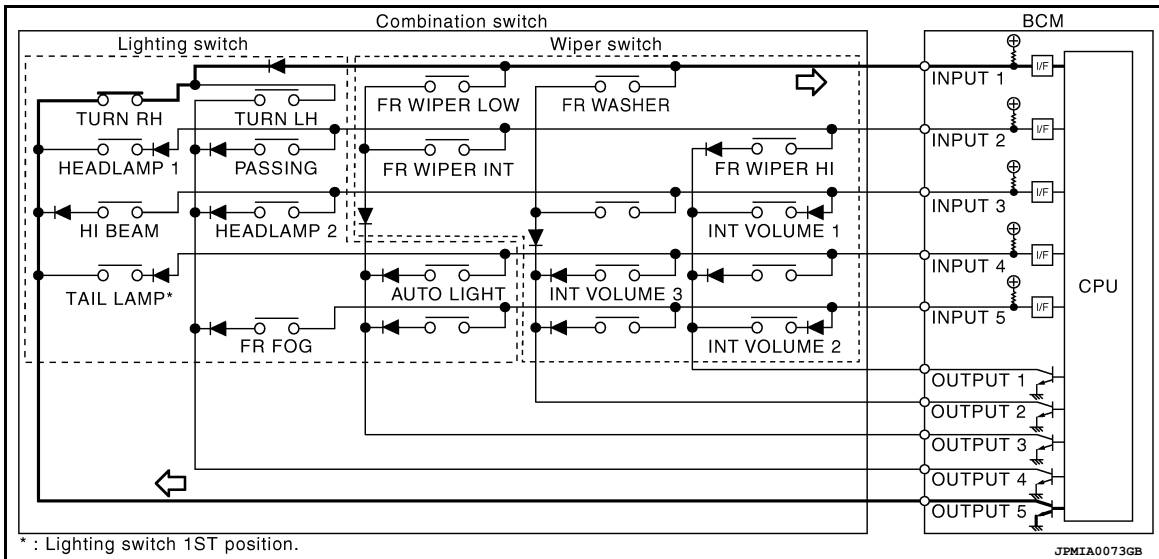
- The circuit between INPUT 1 and OUTPUT 5 is formed when the TURN RH switch is turned ON.



- BCM detects the combination switch status signal "1E" when the signal of OUTPUT 5 is input to INPUT 1.
- BCM judges that the TURN RH switch is ON when the signal "1E" is detected.
- Example 2: When some switches (TURN RH switch, FR WIPER LOW switch) are turned ON

Example 2: When some switches (turn RH switch, front wiper LO switch) are turned ON

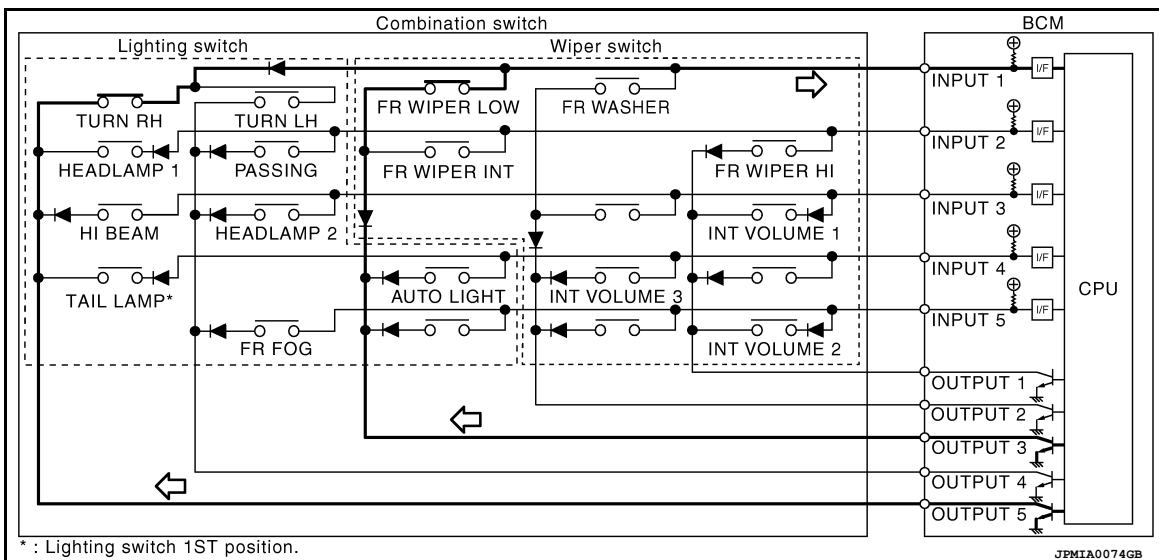- The circuits between INPUT 1 and OUTPUT 5 and between INPUT 1 and OUTPUT 3 are formed when the TURN RH switch and FR WIPER LOW switch are turned ON.



- BCM detects the combination switch status signal "1CE" when the signals of OUTPUT 3 and OUTPUT 5 are input to INPUT 1.
- BCM judges that the TURN RH switch and FR WIPER LOW switch are ON when the signal "1CE" is detected.

WIPER INTERMITTENT DIAL POSITION SETTING (FRONT WIPER INTERMITTENT OPERATION)

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2, and 3 switches.

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

[BCM]

Wiper intermittent dial position	Intermittent operation delay interval	INT VOLUME switch ON/OFF status		
		INT VOLUME 1 switch	INT VOLUME 2 switch	INT VOLUME 3 switch
1	Short ↑	ON	ON	ON
2		ON	ON	OFF
3		ON	OFF	OFF
4		OFF	OFF	OFF
5	↓ Long	OFF	OFF	ON
6		OFF	ON	ON
7		OFF	ON	OFF

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

SIGNAL BUFFER SYSTEM

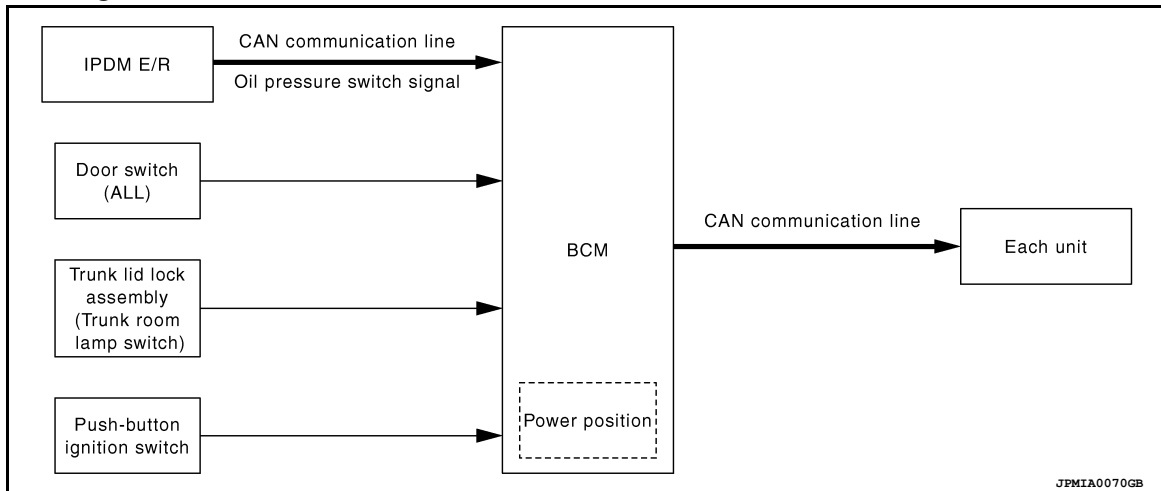
< SYSTEM DESCRIPTION >

[BCM]

SIGNAL BUFFER SYSTEM

System Diagram

INFOID:000000006234200



System Description

INFOID:000000006234201

OUTLINE


BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

Signal transmission function list

Signal name	Input	Output	Description
<ul style="list-style-type: none"> Ignition switch ON signal Ignition switch signal 	Engine switch (push switch)	IPDM E/R (CAN)	Inputs the push-button ignition switch (push switch) signal and transmits the ignition switch status judged with BCM via CAN communication.
Door switch signal	Any door switch	<ul style="list-style-type: none"> Combination meter (CAN) IPDM E/R (CAN) 	Inputs the door switch signal and transmits it via CAN communication.
Trunk switch signal	Trunk room lamp switch	Combination meter (CAN)	Inputs the trunk room lamp switch signal and transmits the trunk switch signal via CAN communication.
Oil pressure switch signal	IPDM E/R (CAN)	Combination meter (CAN)	Transmits the received oil pressure switch signal via CAN communication.

POWER CONSUMPTION CONTROL SYSTEM

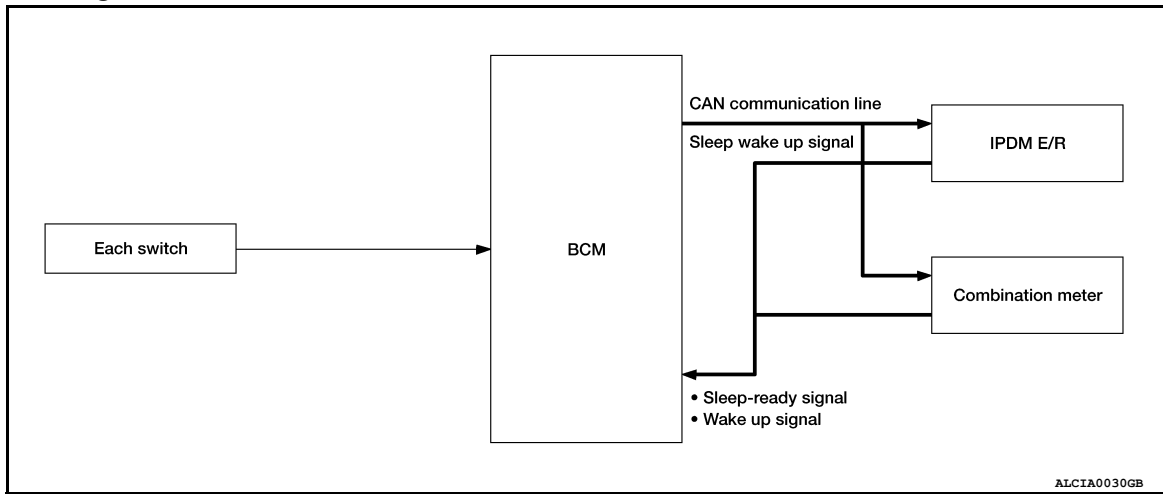System Diagram



System Description

INFOID:000000006234203

OUTLINE

- BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status.
- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R and combination meter) that operates with the ignition switch OFF.

Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of the each switches changes from 10 ms interval to 60 ms interval.

Sleep mode activation

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wakeup signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and perform the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

POWER CONSUMPTION CONTROL SYSTEM

[BCM]

< SYSTEM DESCRIPTION >

Sleep condition

CAN sleep condition	BCM sleep condition
<ul style="list-style-type: none"> Receiving the sleep-ready signal (ready) from all units Ignition switch: OFF Vehicle security system alarm and panic alarm : No operation Warning lamp: No operation Intelligent Key system buzzer: No operation Trunk room lamp switch status: No change Brake switch: OFF Key slot status: No change Turn signal indicator lamp: No operation Exterior lamp: OFF Door lock status: No change CONSULT-III communication status: No communication Meter display signal : Non-transmission Door switch status: No change Rear window defogger: OFF 	<ul style="list-style-type: none"> Interior room lamp battery saver: Time out RAP system: OFF Power window switch communication: No transmission Push-button ignition switch (push switch) illumination: OFF NATS: No operation Remote keyless entry receiver communication status: No communication Tire pressure monitor system: Stop

Wake-up operation

- BCM changes from the low power consumption mode to the CAN communication sleep mode when any of the BCM wake-up conditions is fulfilled. Only the control with BCM is activated.
- BCM transmits the sleep wake up signal (wake up) to each unit when any of the CAN wake-up conditions is fulfilled. It changes from the low power consumption mode or the CAN communication sleep mode to the normal mode.
- Each unit starts the transmission of CAN communication with the sleep wake up signal. In addition, the combination meter transmits the wake up signal to BCM via CAN communication to report the CAN communication start.

Wake-up condition

BCM wake-up condition	CAN wake-up condition
<ul style="list-style-type: none"> Door unlock sensor: OFF→ON, ON→OFF Door lock lock assembly LH (key cylinder switch): Lock or unlock Door lock switch: OFF→ON Door unlock switch: OFF→ON Trunk lid opener switch: OFF→ON Power window serial link communication: Receiving Remote keyless entry receiver: Receiving valid keyfob 	<ul style="list-style-type: none"> Receiving the sleep-ready signal (Not-ready) from any units Key slot: OFF→ON, ON→OFF Push-button ignition switch (push switch): OFF→ON Hazard switch: OFF→ON PASSING switch: OFF→ON, ON→OFF TAIL LAMP switch: OFF→ON Driver door switch: OFF→ON, ON→OFF Passenger door switch: OFF → ON, ON → OFF Trunk room lamp switch: OFF→ON, ON→OFF Driver door request switch: OFF→ON Passenger door request switch: OFF→ON Trunk request switch: OFF→ON Stop lamp switch 2 signal: ON Remote keyless entry receiver: Receiving valid keyfob

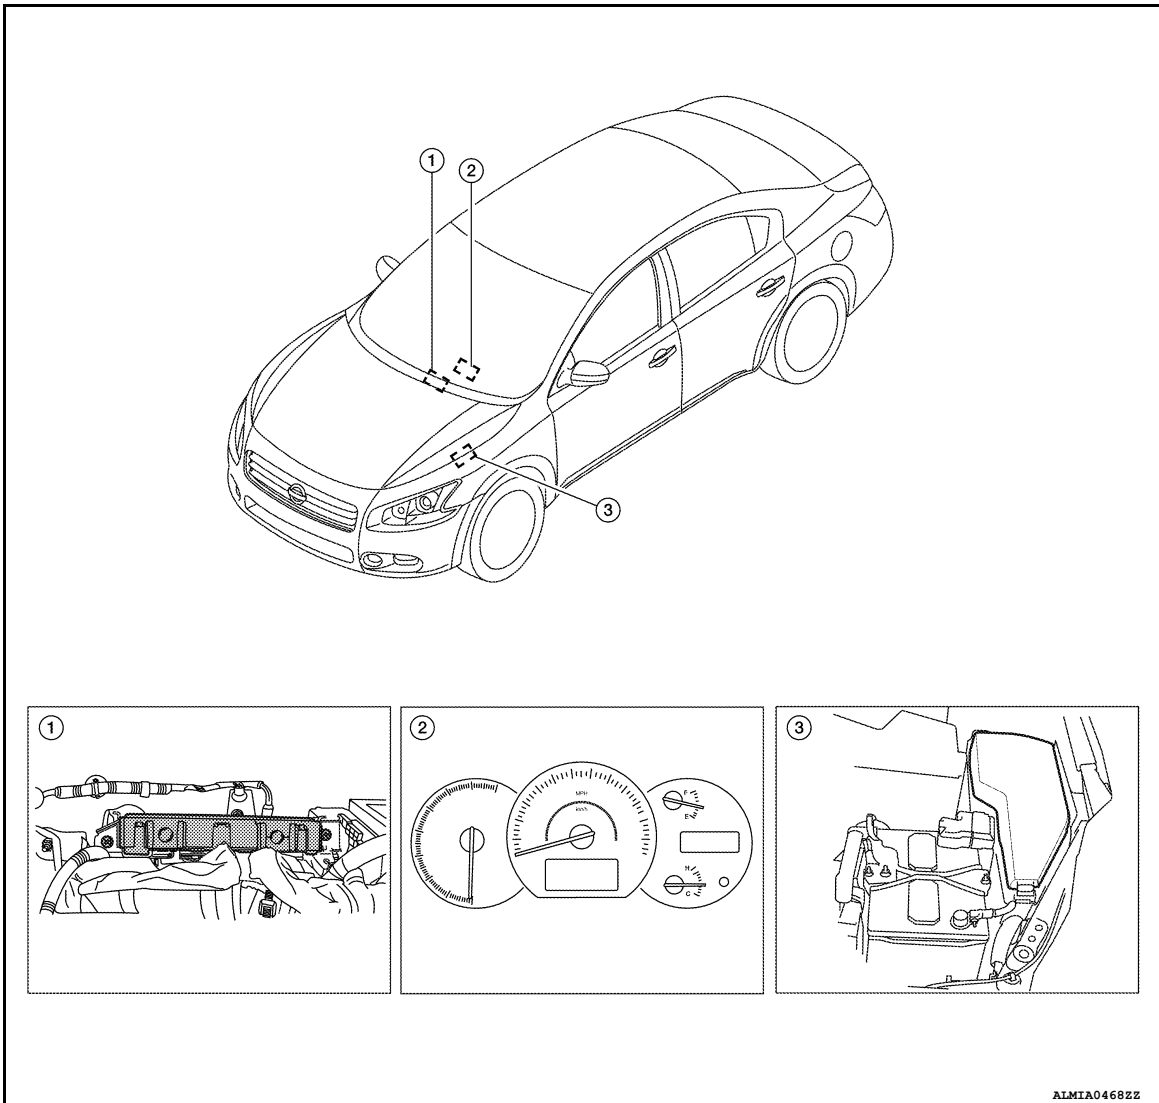
POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[BCM]

Component Parts Location

INFOID:000000006234204



1. BCM M16, M17, M18, M19, M20, M21 (view with instrument panel removed)
2. Combination meter M24
3. IPDM E/R E16, E17, E18, E200, E201, F10

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000006234205

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Work support	Changes the setting for each system function.
Configuration	<ul style="list-style-type: none"> Enables to read and save the vehicle specification. Enables to write the vehicle specification when replacing BCM.
CAN Diag Support Mntr	Monitors the reception status of CAN communication viewed from BCM.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×			
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×	×		
Intelligent Key system	INTELLIGENT KEY			×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×	×		
Trunk open	TRUNK			×	×			
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×				
Signal buffer system	SIGNAL BUFFER			×	×			
TPMS	AIR PRESSURE MONITOR		×	×	×	×		

DOOR LOCK

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

DOOR LOCK : CONSULT-III Function (BCM - DOOR LOCK)

INFOID:000000006234207

SELF DIAGNOSTIC RESULT

Refer to [BCS-65. "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW-DR [On/Off]	Indicates condition of door request switch LH
REQ SW-AS [On/Off]	Indicates condition of door request switch RH
REQ SW-BD/TR [On/Off]	Indicates condition of trunk request switch
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH
DOOR SW-BK [On/Off]	Indicates condition of trunk switch
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch

ACTIVE TEST

Test Item	Description
DOOR LOCK	This test is able to check door lock operation [OTR ULK/AS UNLK/DR UNLK/ALL UNLK/ALL LCK].

WORK SUPPORT

Support Item	Setting	Description
DOOR LOCK-UNLOCK SET	On*	Automatic door locks function ON
	Off	Automatic door locks function OFF
AUTOMATIC DOOR LOCK SELECT	P RANGE	Doors lock automatically when shifted out of park (P)
	VH SPD*	Doors lock automatically when vehicle speed reaches 24 km/h (15 mph)
AUTOMATIC DOOR UNLOCK SELECT	MODE4	Drivers door unlocks automatically when shifted into park (P)
	MODE3	Drivers door unlocks automatically when ignition is switched from ON to OFF
	MODE2	Doors unlock automatically when shifted into park (P)
	MODE1*	Doors unlock automatically when ignition is switched from ON to OFF
AUTOMATIC LOCK/UNLOCK SELECT	Lock/Unlock*	Automatic door locks function operates in lock and unlock
	Lock Only	Automatic door locks function operates in lock only
	Unlock Only	Automatic door locks function operates in unlock only
	Off	Automatic door locks function OFF

* : Initial setting

REAR DEFOGGER

REAR DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)

INFOID:000000006234208

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push button ignition switch
REAR DEF SW [On/Off]	Indicates condition of rear window defogger switch

ACTIVE TEST

Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation [Off/On].

BUZZER

BUZZER : CONSULT-III Function (BCM - BUZZER)

INFOID:000000006234209

DATA MONITOR

Monitor Item [Unit]	Description
PUSH -SW [On/Off]	Indicates condition of push button ignition switch
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line
KEY SW -SLOT [On/Off]	Indicates condition of key slot
TAIL LAMP SW [On/Off]	Indicates condition of combination switch
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH

ACTIVE TEST

Test Item	Description
IGN KEY WARN ALM	This test is able to check key warning chime operation [On/Off].
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation [On/Off].
ID REGIST WARNING	This test is able to check ID regist warning chime operation [On/Off].
LIGHT WARN ALM	This test is able to check light warning chime operation [On/Off].

INT LAMP

INT LAMP : CONSULT-III Function (BCM - INT LAMP)

INFOID:000000006234210

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH
REQ SW -AS [On/Off]	Indicates condition of door request switch RH
PUSH -SW [On/Off]	Indicates condition of push button ignition switch
ACC RLY -F/B [ON/OFF]	Indicates condition of accessory relay
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor
KEY SW -SLOT [On/Off]	Indicates condition of key slot
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH
DOOR SW-BK [On/Off]	Indicates condition of trunk switch
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch
TRNK/HAT MNTR [ON/OFF]	Indicates condition of trunk room lamp switch
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key

ACTIVE TEST

Test Item	Description
INT LAMP	This test is able to check interior room lamp operation [On/Off].
STEP LAMP TEST	This test is able to check step lamp operation [On/Off].
LUGGAGE LAMP TEST	This test is able to check trunk room lamp operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
SET I/L D-UNLCK INTCON	On*	Interior room lamp timer function ON
	Off	Interior room lamp timer function OFF
ROOM LAMP TIMER SET	MODE 4 30 sec.	Sets the interior room lamp ON time. (Timer operating time)
	MODE 3* 15 sec.	
	MODE 2 7.5 sec.	
ROOM LAMP ON TIME SET	MODE 5 0 sec.	Sets the interior room lamp gradual brightening time.
	MODE 4 3 sec.	
	MODE 3 2 sec.	
	MODE 2* 1 sec.	
	MODE 1 0.5 sec.	
ROOM LAMP OFF TIME SET	MODE 5 0 sec.	Sets the interior room lamp gradual dimming time.
	MODE 4* 3 sec.	
	MODE 3 2 sec.	
	MODE 2 1 sec.	
	MODE 1 0.5 sec.	
R LAMP TIMER LOGIC SET	MODE 2	Interior room lamp timer activates with all doors.
	MODE 1*	Interior room lamp timer activates with the driver door only.

* : Initial setting

HEADLAMP

HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)

INFOID:000000006234211

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push button ignition switch
ENGINE STATE [Stop/Stall/Crank/Run]	Indicates engine status received from ECM on CAN communication line
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line
KEY SW -SLOT [On/Off]	Indicates condition of key slot

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
TURN SIGNAL R [On/Off]	Indicates condition of combination switch
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	
HI BEAM SW [On/Off]	
HEAD LAMP SW 1 [On/Off]	
HEAD LAMP SW 2 [On/Off]	
PASSING SW [On/Off]	
AUTO LIGHT SW [On/Off]	
FR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH
DOOR SW-BK [On/Off]	Indicates condition of trunk switch
OPTICAL SENSOR [V]	Indicates voltage signal from optical sensor

ACTIVE TEST

Test Item	Description
TAIL LAMP	This test is able to check tail lamp operation [On/Off].
HEAD LAMP	This test is able to check head lamp operation [Hi/Low/Off].
FR FOG LAMP	This test is able to check front fog lamp operation [On/Off].
CORNERING LAMP	This test is able to check turn signal lamp operation [LH/RH/Off].
ILL DIM SIGNAL	This test is able to check head lamp illumination dimming operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
CUSTOM A/LIGHT SETTING	MODE 4	Less sensitive setting than normal setting (Turns ON later than normal operation.)
	MODE 3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2.)
	MODE 2	More sensitive setting than normal setting (Turns ON earlier than normal operation.)
	MODE 1*	Normal
BATTERY SAVER SET	On*	Exterior lamp battery saver function ON
	Off	Exterior lamp battery saver function OFF
ILL DELAY SET	MODE 8	180 sec.
	MODE 7	150 sec.
	MODE 6	120 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 3	30 sec.
	MODE 2	OFF
	MODE 1*	45 sec.

* : Initial setting

WIPER

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

WIPER : CONSULT - III Function (BCM - WIPER)

INFOID:000000006234212

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push button ignition switch
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch
FR WIPER LOW [On/Off]	
FR WASHER SW [On/Off]	
FR WIPER INT [On/Off]	
FR WIPER STOP [On/Off]	Indicates front wiper auto stop signal received from IPDM E/R on CAN communication line
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch

ACTIVE TEST

Test Item	Description
FR WIPER	This test is able to check front wiper operation [INT/Lo/Hi/Off].

WORK SUPPORT

Support Item	Setting	Description
WIPER SPEED SETTING	On	Front wiper intermittent time linked with vehicle speed and wiper dial position
	Off*	Front wiper intermittent time linked with wiper dial position

* : Initial setting

FLASHER

FLASHER : CONSULT-III Function (BCM - FLASHER)

INFOID:000000006234213

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH
REQ SW -AS [On/Off]	Indicates condition of door request switch RH
PUSH SW [On/Off]	Indicates condition of push button ignition switch
TURN SIGNAL R [On/Off]	Indicates condition of turn signal function of combination switch
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	Indicates condition of hazard switch
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key
RKE-PANIC [On/Off]	Indicates condition of panic alarm signal from Intelligent Key

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

WORK SUPPORT

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

Support Item	Setting	Description
HAZARD ANSWER BACK	Lock/Unlock*	Hazard warning lamp activation when doors are locked or unlocked with the Intelligent Key.
	Unlock Only	Hazard warning lamp activation when doors are unlocked with the Intelligent Key.
	Lock Only	Hazard warning lamp activation when doors are locked with the Intelligent Key.
	Off	No hazard warning lamp activation when doors are locked or unlocked with the Intelligent Key.

* : Initial setting

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY) INFOID:000000006234214

DATA MONITOR

Monitor Item [Unit]	Main	Description
REQ SW -DR [On/Off]	×	Indicates condition of door request switch LH
REQ SW -AS [On/Off]	×	Indicates condition of door request switch RH
REQ SW -BD/TR [On/Off]	×	Indicates condition of trunk opener request switch
PUSH SW [On/Off]		Indicates condition of push button ignition switch
IGN RLY2 -F/B [On/Off]		Indicates condition of ignition relay 2
ACC RLY -F/B [On/Off]		Indicates condition of accessory relay
BRAKE SW 1 [On/Off]	×	Indicates condition of brake switch
BRAKE SW 2 [On/Off]		Indicates condition of brake switch
DETE/CANCL SW [On/Off]	×	Indicates condition of P position
SFT PN/N SW [On/Off]	×	Indicates condition of P or N position
UNLK SEN -DR [On/Off]	×	Indicates condition of door unlock sensor
PUSH SW -IPDM [On/Off]		Indicates condition of push button ignition switch received from IPDM E/R on CAN communication line
IGN RLY1 -F/B [On/Off]		Indicates condition of ignition relay 1 received from IPDM E/R on CAN communication line
DETE SW -IPDM [On/Off]		Indicates condition of detent switch received from TCM on CAN communication line
SFT PN -IPDM [On/Off]		Indicates condition of P or N position from TCM on CAN communication line
SFT P -MET [On/Off]		Indicates condition of P position from TCM on CAN communication line
SFT N -MET [On/Off]		Indicates condition of N position from IPDM E/R on CAN communication line
ENGINE STATE [Stop/Start/Crank/Run]	×	Indicates condition of engine state from ECM on CAN communication line
VEH SPEED 1 [mph/km/h]	×	Indicates condition of vehicle speed signal received from ABS on CAN communication line
VEH SPEED 2 [mph/km/h]	×	Indicates condition of vehicle speed signal received from combination meter on CAN communication line
DOOR STAT -DR [LOCK/READY/UNLK]	×	Indicates condition of driver side door status.
DOOR STAT -AS [LOCK/READY/UNLK]	×	Indicates condition of passenger side door status.
ID OK FLAG [Set/Reset]		Indicates condition of Intelligent Key ID.
PRMT ENG STRT [Set/Reset]		Indicates condition of engine start possibility.
PRMT RKE STRT [Set/Reset]		Indicates condition of engine start possibility from Intelligent Key.
KEY SW -SLOT [On/Off]		Indicates condition of key slot.
TRNK/HAT MNTR [On/Off]		Indicates condition of trunk lid.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

Monitor Item [Unit]	Main	Description
RKE-LOCK [On/Off]		Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]		Indicates condition of unlock signal from Intelligent Key.
RKE-TR/BD [On/Off]		Indicates condition of trunk open signal from Intelligent Key.
RKE-PANIC [On/Off]		Indicates condition of panic signal from Intelligent Key.
RKE-P/W OPEN [On/Off]		Indicates condition of power window down signal from Intelligent Key.
RKE-MODE CHG [On/Off]		Indicates condition of mode change signal from Intelligent Key.
RKE OPE COUN1 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE OPE COUN2 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
REVERSE SW [On/Off]		Indicates condition of reverse switch status.

ACTIVE TEST

Test Item	Description
BATTERY SAVER	This test is able to check battery saver operation [On/Off].
PW REMOTO DOWN SET	This test is able to check power window down operation [On/Off].
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation [Off/On].
INSIDE BUZZER	This test is able to check combination meter warning chime operation [Key/Knob/Take Out/Off].
INDICATOR	This test is able to check combination meter warning lamp operation [KEY IND/KEY ON/Off].
INT LAMP	This test is able to check interior room lamp operation [On/Off].
LCD	This test is able to check combination meter display information [Off/LK WN/OUTKEY/NO KY/BATT/INSRT/SFT P/ROTAT/ID NG/BP I/BP N].
TRUNK/GLASS HATCH	This test is able to check trunk lid opener actuator open operation [Open].
FLASHER	This test is able to check hazard lamp operation [Off/LH/RH].
HORN	This test is able to check horn operation [On].
P RANGE	This test is able to check CVT shift selector illumination operation [On/Off].
ENGINE SW ILLUMI	This test is able to check push button ignition switch illumination operation [On/Off].
LOCK INDICATOR	This test is able to check LOCK indicator in push button ignition switch operation [On/Off].
ACC INDICATOR	This test is able to check ACC indicator in push button ignition switch operation [On/Off].
IGNITION ON IND	This test is able to check ignition ON indicator in push button ignition switch operation [On/Off].
KEY SLOT ILLUMI	This test is able to check key slot illumination operation [On/Off].
TRUNK/BACK DOOR	This test is able to check trunk lid opener actuator operation [Open].

WORK SUPPORT

Support Item	Setting	Description	
CONFIRM KEY FOB ID	MEMORY 1	Intelligent Key ID code can be checked.	
	MEMORY 2		
	MEMORY 3		
	MEMORY 4		
	NON REGIST		
AUTO LOCK SET	MODE 4	2 min	Auto door lock time can be set in this mode.
	MODE 3	30 sec	
	MODE 2	5 min	
	MODE 1*	1 min	

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

Support Item	Setting		Description
LOCK/UNLOCK BY I-KEY	On*		Door lock/unlock function by request switch ON.
	Off		Door lock/unlock function by request switch OFF.
ENGINE START BY I-KEY	On*		Engine start function from Intelligent Key ON.
	Off		Engine start function from Intelligent Key OFF.
TRUNK/GLASS HATCH OPEN	On*		Buzzer reminder function by trunk opener request switch ON.
	Off		Buzzer reminder function by trunk opener request switch OFF.
PANIC ALARM SET	MODE 3	1.5 sec	Panic alarm button set time on Intelligent Key can be set in this mode.
	MODE 2	OFF	
	MODE 1*	0.5 sec	
PW DOWN SET	MODE 3	5 sec	Unlock button press time on Intelligent Key to lower front window can be set in this mode.
	MODE 2	OFF	
	MODE 1*	3 sec	
TRUNK OPEN DELAY	MODE 3	1.5 sec	Trunk button pressing time on Intelligent Key button can be selected from the following with this mode.
	MODE 2	OFF	
	MODE 1*	0.5 sec	
LO- BATT OF KEY FOB WARN	On*		Intelligent Key low battery warning mode ON.
	Off		Intelligent Key low battery warning mode OFF.
ANTI KEY LOCK IN FUNCTI	On*		Key reminder function mode ON.
	Off		Key reminder function mode OFF.
HAZARD ANSWER BACK	Lock/Unlock*		Hazard warning lamp activation when doors are locked or unlocked with Intelligent Key.
	Unlock Only		Hazard warning lamp activation when doors are unlocked with Intelligent Key.
	Lock Only		Hazard warning lamp activation when doors are locked with Intelligent Key.
	Off		No hazard warning lamp activation when doors are locked or unlocked with Intelligent Key.
ANS BACK I-KEY LOCK	Horn Chirp		Horn chirp reminder when doors are unlocked with Intelligent Key
	Buzzer*		Buzzer or horn chirp reminder when doors are unlocked with Intelligent Key
	Off		No buzzer or horn chirp reminder when doors are unlocked with Intelligent Key
ANS BACK I-KEY UNLOCK	Off		No buzzer or horn chirp reminder when doors are unlocked with Intelligent Key
	On*		Buzzer or horn chirp reminder when doors are unlocked with Intelligent Key
SHORT CRANKING OUTPUT	Start	70 msec	Starter motor operation duration times.
		100 msec	
		200 msec	
	End		
INSIDE ANT DIAGNOSIS	Start		This function allows inside key antenna self-diagnosis.
HORN WITH KEYLESS LOCK	Off		No horn reminder activation when doors are locked with Intelligent Key.
	On*		Horn reminder activation when doors are locked with Intelligent Key.

*: Initial Setting

COMB SW

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

COMB SW : CONSULT-III Function (BCM-COMB SW)

INFOID:000000006234215

DATA MONITOR

Monitor Item [Unit]	Description
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch
FR WIPER LOW [On/Off]	
FR WASHER SW [On/Off]	
FR WIPER INT [On/Off]	
FR WIPER STOP [On/Off]	Indicates front wiper auto stop signal received from IPDM E/R on CAN communication line
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch
TURN SIGNAL R [On/Off]	Indicates condition of right turn signal operation of combination switch
TURN SIGNAL L [On/Off]	Indicates condition of left turn signal operation of combination switch
TAIL LAMP SW [On/Off]	Indicates condition of tail lamp switch operation of combination switch
HI BEAM SW [On/Off]	Indicates condition of Hi beam switch operation of combination switch
HEAD LAMP SW 1 [On/Off]	Indicates condition of head lamp switch 1 operation of combination switch
HEAD LAMP SW 2 [On/Off]	Indicates condition of head lamp switch 2 operation of combination switch
PASSING SW [On/Off]	Indicates condition of passing switch operation of combination switch
AUTO LIGHT SW [On/Off]	Indicates condition of auto light switch operation of combination switch
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch operation of combination switch

BCM

BCM : CONSULT-III Function (BCM - BCM)

INFOID:000000006234216

ECU IDENTIFICATION

The BCM part number is displayed.

SELF DIAGNOSTIC RESULT

Refer to [BCS-65, "DTC Index"](#).

WORK SUPPORT

Support Item	Setting	Description
RESET SETTING VALUE	Reset	Returns BCM to initial value in factory shipment.
	Cancel	Cancels the reset function.

CONFIGURATION

Refer to [BCS-6, "CONFIGURATION \(BCM\) : Description"](#).

CAN DIAG SUPPORT MNTR

Refer to [LAN-12, "CAN Diagnostic Support Monitor"](#).

IMMU

IMMU : CONSULT-III Function (BCM - IMMU)

INFOID:000000006234217

SELF DIAGNOSTIC RESULT

Refer to [BCS-65, "DTC Index"](#).

DATA MONITOR

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
CONFIRM ID ALL [Yet/DONE]	Switches to DONE when a registered Intelligent Key is inserted into the key slot.
CONFIRM ID4 [Yet/DONE]	
CONFIRM ID3 [Yet/DONE]	
CONFIRM ID2 [Yet/DONE]	
CONFIRM ID1 [Yet/DONE]	
TP 4 [Yet/DONE]	DONE indicates the number of Intelligent Key ID which has been registered.
TP 3 [Yet/DONE]	
TP 2 [Yet/DONE]	
TP 1 [Yet/DONE]	
PUSH SW [On/Off]	Indicates condition of push button ignition switch
KEY SW -SLOT [On/Off]	Indicates condition of key slot

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [On/Off].

BATTERY SAVER

BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)

INFOID:000000006234218

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH
REQ SW -AS [On/Off]	Indicates condition of door request switch RH
PUSH SW [On/Off]	Indicates condition push button ignition switch
ACC RLY -F/B [On/Off]	Indicates condition of accessory relay
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor
KEY SW -SLOT [On/Off]	Indicates condition of key slot
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch
TRNK/HAT MNTR [On/Off]	Indicates condition of trunk room lamp switch
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check battery saver operation [On/Off].

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

Support Item	Setting		Description
ROOM LAMP BAT SAV SET	ON*		Interior room lamp battery saver function ON
	OFF		Interior room lamp battery saver function OFF
ROOM LAMP TIMER SET	MODE 2	60 min.	Sets interior room lamp battery saver timer operating time
	MODE 1*	15 min.	
BATTERY SAVER SET	ON*		Exterior lamp battery saver function ON
	OFF		Exterior lamp battery saver function OFF

* : Initial setting

TRUNK

TRUNK : CONSULT-III Function (BCM - TRUNK)

INFOID:000000006234219

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push button ignition switch
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line
TR CANCEL SW [On/Off]	Indicates condition of trunk cancel switch
TR/BD OPEN SW [On/Off]	Indicates condition of trunk lid opener switch
TRNK/HAT MNTR [On/Off]	Indicates condition of trunk room lamp switch
RKE-TR/BD [On/Off]	Indicates condition of trunk open signal from Intelligent Key

ACTIVE TEST

Test Item	Description
TRUNK/GLASS HATCH	This test is able to check trunk open operation [Open].

THEFT ALM

THEFT ALM : CONSULT-III Function (BCM - THEFT ALM)

INFOID:000000006234220

DATA MONITOR

Monitored Item	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH
REQ SW -AS [On/Off]	Indicates condition of door request switch RH
REQ SW -BD/TR [On/Off]	Indicates condition of trunk opener request switch
PUSH SW [On/Off]	Indicates condition of push button ignition switch
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor
KEY SW -SLOT [On/Off]	Indicates condition of key slot
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH
DOOR SW-BK [On/Off]	Indicates condition of trunk switch
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Monitored Item	Description
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch
TR/BD OPEN SW [On/Off]	Indicates condition of trunk opener switch
TRNK/HAT MNTR [On/Off]	Indicates condition of trunk room lamp switch
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key
RKE-TR/BD [On/Off]	Indicates condition of trunk open signal from Intelligent Key

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation [On/Off].
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation [On].
HEADLAMP(HI)	This test is able to check vehicle security lamp operation [On].
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

WORK SUPPORT

Support Item	Setting	Description
SECURITY ALARM SET	On	Security alarm ON
	Off	Security alarm OFF
THEFT ALM TRG	Off/On	The switch which triggered vehicle security alarm is recorded [On]. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching [CLEAR].
	CLEAR	

RETAINED PWR

RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)

INFOID:000000006234221

DATA MONITOR

Monitor Item [Unit]	Description
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH

SIGNAL BUFFER

SIGNAL BUFFER : CONSULT-III Function (BCM - SIGNAL BUFFER)

INFOID:000000006234222

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of the push button ignition switch

ACTIVE TEST

Test Item	Description
OIL PRESSURE SW	This test is able to check the oil pressure warning lamp operation [On/Off].

AIR PRESSURE MONITOR

AIR PRESSURE MONITOR : CONSULT-III Function (BCM - AIR PRESSURE MONITOR)

INFOID:000000006234224

SELF DIAGNOSTIC RESULT

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

NOTE:

Before performing Self Diagnostic Result, be sure to register the ID, or else the actual malfunction may be different from that displayed on CONSULT-III.

Refer to [BCS-65, "DTC Index"](#).

DATA MONITOR

Monitor Item	Condition	Specification
AIR PRESS FL	<ul style="list-style-type: none"> • Drive vehicle for a few minutes. <li style="text-align: center;">or • Ignition switch ON and activation tool is transmitting activation signals. 	Tire pressure (kPa, kg/cm ² or Psi)
AIR PRESS FR		
AIR PRESS RR		
AIR PRESS RL		
ID REGST FL1	Ignition switch ON	Registration ID: Green No registration: Red
ID REGST FR1		
ID REGST RR1		
ID REGST RL1		
WARNING LAMP	Ignition switch ON	Low tire pressure warning lamp on: ON Low tire pressure warning lamp off: OFF
BUZZER	Ignition switch ON	Buzzer in combination meter on: ON Buzzer in combination meter off: OFF

ACTIVE TEST

Test Item	Description
WARNING LAMP	This test is able to check tire pressure warning lamp operation [On/Off].
ID REGIST WARNING	This test is able to check ID regist warning chime operation [On/Off].
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].
HORN	This test is able to check horn operation [On].

WORK SUPPORT

Support Item	Description
ID READ	The registered ID number is displayed.
ID REGIST	Refer to WT-6, "ID Registration Procedure" .

BCS

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000006234225

Refer to [LAN-6, "System Description"](#).

DTC Logic

INFOID:000000006234226

DTC DETECTION LOGIC

NOTE:

U1000 can be set if a module harness was disconnected and reconnected, perhaps during a repair. Confirm that there are actual CAN diagnostic symptoms and a present DTC by performing the Self Diagnostic Result procedure.

CONSULT-III Display	DTC Detection Condition	Possible cause
CAN COMM CIRCUIT [U1000]	When any listed module cannot communicate with CAN communication signal continuously for 2 seconds or more with ignition switch ON	In CAN communication system, any item (or items) of the following listed below is malfunctioning. <ul style="list-style-type: none">• Transmission• Receiving (ECM)• Receiving (VDC/TCS/ABS)• Receiving (METER/M&A)• Receiving (TCM)• Receiving (IPDM E/R)

Diagnosis Procedure

INFOID:000000006234227

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "SELF- DIAG RESULTS".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Perform CAN Diagnosis as described in DIAGNOSIS section of CONSULT-III Operation Manual.
NO >> Refer to [GI-39, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

[BCM]

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:000000006234228

DTC DETECTION LOGIC

CONSULT-III display description	DTC Detection Condition	Possible cause
CAN COMM CIRCUIT [U1010]	BCM detected internal CAN communication circuit malfunction.	BCM

Diagnosis Procedure

INFOID:000000006234229

1. REPLACE BCM

When DTC U1010 is detected, replace BCM.

>> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

U0415 VEHICLE SPEED SIG

[BCM]

< DTC/CIRCUIT DIAGNOSIS >

U0415 VEHICLE SPEED SIG

Description

INFOID:000000006234230

U0415 is displayed if any unusual condition is present in the reception status of the vehicle speed signal from the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000006234231

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
U0415	VEHICLE SPEED SIG [U0415]	When the vehicle speed signal received from the ABS actuator and electric unit (control unit) remains abnormal for 2 seconds or more.	<ul style="list-style-type: none">• ABS actuator and electric unit (control unit)• BCM

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase the DTC.
2. Turn ignition switch OFF.
3. Perform the "SELF-DIAG RESULTS" of CONSULT-III, after the ignition switch has been turned ON for 2 seconds or more.

Is any DTC detected?

- YES >> Refer to [BCS-65, "DTC Index"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000006234232

1. ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAG RESULTS

Perform "SELF-DIAG RESULTS" of ABS actuator and electric unit (control unit) with CONSULT-III. Refer to [BRC-23, "CONSULT-III Function \(ABS\)"](#).

Is any DTC detected?

- YES >> Repair or replace the malfunctioning part.
NO >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

B2562 LOW VOLTAGE

[BCM]

< DTC/CIRCUIT DIAGNOSIS >

B2562 LOW VOLTAGE

DTC Logic

INFOID:000000006234233

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Possible cause
B2562	LOW VOLTAGE	When the power supply voltage to BCM remains less than 8.8 V for 1.5 seconds or more	Harness or connector (power supply circuit)

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform the "SELF-DIAG RESULTS" of CONSULT-III, after the ignition switch has been turned ON for 1.5 seconds or more.

Is any DTC detected?

YES >> Refer to [BCS-35. "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000006234234

1. CHECK BATTERY VOLTAGE

Check battery voltage.

Is battery voltage less than 8.8V?

YES >> Charge battery and retest. Refer to [PG-2. "Work Flow"](#).

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

Check BCM power supply circuit. Refer to [BCS-36. "Diagnosis Procedure"](#).

Is the circuit OK?

YES >> Replace BCM. Refer to [BCS-80. "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning part.

Special Repair Requirement

INFOID:000000006234235

1. REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to [BCS-6. "CONFIGURATION \(BCM\) : Special Repair Requirement"](#).

>> Work End.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

POWER SUPPLY AND GROUND CIRCUIT

[BCM]

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:00000006234236

Regarding Wiring Diagram information, refer to [BCS-68. "Wiring Diagram"](#).

1. CHECK FUSE AND FUSIBLE LINK

Check if the following BCM fuses or fusible link are blown.

Terminal No.	Signal name	Fuse and fusible link No.
1	Battery power supply	H
11		10
24		7

Is the fuse or fusible link blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
 NO >> GO TO 2


2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M16 (A)	1	
M17 (B)	11	
M18 (C)	24	

Is the measurement normal?

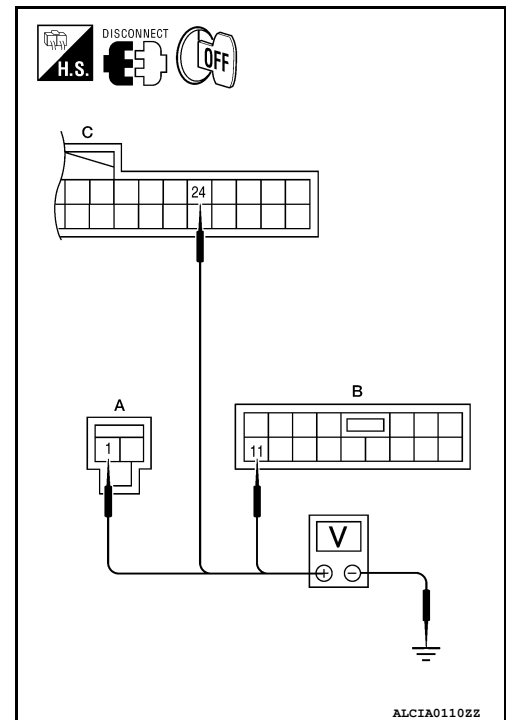- YES >> GO TO 3
 NO >> Repair or replace harness.




3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		Yes
M17	13		Yes

Does continuity exist?

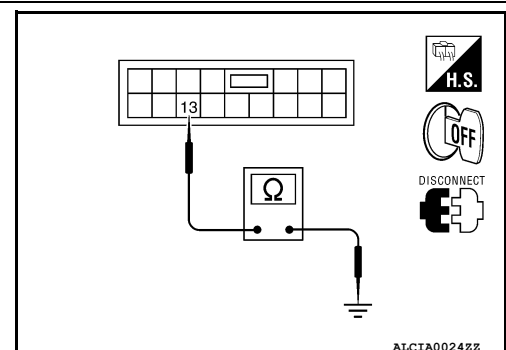- YES >> Inspection End.
 NO >> Repair or replace harness.



POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

Special Repair Requirement

INFOID:000000006234237

1. REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to [BCS-6, "CONFIGURATION \(BCM\) : Special Repair Requirement"](#).

>> Work End.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

COMBINATION SWITCH INPUT CIRCUIT

Diagnosis Procedure


INFOID:000000006234238

Regarding Wiring Diagram information, refer to [BCS-68. "Wiring Diagram"](#).

1. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch.
3. Check continuity between BCM harness connector and combination switch harness connector.

System	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
INPUT 1	M19 (A)	95	M28 (B)	11	Yes
INPUT 2		97		9	
INPUT 3		76		7	
INPUT 4		96		10	
INPUT 5		75		13	

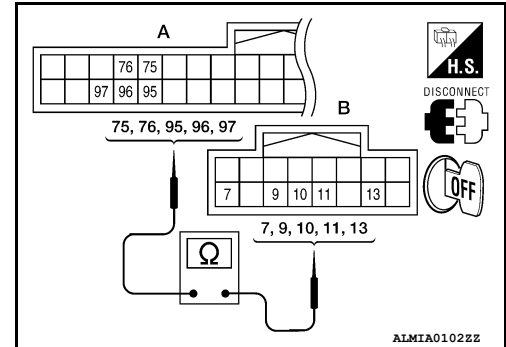


Does continuity exist?

- YES >> GO TO 2
 NO >> Repair or replace harness.

2. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

System	BCM		Ground	Continuity
	Connector	Terminal		
INPUT 1	M19	95	Ground	No
INPUT 2		97		
INPUT 3		76		
INPUT 4		96		
INPUT 5		75		

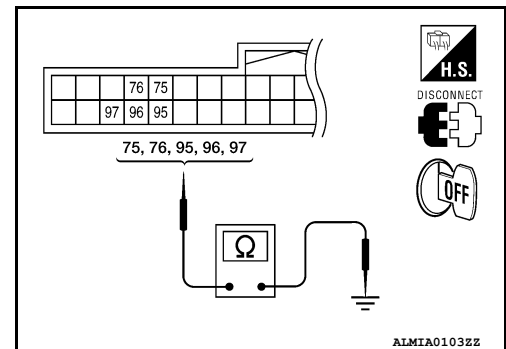


Does continuity exist?

- YES >> Repair or replace harness.
 NO >> GO TO 3

3. CHECK BCM OUTPUT VOLTAGE

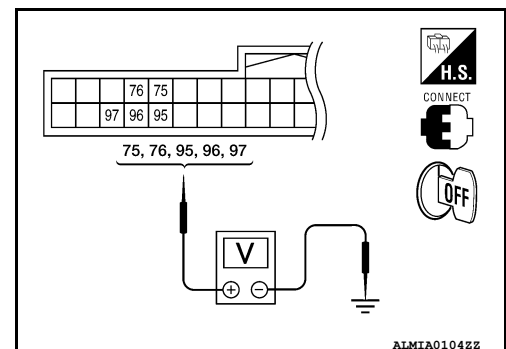1. Connect the BCM.
2. Check voltage between BCM harness connector and ground.



COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

System	Terminals		Voltage (Approx.)
	(+)	(-)	
	BCM		
	Connector	Terminal	
INPUT 1	M19	95	Ground
INPUT 2		97	
INPUT 3		76	
INPUT 4		96	
INPUT 5		75	

Refer to [BCS-47](#), "Physical Values".

Is the measurement normal?

YES >> GO TO 4


NO >> Replace BCM. Refer to [BCS-80](#), "Removal and Installation".

4. CHECK BCM INPUT SIGNAL

1. Connect the combination switch.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between BCM harness connector and ground.

System	Terminals		Voltage (Approx.)
	(+)	(-)	
	BCM		
	Connector	Terminal	
INPUT 1	M19	95	Ground
INPUT 2		97	
INPUT 3		76	
INPUT 4		96	
INPUT 5		75	

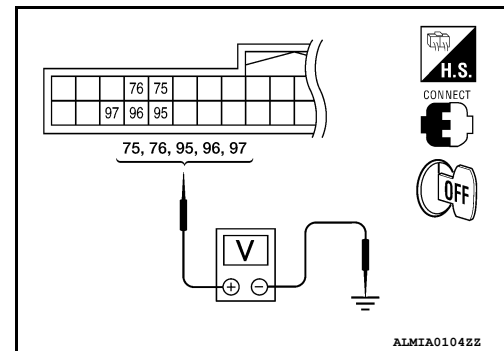Refer to [BCS-47](#), "Physical Values".



Is the measurement normal when any of the switches is turned ON?

YES >> Replace BCM. Refer to [BCS-80](#), "Removal and Installation".

NO >> Replace the combination switch. Refer to [WW-84](#), "Removal and Installation".

Special Repair Requirement

INFOID:000000006234239

1. REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to [BCS-6](#), "CONFIGURATION (BCM) : Special Repair Requirement".

>> Work end.

BCS

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

COMBINATION SWITCH OUTPUT CIRCUIT

Diagnosis Procedure


INFOID:00000006234240

Regarding Wiring Diagram information, refer to [BCS-68. "Wiring Diagram"](#).

1. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch.
3. Check continuity between BCM harness connector and combination switch harness connector.

System	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
OUTPUT 1	M18 (A)	51	M28 (B)	12	Yes
OUTPUT 2		52		14	
OUTPUT 3		53		5	
OUTPUT 4		54		2	
OUTPUT 5		50		8	

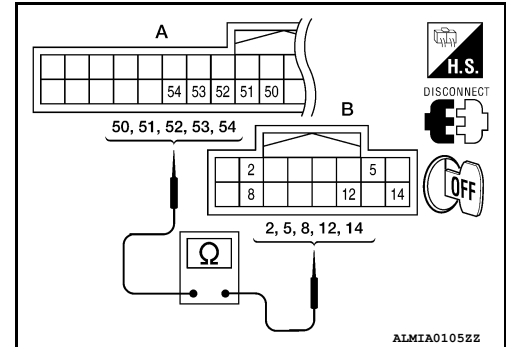


Does continuity exist?

- YES >> GO TO 2
 NO >> Repair or replace harness.

2. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

System	BCM		Continuity
	Connector	Terminal	
OUTPUT 1	M18	51	No
OUTPUT 2		52	
OUTPUT 3		53	
OUTPUT 4		54	
OUTPUT 5		50	

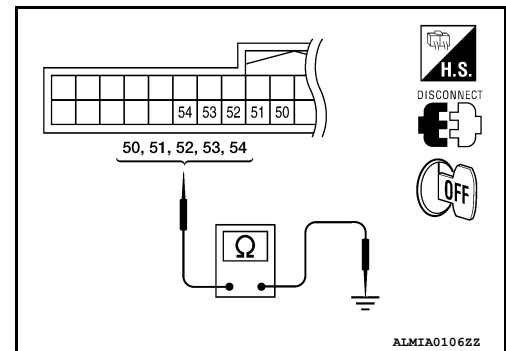


Does continuity exist?

- YES >> Repair or replace harness.
 NO >> GO TO 3

3. CHECK COMBINATION SWITCH OUTPUT VOLTAGE

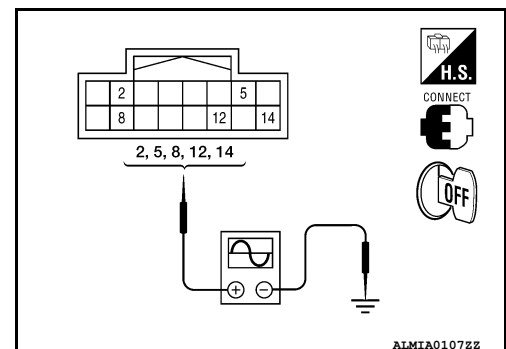
1. Connect the BCM and combination switch.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between combination switch harness connector and ground.



COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

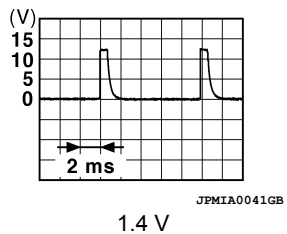[BCM]

System	Terminals		Value (Approx.)
	(+)	(-)	
	Combination switch	Ground	
Connector	Terminal		
OUTPUT 1	M28	12	
OUTPUT 2		14	
OUTPUT 3		5	
OUTPUT 4		2	
OUTPUT 5		8	

Is the measurement normal when any of the switches is turned ON?

YES >> Replace BCM. Refer to [BCS-80. "Removal and Installation"](#).

NO >> Replace the combination switch. Refer to [WW-84. "Removal and Installation"](#).

Special Repair Requirement

INFOID:000000006234241

1. REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to [BCS-6. "CONFIGURATION \(BCM\) : Special Repair Requirement"](#).

>> Work end.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000006234242

NOTE:

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Check Intelligent Key relative signal strength
- Confirm vehicle Intelligent Key antenna signal strength

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	OFF
	Front wiper switch HI	ON
FR WIPER LOW	Other than front wiper switch LO	OFF
	Front wiper switch LO	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER INT	Other than front wiper switch INT	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Front wiper is not in STOP position	OFF
	Front wiper is in STOP position	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	OFF
	Turn signal switch RH	ON
TURN SIGNAL L	Other than turn signal switch LH	OFF
	Turn signal switch LH	ON
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	OFF
	Lighting switch 1ST or 2ND	ON
HI BEAM SW	Other than lighting switch HI	OFF
	Lighting switch HI	ON
HEAD LAMP SW 1	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
HEAD LAMP SW 2	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
AUTO LIGHT SW	Other than lighting switch AUTO	OFF
	Lighting switch AUTO	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
DOOR SW-DR	Driver door closed	OFF
	Driver door opened	ON

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Monitor Item	Condition	Value/Status	
DOOR SW-AS	Passenger door closed	OFF	A
	Passenger door opened	ON	
DOOR SW-RR	Rear door RH closed	OFF	B
	Rear door RH opened	ON	
DOOR SW-RL	Rear door LH closed	OFF	C
	Rear door LH opened	ON	
CDL LOCK SW	Other than power door lock switch LOCK	OFF	D
	Power door lock switch LOCK	ON	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	OFF	E
	Power door lock switch UNLOCK	ON	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	OFF	F
	Driver door key cylinder LOCK position	ON	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	OFF	G
	Driver door key cylinder UNLOCK position	ON	
HAZARD SW	When hazard switch is not pressed	OFF	H
	When hazard switch is pressed	ON	
REAR DEF SW	When rear window defogger switch is pressed	ON	I
TR CANCEL SW	Trunk lid opener cancel switch OFF	OFF	J
	Trunk lid opener cancel switch ON	ON	
TR/BD OPEN SW	Trunk lid opener switch OFF	OFF	K
	While the trunk lid opener switch is turned ON	ON	
TRNK/HAT MNTR	Trunk lid closed	OFF	L
	Trunk lid opened	ON	
RKE-LOCK	When LOCK button of Intelligent Key is not pressed	OFF	
	When LOCK button of Intelligent Key is pressed	ON	
RKE-UNLOCK	When UNLOCK button of Intelligent Key is not pressed	OFF	
	When UNLOCK button of Intelligent Key is pressed	ON	
RKE-TR/BD	When TRUNK OPEN button of Intelligent Key is not pressed	OFF	
	When TRUNK OPEN button of Intelligent Key is pressed	ON	
RKE-PANIC	When PANIC button of Intelligent Key is not pressed	OFF	
	When PANIC button of Intelligent Key is pressed	ON	
RKE-P/W OPEN	When UNLOCK button of Intelligent Key is not pressed and held	OFF	
	When UNLOCK button of Intelligent Key is pressed and held	ON	
RKE-MODE CHG	When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	OFF	
	When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	ON	
OPTICAL SENSOR	When outside of the vehicle is bright	Close to 5 V	
	When outside of the vehicle is dark	Close to 0 V	
REQ SW -DR	When front door request switch is not pressed (driver side)	OFF	
	When front door request switch is pressed (driver side)	ON	
REQ SW -AS	When front door request switch is not pressed (passenger side)	OFF	
	When front door request switch is pressed (passenger side)	ON	
REQ SW -RL	When rear door request switch is not pressed (driver side)	OFF	
	When rear door request switch is pressed (driver side)	ON	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Monitor Item	Condition	Value/Status
REQ SW -RR	When rear door request switch is not pressed (passenger side)	OFF
	When rear door request switch is pressed (passenger side)	ON
REQ SW -BD/TR	When trunk request switch is not pressed	OFF
	When trunk request switch is pressed	ON
PUSH SW	When engine switch (push switch) is not pressed	OFF
	When engine switch (push switch) is pressed	ON
IGN RLY 2 -F/B	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
ACC RLY -F/B	Ignition switch OFF	OFF
	Ignition switch ACC or ON	ON
BRAKE SW 1	When the brake pedal is not depressed	ON
	When the brake pedal is depressed	OFF
DETE/CANCL SW	When selector lever is in P position	OFF
	When selector lever is in any position other than P	ON
SFT PN/N SW	When selector lever is in any position other than P or N	OFF
	When selector lever is in P or N position	ON
UNLK SEN -DR	Driver door UNLOCK status	OFF
	Driver door LOCK status	ON
PUSH SW -IPDM	When engine switch (push switch) is not pressed	OFF
	When engine switch (push switch) is pressed	ON
IGN RLY1 -F/B	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
DETE SW -IPDM	When selector lever is in P position	OFF
	When selector lever is in any position other than P	ON
SFT PN -IPDM	When selector lever is in any position other than P or N	OFF
	When selector lever is in P or N position	ON
SFT P -MET	When selector lever is in any position other than P	OFF
	When selector lever is in P position	ON
SFT N -MET	When selector lever is in any position other than N	OFF
	When selector lever is in N position	ON
ENGINE STATE	Engine stopped	STOP
	While the engine stalls	STALL
	At engine cranking	CRANK
	Engine running	RUN
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door LOCK status	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door UNLOCK status	UNLK
DOOR STAT-AS	Passenger door LOCK status	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door UNLOCK status	UNLK
ID OK FLAG	Ignition switch ACC or ON	RESET
	Ignition switch OFF	SET

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Monitor Item	Condition	Value/Status	
PRMT ENG STRT	When the engine start is prohibited	RESET	A
	When the engine start is permitted	SET	
KEY SW -SLOT	When Intelligent Key is not inserted into key slot	OFF	B
	When Intelligent Key is inserted into key slot	ON	
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key	
CONFIRM ID ALL	The key ID that the key slot receives does not accord with any key ID registered to BCM.	YET	C
	The key ID that the key slot receives accords with any key ID registered to BCM.	DONE	D
CONFIRM ID4	The key ID that the key slot receives does not accord with the fourth key ID registered to BCM.	YET	E
	The key ID that the key slot receives accords with the fourth key ID registered to BCM.	DONE	
CONFIRM ID3	The key ID that the key slot receives does not accord with the third key ID registered to BCM.	YET	F
	The key ID that the key slot receives accords with the third key ID registered to BCM.	DONE	
CONFIRM ID2	The key ID that the key slot receives does not accord with the second key ID registered to BCM.	YET	G
	The key ID that the key slot receives accords with the second key ID registered to BCM.	DONE	H
CONFIRM ID1	The key ID that the key slot receives does not accord with the first key ID registered to BCM.	YET	I
	The key ID that the key slot receives accords with the first key ID registered to BCM.	DONE	
TP 4	The ID of fourth key is not registered to BCM	YET	J
	The ID of fourth key is registered to BCM	DONE	
TP 3	The ID of third key is not registered to BCM	YET	K
	The ID of third key is registered to BCM	DONE	
TP 2	The ID of second key is not registered to BCM	YET	L
	The ID of second key is registered to BCM	DONE	
TP 1	The ID of first key is not registered to BCM	YET	
	The ID of first key is registered to BCM	DONE	
AIR PRESS FL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front LH tire	BCS
AIR PRESS FR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front RH tire	
AIR PRESS RR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear RH tire	N
AIR PRESS RL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear LH tire	O
ID REGST FL1	When ID of front LH tire transmitter is registered	DONE	P
	When ID of front LH tire transmitter is not registered	YET	
ID REGST FR1	When ID of front RH tire transmitter is registered	DONE	
	When ID of front RH tire transmitter is not registered	YET	
ID REGST RR1	When ID of rear RH tire transmitter is registered	DONE	
	When ID of rear RH tire transmitter is not registered	YET	
ID REGST RL1	When ID of rear LH tire transmitter is registered	DONE	
	When ID of rear LH tire transmitter is not registered	YET	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Monitor Item	Condition	Value/Status
WARNING LAMP	Tire pressure indicator OFF	OFF
	Tire pressure indicator ON	ON
BUZZER	Tire pressure warning alarm is not sounding	OFF
	Tire pressure warning alarm is sounding	ON

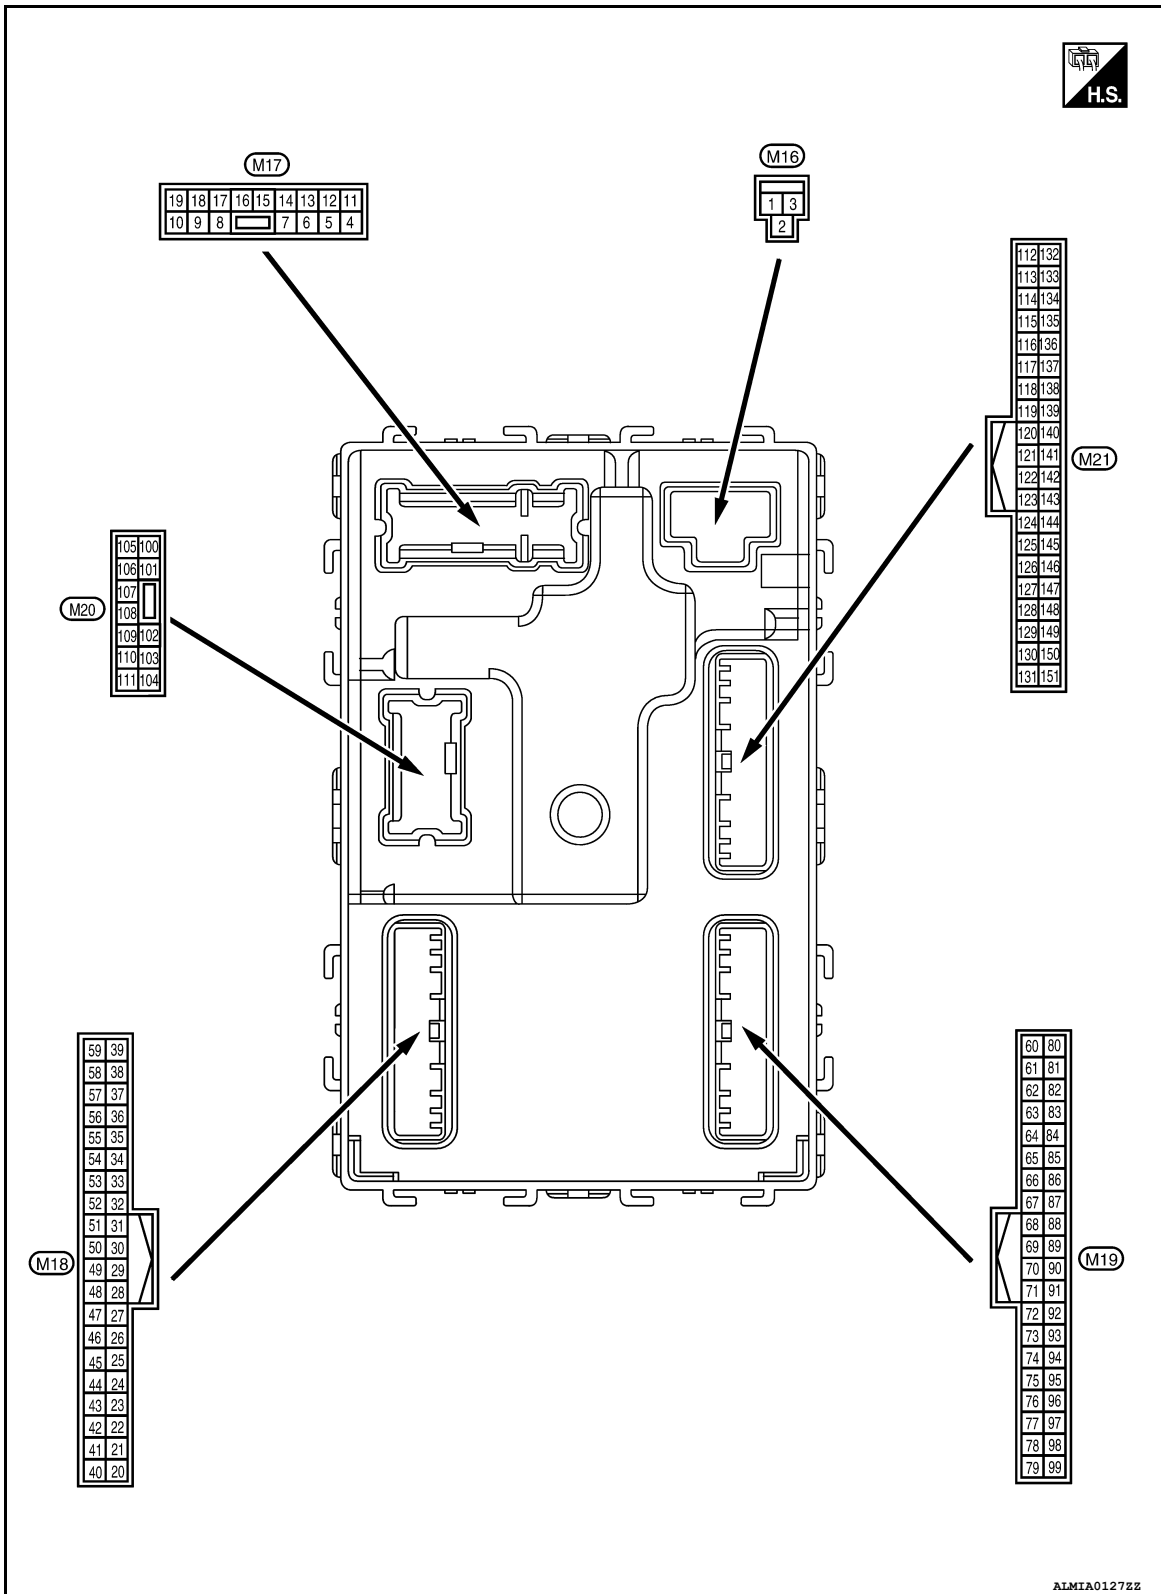
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Terminal Layout

INFOID:000000006234243



A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

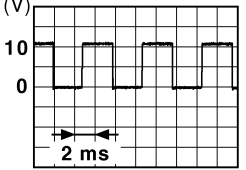
Physical Values

INFOID:000000006234244

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




[BCM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
(+)	(-)					
1 (W/B)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (R/Y)	Ground	Battery power supply output	Output	Ignition switch OFF		Battery voltage
3 (L/W)	Ground	Ignition power supply output	Output	Ignition switch ON		Battery voltage
4 (P/W)	Ground	Interior room lamp power supply	Output	After passing the interior room lamp battery saver operation time		0V
				Any other time after passing the interior room lamp battery saver operation time		Battery voltage
5 (G)	Ground	Front door RH UNLOCK	Output	Front door RH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
7 (R/W)	Ground	Step lamp	Output	Step lamp	ON	0V
					OFF	Battery voltage
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (actuator is activated)	Battery voltage
					Other than LOCK (actuator is not activated)	0V
9 (L)	Ground	Front door LH UNLOCK	Output	Front door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
10 (G)	Ground	Rear door RH and rear door LH UNLOCK	Output	Rear door RH and rear door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
11 (Y/R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0V
14 (GR/W)	Ground	Engine switch (push switch) illumination ground	Input	Tail lamp	OFF	0V
					ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (Y/L)	Ground	ACC indicator lamp	Output	Ignition switch	OFF	Battery voltage
					ACC or ON	0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

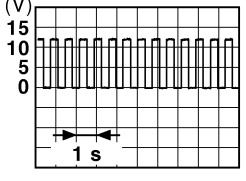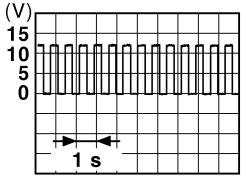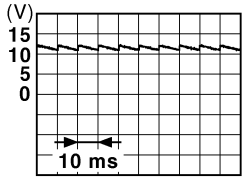[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
17 (G/B)	Ground	Turn signal (RH)	Output	Ignition switch ON	Turn signal switch OFF 0V
				Turn signal switch RH	 <p style="text-align: center;">6.5 V</p>
18 (G/Y)	Ground	Turn signal (LH)	Output	Ignition switch ON	Turn signal switch OFF 0V
				Turn signal switch LH	 <p style="text-align: center;">6.5 V</p>
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp	OFF Battery voltage
				ON	0V
21 (P/B)	Ground	Optical sensor signal	Input	Ignition switch ON	When outside of the vehicle is bright Close to 5V
				When outside of the vehicle is dark Close to 0V	
24 (R/W)	Ground	Stop lamp switch 1	Input	—	Battery voltage
26 (O/L)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (brake pedal is released) 0V
				ON (brake pedal is depressed) Battery voltage	
27 (O)	Ground	Front door lock assembly LH (unlock sensor)	Input	Front door LH	LOCK status  <p style="text-align: center;">11.8V</p>
				UNLOCK status 0V	
29 (Y)	Ground	Key slot switch	Input	When Intelligent Key is inserted into key slot Battery voltage	
				When Intelligent Key is not inserted into key slot 0V	
31 (G)	Ground	Rear window defogger feedback signal	Input	Rear window defogger switch	OFF 0V
				ON Battery voltage	

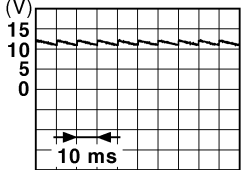
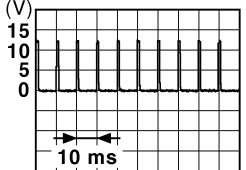

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >






[BCM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
32 (R/B)	Ground	Front door RH switch	Input	Front door RH switch	OFF (when front door RH closes)	 11.8 V
					ON (when front door RH opens)	0V
37 (O)	Ground	Trunk lid opener cancel switch	Input	Trunk lid opener cancel switch	CANCEL	 1.1V
					ON	0V
38 (GR/W)	Ground	Rear window defogger ON signal	Input	Rear window defogger switch	OFF	5V
					ON	0V
40 (Y/G)	Ground	Power window serial link	Input/ Output	Ignition switch ON	Ignition switch ON	 10.2V
					Ignition switch OFF or ACC	0V
41 (W)	Ground	Engine switch (push switch) illumination	Output	Engine switch (push switch) illumination	ON	5.5V
					OFF	0V
42 (R)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	ON	0V
					OFF	Battery voltage
45 (P)	Ground	Receiver & sensor ground	Input	Ignition switch ON		0V
46 (V/W)	Ground	Receiver & sensor power supply output	Output	Ignition switch	OFF	0V
					ACC or ON	5.0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

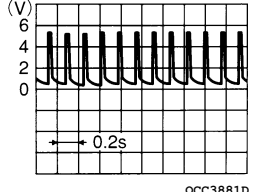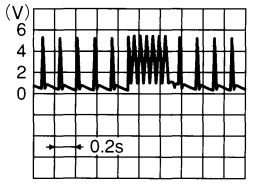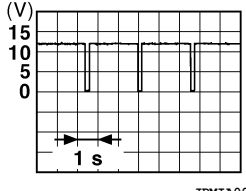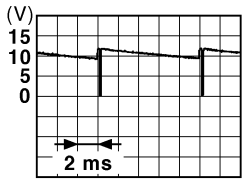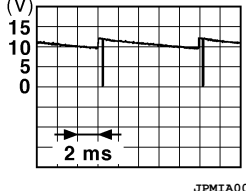[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
47 ¹ (G/O)	Ground	Tire pressure receiver signal	Input/ Output	Ignition switch ON	Standby state  OCC3881D
				When receiving the signal from the transmitter	 OCC3880D
48 (R/G)	Ground	Selector lever transmission range switch signal	Input	Selector lever	P or N position 12.0V
				Except P and N positions	0V
49 (L/O)	Ground	Security indicator signal	Output	Security indicator	ON 0V
				Blinking	 JPM1A0014GB 11.3V
50 (LG/B)	Ground	Combination switch INPUT 5	Output	Combination switch (Wiper intermittent dial 4)	All switch OFF 0V
				Lighting switch 1ST	 JPM1A0031GB 10.7V
				Lighting switch high-beam	
				Lighting switch 2ND	
Turn signal switch RH	Battery voltage				
51 (L/W)	Ground	Combination switch INPUT 1	Output	Combination switch	All switch OFF (Wiper intermittent dial 4) 0V
				Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7	 JPM1A0032GB 10.7V

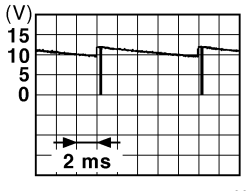
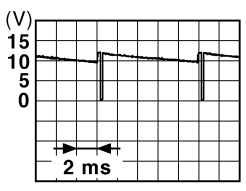
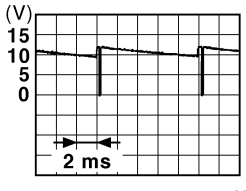
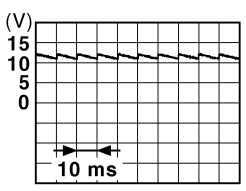
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
52 (G/B)	Ground	Combination switch INPUT 2	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)
				Combination switch	Front washer switch ON (Wiper intermittent dial 4)
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6
					 <p style="text-align: right; font-size: small;">JPM1A0033GB</p>
					10.7V
53 (LG/R)	Ground	Combination switch INPUT 3	Output	Combination switch (Wiper intermittent dial 4)	All switch OFF
				Combination switch (Wiper intermittent dial 4)	Front wiper switch INT
					Lighting switch AUTO
					 <p style="text-align: right; font-size: small;">JPM1A0034GB</p>
					10.7V
54 (G/Y)	Ground	Combination switch INPUT 4	Output	Combination switch (Wiper intermittent dial 4)	All switch OFF
				Combination switch (Wiper intermittent dial 4)	Front fog lamp switch ON
					Lighting switch 2ND
					Lighting switch flash-to-pass
					Turn signal switch LH
					 <p style="text-align: right; font-size: small;">JPM1A0035GB</p>
					10.7V
57 ¹ (W)	Ground	Tire pressure warning check switch	Input	—	5V
58 (SB)	Ground	Front door LH switch	Input	Front door LH switch	OFF (front door LH CLOSE)
				Front door LH switch	ON (front door LH OPEN)
					 <p style="text-align: right; font-size: small;">JPM1A0011GB</p>
					11.8V
59 (G/R)	Ground	Rear window defogger relay	Output	Rear window defogger	Active
				Rear window defogger	Not activated
					Battery voltage
					0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

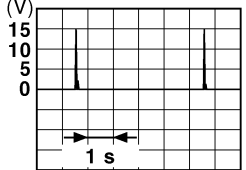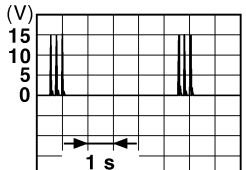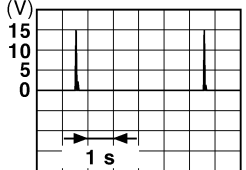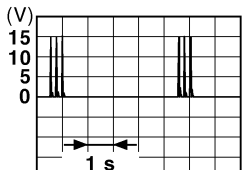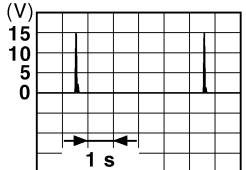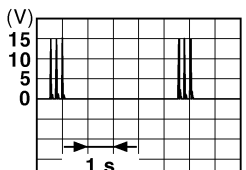[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
60 (B/R)	Ground	Front console antenna 2 (-)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
61 (W/R)	Ground	Center console antenna 2 (+)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
62 (V)	Ground	Front outside handle RH antenna (-)	Output	When the front door RH request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

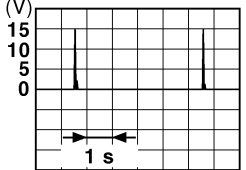
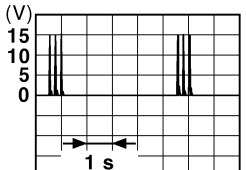
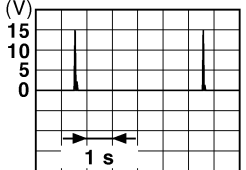
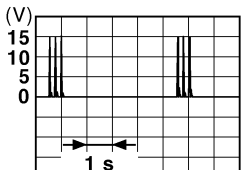
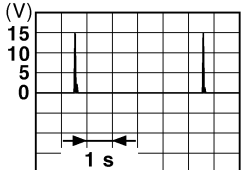
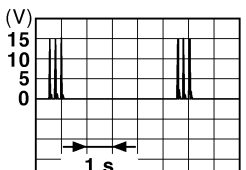
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >






[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
63 (P)	Ground	Front outside handle RH antenna (+)	Output	When the front door RH request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area  <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
64 (V)	Ground	Front outside handle LH antenna (-)	Output	When the front door LH request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area  <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
65 (P)	Ground	Front outside handle LH antenna (+)	Output	When the front door LH request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area  <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

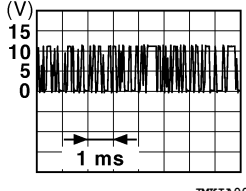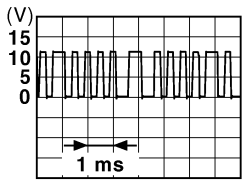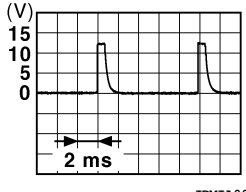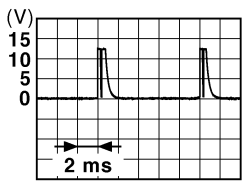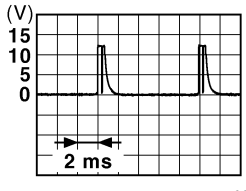[BCM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
(+)	(-)					
68 (G/O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
69 (O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
70 (R/B)	Ground	Ignition relay-2 con- trol	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
71 (L/O)	Ground	Remote keyless entry receiver signal	Input/ Output	During waiting		 <p style="text-align: right; font-size: small;">JMK1A0064GB</p>
				When operating either button on Intelligent Key		 <p style="text-align: right; font-size: small;">JMK1A0065GB</p>
75 (R/Y)	Ground	Combination switch OUTPUT 5	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPM1A0041GB</p> <p style="text-align: center;">1.4V</p>
					Front fog lamp switch ON (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPM1A0037GB</p> <p style="text-align: center;">1.3V</p>
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7	 <p style="text-align: right; font-size: small;">JPM1A0040GB</p> <p style="text-align: center;">1.3V</p>

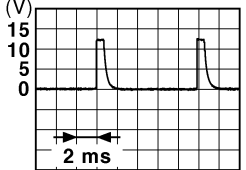
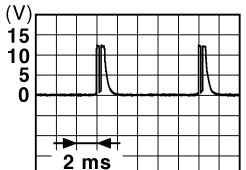

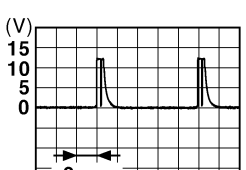
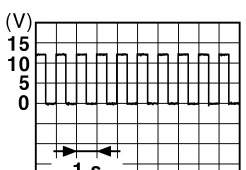
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
76 (R/G)	Ground	Combination switch OUTPUT 3	Input	Combination switch	All switch OFF (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0041GB</p> <p style="margin: 0;">1.4V</p> </div>
					Lighting switch high-beam (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0036GB</p> <p style="margin: 0;">1.3V</p> </div>
					Lighting switch 2ND (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0037GB</p> <p style="margin: 0;">1.3V</p> </div>
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0040GB</p> <p style="margin: 0;">1.3V</p> </div>
78 (P)	Ground	CAN-L	Input/ Output	—	—
79 (L)	Ground	CAN-H	Input/ Output	—	—
80 (R/L)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF <div style="text-align: right;"> <p style="margin: 0;">0V</p> </div>
					Blinking <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0015GB</p> <p style="margin: 0;">6.5V</p> </div>
81 (LG)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC <div style="text-align: right;"> <p style="margin: 0;">0V</p> </div>
					ON <div style="text-align: right;"> <p style="margin: 0;">Battery voltage</p> </div>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

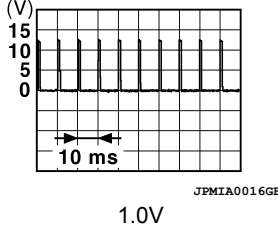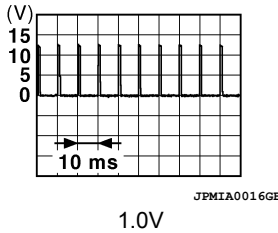[BCM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
(+)	(-)					
83 (L)	Ground	ACC relay control	Output	Ignition switch	OFF	0V
					ACC or ON	Battery voltage
84 (Y/R)	Ground	CVT shift selector	Output	—		Battery voltage
87 (G/B)	Ground	Selector lever P position switch	Input	Selector lever	P position	0V
					Any position other than P	Battery voltage
88 (R)	Ground	Front door RH request switch	Input	Front door RH request switch	ON (pressed)	0V
					OFF (not pressed)	
89 (R)	Ground	Front door LH request switch	Input	Front door LH request switch	ON (pressed)	0V
					OFF (not pressed)	
90 (Y)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
91 (L/R)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		Battery voltage

A
B
C
D
E
F
G
H
I
J
K
L

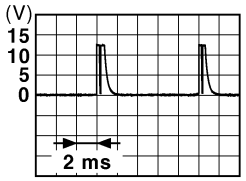
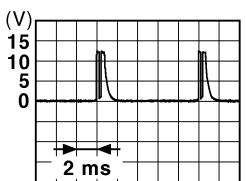
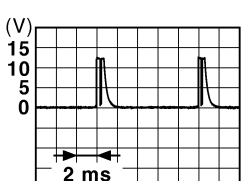
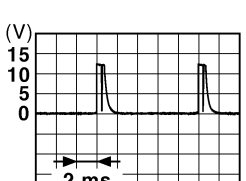
BCS

N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
95 (R/W)	Ground	Combination switch OUTPUT 1	Input		
				Turn signal switch LH	 <p style="text-align: center;">1.3V</p>
				Turn signal switch RH	 <p style="text-align: center;">1.3V</p>
				Front wiper switch LO	 <p style="text-align: center;">1.3V</p>
				Front washer switch ON	 <p style="text-align: center;">1.3V</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

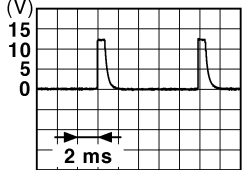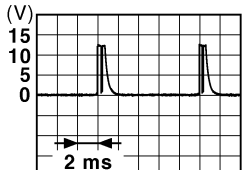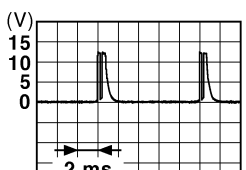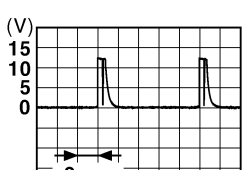[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
96 (P/B)	Ground	Combination switch OUTPUT 4	Input	Combination switch	All switch OFF (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMA0041GB</p> <p style="margin: 0;">1.4V</p> </div>
				Combination switch	Lighting switch AUTO (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMA0038GB</p> <p style="margin: 0;">1.3V</p> </div>
				Combination switch	Lighting switch 1ST (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMA0036GB</p> <p style="margin: 0;">1.3V</p> </div>
				Combination switch	Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMA0039GB</p> <p style="margin: 0;">1.3V</p> </div>

A
B
C
D
E
F
G
H
I
J
K
L

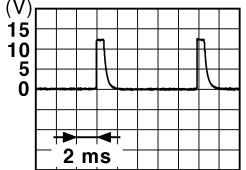

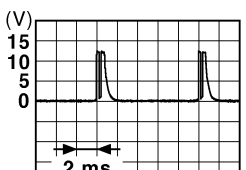
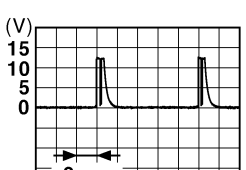
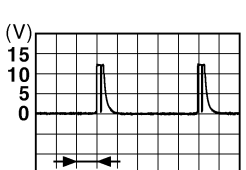
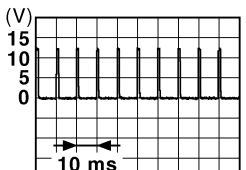
BCS

N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
(+)	(-)	Signal name	Input/ Output			
97 (R/B)	Ground	Combination switch OUTPUT 2	Input	Combination switch (Wiper intermittent dial 4)	All switch OFF	 <small>JPMIA0041GB</small> 1.4V
					Lighting switch flash-to-pass	 <small>JPMIA0037GB</small> 1.3V
					Lighting switch 2ND	 <small>JPMIA0036GB</small> 1.3V
					Front wiper switch INT	 <small>JPMIA0038GB</small> 1.3V
					Front wiper switch HI	 <small>JPMIA0040GB</small> 1.3V
					Pressed	0 V
98 (G/O)	Ground	Hazard switch	Input	Hazard switch	Not pressed  <small>JPMIA0012GB</small> 1.1V	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
(+)	(-)					
103 (V)	Ground	Trunk lid opening.	Output	Trunk lid	Open (trunk lid opener actuator is activated)	Battery voltage
					Close (trunk lid opener actuator is not activated)	0V
110 (V/W)	Ground	Trunk room lamp	Output	Trunk room lamp	ON	0V
					OFF	Battery voltage
114 (B)	Ground	Trunk room antenna 1 (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	
					When Intelligent Key is not in the passenger compartment	
115 (W)	Ground	Trunk room antenna 1 (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	
					When Intelligent Key is not in the passenger compartment	

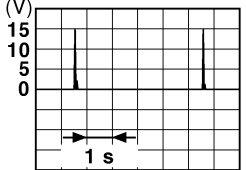
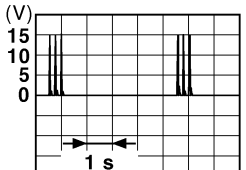
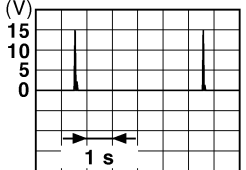
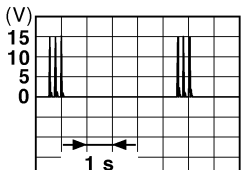
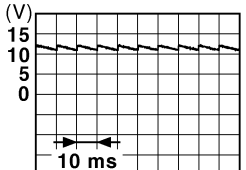
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
118 (L/O)	Ground	Rear bumper antenna (-)	Output	When the trunk lid request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area
				When Intelligent Key is not in the antenna detection area	When Intelligent Key is not in the antenna detection area
					 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
					 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
119 (BR/W)	Ground	Rear bumper antenna (+)	Output	When the trunk lid request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area
				When Intelligent Key is not in the antenna detection area	When Intelligent Key is not in the antenna detection area
					 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
					 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
127 (BR/W)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC
					ON
130 (W)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (trunk is closed)
					ON (trunk is open)
					 <p style="text-align: right; font-size: small;">JPMIA0011GB</p> <p style="text-align: center;">11.8V</p>
132 (R)	Ground	Starter motor relay control	Output	Ignition switch ON	When selector lever is in P or N position and the brake is depressed
					When selector lever is in P or N position and the brake is not depressed
					Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
(+)	(-)					
140 (BR)	Ground	Engine switch (push switch)	Input	Engine switch (push switch)	Pressed Not pressed	0V Battery voltage
				141 (BR)	Ground	Trunk request switch
144 (GR)	Ground	Request switch buzzer	Output			
147 (L/R)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed Not pressed	0V Battery voltage
				148 (R/W)	Ground	Rear door RH switch
149 (R/B)	Ground	Rear door LH switch	Input			

1 : With low tire pressure monitoring system

Fail Safe

INFOID:000000006234246

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Erase DTC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Display contents of CONSULT	Fail-safe	Cancellation
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal
B2562: LO VOLTAGE	Inhibit engine cranking	100 ms after the power supply voltage increases to more than 8.8 V
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN)
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B26E1: ENG STATE NO RECIV	Inhibit engine cranking	When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)

DTC Inspection Priority Chart

INFOID:000000006234247

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> • B2562: LO VOLTAGE
2	<ul style="list-style-type: none"> • U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
3	<ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM
4	<ul style="list-style-type: none"> • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SWITCH • B2605: PNP SWITCH • B2608: STARTER RELAY • B260A: IGNITION RELAY • B260F: ENG STATE SIG LOST • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B261A: PUSH-BTN IGN SW • B26E1: ENG STATE NO RECIV • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Priority	DTC
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1712: [CHECKSUM ERR] FL • C1713: [CHECKSUM ERR] FR • C1714: [CHECKSUM ERR] RR • C1715: [CHECKSUM ERR] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1720: [CODE ERR] FL • C1721: [CODE ERR] FR • C1722: [CODE ERR] RR • C1723: [CODE ERR] RL • C1724: [BATT VOLT LOW] FL • C1725: [BATT VOLT LOW] FR • C1726: [BATT VOLT LOW] RR • C1727: [BATT VOLT LOW] RL • C1734: CONTROL UNIT
6	<ul style="list-style-type: none"> • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

DTC Index

INFOID:000000006234248

NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	BCS-32
U1010: CONTROL UNIT (CAN)	—	—	—	BCS-33
U0415: VEHICLE SPEED SIG	—	—	—	BCS-34
B2190: NATS ANTENNA AMP	×	—	—	SEC-37
B2191: DIFFERENCE OF KEY	×	—	—	SEC-40
B2192: ID DISCORD BCM-ECM	×	—	—	SEC-41
B2193: CHAIN OF BCM-ECM	×	—	—	SEC-42
B2553: IGNITION RELAY	—	—	—	PCS-46
B2555: STOP LAMP	—	—	—	SEC-43
B2556: PUSH-BTN IGN SW	—	×	—	SEC-46
B2557: VEHICLE SPEED	×	×	—	SEC-48
B2560: STARTER CONT RELAY	×	×	—	SEC-49

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2562: LOW VOLTAGE	—	—	—	BCS-35
B2601: SHIFT POSITION	×	×	—	SEC-50
B2602: SHIFT POSITION	×	×	—	SEC-53
B2603: SHIFT POSI STATUS	×	×	—	SEC-56
B2604: PNP SWITCH	×	×	—	SEC-59
B2605: PNP SWITCH	×	×	—	SEC-61
B2608: STARTER RELAY	×	×	—	SEC-63
B260A: IGNITION RELAY	×	×	—	PCS-48
B260F: ENG STATE SIG LOST	×	×	—	SEC-65
B2614: ACC RELAY CIRC	—	×	—	PCS-50
B2615: BLOWER RELAY CIRC	—	×	—	PCS-53
B2616: IGN RELAY CIRC	—	×	—	PCS-56
B2617: STARTER RELAY CIRC	×	×	—	SEC-67
B2618: BCM	×	×	—	PCS-59
B261A: PUSH-BTN IGN SW	—	×	—	PCS-60
B2622: INSIDE ANTENNA	—	—	—	DLK-56
B2623: INSIDE ANTENNA	—	—	—	DLK-59
B26E1: ENG STATE NO RES	×	×	—	SEC-66
C1704: LOW PRESSURE FL	—	—	×	WT-43
C1705: LOW PRESSURE FR	—	—	×	WT-43
C1706: LOW PRESSURE RR	—	—	×	WT-43
C1707: LOW PRESSURE RL	—	—	×	WT-43
C1708: [NO DATA] FL	—	—	×	WT-13
C1709: [NO DATA] FR	—	—	×	WT-13
C1710: [NO DATA] RR	—	—	×	WT-13
C1711: [NO DATA] RL	—	—	×	WT-13
C1712: [CHECKSUM ERR] FL	—	—	×	WT-15
C1713: [CHECKSUM ERR] FR	—	—	×	WT-15
C1714: [CHECKSUM ERR] RR	—	—	×	WT-15
C1715: [CHECKSUM ERR] RL	—	—	×	WT-15
C1716: [PRESSDATA ERR] FL	—	—	×	WT-17
C1717: [PRESSDATA ERR] FR	—	—	×	WT-17
C1718: [PRESSDATA ERR] RR	—	—	×	WT-17
C1719: [PRESSDATA ERR] RL	—	—	×	WT-17
C1720: [CODE ERR] FL	—	—	×	WT-15
C1721: [CODE ERR] FR	—	—	×	WT-15
C1722: [CODE ERR] RR	—	—	×	WT-15
C1723: [CODE ERR] RL	—	—	×	WT-15
C1724: [BATT VOLT LOW] FL	—	—	×	WT-15
C1725: [BATT VOLT LOW] FR	—	—	×	WT-15
C1726: [BATT VOLT LOW] RR	—	—	×	WT-15
C1727: [BATT VOLT LOW] RL	—	—	×	WT-15

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
C1729: VHCL SPEED SIG ERR	—	—	×	WT-19
C1734: CONTROL UNIT	—	—	×	WT-20

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

BCM (BODY CONTROL MODULE)

[BCM]

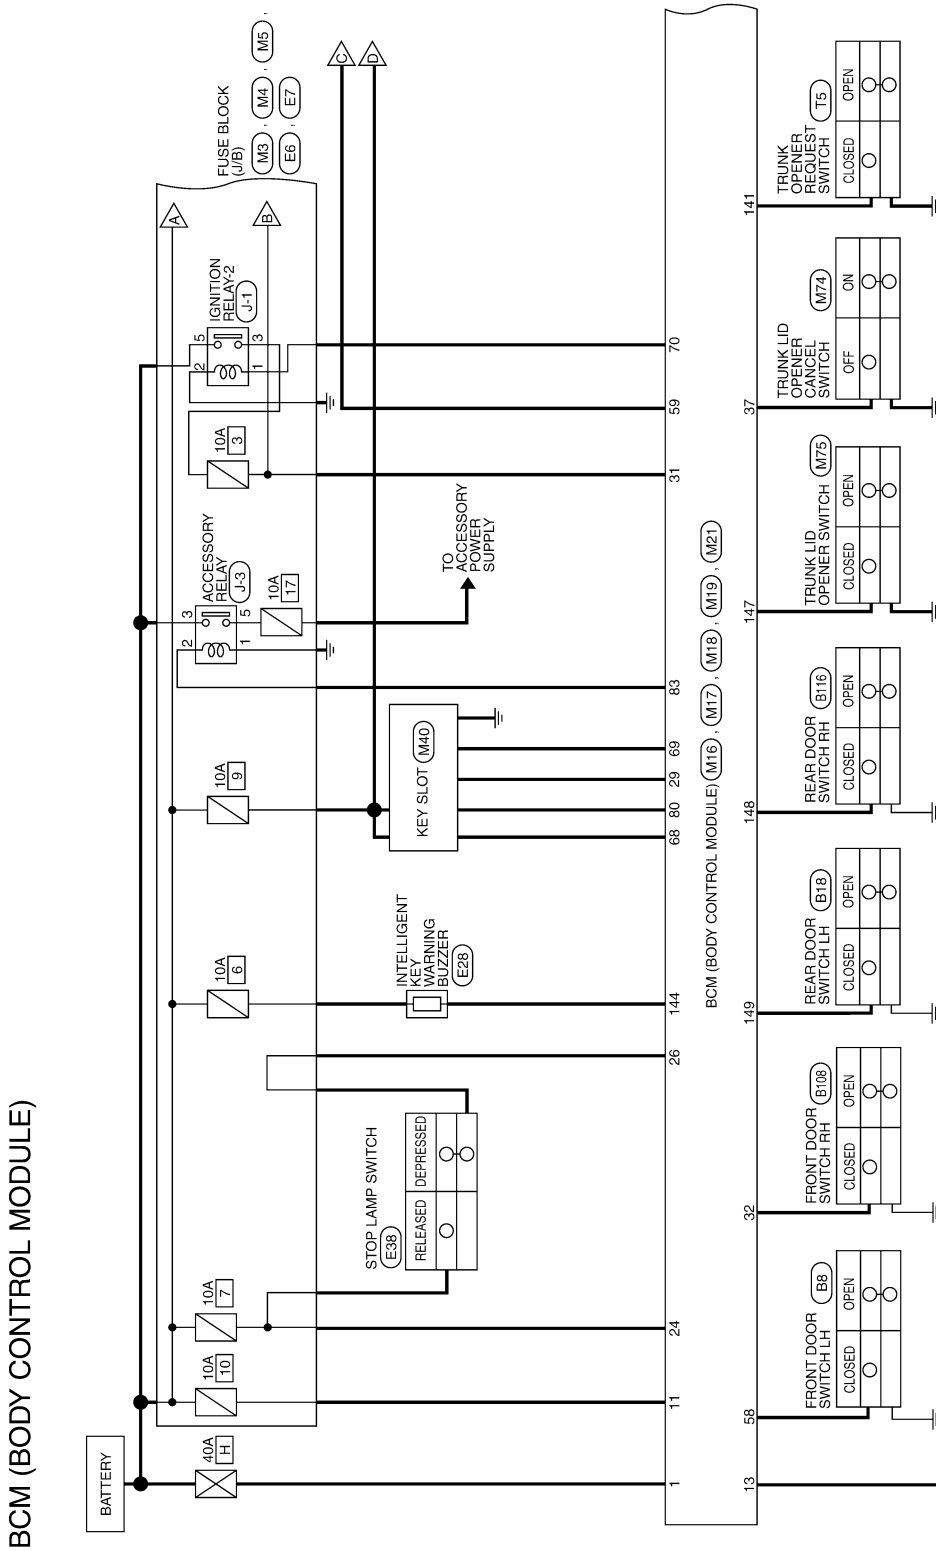
< WIRING DIAGRAM >

WIRING DIAGRAM

BCM (BODY CONTROL MODULE)

Wiring Diagram

INFOID:000000006234245




ABMWA1029GB

BCM (BODY CONTROL MODULE)

[BCM]

< WIRING DIAGRAM >

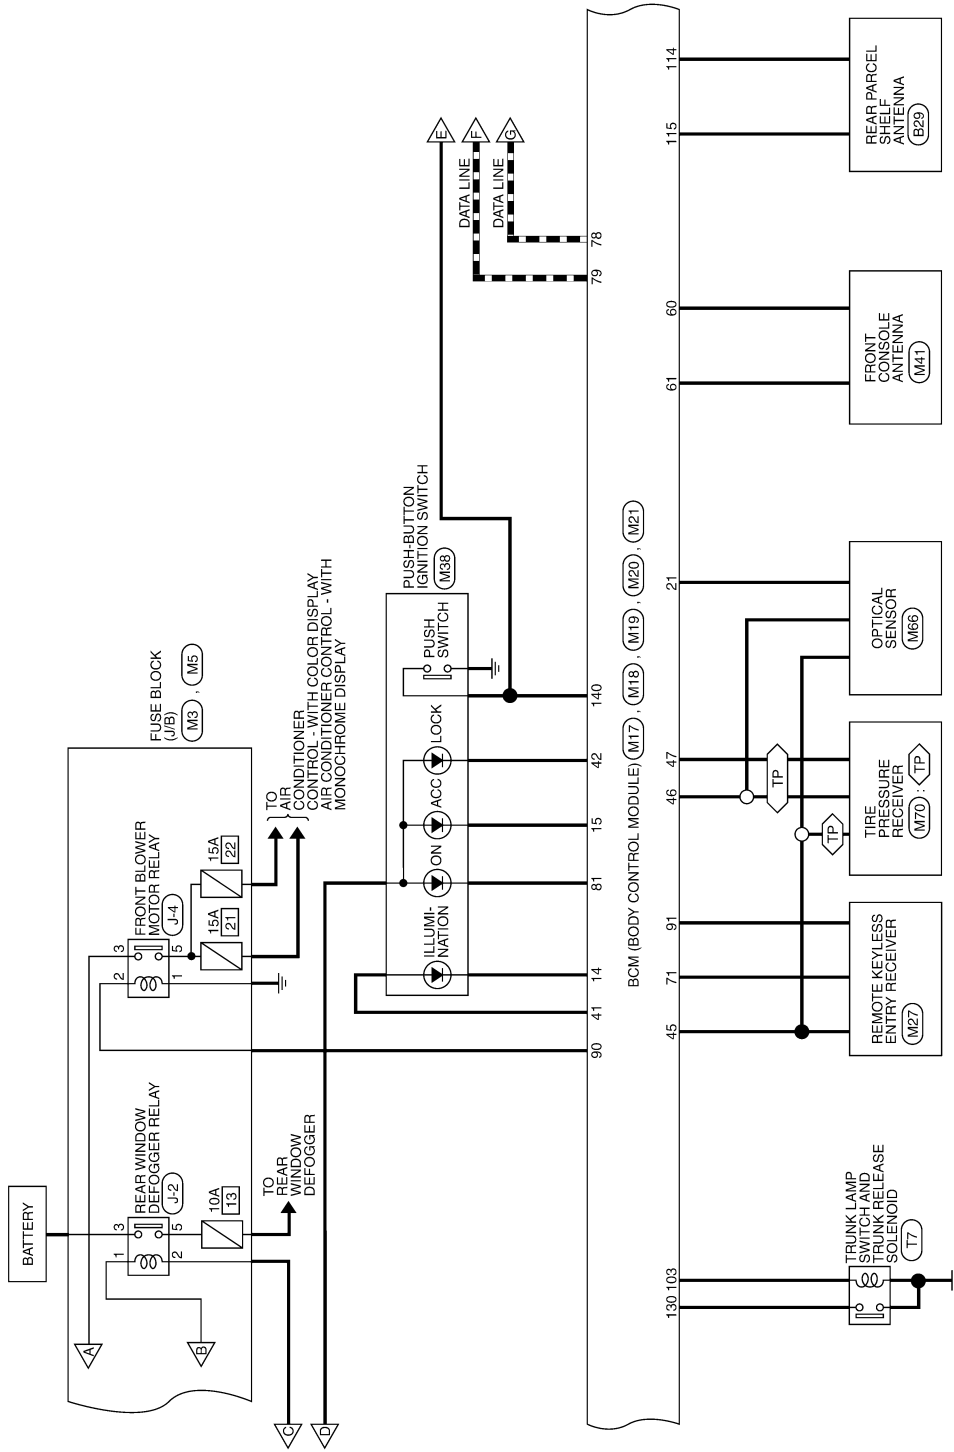TP: WITH LOW TIRE PRESSURE MONITORING SYSTEM



A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

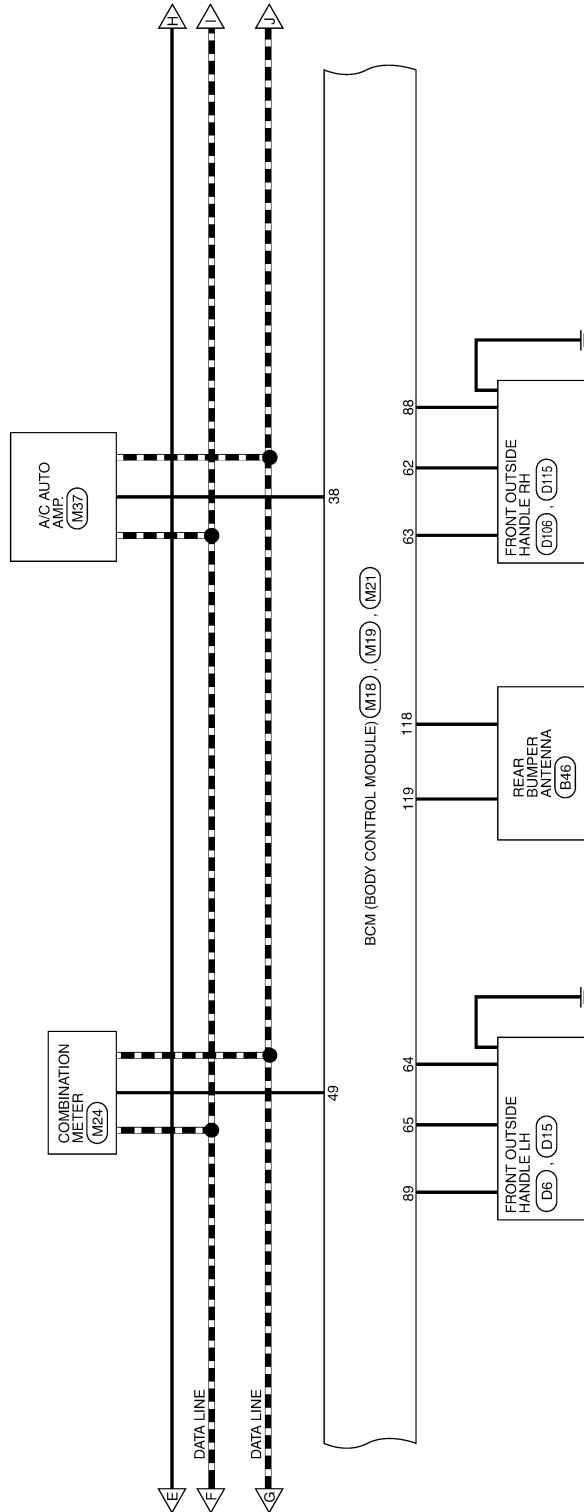
BCS

ABMWA1030GB

BCM (BODY CONTROL MODULE)

< WIRING DIAGRAM >

[BCM]




ABMWA1037GB

BCM (BODY CONTROL MODULE)

< WIRING DIAGRAM >

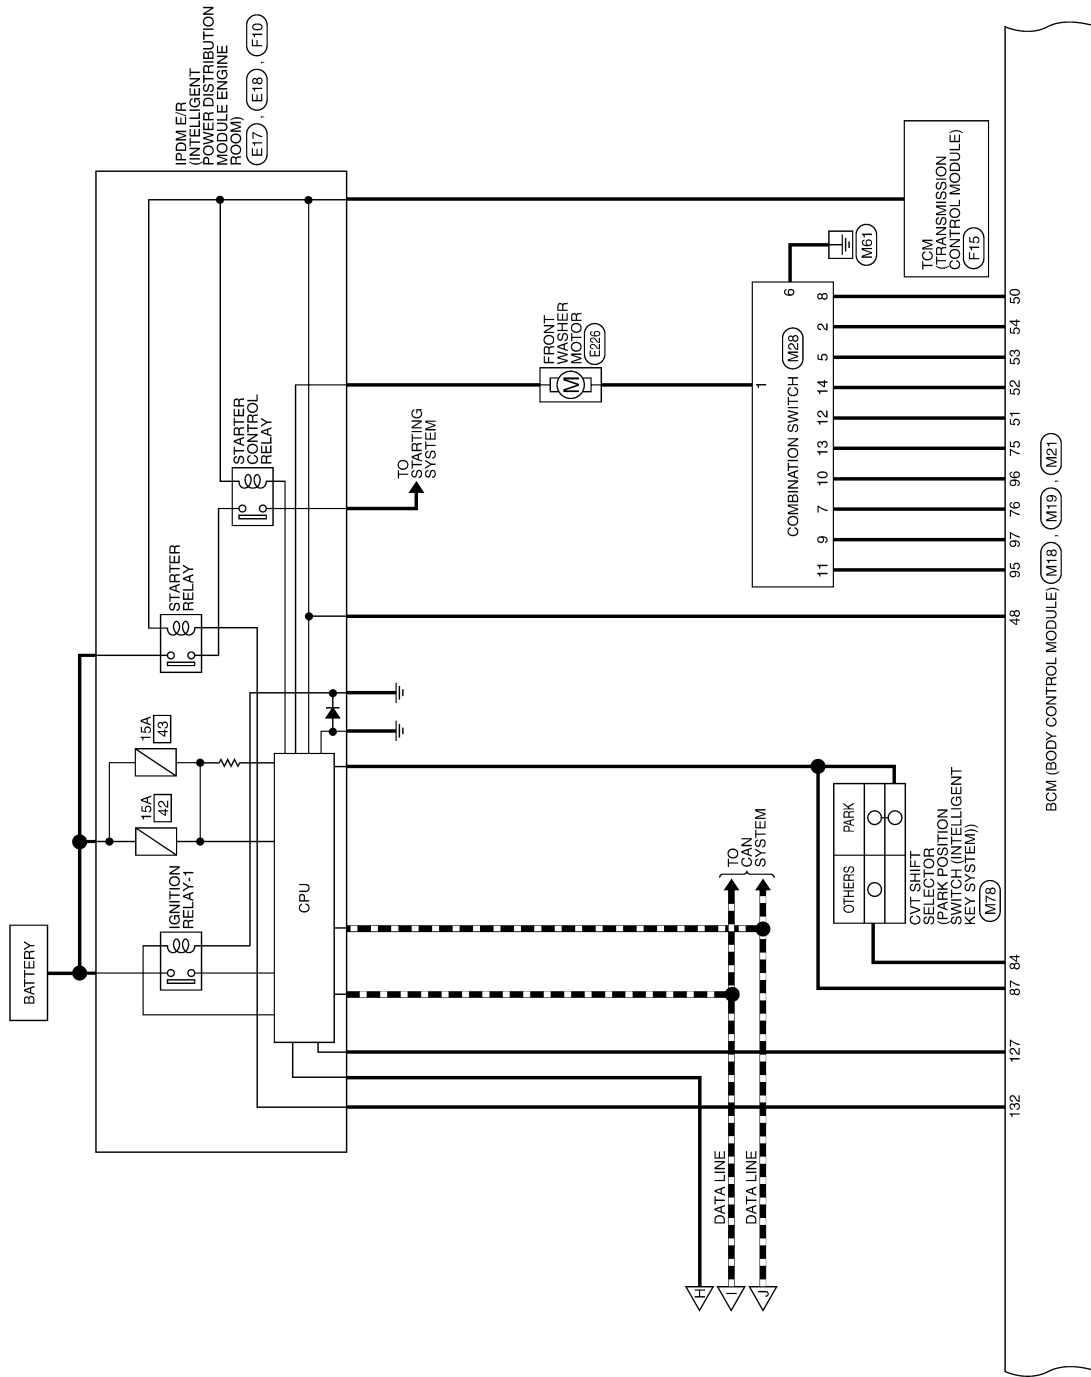[BCM]



ABMWA1031GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

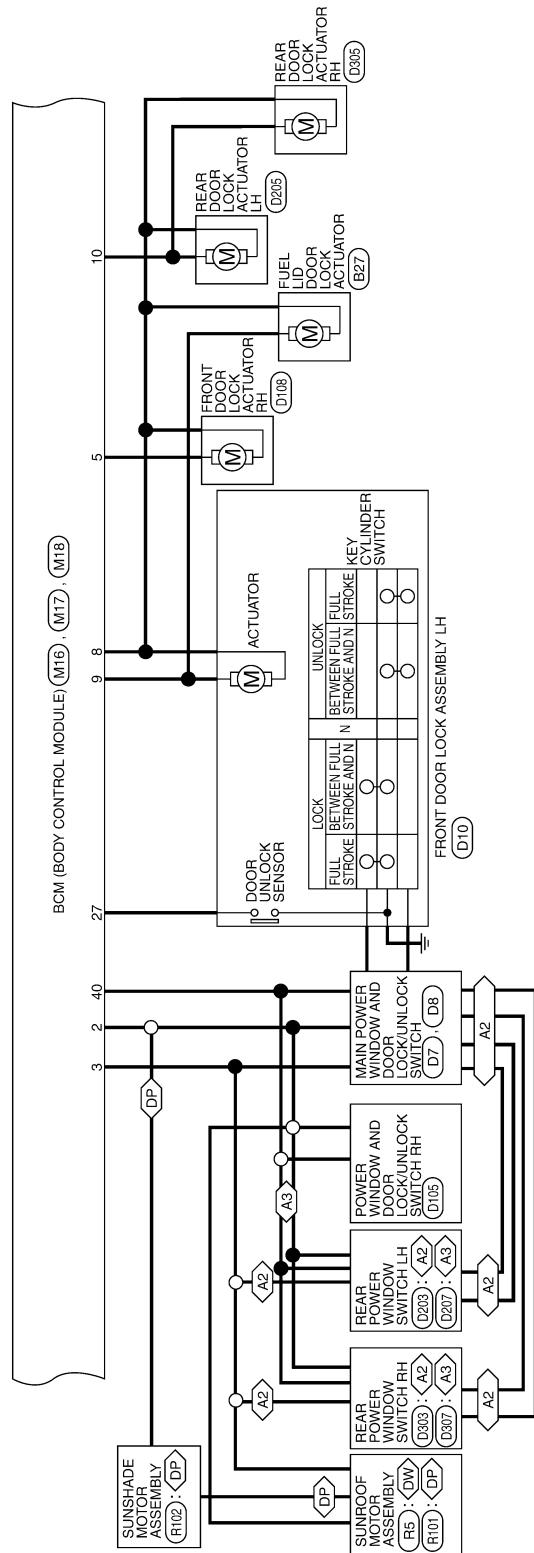
BCS

BCM (BODY CONTROL MODULE)

[BCM]

< WIRING DIAGRAM >

- <A2> : WITH LEFT AND RIGHT FRONT POWER WINDOW ANTI-PINCH SYSTEM
- <A3> : WITH FRONT AND REAR POWER WINDOW ANTI-PINCH SYSTEM
- <DP> : WITH DUAL PANEL SUNROOF
- <DW> : WITHOUT DUAL PANEL SUNROOF




ABMWA1032GB

BCM (BODY CONTROL MODULE)

< WIRING DIAGRAM >

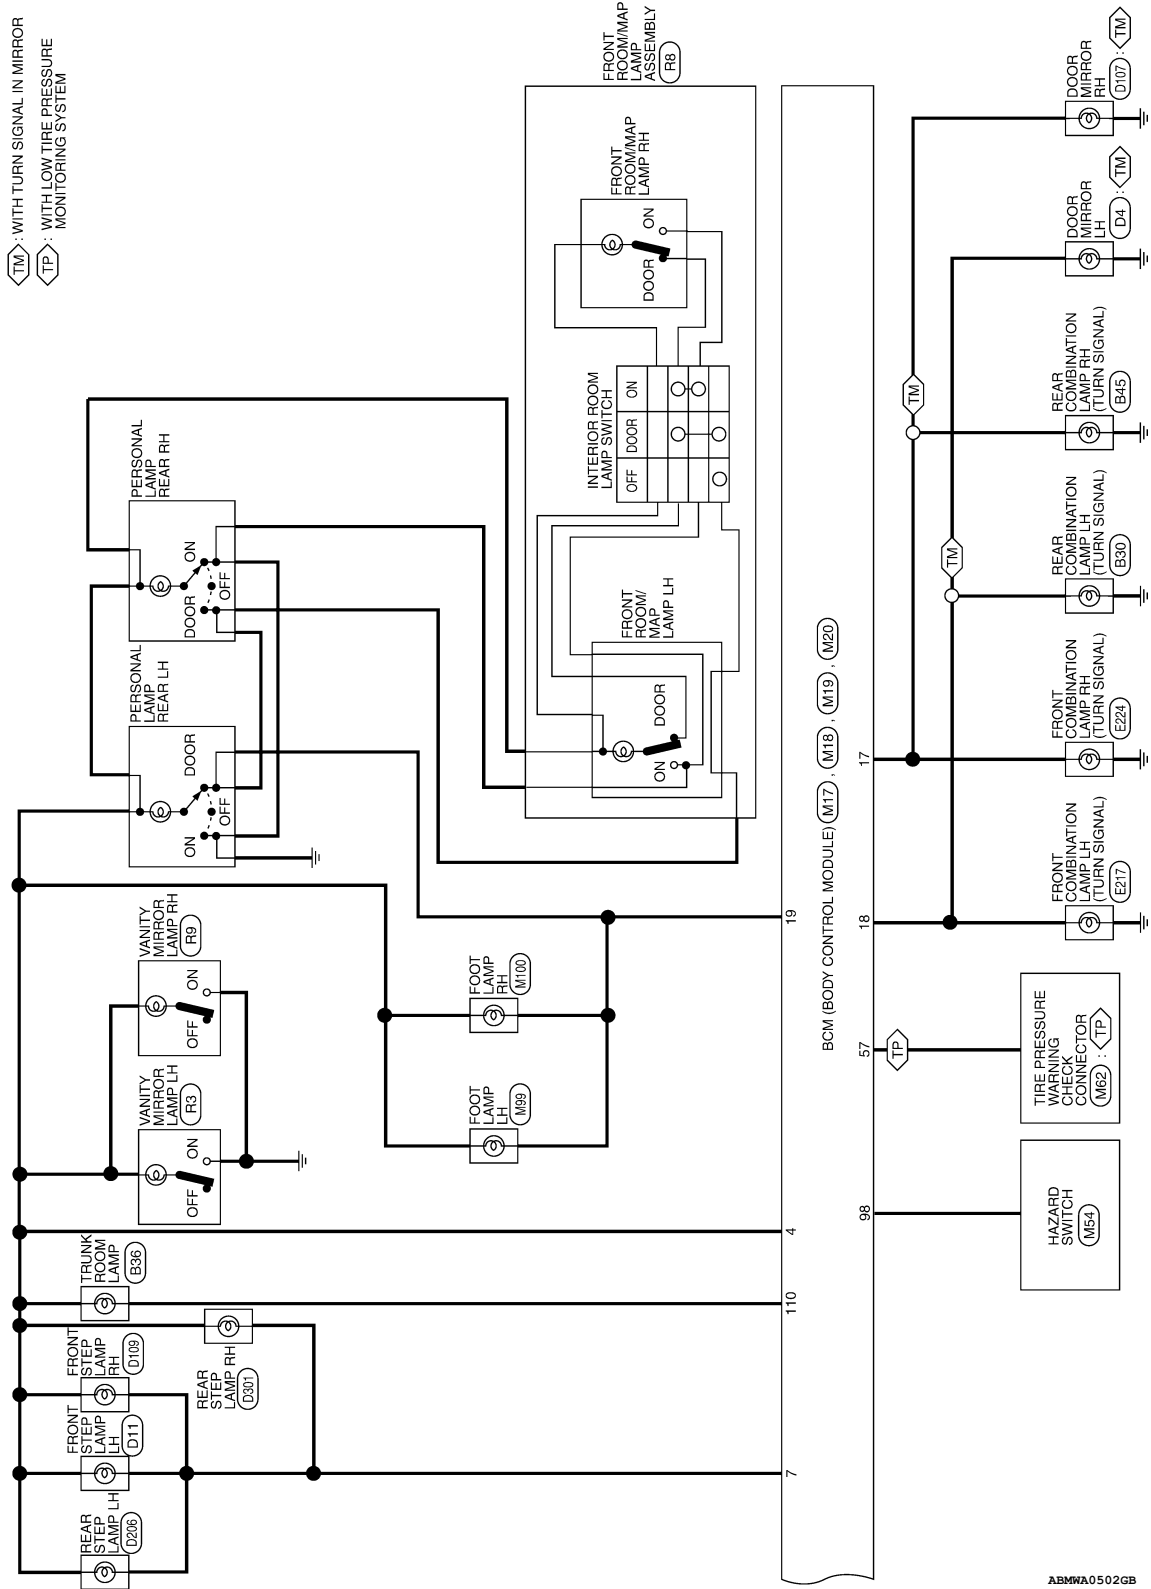[BCM]



A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< WIRING DIAGRAM >

[BCM]


BCM (BODY CONTROL MODULE) CONNECTORS

Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/B	BATT (F/L)
2	R/Y	P/W POWER SUPPLY PERM
3	L/W	P/W POWER SUPPLY IGN


Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	P/W	R/L POWER SUPPLY
5	G	DOOR UNLOCK OUTPUT AS
6	-	-
7	R/W	STEP LAMP CONT
8	V	DOOR LOCK OUTPUT ALL
9	L	DOOR UNLOCK OUTPUT (DR/FL)

Terminal No.	Color of Wire	Signal Name
10	G	DOOR UNLOCK OUTPUT (RR/RL)
11	Y/R	BAT BCM FUSE
12	-	-
13	B	GND1
14	GR/W	LOW SIDE PUSH LED
15	Y/L	ACC LED
16	-	-
17	G/B	FR FLASHER
18	G/Y	FL FLASHER
19	Y	ROOM LAMP CONT

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
20	-	-
21	P/B	A/L SIGNAL TYPE 1
22	-	-
23	-	-
24	R/W	BRAKE SW1
25	-	-
26	O/L	BRAKE SW2

Terminal No.	Color of Wire	Signal Name
27	O	DOOR LOCK STATUS DR
28	-	-
29	Y	FOB IN SW 1
30	-	-
31	G	IGN F/B
32	R/B	AS DOOR SW 1
33	-	-
34	-	-
35	-	-
36	-	-
37	O	TRUNK CANCEL SW
38	GR/W	REAR DEFOGGER SW
39	-	-
40	Y/G	PW K-LINE
41	W	RING LED
42	R	S/L LOCK LED
43	-	-
44	-	-

Terminal No.	Color of Wire	Signal Name
45	P	GND RF2 A/L
46	V/W	A/L POWER SUPPLY 5V
47	G/O	RF2 TUNER SIGNAL
48	R/G	SHIFT N/P/ NEUTRAL SW
49	L/O	IMMO LED (SECURITY INDICATOR)
50	LG/B	INPUT 5
51	L/W	INPUT 1
52	G/B	INPUT 2
53	LG/R	INPUT 3
54	G/Y	INPUT 4
55	-	-
56	-	-
57	W	TPMS MODE
58	SB	DR DOOR SW
59	G/R	REAR DEFOGGER

ABMIA24396B

BCM (BODY CONTROL MODULE)

< WIRING DIAGRAM >

[BCM]

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60
89	88	87	86	85	84	83	82	81	80	79	78	77	76	75	74	73	72	71	70

Terminal No.	Color of Wire	Signal Name
60	B/R	ROOM ANT 2 B
61	W/R	ROOM ANT 2 A
62	V	AS DOOR ANT B
63	P	AS DOOR ANT A
64	V	DR DOOR ANT B
65	P	DR DOOR ANT A
66	-	-

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



100	101	102	103	104		
105	106	107	108	109	110	111

Terminal No.	Color of Wire	Signal Name
100	-	-
101	-	-
102	-	-
103	V	CDL BACK TRUNK

Terminal No.	Color of Wire	Signal Name
67	-	-
68	G/O	FOB READER CLOCK
69	O	FOB READER DATA
70	R/B	IGN REL OUTPUT 2
71	L/O	RF1 TUNER SIGNAL
72	-	-
73	-	-
74	-	-
75	R/Y	OUTPUT 5
76	R/G	OUTPUT 3
77	-	-
78	P	CAN-L
79	L	CAN-H
80	R/L	FOB SLOT ILLUMINATION
81	LG	IGN ON LED
82	-	-
83	L	ACC CONT

Terminal No.	Color of Wire	Signal Name
84	Y/R	AT DEVICE OUT
85	-	-
86	-	-
87	G/B	SHIFT P/ASCD CANCEL SW
88	R	AS REQUEST SW
89	R	DR REQUEST SW
90	Y	BLOWER FAN RELAY
91	L/R	RF POWER SUPPLY 12V
92	-	-
93	-	-
94	-	-
95	R/W	OUTPUT 1
96	P/B	OUTPUT 4
97	R/B	OUTPUT 2
98	G/O	HAZARD SW
99	-	-

Terminal No.	Color of Wire	Signal Name
104	-	-
105	-	-
106	-	-
107	-	-
108	-	-
109	-	-
110	V/W	TRUNK LAMP CONT
111	-	-

ABMIA2440GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


BCS

BCM (BODY CONTROL MODULE)

< WIRING DIAGRAM >


[BCM]

Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
112	-	-
113	-	-
114	B	TRUNK ANT 1 B
115	W	TRUNK ANT 1 A
116	-	-
117	-	-
118	L/O	BACK DOOR ANT B

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	G/Y	OUTPUT 4
5	LG/R	OUTPUT 3
6	B	-
7	R/G	INPUT 3
8	LG/B	OUTPUT 5
9	R/B	INPUT 2

Terminal No.	Color of Wire	Signal Name
119	BR/W	BACK DOOR ANT A
120	-	-
121	-	-
122	-	-
123	-	-
124	-	-
125	-	-
126	-	-
127	BR/W	IGN RELAY OUTPUT
128	-	-
129	-	-
130	W	TRUNK SW
131	-	-
132	R	ST RELAY OUTPUT
133	-	-
134	-	-
135	-	-

Terminal No.	Color of Wire	Signal Name
10	P/B	INPUT 4
11	R/W	INPUT 1
12	L/W	OUTPUT 1
13	R/Y	INPUT 5
14	G/B	OUTPUT 2

Terminal No.	Color of Wire	Signal Name
136	-	-
137	-	-
138	-	-
139	-	-
140	BR	ENG START SW W/O ESCL
141	BR	TRUNK REQUEST SW
142	-	-
143	-	-
144	GR	BUZZER
145	-	-
146	-	-
147	L/R	BACK TRUNK OPENER
148	R/W	RR DOOR SW
149	R/B	RL DOOR SW
150	-	-
151	-	-

ABMIA21026B

COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[BCM]

SYMPTOM DIAGNOSIS

COMBINATION SWITCH SYSTEM SYMPTOMS

Symptom Table

INFOID:000000006234249

1. Perform the data monitor of CONSULT-III to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction item: x

Malfunction combination	Data monitor item													
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	INT VOLUME	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW	AUTO LIGHT SW	FR FOG SW
A		x	x			x	x							
B	x			x						x		x		
C					x				x		x			
D					x			x					x	
E					x									x
F	x				x									
G			x		x									
H		x		x									x	
I							x				x	x		x
J						x		x	x	x				
K	All Items													
L	If only one item is detected or the item is not applicable to the combinations A to K													

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to BCS-38, "Diagnosis Procedure" .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to BCS-40, "Diagnosis Procedure" .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to BCS-80, "Removal and Installation" .
L	Combination switch	Replace the combination switch. Refer to WW-84, "Removal and Installation" .

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006234250

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

PREPARATION

< PREPARATION >

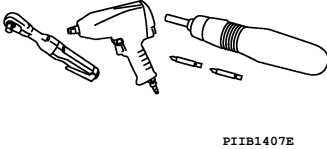
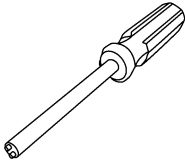
[BCM]

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000006234252

Tool name	Description
Power tool  FTIB1407E	Loosening bolts, screws and nuts
One-way screw removal tool  ALMIA0486ZZ	Removing one-way screws

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

REMOVAL AND INSTALLATION

BCM (BODY CONTROL MODULE)

Removal and Installation

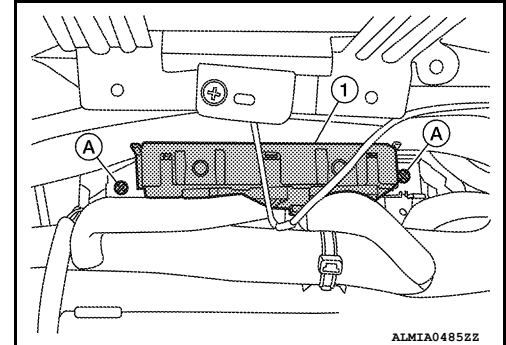
INFOID:000000006234253

REMOVAL

CAUTION:

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-5, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

1. Remove the combination meter. Refer to [MWI-119, "Removal and Installation"](#).
2. Remove the BCM screws (A) using a suitable tool, and pull out the BCM (1).
3. Disconnect the BCM connector and remove the BCM (1).



INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- When replacing BCM, perform "WRITE CONFIGURATION". Refer to [BCS-5, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).
- When replacing BCM, perform the system initialization (NATS). Refer to the CONSULT-III operation manual for the initialization procedure.
- When replacing BCM, if new BCM does not come with keyfobs attached, all existing keyfobs must be re-registered. Refer to the CONSULT-III operation manual for the initialization procedure.