

# BRAKE SYSTEM

## SECTION **BR**

### CONTENTS

<b>PRECAUTIONS</b> .....	4	<b>OPERATING CHECK</b> .....	20
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	4	<b>AIRTIGHT CHECK</b> .....	20
Precautions for Brake System .....	4	Removal .....	20
Wiring Diagrams and Trouble Diagnosis .....	5	Inspection .....	20
<b>PREPARATION</b> .....	6	<b>OUTPUT ROD LENGTH CHECK</b> .....	20
Commercial Service Tools .....	6	Installation .....	20
<b>NOISE, VIBRATION AND HARSHNESS (NVH)</b>		<b>VACUUM HOSE</b> .....	22
<b>TROUBLESHOOTING</b> .....	7	Removal and Installation .....	22
NVH Troubleshooting Chart .....	7	Inspection .....	22
<b>ON-VEHICLE SERVICE</b> .....	8	<b>HOSES AND CONNECTORS</b> .....	22
Checking Brake Fluid Level .....	8	<b>CHECK VALVE</b> .....	22
Checking Brake Line .....	8	<b>FRONT DISC BRAKE</b> .....	23
Changing Brake Fluid .....	8	Component .....	23
Brake Burnishing Procedure .....	8	Pad Replacement .....	23
Bleeding Brake System .....	9	Removal .....	24
<b>BRAKE HYDRAULIC LINE</b> .....	10	Disassembly .....	24
Hydraulic Circuit .....	10	Inspection .....	25
Removal .....	10	<b>CALIPER</b> .....	25
Inspection .....	11	<b>ROTOR</b> .....	25
Installation .....	11	Assembly .....	26
<b>BRAKE PEDAL AND BRACKET</b> .....	12	Installation .....	26
Removal and Installation .....	12	<b>REAR DISC BRAKE</b> .....	27
Inspection .....	12	Component .....	27
Adjustment .....	12	Pad Replacement .....	27
<b>MASTER CYLINDER (TOKICO)</b> .....	14	Removal .....	29
Removal .....	14	Disassembly .....	30
Disassembly .....	15	Inspection .....	31
Inspection .....	15	<b>CALIPER</b> .....	31
Assembly .....	15	<b>ROTOR</b> .....	31
Installation .....	16	Assembly .....	32
<b>MASTER CYLINDER [BOSCH (NABCO)]</b> .....	17	Installation .....	34
Removal .....	17	<b>PARKING BRAKE CONTROL (CENTER LEVER TYPE)</b> .....	35
Disassembly .....	18	Components .....	35
Inspection .....	18	Removal and Installation .....	35
Assembly .....	18	Inspection .....	35
Installation .....	19	Adjustment .....	36
<b>BRAKE BOOSTER</b> .....	20		
On-vehicle Service .....	20		

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# CONTENTS (Cont'd)

	<b>ABS</b>
<b>DESCRIPTION</b> .....	37
Purpose.....	37
ABS (Anti-Lock Brake System) Operation .....	37
ABS Hydraulic Circuit .....	37
System Components .....	38
System Description.....	38
SENSOR .....	38
CONTROL UNIT .....	38
ABS ACTUATOR AND ELECTRIC UNIT .....	39
Component Parts and Harness Connector	
Location .....	40
Schematic (For M/T models) .....	41
Wiring Diagram - ABS - (For M/T models) .....	42
Schematic (For A/T models).....	45
Wiring Diagram - ABS - (For A/T models).....	46
<b>ON BOARD DIAGNOSTIC SYSTEM</b>	
<b>DESCRIPTION</b> .....	50
CONSULT-II .....	50
CONSULT-II APPLICATION TO ABS.....	50
ECU (ABS CONTROL UNIT) PART NUMBER	
MODE .....	50
CONSULT-II Inspection Procedure.....	50
SELF-DIAGNOSIS PROCEDURE .....	50
SELF-DIAGNOSTIC RESULTS MODE (FOR M/T	
MODELS).....	52
DATA MONITOR PROCEDURE .....	53
SELF-DIAGNOSTIC RESULTS MODE (FOR A/T	
MODELS).....	54
DATA MONITOR PROCEDURE .....	54
ACTIVE TEST PROCEDURE .....	55
DATA MONITOR MODE .....	56
ACTIVE TEST MODE .....	57
<b>TROUBLE DIAGNOSIS - INTRODUCTION</b> .....	58
How to Perform Trouble Diagnoses for Quick	
and Accurate Repair .....	58
INTRODUCTION.....	58
<b>TROUBLE DIAGNOSIS - BASIC INSPECTION</b> .....	59
Preliminary Check.....	59
Ground Circuit Check .....	62
ABS ACTUATOR AND ELECTRIC UNIT GROUND.....	62
<b>TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC</b>	
<b>ITEMS</b> .....	63
Wheel Sensor or Rotor.....	63
DIAGNOSTIC PROCEDURE.....	63
ABS Actuator Solenoid Valve or Solenoid Valve	
Relay .....	68
DIAGNOSTIC PROCEDURE.....	68
Motor Relay or Motor.....	72
DIAGNOSTIC PROCEDURE.....	72
Low Voltage .....	75
DIAGNOSTIC PROCEDURE.....	75
Control Unit.....	77
DIAGNOSTIC PROCEDURE.....	77

<b>TROUBLE DIAGNOSES FOR SYMPTOMS</b> .....	79
1. ABS Works Frequently .....	79
2. Unexpected Pedal Action .....	79
3. Long Stopping Distance .....	80
4. ABS Does Not Work.....	81
5. Pedal Vibration and Noise.....	82
6. ABS Warning Lamp Does Not Come On	
When Ignition Switch Is Turned On.....	83
7. ABS Warning Lamp Stays On When Ignition	
Switch Is Turned On.....	86

	<b>TCS</b>
<b>DESCRIPTION</b> .....	88
Purpose.....	88
ABS (Anti-Lock Brake System) Operation .....	88
ABS Hydraulic Circuit .....	88
TCS (Traction Control System) Operation .....	89
System Components .....	89
System Description.....	89
SENSOR .....	89
CONTROL UNIT .....	90
ACTUATOR.....	90
Component Parts and Harness Connector	
Location .....	91
Schematic .....	92
Wiring Diagram - TCS - .....	93
<b>ON BOARD DIAGNOSTIC SYSTEM</b>	
<b>DESCRIPTION</b> .....	97
CONSULT-II Functions .....	97
CONSULT-II MAIN FUNCTION.....	97
ECU (ABS/TCS CONTROL UNIT) PART NUMBER	
MODE .....	97
CONSULT-II Inspection Procedure.....	97
SELF-DIAGNOSIS PROCEDURE .....	97
SELF-DIAGNOSTIC RESULTS MODE.....	99
DATA MONITOR PROCEDURE .....	100
ACTIVE TEST PROCEDURE .....	101
DATA MONITOR MODE .....	102
ACTIVE TEST MODE .....	103
<b>TROUBLE DIAGNOSIS - INTRODUCTION</b> .....	104
How to Perform Trouble Diagnoses for Quick	
and Accurate Repair .....	104
INTRODUCTION.....	104
<b>TROUBLE DIAGNOSIS - BASIC INSPECTION</b> .....	105
Preliminary Check.....	105
Ground Circuit Check .....	108
ABS ACTUATOR AND ELECTRIC UNIT GROUND... ..	108
<b>TROUBLE DIAGNOSIS - GENERAL</b>	
<b>DESCRIPTION</b> .....	109
Malfunction Code/Symptom Chart.....	109
<b>CAN COMMUNICATION</b> .....	111
System Description.....	111
FOR A/T MODELS .....	111

# CONTENTS (Cont'd)

FOR TCS MODELS .....	111
<b>TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS</b> .....	112
Wheel Sensor or Rotor.....	112
DIAGNOSTIC PROCEDURE.....	112
ABS Actuator Solenoid Valve or Solenoid Valve Relay.....	116
DIAGNOSTIC PROCEDURE.....	116
Motor Relay or Motor.....	119
DIAGNOSTIC PROCEDURE.....	119
Low Voltage .....	121
DIAGNOSTIC PROCEDURE.....	121
Control Unit.....	123
DIAGNOSTIC PROCEDURE.....	123
CAN Communication System.....	124
INSPECTION PROCEDURE .....	124
Engine System.....	124
DIAGNOSTIC PROCEDURE.....	124
A/T System .....	125
DIAGNOSTIC PROCEDURE.....	125
<b>TROUBLE DIAGNOSES FOR SYMPTOMS</b> .....	126
1. ABS Works Frequently .....	126
2. Unexpected Pedal Action .....	126
3. Long Stopping Distance .....	127
4. ABS Does Not Work.....	128
5. Pedal Vibration and Noise.....	129
6. ABS Warning Lamp Does Not Come On When Ignition Switch Is Turned On.....	130

7. ABS Warning Lamp Stays On When Ignition Switch Is Turned On.....	131
8. SLIP Indicator Lamp Does Not Come On When Ignition Switch Is Turned On.....	133
9. TCS OFF Indicator Lamp Does Not Come On When Ignition Switch Is Turned On.....	134
10. TCS OFF Switch Is Inoperative .....	136
11. Poor Acceleration.....	139

## ABS/TCS

<b>REMOVAL AND INSTALLATION</b> .....	140
Wheel Sensors .....	140
Sensor Rotor.....	140
REMOVAL.....	140
INSTALLATION.....	141
ABS Actuator and Electric Unit.....	141
REMOVAL.....	141
INSTALLATION.....	141

<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	142
General Specifications.....	142
Disc Brake .....	142
Brake Pedal .....	142
Parking Brake .....	142
Brake Booster .....	142
ABS Wheel Sensor.....	143

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
**BR**  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

## PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

### Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

NFBR0127


The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER" used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. The SRS system composition which is available to NISSAN MODEL A33 is as follows:

- For a frontal collision  
The Supplemental Restraint System consists of driver air bag module (located in the center of the steering wheel), front passenger air bag module (located on the instrument panel on passenger side), seat belt pre-tensioners, a diagnosis sensor unit, crash zone sensor, warning lamp, wiring harness and spiral cable.
- For a side collision  
The Supplemental Restraint System consists of front side air bag module (located in the outer side of front seat), satellite sensor, diagnosis sensor unit (one of components of air bags for a frontal collision), wiring harness, warning lamp (one of components of air bags for a frontal collision).

Information necessary to service the system safely is included in the **RS section** of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance should be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the RS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harness connector.

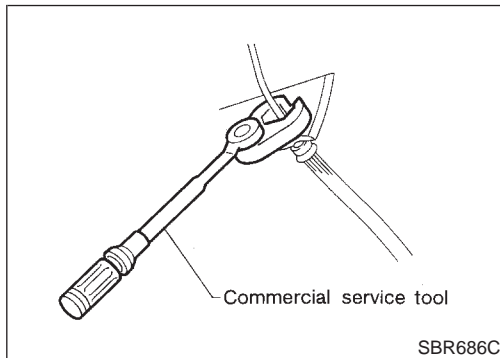

### Precautions for Brake System

NFBR0002

- Recommended fluid is brake fluid "DOT 3".
- Never reuse drained brake fluid.
- Be careful not to splash brake fluid on painted areas.
- To clean or wash all parts of master cylinder, disc brake caliper and wheel cylinder, use clean brake fluid.
- Never use mineral oils such as gasoline or kerosene. They will ruin rubber parts of the hydraulic system.
- Use flare nut wrench when removing and installing brake tube.
- Always torque brake lines when installing.
- Burnish the brake contact surfaces after refinishing or replacing drums or rotors, after replacing pads or linings, or if a soft pedal occurs at very low mileage. Refer to "Brake Burnishing Procedure", "ON-VEHICLE SERVICE", BR-8.

#### **WARNING:**

- Clean brake pads and shoes with a waste cloth, then wipe with a dust collector.

## Wiring Diagrams and Trouble Diagnosis

NFBR0003

When you read wiring diagrams, refer to the following:

- "HOW TO READ WIRING DIAGRAMS" in GI section
- "POWER SUPPLY ROUTING" for power distribution circuit in EL section

When you perform trouble diagnosis, refer to the following:

- "HOW TO FOLLOW TEST GROUP IN TROUBLE DIAGNOSIS" in GI section
- "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT" in GI section
- For trouble diagnoses of models with ABS, refer to BR-37.
- For trouble diagnoses of models with TCS, refer to BR-88.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

**BR**

ST

RS

BT

HA

SC

EL



IDX

# PREPARATION

Commercial Service Tools

## Commercial Service Tools

NFBR0004

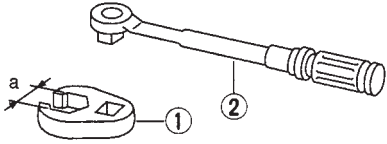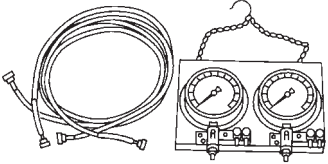Tool name	Description
1 Flare nut crowfoot 2 Torque wrench	 <p>Removing and installing each brake piping <b>a: 10 mm (0.39 in)</b></p> <p>NT360</p>
Brake fluid pressure gauge	 <p>Measuring brake fluid pressure</p> <p>NT151</p>

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

## NVH Troubleshooting Chart

NFBR0005S01

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.


Reference page		BR-23, 27	BR-23, 27	BR-23, 27	—	—	BR-25, 31	—	—	—	BR-26, 32	NVH in AX section	NVH in AX section	NVH in SU section	NVH in SU section	NVH in SU section	NVH in ST section	
Possible cause and SUSPECTED PARTS		Pads - damaged	Pads - uneven wear	Shims damaged	Rotor imbalance	Rotor damage	Rotor runout	Rotor deformation	Rotor deflection	Rotor rust	Rotor thickness variation	DRIVE SHAFT	AXLE	SUSPENSION	TIRES	ROAD WHEEL	STEERING	
Symptom	BRAKE	Noise	X	X	X							X	X	X	X	X	X	
		Shake				X							X	X	X	X	X	X
		Shimmy, Judder				X	X	X	X	X	X	X		X	X	X	X	X

X: Applicable

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
**BR**  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# ON-VEHICLE SERVICE


## Checking Brake Fluid Level

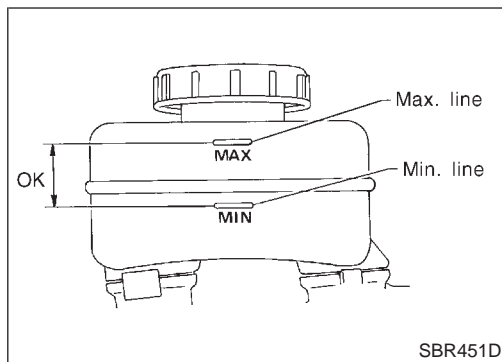

## Checking Brake Fluid Level

NFBR0006

- Check fluid level in reservoir tank. It should be between Max and Min lines on reservoir tank.
- If fluid level is extremely low, check brake system for leaks.
- Release parking brake lever and see if brake warning lamp goes off. If not, check brake system for leaks.

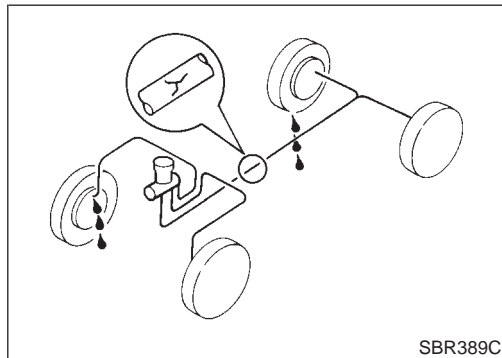


## Checking Brake Line

NFBR0007

### CAUTION:

If leakage occurs around joints, retighten or, if necessary, replace damaged parts.

1. Check brake lines (tubes and hoses) for cracks, deterioration or other damage. Replace any damaged parts.
2. Check for oil leakage by fully depressing brake pedal while engine is running.

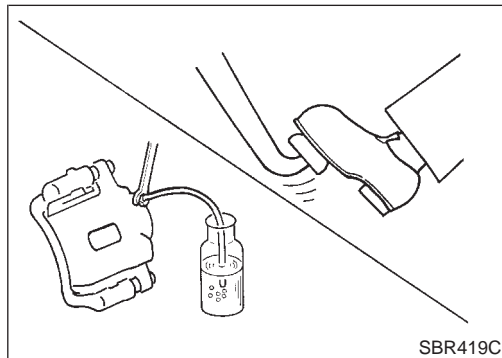

## Changing Brake Fluid

NFBR0008

### CAUTION:

- Refill with new brake fluid "DOT 3".
- Always keep fluid level higher than minimum line on reservoir tank.
- Never reuse drained brake fluid.
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

1. Clean inside of reservoir tank, and refill with new brake fluid.
2. Connect a vinyl tube to each air bleeder valve.
3. Drain brake fluid from each air bleeder valve by depressing brake pedal.
4. Refill until brake fluid comes out of each air bleeder valve. Use same procedure as in bleeding hydraulic system to refill brake fluid. Refer to "Bleeding Brake System", BR-9.

## Brake Burnishing Procedure

NFBR0036

Burnish the brake contact surfaces according to the following procedure after refinishing or replacing drums or rotors, after replacing pads or linings, or if a soft pedal occurs at very low mileage.

### CAUTION:

Only perform this procedure under safe road and traffic conditions. Use extreme caution.

1. Drive the vehicle on a straight smooth road at 50 km/h (31 MPH).
2. Use medium brake pedal/foot effort to bring the vehicle to a complete stop from 50 km/h (31 MPH). Adjust brake pedal/foot




pressure such that vehicle stopping time equals 3 to 5 seconds.

3. To cool the brake system, drive the vehicle at 50 km/h (31 MPH) for 1 minute without stopping.
4. Repeat steps 1 to 3, 10 times or more to complete the burnishing procedure.

GI  
MA  
EM

LC  
LG

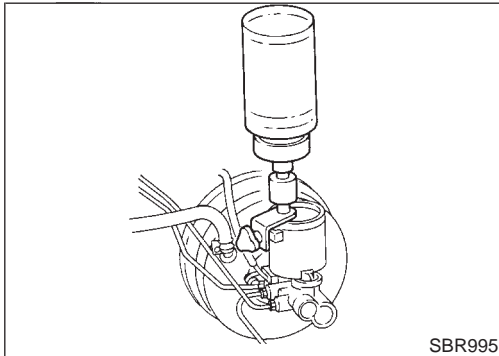


## Bleeding Brake System

NFBR0009

### CAUTION:

- Carefully monitor brake fluid level at master cylinder during bleeding operation.
- Fill reservoir with new brake fluid "DOT 3". Make sure it is full at all times while bleeding air out of system.
- Place a container under master cylinder to avoid spillage of brake fluid.
- For models with ABS, turn ignition switch OFF and disconnect ABS actuator connectors or battery ground cable.

EC  
FE  
CL  
MT

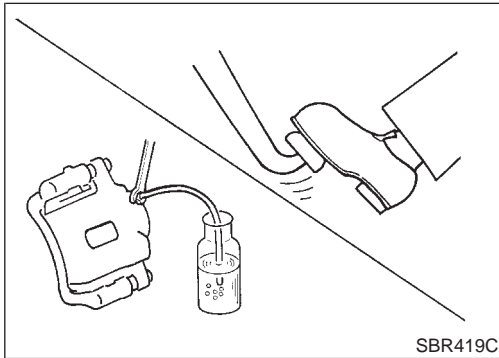

- Bleed air in the following order:  
Right rear brake → Left front brake → Left rear brake → Right front brake
1. Connect a transparent vinyl tube to air bleeder valve.
  2. Fully depress brake pedal several times.
  3. With brake pedal depressed, open air bleeder valve to release air.
  4. Close air bleeder valve.
  5. Release brake pedal slowly.
  6. Repeat steps 2. through 5. until clear brake fluid comes out of air bleeder valve.

AT  
AX  
SU

**BR**

ST

RS

BT

HA

SC

EL




IDX

# BRAKE HYDRAULIC LINE

Hydraulic Circuit

## Hydraulic Circuit

NFBR0010

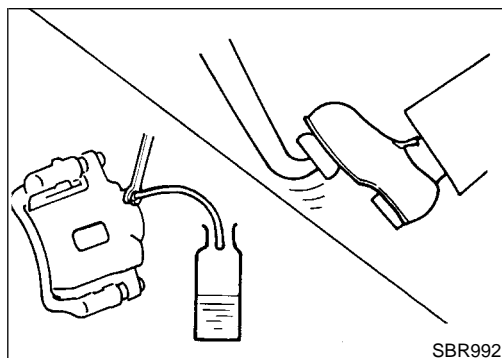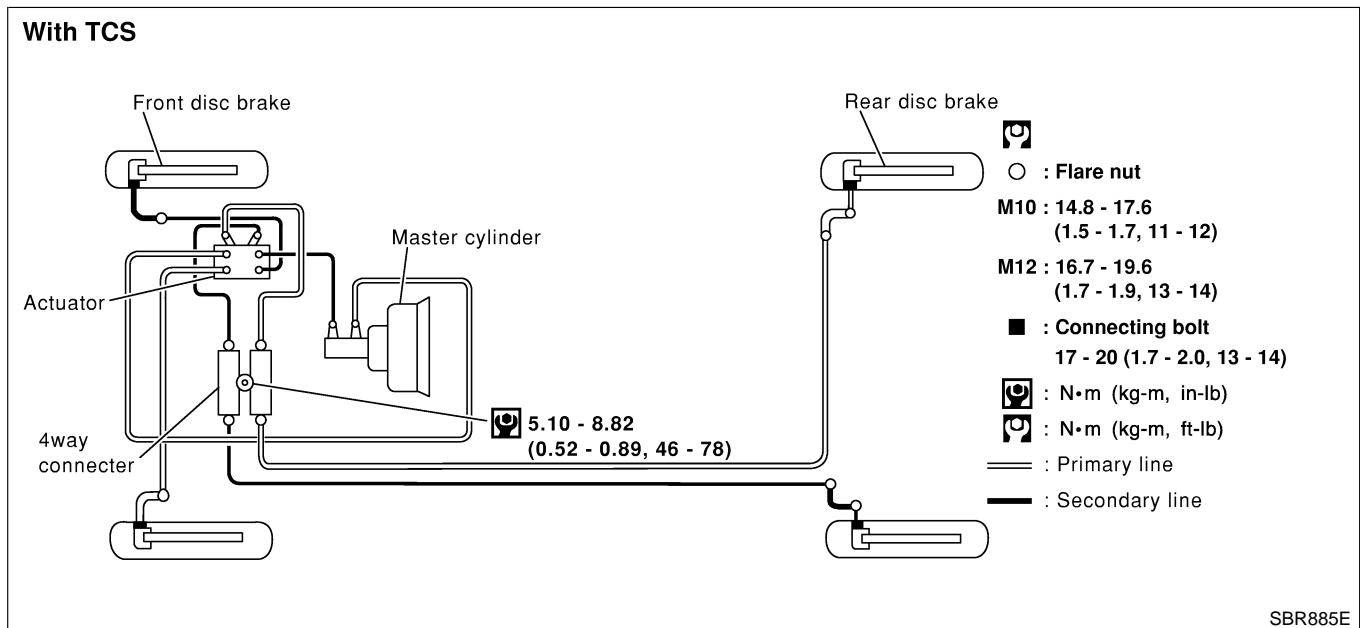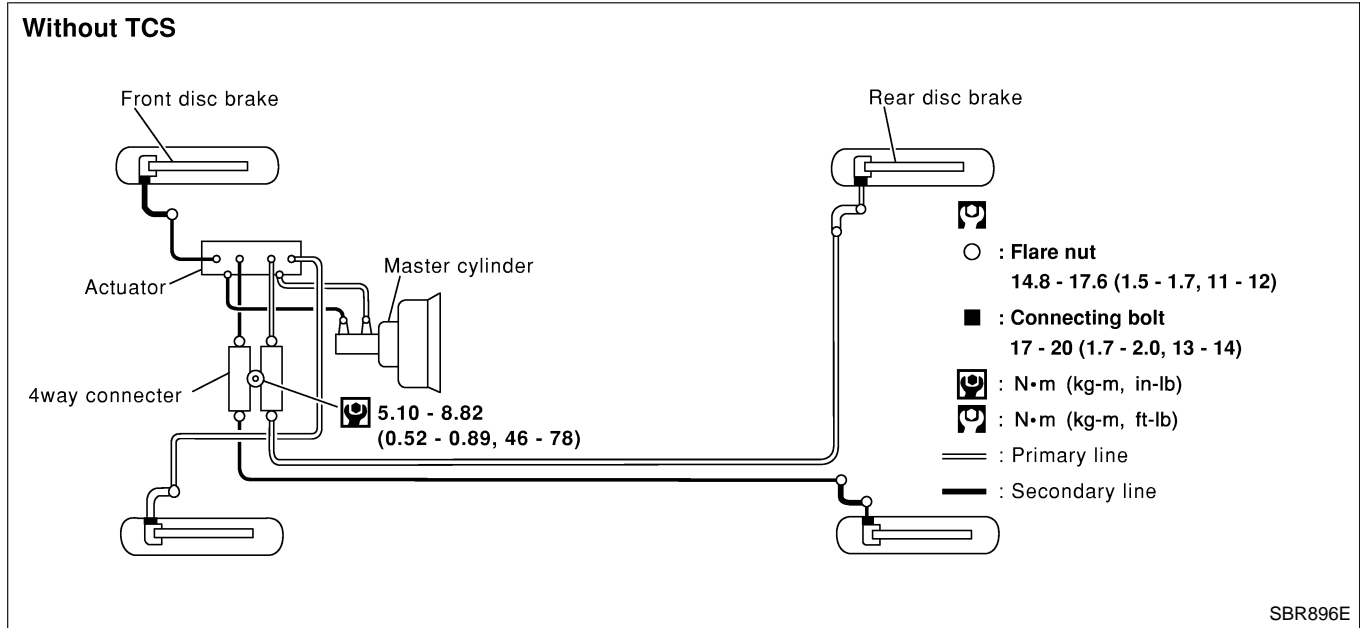

## Removal

NFBR0011

### CAUTION:

- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
  - All hoses must be free from excessive bending, twisting and pulling.
1. Connect vinyl tube to air bleeder valve.
  2. Drain brake fluid from each air bleeder valve by depressing brake pedal.

3. Remove flare nut connecting brake tube and hose, then withdraw lock spring.
4. Cover openings to prevent entrance of dirt whenever disconnecting brake line.

GI

MA

EM

LC

## Inspection

Check brake lines (tubes and hoses) for cracks, deterioration or other damage. Replace any damaged parts.


NFBR0012

EC

FE

CL

MT

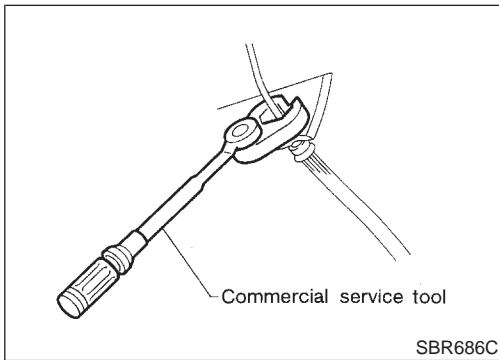

## Installation

### CAUTION:

- Refill with new brake fluid "DOT 3".
- Never reuse drained brake fluid.

NFBR0013

AT

1. Tighten all flare nuts and connecting bolts.

AX

### Specification:

#### Flare nut

**M10: 14.8 - 17.6 N·m (1.5 - 1.7 kg-m, 11 - 12 ft-lb)**

**M12: 16.7 - 19.6 N·m (1.7 - 1.9 kg-m, 13 - 14 ft-lb)**

SU

#### Connecting bolt

**17 - 20 N·m (1.8 - 2.0 kg-m, 13 - 14 ft-lb)**

**BR**

2. Refill until new brake fluid comes out of each air bleeder valve.
3. Bleed air. Refer to "Bleeding Brake System", BR-9.

ST

RS

BT

HA

SC

EL

IDX


# BRAKE PEDAL AND BRACKET

Removal and Installation

## Removal and Installation

NFBR0015


SEC. 465•470

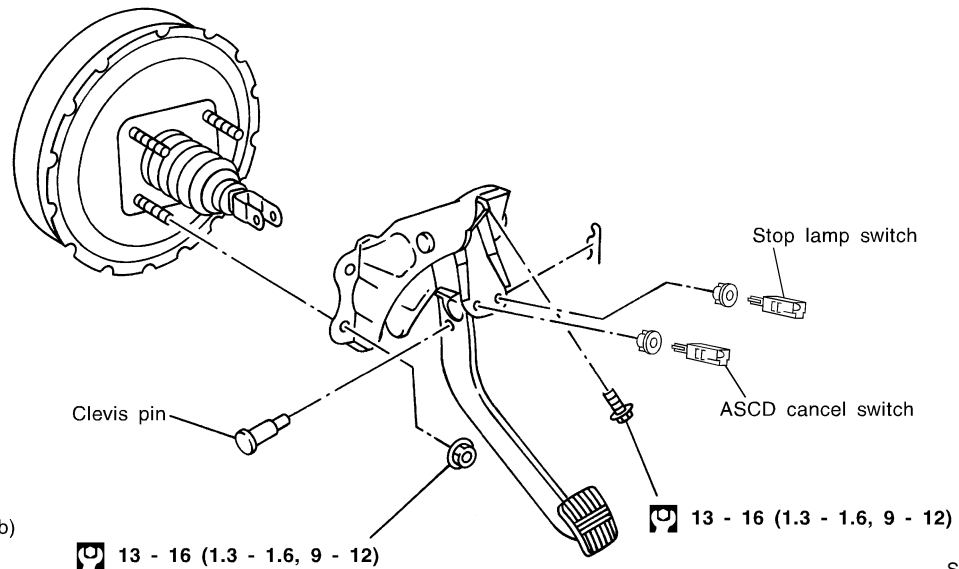

⊗ : N·m (kg-m, ft-lb)

⊗ 13 - 16 (1.3 - 1.6, 9 - 12)

SBR525EB

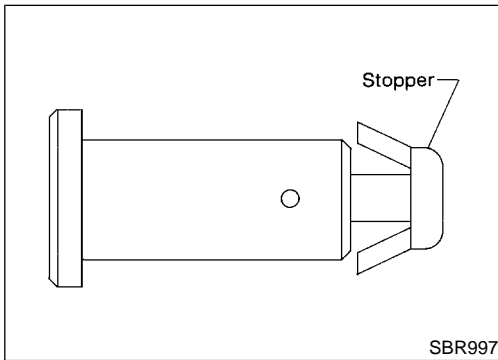


### Inspection

NFBR0016

Check brake pedal for following items.

- Brake pedal bend
- Clevis pin deformation
- Crack of any welded portion
- Crack or deformation of clevis pin stopper

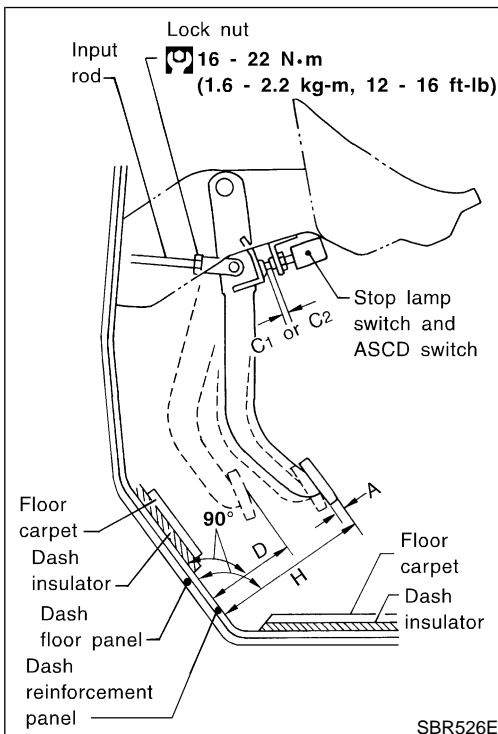

### Adjustment

NFBR0017

Check brake pedal free height from metal panel. Adjust if necessary.

**H: Free height**

Refer to SDS, BR-142.

**C<sub>1</sub>, C<sub>2</sub>: Clearance between pedal stopper and threaded end of stop lamp switch and ASCD switch**

0.74 - 1.96 mm (0.0291 - 0.0772 in)

**D: Depressed height**

82.5 mm (3.248 in)


Under force of 490 N (50 kg, 110 lb) with engine running.

**A: Pedal play**

3 - 11 mm (0.12 - 0.43 in)

# BRAKE PEDAL AND BRACKET

Adjustment (Cont'd)

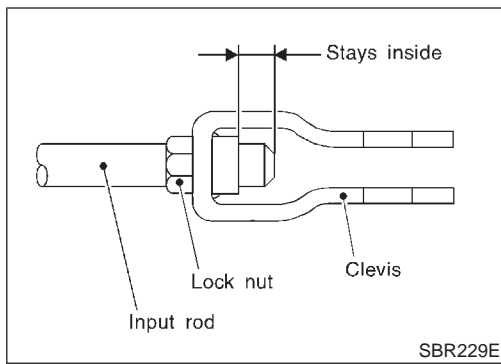

1. Loosen lock nut and adjust pedal free height by turning brake booster input rod. Then tighten lock nut.
2. Check pedal free play.  
**Make sure that stop lamps go off when pedal is released.**
3. Check brake pedal's depressed height while engine is running. If lower than specification, check brake system for leaks, accumulation of air or any damage to components (master cylinder, wheel cylinder, etc.); then make necessary repairs.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

**BR**

ST

RS

BT

HA

SC

EL

IDX


# MASTER CYLINDER (TOKICO)

Removal

## Removal

NFBR0018

TOKICO made  
SEC. 460

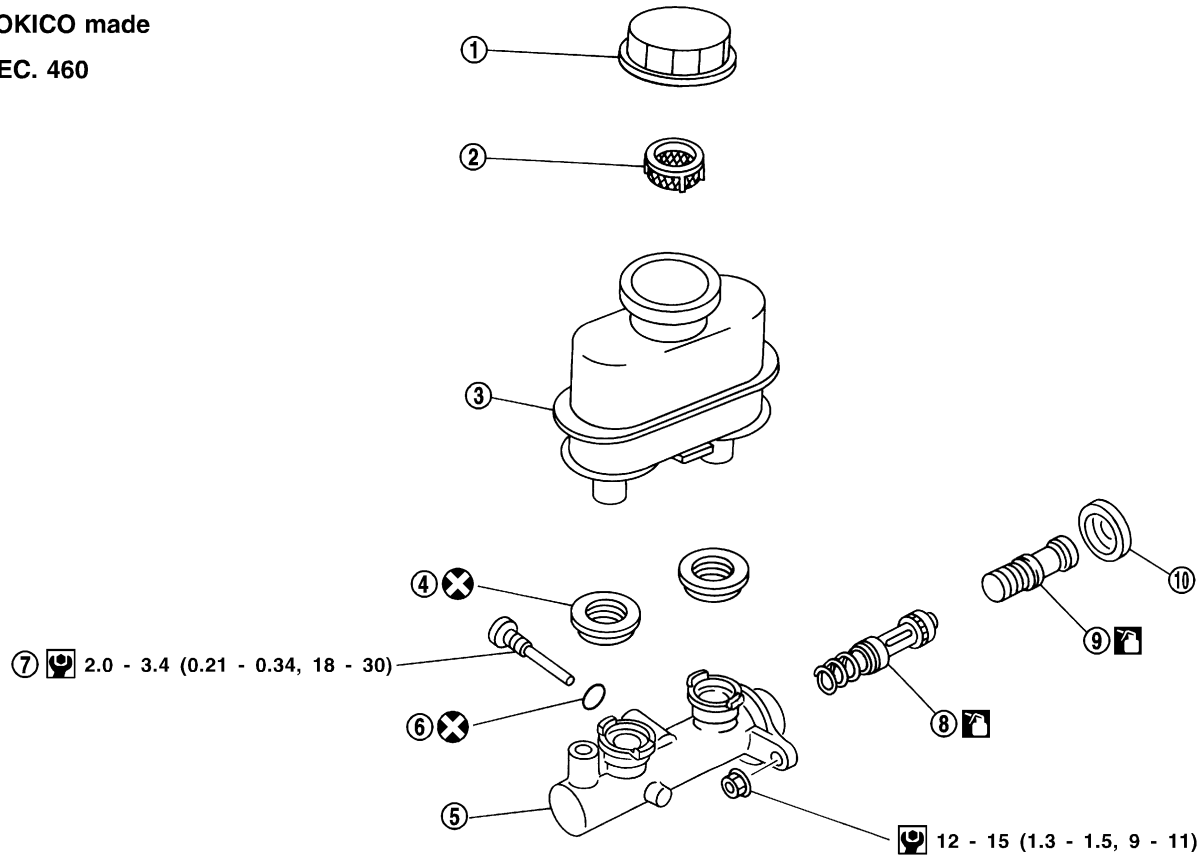

- : Brake fluid
- : N·m (kg-m, ft-lb)
- : N·m (kg-m, in-lb)


SBR886E

- |                   |                   |                              |
|-------------------|-------------------|------------------------------|
| 1. Reservoir cap  | 5. Cylinder body  | 8. Secondary piston assembly |
| 2. Oil filter     | 6. O-ring         | 9. Primary piston assembly   |
| 3. Reservoir tank | 7. Piston stopper | 10. Stopper cap              |
| 4. Seal           |                   |                              |

### CAUTION:

Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

1. Connect a vinyl tube to air bleeder valve.
2. Drain brake fluid from each air bleeder valve, depressing brake pedal to empty fluid from master cylinder.
3. Remove brake pipe flare nuts.
4. Remove master cylinder mounting nuts.

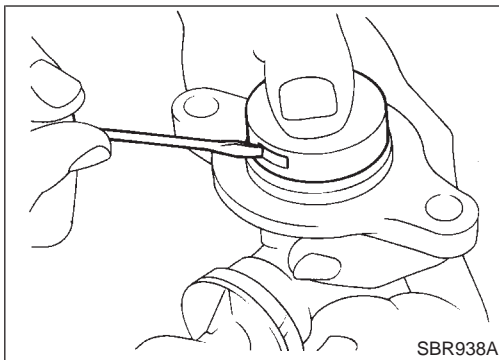

## Disassembly

NFBR0019


1. Bend claws of stopper cap outward and remove stopper cap.

GI

MA

EM

LC

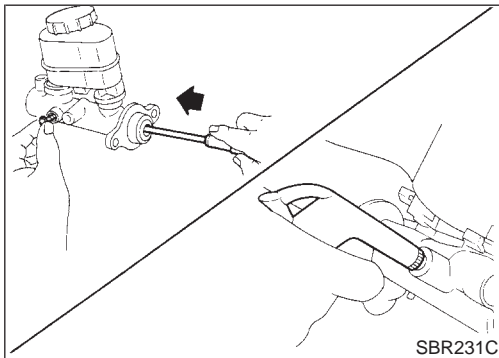

2. Remove piston stopper while piston is pushed into cylinder.
3. Remove piston assemblies.  
**If it is difficult to remove secondary piston assembly, gradually apply compressed air through fluid outlet.**
4. Draw out reservoir tank.

EC

FE

CL

MT

## Inspection

NFBR0020

Check for the following items.  
**Replace any part if damaged.**  
**Master cylinder:**

- Pin holes or scratches on inner wall.

AT


AX

**Piston:**

- Deformation of or scratches on piston cups.

SU

**BR**

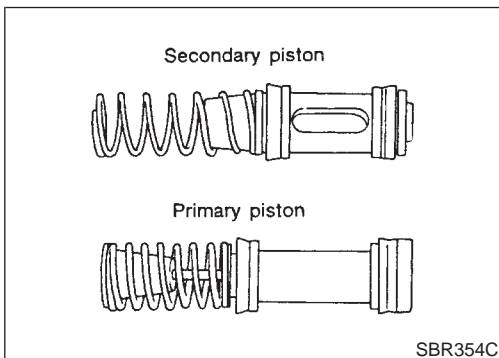

## Assembly

NFBR0021


1. Insert secondary piston assembly. Then insert primary piston assembly.  
● Pay attention to alignment of secondary piston slit with valve stopper mounting hole of cylinder body.

ST

RS

BT

HA

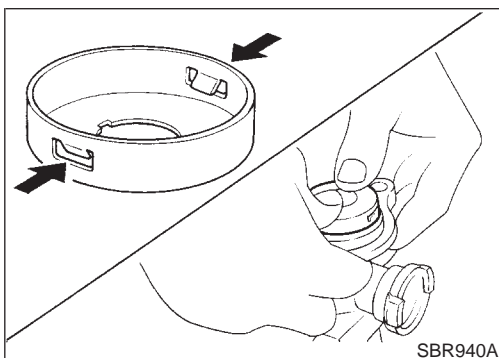

2. Install stopper cap.  
**Before installing stopper cap, ensure that claws are bent inward.**
3. Push reservoir tank seals into cylinder body.
4. Push reservoir tank into cylinder body.


SC

EL


IDX

# MASTER CYLINDER (TOKICO)

Assembly (Cont'd)

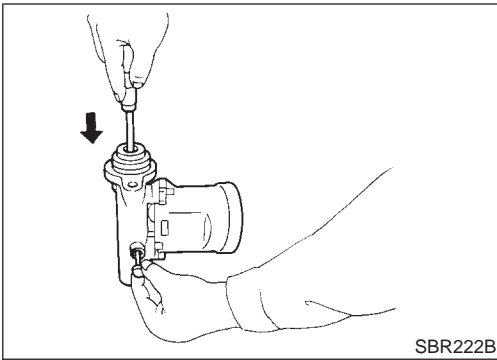

5. Install piston stopper while piston is pushed into cylinder.

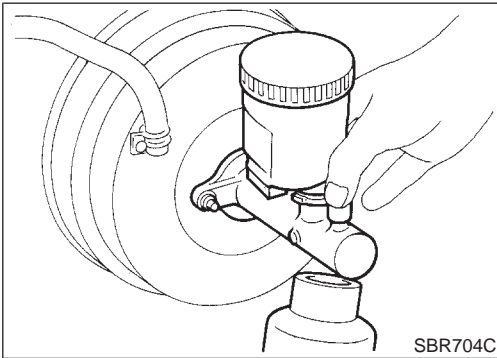

## Installation

NFBR0022

### CAUTION:

- Refill with new brake fluid "DOT 3".
  - Never reuse drained brake fluid.
1. Place master cylinder onto brake booster and secure mounting nuts lightly.
  2. Torque mounting nuts.  
☑ : 12 - 15 N·m (1.3 - 1.5 kg-m, 9 - 11 ft-lb)
  3. Fill up reservoir tank with new brake fluid.
  4. Plug all ports on master cylinder with fingers to prevent air suction while releasing brake pedal.
  5. Have driver depress brake pedal slowly several times until no air comes out of master cylinder.
  6. Fit brake lines to master cylinder.
  7. Tighten flare nuts.  
M10: ☑ 14.8 - 17.6 N·m (1.5 - 1.7 kg-m, 11 - 12 ft-lb)  
M12: ☑ 16.7 - 19.6 N·m (1.7 - 1.9 kg-m, 13 - 14 ft-lb)
  8. Bleed air from brake system. Refer to "Bleeding Brake System", BR-9.




# MASTER CYLINDER [BOSCH (NABCO)]

Removal

## Removal

NFBR0095

BOSCH (NABCO) made  
SEC. 460

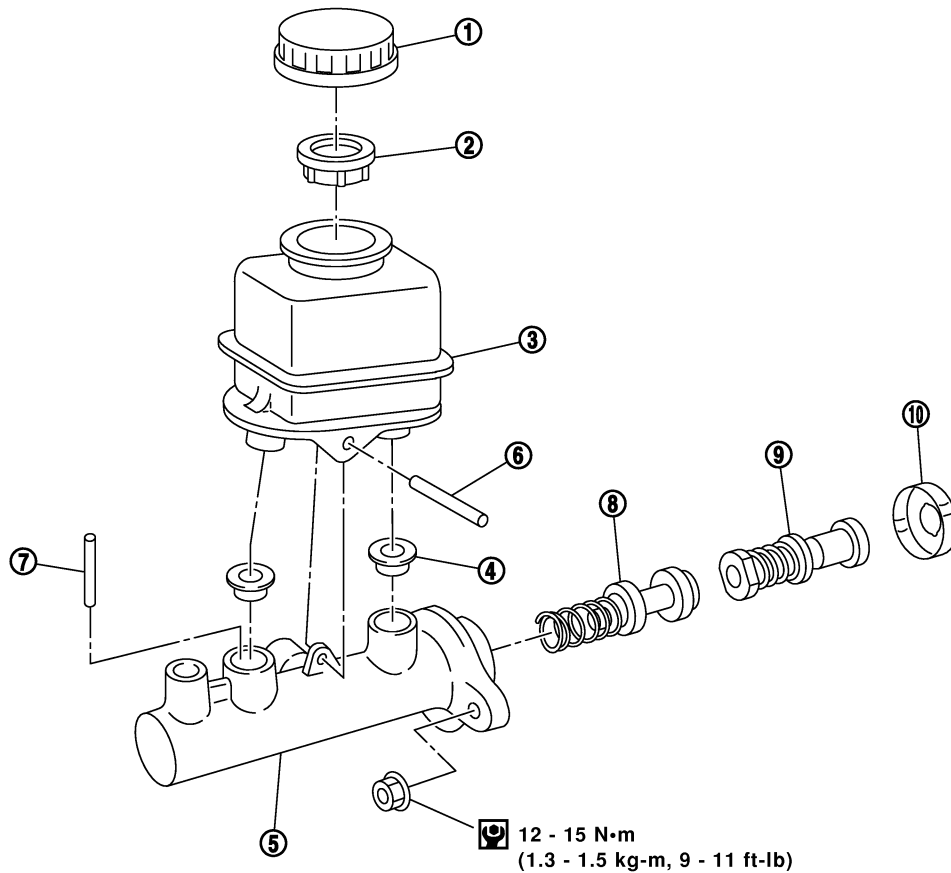

SBR976E

- |                   |                       |                              |
|-------------------|-----------------------|------------------------------|
| 1. Reservoir cap  | 5. Cylinder body      | 8. Secondary piston assembly |
| 2. Oil filter     | 6. Spring pin         | 9. Primary piston assembly   |
| 3. Reservoir tank | 7. Piston stopper pin | 10. Stopper cap              |
| 4. Seal           |                       |                              |

### CAUTION:

Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

1. Connect a vinyl tube to air bleeder valve.
2. Drain brake fluid from each air bleeder valve, depressing brake pedal to empty fluid from master cylinder.
3. Remove brake pipe flare nuts.
4. Remove master cylinder mounting nuts.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA




SC

EL

IDX

# MASTER CYLINDER [BOSCH (NABCO)]

## Disassembly

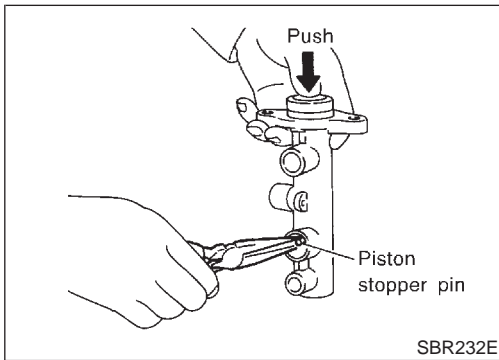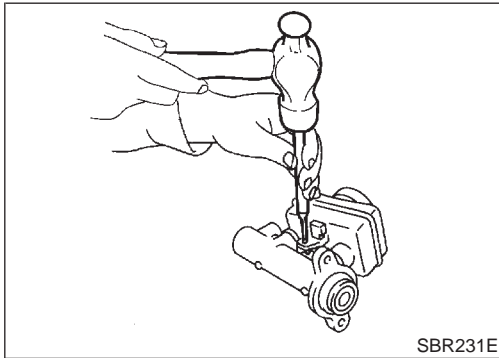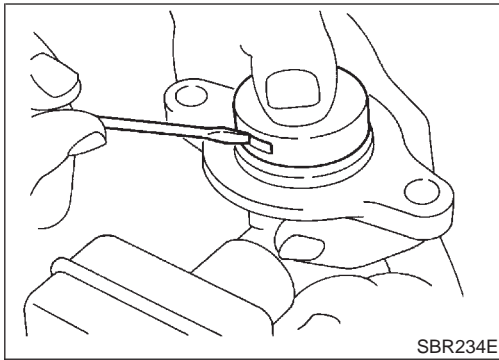

## Disassembly

NFBR0096

1. Bend claws of stopper cap outward and remove stopper cap.
2. Drive out spring pin from cylinder body.
3. Draw out reservoir tank and seals.
4. Remove piston stopper pin while piston is pushed into cylinder.
5. Remove piston assemblies.  
**If it is difficult to remove secondary piston assembly, gradually apply compressed air through fluid outlet.**

## Inspection


NFBR0097

Check for the following items.  
**Replace any part if damaged.**  
**Master cylinder:**

- Pin holes or scratches on inner wall.

**Piston:**

- Deformation of or scratches on piston cups.

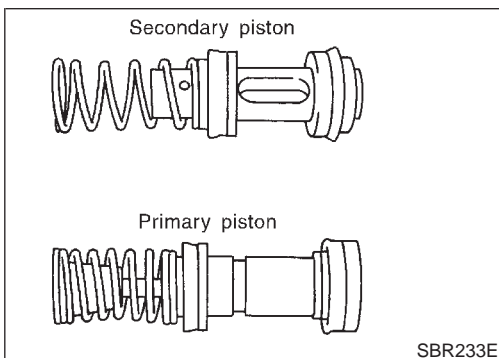


## Assembly

NFBR0098

1. Insert secondary piston assembly. Then insert primary piston assembly.
- **Pay attention to alignment of secondary piston slit with valve stopper mounting hole of cylinder body.**

# MASTER CYLINDER [BOSCH (NABCO)]

Assembly (Cont'd)

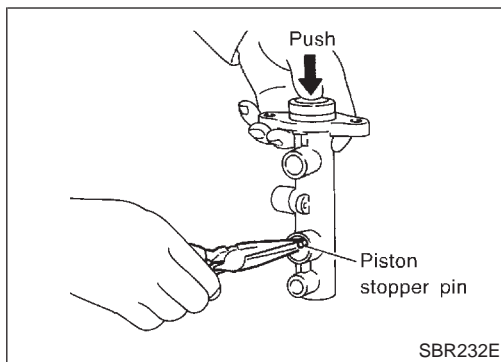


2. Install piston stopper pin while piston is pushed into cylinder.
3. Push reservoir tank seals and reservoir tank into cylinder body.
4. Install spring pin.

GI

MA

EM

LC

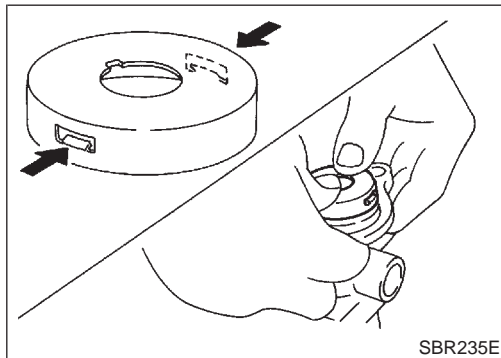

5. Install stopper cap.


**Before installing stopper cap, ensure that claws are bent inward.**

EC

FE

CL

MT

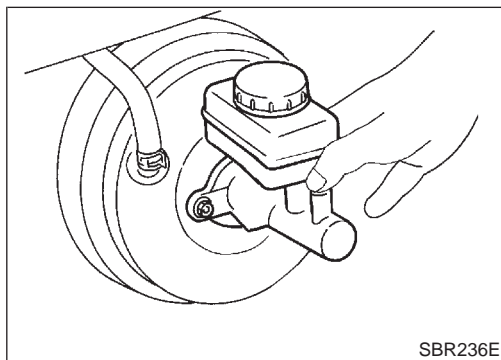

## Installation

NFBR0099

### CAUTION:

- Refill with new brake fluid "DOT 3".
- Never reuse drained brake fluid.

AT

AX

1. Place master cylinder onto brake booster and secure mounting nuts lightly.
2. Torque mounting nuts.

SU

**⚙️ : 12 - 15 N·m (1.3 - 1.5 kg·m, 9 - 11 ft·lb)**

3. Fill up reservoir tank with new brake fluid.
4. Plug all ports on master cylinder with fingers to prevent air suction while releasing brake pedal.
5. Have driver depress brake pedal slowly several times until no air comes out of master cylinder.
6. Fit brake lines to master cylinder.
7. Tighten flare nuts.

BR

ST

RS

**M10: ⚙️ 14.8 - 17.6 N·m (1.5 - 1.7 kg·m, 11 - 12 ft·lb)**

**M12: ⚙️ 16.7 - 19.6 N·m (1.7 - 1.9 kg·m, 13 - 14 ft·lb)**

BT

8. Bleed air from brake system.

HA





SC

EL

IDX

# BRAKE BOOSTER

## On-vehicle Service

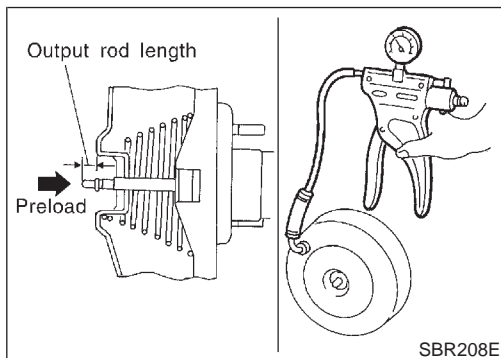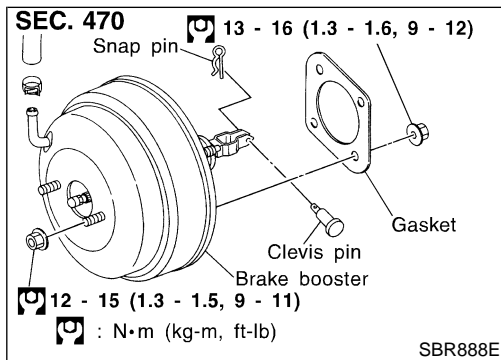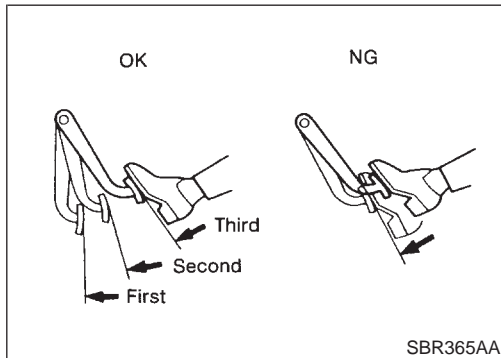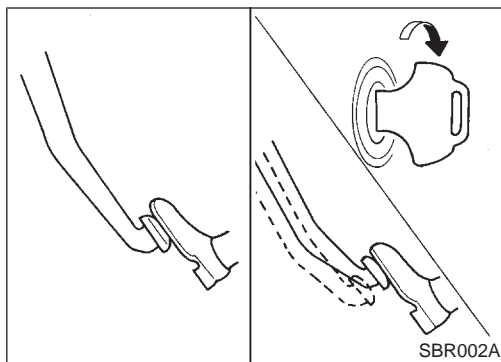

## On-vehicle Service

NFBR0023

### OPERATING CHECK

NFBR0023S01

1. Stop engine and depress brake pedal several times. Check that pedal stroke does not change.
2. Depress brake pedal, then start engine. If pedal goes down slightly, operation is normal.

### AIRTIGHT CHECK

NFBR0023S02

1. Start engine, and stop it after one or two minutes. Depress brake pedal several times slowly. The pedal should go further down the first time, and then it should gradually rise thereafter.
2. Depress brake pedal while engine is running, and stop engine with pedal depressed. The pedal stroke should not change after holding pedal down for **30 seconds**.

## Removal

NFBR0024

### CAUTION:

- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
- Be careful not to deform or bend brake pipes, during removal of booster.

## Inspection

NFBR0025

### OUTPUT ROD LENGTH CHECK

NFBR0025S01

1. Apply vacuum of  $-66.7$  kPa ( $-500$  mmHg,  $-19.69$  inHg) to brake booster with a handy vacuum pump.
2. Add preload of  $19.6$  N ( $2$  kg,  $4.4$  lb) to output rod.
3. Check output rod length.

**Specified length:**

**10.275 - 10.525 mm (0.4045 - 0.4144 in)**

## Installation


NFBR0026

### CAUTION:

- Be careful not to deform or bend brake pipes, during installation of booster.
- Replace clevis pin if damaged.
- Refill with new brake fluid "DOT 3".
- Never reuse drained brake fluid.
- Take care not to damage brake booster mounting bolt thread when installing. Due to the acute angle of installation, the threads can be damaged with the dash panel.

# BRAKE BOOSTER

Installation (Cont'd)

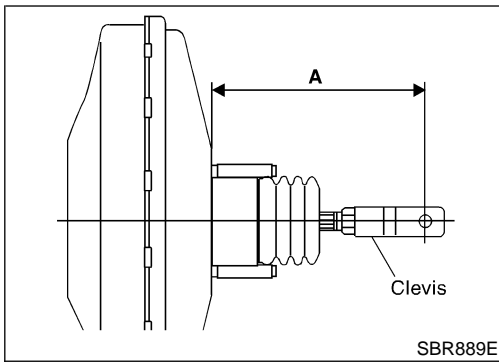

1. Before fitting booster, temporarily adjust clevis to dimension "A" shown.

**Specification:**

**130 mm (5.12 in)**

2. Fit booster, then secure mounting nuts (brake pedal bracket to master cylinder) lightly.
3. Connect brake pedal and booster input rod with clevis pin.
4. Secure mounting nuts.

**Specification:**

**15.7 - 21.6 N·m (1.6 - 2.2 kg-m, 12 - 15 ft-lb)**

5. Install master cylinder. Refer to "Installation" in "MASTER CYLINDER", BR-16 or BR-19.
6. Bleed air. Refer to "Bleeding Brake System", BR-9.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

**BR**

ST

RS

BT

HA


SC

EL

IDX

# VACUUM HOSE

## Removal and Installation

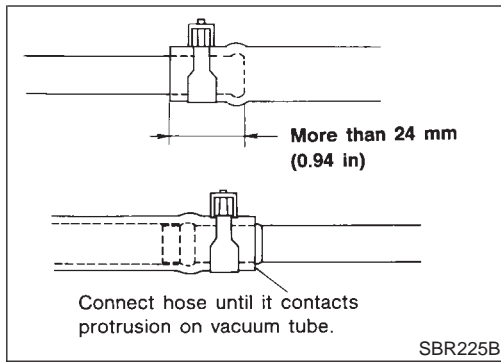

## Removal and Installation

NFBR0027

### CAUTION:

When installing vacuum hoses, pay attention to the following points.

- Do not apply any oil or lubricants to vacuum hose and check valve.
- Insert vacuum tube into vacuum hose as shown.
- Install check valve, paying attention to its direction.


## Inspection

NFBR0028

### HOSES AND CONNECTORS

NFBR0028S01

Check vacuum lines, connections and check valve for airtightness, improper attachment chafing and deterioration.

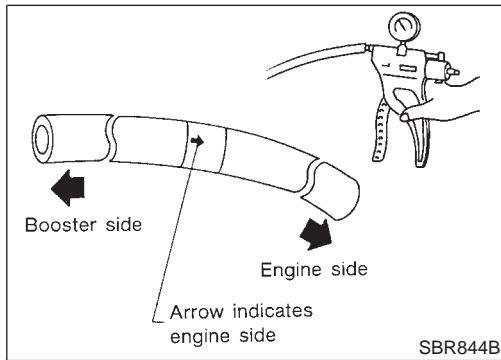

## CHECK VALVE


NFBR0028S02

Check vacuum with a vacuum pump.

Connect to booster side	Vacuum should exist.
Connect to engine side	Vacuum should not exist.

## Component

NFBR0030

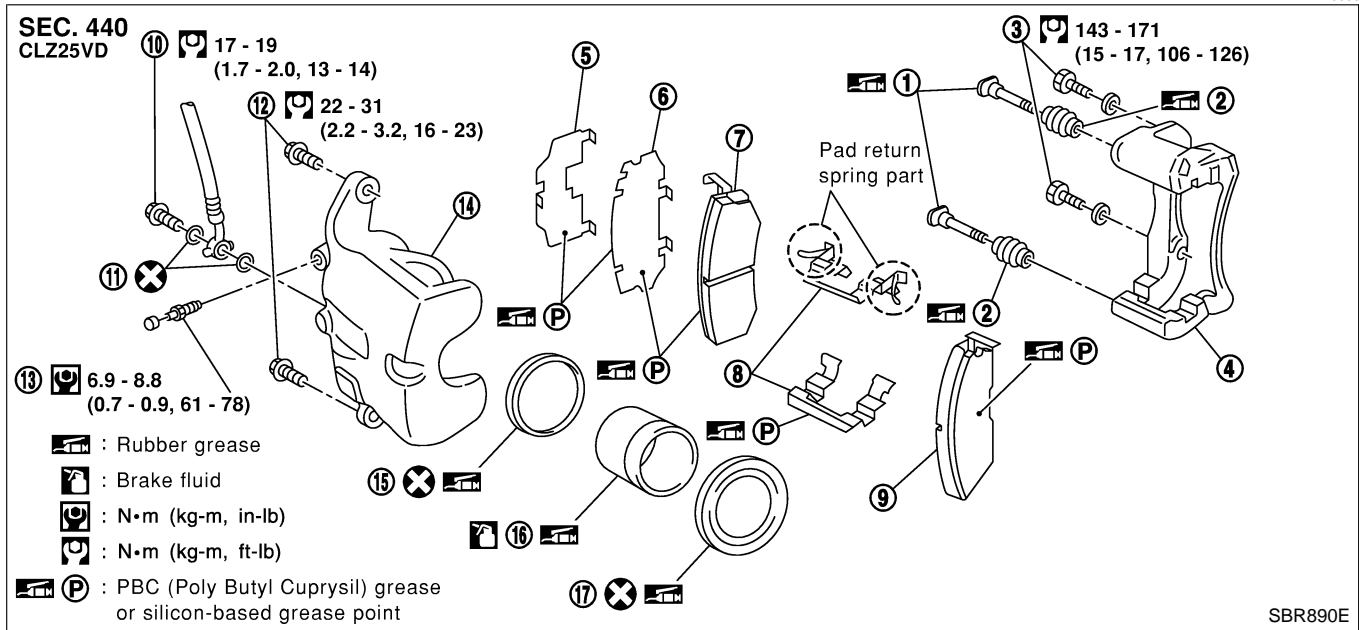

- |                              |                     |                   |
|------------------------------|---------------------|-------------------|
| 1. Main pin                  | 7. Inner pad        | 13. Bleed valve   |
| 2. Pin boot                  | 8. Pad retainer     | 14. Cylinder body |
| 3. Torque member fixing bolt | 9. Outer pad        | 15. Piston seal   |
| 4. Torque member             | 10. Connecting bolt | 16. Piston        |
| 5. Shim cover                | 11. Copper washer   | 17. Piston boot   |
| 6. Inner shim                | 12. Main pin bolt   |                   |

## Pad Replacement

NFBR0029

### WARNING:

Clean brake pads with a vacuum dust collector to minimize the hazard of airborne particles or other materials.


### CAUTION:

- When cylinder body is open, do not depress brake pedal because piston will pop out.
- Be careful not to damage piston boot or get oil on rotor. Always replace shims when replacing pads.
- If shims are rusted or show peeling of the rubber coat, replace them with new shims.
- It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly. In this case, suspend cylinder body with wire so as not to stretch brake hose.
- Burnish the brake contact surfaces after refinishing or replacing drums or rotors, after replacing pads or linings, or if a soft pedal occurs at very low mileage. Refer to "Brake Burnishing Procedure", "ON-VEHICLE SERVICE", BR-8.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# FRONT DISC BRAKE

## Pad Replacement (Cont'd)

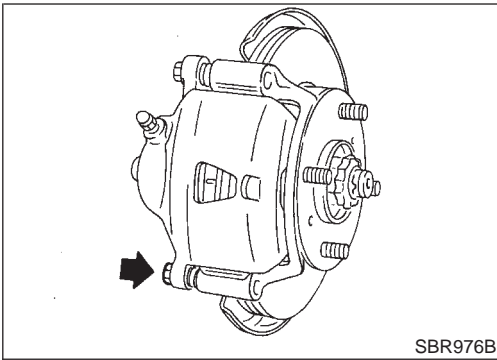

1. Remove master cylinder reservoir cap.
2. Remove pin bolt.
3. Open cylinder body upward. Then remove pad with retainers, inner shim.



**Standard pad thickness:**

**9.5 mm (0.374 in)**

**Pad wear limit:**

**2.0 mm (0.079 in)**

**Carefully monitor brake fluid level because brake fluid will return to reservoir when pushing back piston.**

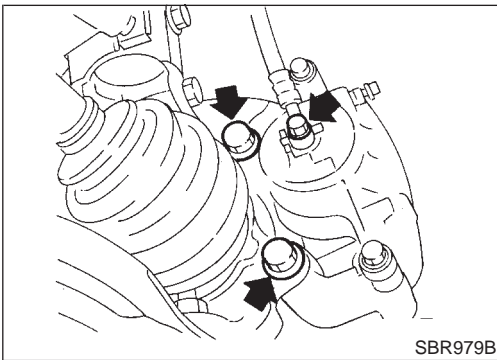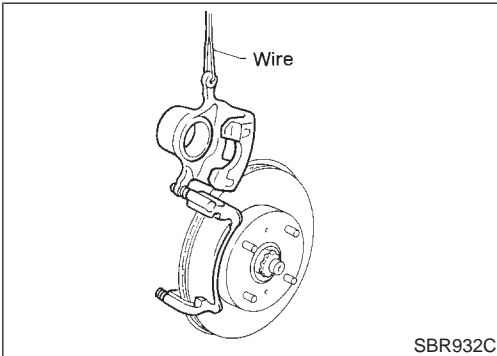

## Removal


NFBR0031

### **WARNING:**

Clean brake pads with a vacuum dust collector to minimize the hazard of airborne particles or other materials.

Remove torque member fixing bolts and connecting bolt.

**It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly. In this case, suspend caliper assembly with wire so as not to stretch brake hose.**

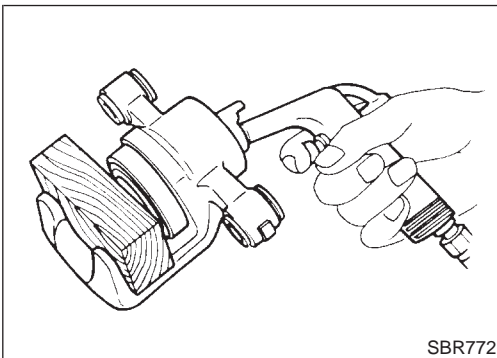

## Disassembly

NFBR0032


### **WARNING:**

**Do not place your fingers in front of piston.**

### **CAUTION:**

**Do not scratch or score cylinder wall.**

1. Push out piston with piston boot with compressed air.
2. Remove piston seal with a suitable tool.

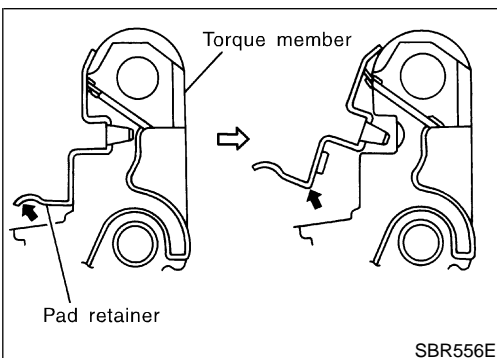

### **CAUTION:**

**When removing the pad retainer from the torque member, lift it up and out in the direction of the arrows in the figure.**



## Inspection

### CALIPER

NFBR0033

#### Cylinder Body

NFBR0033S01

- Check inside surface of cylinder for score, rust, wear, damage or presence of foreign materials. If any of the above conditions are observed, replace cylinder body.
- Minor damage from rust or foreign materials may be eliminated by polishing surface with a fine emery paper. Replace cylinder body if necessary.

#### CAUTION:

Use brake fluid to clean. Never use mineral oil.

### Piston

NFBR0033S0102

#### CAUTION:

Piston sliding surface is plated. Do not polish with emery paper even if rust or foreign materials are stuck to sliding surface.

Check piston for score, rust, wear, damage or presence of foreign materials. Replace if any of the above conditions are observed.

### Slide Pin, Pin Bolt and Pin Boot

NFBR0033S0103

Check for wear, cracks or other damage. Replace if any of the above conditions are observed.


### ROTOR

#### Rubbing Surface

NFBR0033S02

NFBR0033S0201

Check rotor for roughness, cracks or chips.

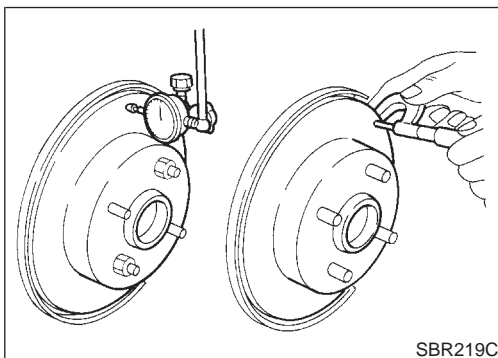

### Runout

NFBR0033S0202

1. Secure rotor to wheel hub with at least two nuts (M12 x 1.25).
2. Check runout using a dial indicator.  
**Make sure that wheel bearing axial end play is within the specifications before measuring. Refer to AX section ("Front Wheel Bearing", "ON-VEHICLE SERVICE").**

#### Maximum runout:

**0.07 mm (0.0028 in)**

3. If the runout is out of specification, find minimum runout position as follows:
  - a. Remove nuts and rotor from wheel hub.
  - b. Shift the rotor one hole and secure rotor to wheel hub with nuts.
  - c. Measure runout.
  - d. Repeat steps a. to c. so that minimum runout position can be found.
4. If the runout is still out of specification, turn rotor with on-car brake lathe ("MAD DL-8700", "AMMCO 700 and 705" or equivalent).

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

# FRONT DISC BRAKE

Inspection (Cont'd)


## Thickness

**Thickness variation (At least 8 positions):  
Maximum 0.01 mm (0.0004 in)**

NFBR0033S0203

If thickness variation exceeds the specification, turn rotor with on-car brake lathe.


**Rotor repair limit:  
22.0 mm (0.866 in)**

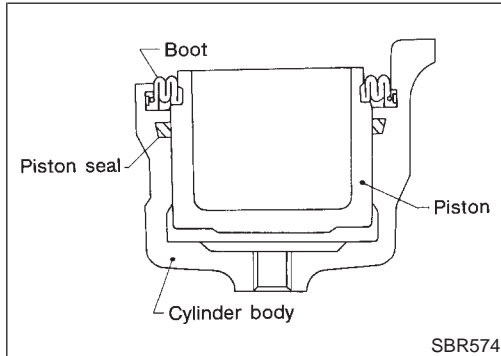

## Assembly

NFBR0034

1. Insert piston seal into groove on cylinder body.
2. With piston boot fitted to piston, insert piston boot into groove on cylinder body and install piston.
3. Properly secure piston boot.

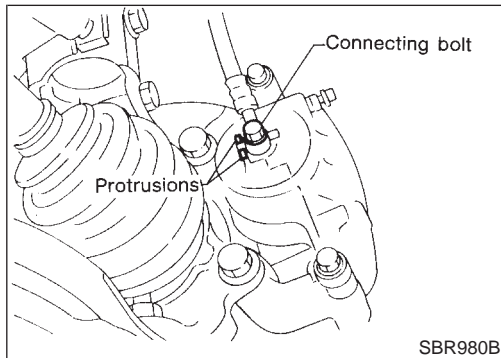


## Installation

NFBR0035

### CAUTION:

- Refill with new brake fluid "DOT 3".
  - Never reuse drained brake fluid.
1. Install brake hose to caliper securely.
  2. Install all parts and secure all bolts.
  3. Bleed air. Refer to "Bleeding Brake System", BR-9.

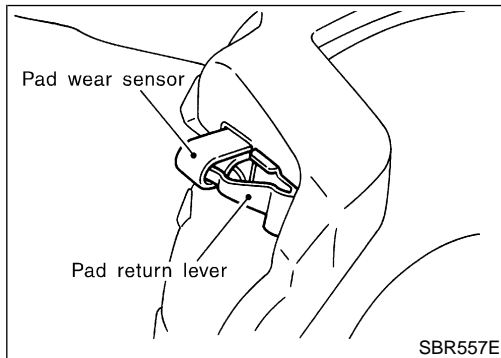

### CAUTION:

The upper pad retainer is built so the pad returns to its original position. Be careful to install the pad-return lever securely to the pad wear sensor, as shown in the left figure.


# REAR DISC BRAKE

Component

## Component

NFBR0038

SEC. 441

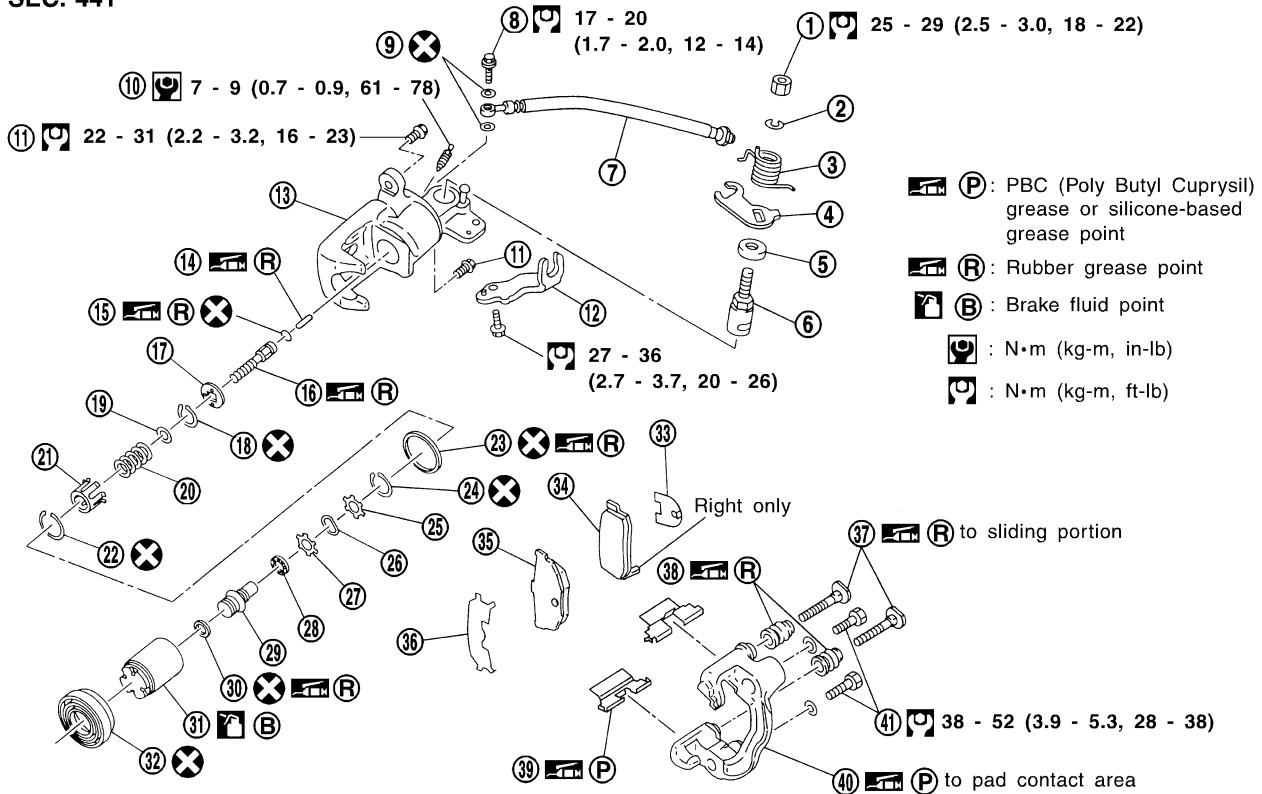

SBR897E

- |                            |                  |                               |
|----------------------------|------------------|-------------------------------|
| 1. Nut                     | 15. O-ring       | 29. Adjust nut                |
| 2. Washer                  | 16. Push rod     | 30. Cup                       |
| 3. Return spring           | 17. Key plate    | 31. Piston                    |
| 4. Toggle lever            | 18. Ring C       | 32. Dust seal                 |
| 5. Cam boot                | 19. Seat         | 33. Inner shim                |
| 6. Cam                     | 20. Spring       | 34. Inner pad                 |
| 7. Brake hose              | 21. Spring cover | 35. Outer pad                 |
| 8. Connecting bolt         | 22. Ring B       | 36. Outer shim                |
| 9. Copper washer           | 23. Piston seal  | 37. Pin                       |
| 10. Bleed screw            | 24. Ring A       | 38. Pin boot                  |
| 11. Pin bolt               | 25. Spacer       | 39. Pad retainer              |
| 12. Cable mounting bracket | 26. Wave washer  | 40. Torque member             |
| 13. Cylinder               | 27. Spacer       | 41. Torque member fixing bolt |
| 14. Strut                  | 28. Ball bearing |                               |

## Pad Replacement

NFBR0037

### WARNING:

Clean brake pads with a vacuum dust collector to minimize the hazard of airborne particles or other materials.

### CAUTION:





- When cylinder body is open, do not depress brake pedal because piston will pop out.
- Be careful not to damage piston boot or get oil on rotor. Always replace shims in replacing pads.
- If shims are rusted or show peeling of rubber coat, replace them with new shims.

BR-27

## REAR DISC BRAKE

### Pad Replacement (Cont'd)

- It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly. In this case, suspend cylinder body with wire so as not to stretch brake hose.
- Burnish the brake contact surfaces after refinishing or replacing drums or rotors, after replacing pads or linings, or if a soft pedal occurs at very low mileage. Refer to "Brake Burnishing Procedure", "ON-VEHICLE SERVICE", BR-8.

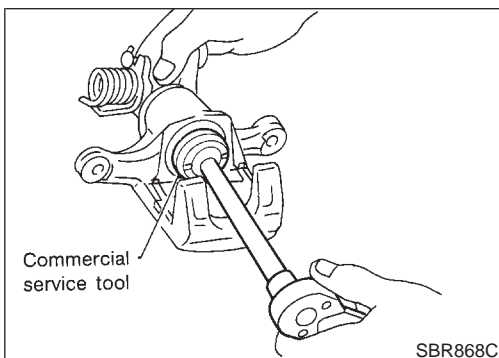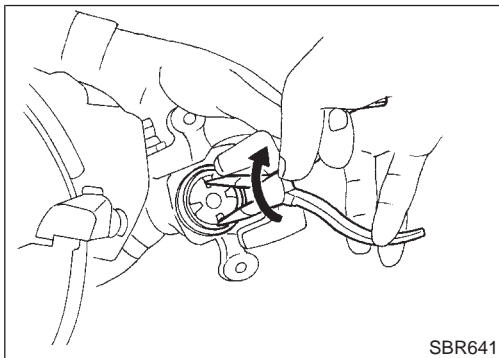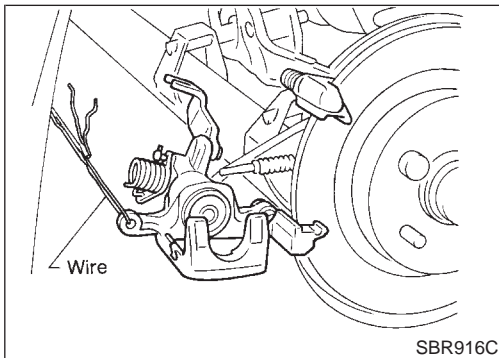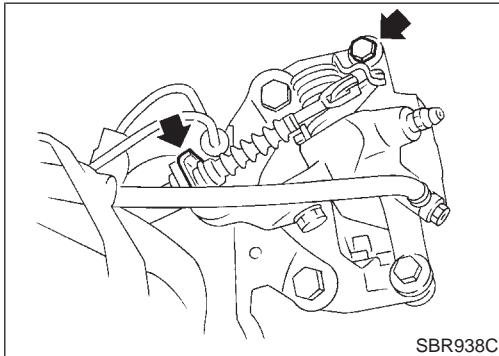

1. Remove master cylinder reservoir cap.
2. Remove brake cable mounting bolt and lock spring.
3. Release parking brake control lever, then disconnect cable from the caliper.
4. Remove upper pin bolt.
5. Open cylinder body downward. Then remove pad with retainers and inner and outer shims.


#### Standard pad thickness:

10 mm (0.39 in)


#### Pad wear limit:

1.5 mm (0.059 in)


6. When installing new pads, push piston into cylinder body by gently turning piston clockwise, as shown. **Carefully monitor brake fluid level because brake fluid will return to reservoir when pushing back piston.**

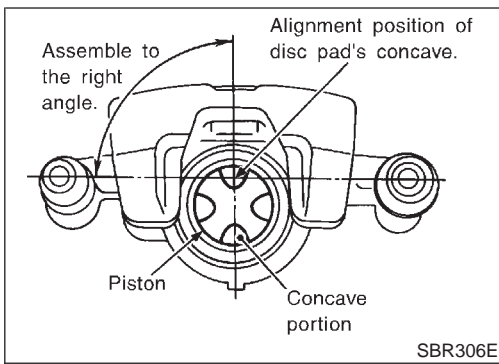

7. Adjust the piston to the right angle as shown in the figure.

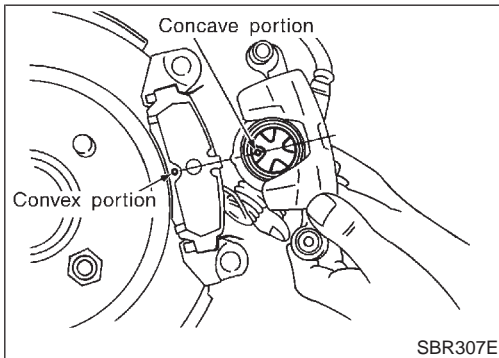

8. As shown in the figure, align the piston's concave portion to the pad's convex portion, then install the cylinder body to the torque member.

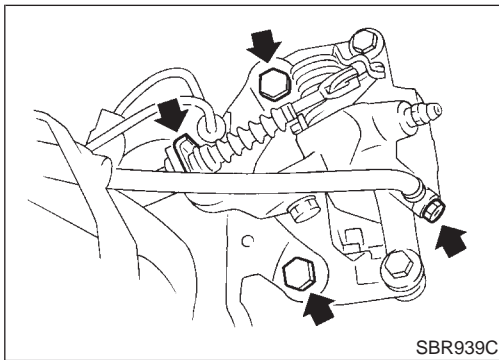

## Removal

NFBR0039

### **WARNING:**

**Clean brake pads with a vacuum dust collector to minimize the hazard of airborne particles or other materials.**






1. Remove brake cable mounting bolt and lock spring.
2. Release parking brake control lever, then disconnect cable from the caliper.
3. Remove torque member fixing bolts and connecting bolt.

**It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly. In this case, suspend caliper assembly with wire so as not to stretch brake hose.**

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# REAR DISC BRAKE

## Disassembly

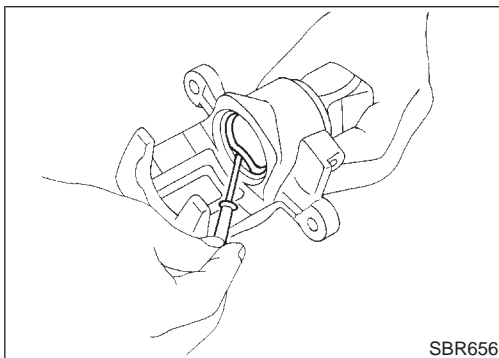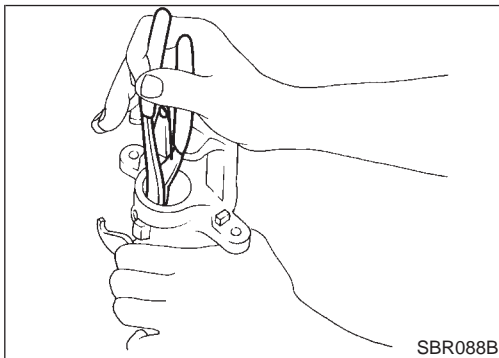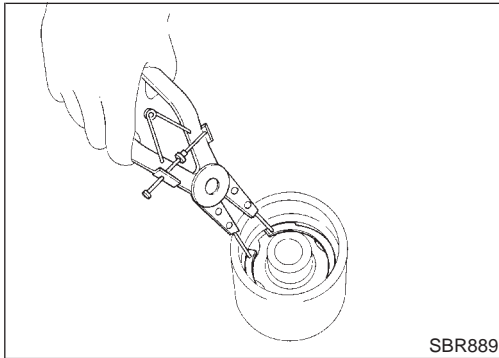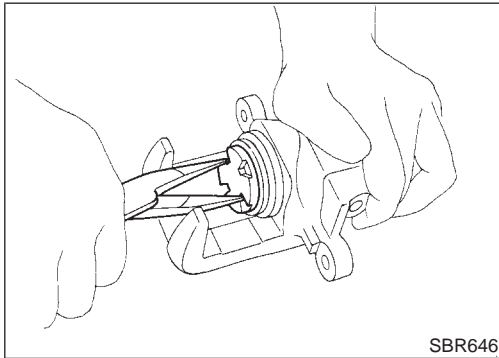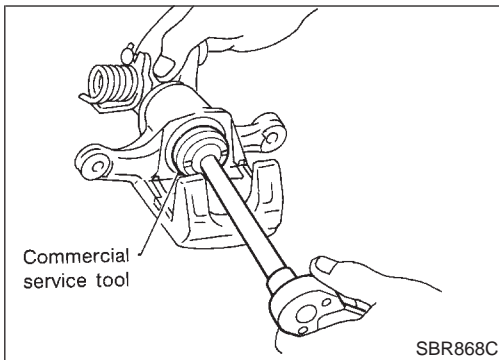

## Disassembly

NFBR0040

1. Remove piston by turning it counterclockwise with suitable commercial service tool or long nose pliers.

2. Pry off ring A from piston with suitable pliers and remove adjusting nut.


3. Disassemble cylinder body.

- a. Pry off ring B with suitable pliers, then remove spring cover, spring and seat.

- b. Pry off ring C, then remove key plate, push rod and rod.

- c. Remove piston seal.

**Be careful not to damage cylinder body.**

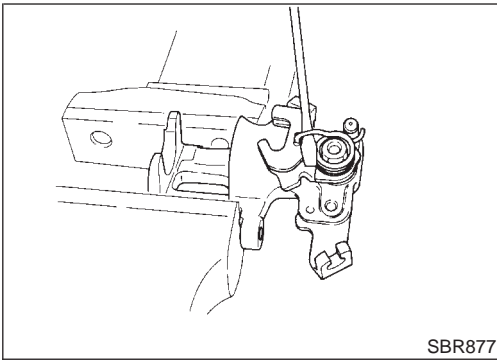

- Remove return spring, toggle lever and cable guide.

GI  
MA  
EM  
LC

## Inspection

### CALIPER

NFBR0041

**CAUTION:**

NFBR0041S01

Use brake fluid to clean cylinder. Never use mineral oil.

### Cylinder Body

NFBR0041S0101

- Check inside surface of cylinder for score, rust, wear, damage or presence of foreign materials. If any of the above conditions are observed, replace cylinder body.
- Minor damage from rust or foreign materials may be eliminated by polishing surface with a fine emery paper. Replace cylinder body if necessary.

EC  
FE  
CL  
MT

### Torque Member

NFBR0041S0102

Check for wear, cracks or other damage. Replace if necessary.

### Piston

NFBR0041S0103

**CAUTION:**

Piston sliding surface is plated. Do not polish with emery paper even if rust or foreign matter is stuck to sliding surface.

Check piston for score, rust, wear, damage or presence of foreign materials.

Replace if any of the above conditions are observed.

AT  
AX  
SU

### Pin and Pin Boot


NFBR0041S0104

Check for wear, cracks or other damage.

Replace if any of the above conditions are observed.

BR  
ST

RS  
BT

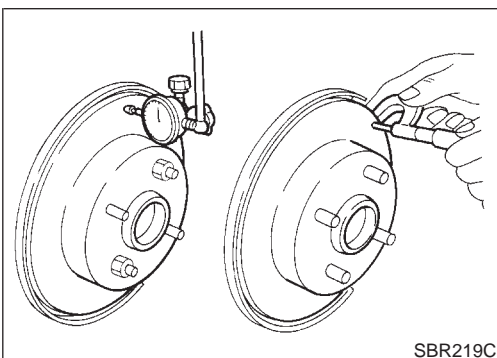

## ROTOR

### Rubbing Surface

NFBR0041S02

Check rotor for roughness, cracks or chips.

NFBR0041S0201

### Runout

NFBR0041S0202

- Secure rotor to wheel hub with two nuts (M12 x 1.25).
- Check runout using a dial indicator.

SC  
EL  
IDX

Make sure that axial end play is within the specifications before measuring. Refer to AX section ("REAR WHEEL BEARING", "On-vehicle Service").

# REAR DISC BRAKE

Inspection (Cont'd)


3. Change relative positions of rotor and wheel hub so that runout is minimized.

**Maximum runout:**  
**0.07 mm (0.0028 in)**

## Thickness

**Rotor repair limit:**  
**Standard thickness**  
**9 mm (0.35 in)**  
**Minimum thickness**  
**8 mm (0.315 in)**  
**Thickness variation (At least 8 portions)**  
**Maximum 0.02 mm (0.0008 in)**


NFBR0041S0203

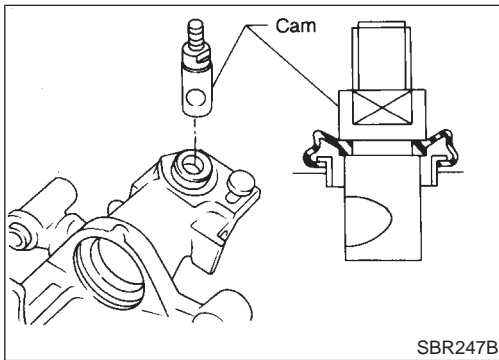


## Assembly

1. Insert cam with depression facing towards open end of cylinder.

NFBR0042

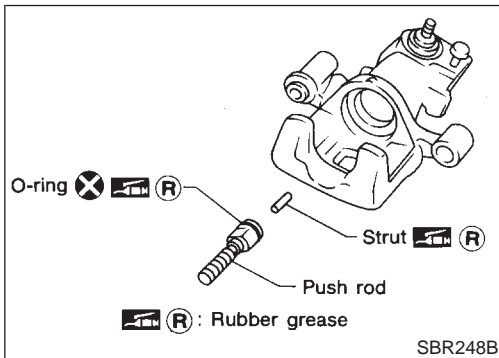

2. Generously apply rubber grease to strut and push rod to make insertion easy.

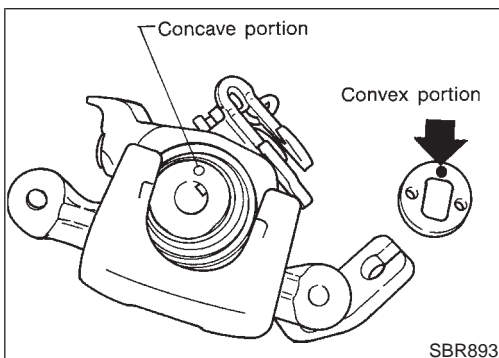


3. Fit push rod into square hole in key plate. Also match convex portion of key plate with concave portion of cylinder.



# REAR DISC BRAKE

Assembly (Cont'd)

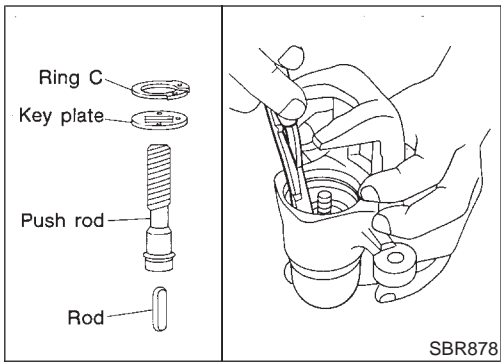


4. Install ring C with a suitable tool.

GI

MA

EM

LC

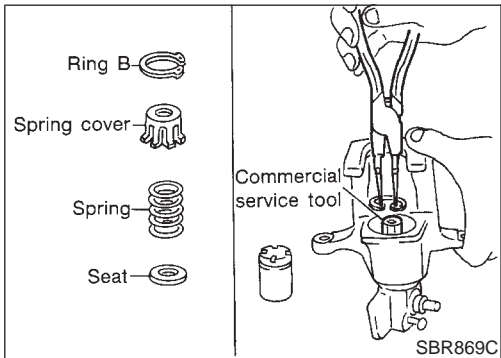


5. Install seat, spring, spring cover and ring B with suitable press and drift.

EC

FE

CL

MT

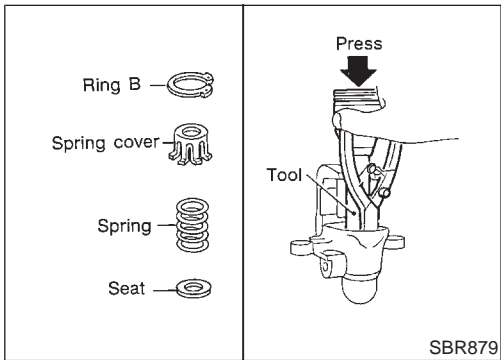


AT

AX

SU

**BR**

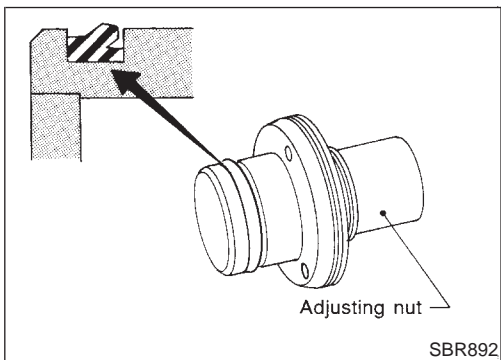


6. Install cup in the specified direction.

ST

RS

BT

HA

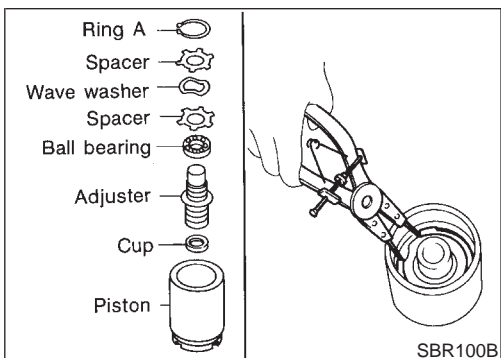

7. Install cup, adjuster, bearing, spacers, washers and ring A with a suitable tool.


SC

EL



IDX

# REAR DISC BRAKE


Assembly (Cont'd)

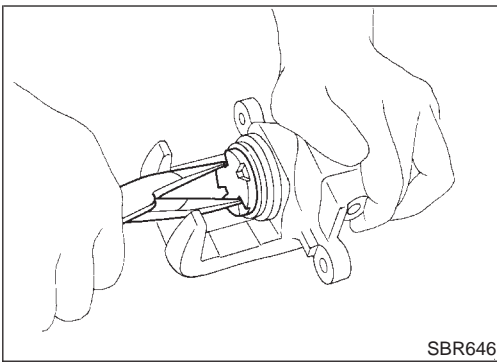


8. Insert piston seal into groove on cylinder body.
9. With piston boot fitted to piston, insert piston boot into groove on cylinder body and fit piston by turning it clockwise with long nose pliers, or suitable tool.

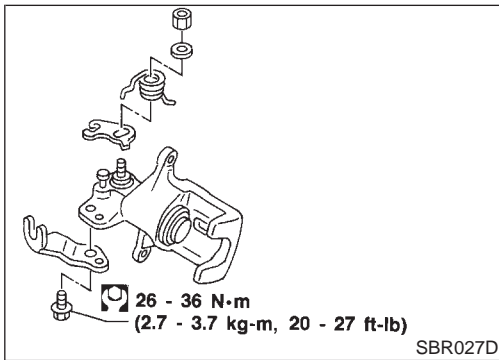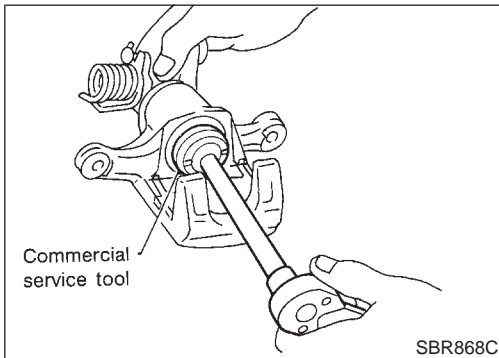

10. Fit toggle lever, return spring and cable guide.

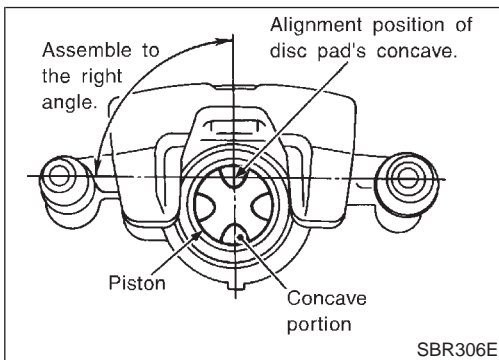

11. Adjust the piston to the right angle as shown in the figure.

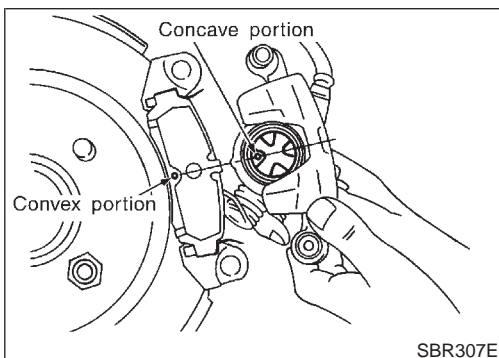

## Installation

### CAUTION:


- Refill with new brake fluid "DOT 3".
- Never reuse drained brake fluid.

1. Install caliper assembly.
- Align the piston's concave portion to the pad's convex portion, then install the cylinder body to the torque member.
2. Install brake hose to caliper securely.
3. Install all parts and secure all bolts.
4. Bleed air. Refer to "Bleeding Brake System", BR-9.

NFBR0043

## Components

NFBR0044

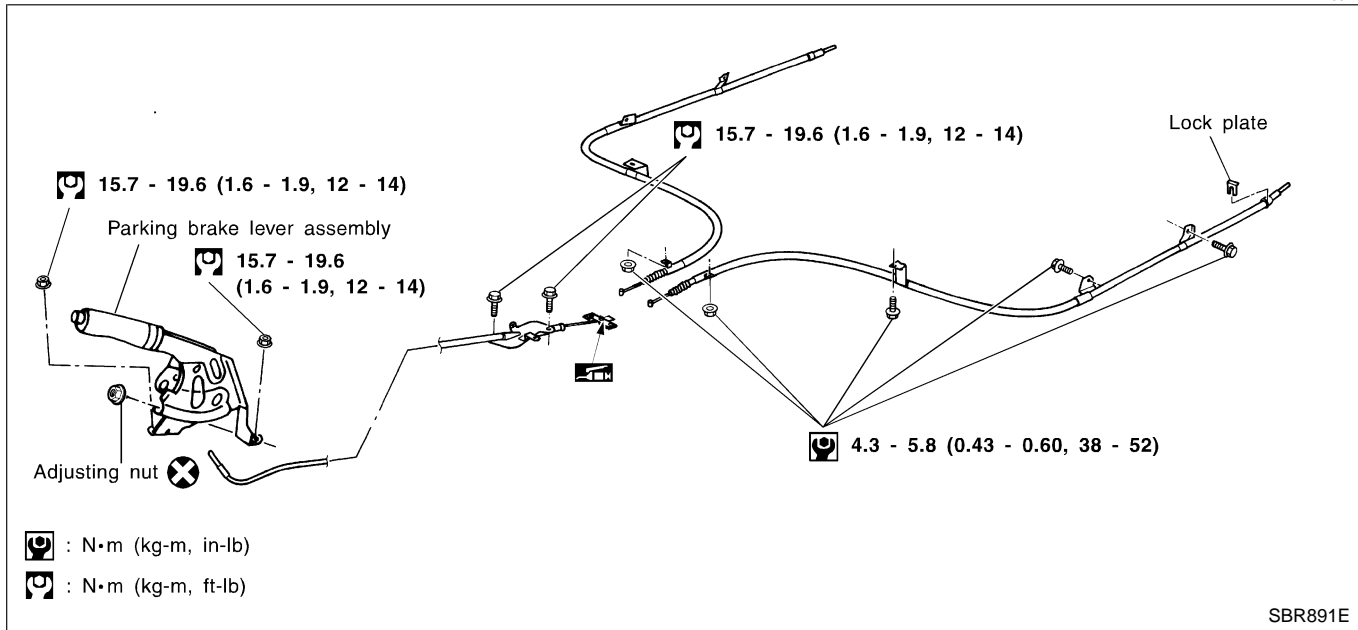

GI

MA

EM


LC

EC

FE

CL

MT

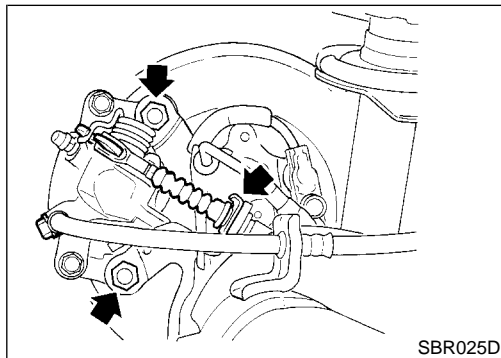

## Removal and Installation

NFBR0045

1. To remove parking brake cable, first remove center console.
2. Disconnect warning switch connector.
3. Remove bolts and nuts, slacken off and remove adjusting nut.
4. Remove lock plate and disconnect cable.

AT

AX

SU

BR

## Inspection

NFBR0046

1. Check control lever assembly for wear or other damage. Replace if necessary.
2. Check wires for discontinuity or deterioration. Replace if necessary.
3. Check warning lamp and switch. Replace if necessary.
4. Check parts at each connecting portion and, if found deformed or damaged, replace.

ST

RS

BT

HA


SC

EL

IDX

# PARKING BRAKE CONTROL (CENTER LEVER TYPE)

Adjustment

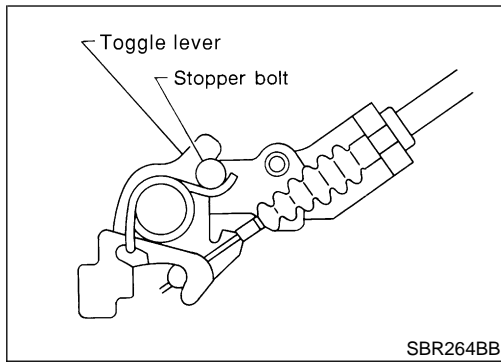

## Adjustment

=NFBR0047

**Pay attention to the following points after adjustment.**

- 1) There is no drag when control lever is being released.
- 2) Be sure that toggle lever returns to stopper when parking brake lever is released.
1. Loosen parking brake cable.
2. Depress brake pedal fully more than five times.
3. Operate control lever 10 times or more with a full stroke [203.5 mm (8.01 in)].
4. Adjust control lever or pedal by turning adjusting nut.
5. Pull control lever with specified amount of force. Check lever stroke and ensure smooth operation.

**Number of notches:**

**10 - 11 [196 N (20 kg, 44 lb)]**

6. Bend warning lamp switch plate. Warning lamp should come on when lever is pulled "A" notches. It should go off when the lever is fully released.

**Number of "A" notches: 1**

**Purpose**

The ABS consists of electronic and hydraulic components. It allows for control of braking force so that locking of the wheels can be avoided.

NFBR0100

The ABS:

- 1) Ensures proper tracking performance through steering wheel operation.
- 2) Enables obstacles to be avoided through steering wheel operation.
- 3) Ensures vehicle stability by preventing flat spins.


**ABS (Anti-Lock Brake System) Operation**

NFBR0101

- When the vehicle speed is less than 10 km/h (6 MPH) this system does not work.
- The Anti-Lock Brake System (ABS) has self-test capabilities. The system turns on the ABS warning lamp for 1 second after turning the ignition switch ON. The system performs another test the first time the vehicle reaches 6 km/h (4 MPH). A mechanical noise may be heard as the ABS performs a self-test. This is a normal part of the self-test feature. If a malfunction is found during this check, the ABS warning lamp will come on.
- During ABS operation, a mechanical noise may be heard. This is a normal condition.

**ABS Hydraulic Circuit**

NFBR0102

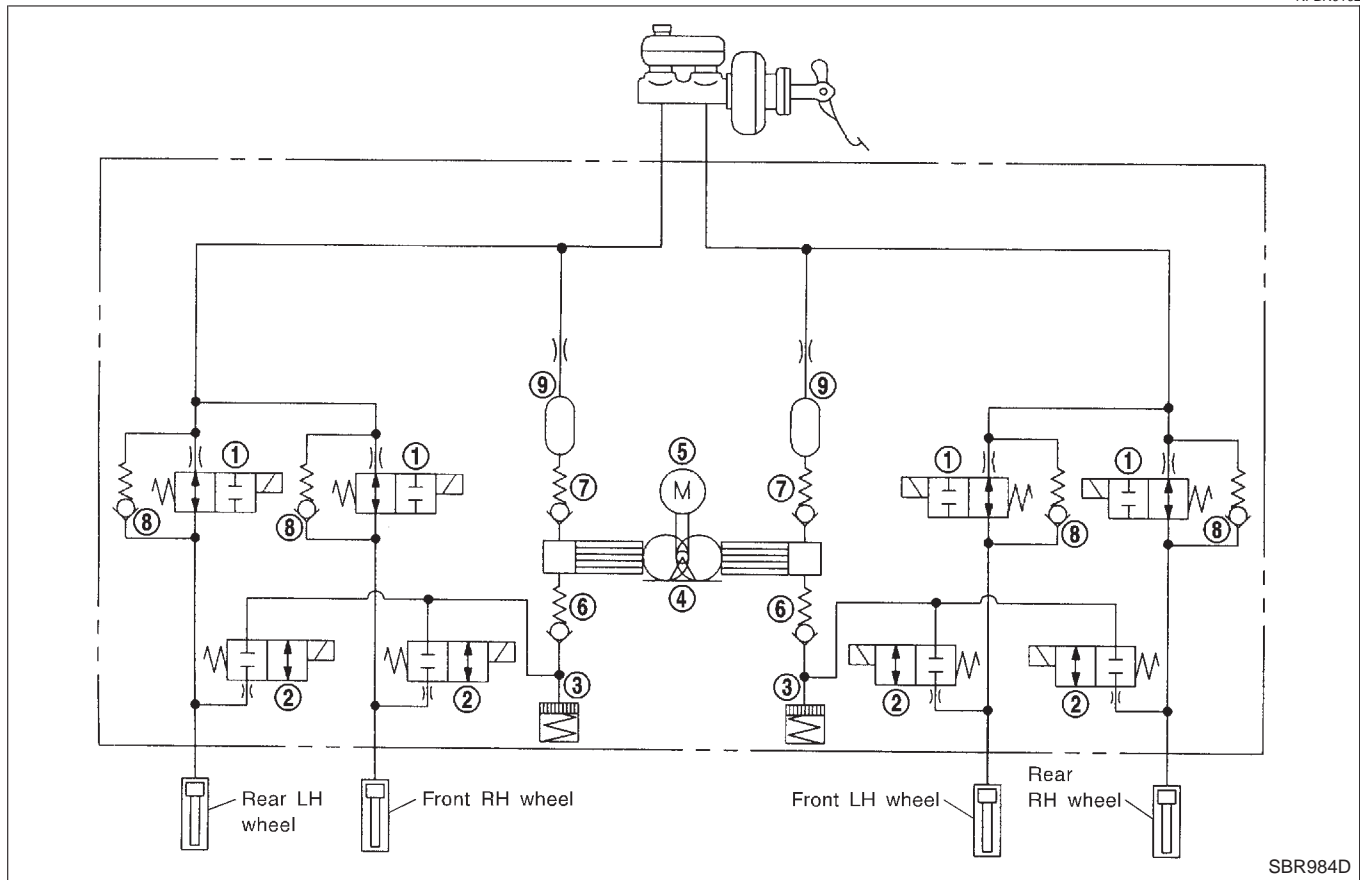



SBR984D

- |                          |                |                       |
|--------------------------|----------------|-----------------------|
| 1. Inlet solenoid valve  | 4. Pump        | 7. Outlet valve       |
| 2. Outlet solenoid valve | 5. Motor       | 8. Bypass check valve |
| 3. Reservoir             | 6. Inlet valve | 9. Damper             |

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

System Components

NFBR0103

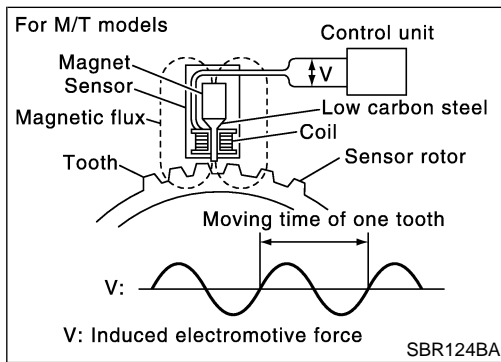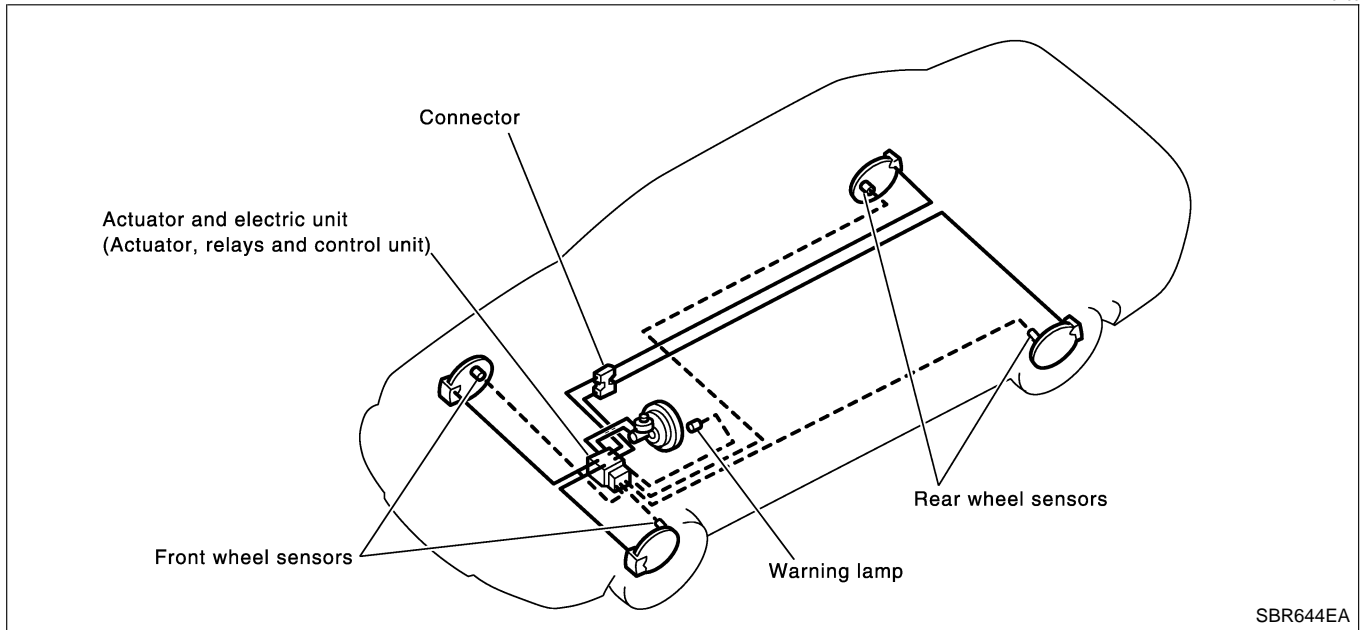

System Description


NFBR0104

SENSOR

NFBR0104S01


For M/T models:

The sensor unit consists of a gear-shaped sensor rotor and a sensor element. The element contains a bar magnet around which a coil is wound. The sensor is installed on the back side of the brake rotor. Sine-wave current is generated by the sensor as the wheel rotates. The frequency and voltage increase(s) as the rotating speed increases.

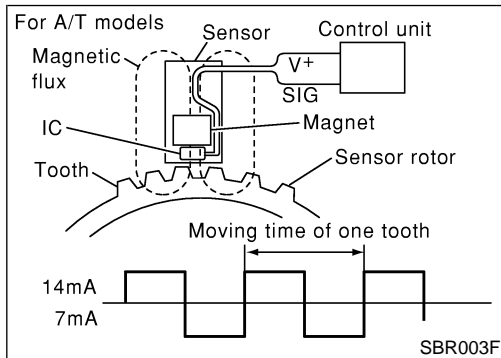

For A/T models:

The front sensor units consist of a gear-shaped sensor rotor and a sensor element. The element contains a magnet and IC. The front wheel sensors are installed on the front of the wheel knuckles. As the wheel rotates, the sensor generates a square-wave signal. The frequency increase as the wheel speed increase.

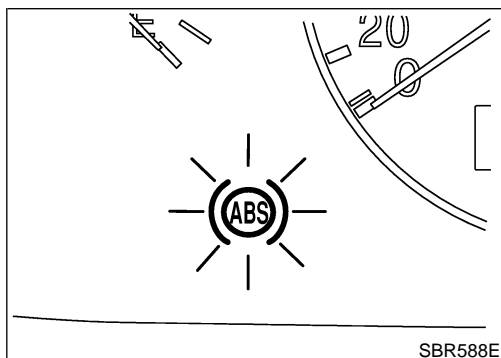


CONTROL UNIT

NFBR0104S02

The control unit computes the wheel rotating speed by the signal current sent from the sensor. Then it supplies a DC current to the actuator solenoid valve. It also controls ON-OFF operation of the valve relay and motor relay. If any electrical malfunction should be detected in the system, the control unit causes the warning lamp to light up. In this condition, the ABS will be deactivated by the control unit, and the vehicle's brake system reverts to normal operation.


NFBR0104S03

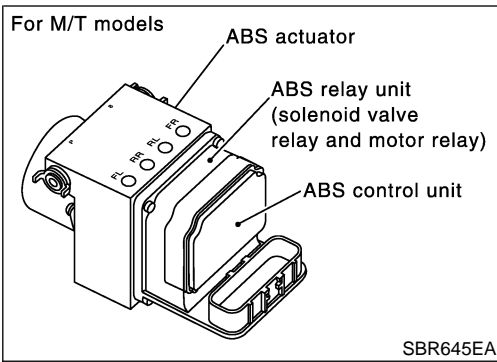

## ABS ACTUATOR AND ELECTRIC UNIT

The ABS actuator and electric unit contains:

- An electric motor and pump
- Two relays
- Eight solenoid valves, each inlet and outlet for
  - LH front
  - RH front
  - LH rear
  - RH rear
- ABS control unit

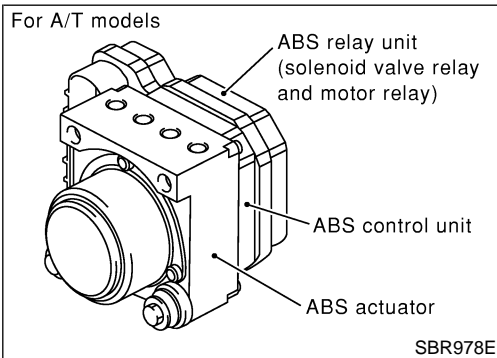

This components controls the hydraulic circuit and increases, holds or decreases hydraulic pressure to all or individual wheels. The ABS actuator and electric unit are not disassemble.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT

AT  
AX  
SU

**BR**

## ABS Actuator Operation


NFBR0104S0301

		Inlet solenoid valve	Outlet solenoid valve	
Normal brake operation		OFF (Open)	OFF (Closed)	Master cylinder brake fluid pressure is directly transmitted to caliper via the inlet solenoid valve.
ABS operation	Pressure hold	ON (Closed)	OFF (Closed)	Hydraulic circuit is shut off to hold the caliper brake fluid pressure.
	Pressure decrease	ON (Closed)	ON (Open)	Caliper brake fluid is sent to reservoir via the outlet solenoid valve. Then it is pushed up to the master cylinder by pump.
	Pressure increase	OFF (Open)	OFF (Closed)	Master cylinder brake fluid pressure is transmitted to caliper.

ST  
RS  
BT  
HA  
SC  
EL  
IDX

Component Parts and Harness Connector Location

NFBR0105

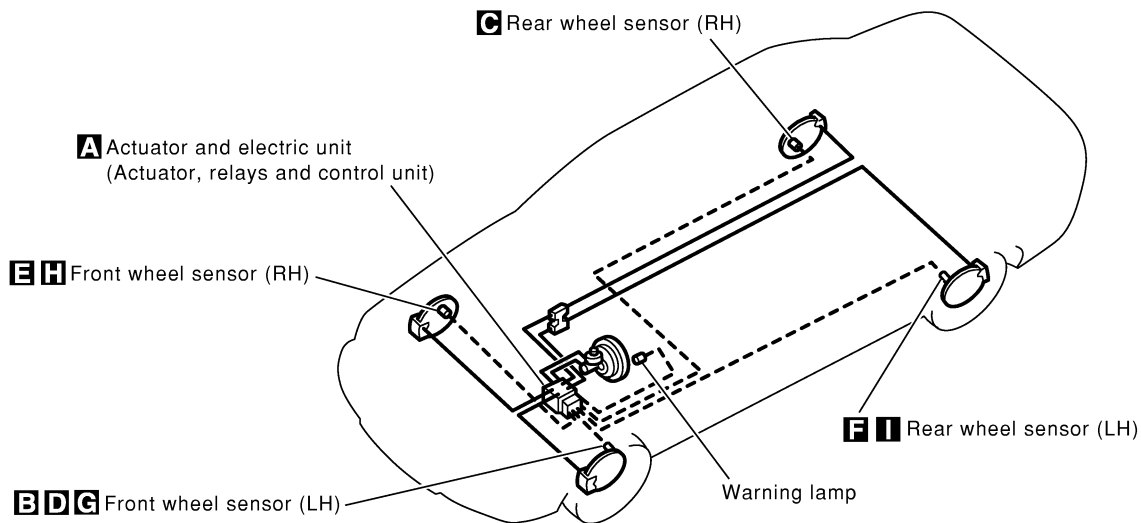


<p><b>A</b> ABS actuator and electric unit</p> <p>Brake master cylinder</p>	<p><b>B</b></p> <p>Front wheel sensor</p>	<p><b>C</b></p> <p>Rear wheel sensor</p>
<p><b>D</b> M/T models</p> <p>Front left wheel sensor connector (E145)</p> <p>Brake master cylinder</p>	<p><b>E</b> M/T models</p> <p>Front right wheel sensor connector (E76)</p>	<p><b>F</b> M/T models</p> <ul style="list-style-type: none"> <li>Rear left wheel sensor connector (B28)</li> <li>(Rear right wheel sensor connector (B16))</li> </ul> <p>Rear tire</p>
<p><b>G</b> A/T models</p> <p>Front left wheel sensor connector (E170)</p>	<p><b>H</b> A/T models</p> <p>Front right wheel sensor connector (E159)</p>	<p><b>I</b> A/T models</p> <ul style="list-style-type: none"> <li>Rear left wheel sensor connector (B54)</li> <li>(Rear right wheel sensor connector (B55))</li> </ul> <p>Rear tire</p>



Schematic (For M/T models)

NFBR0106





GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
**BR**  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

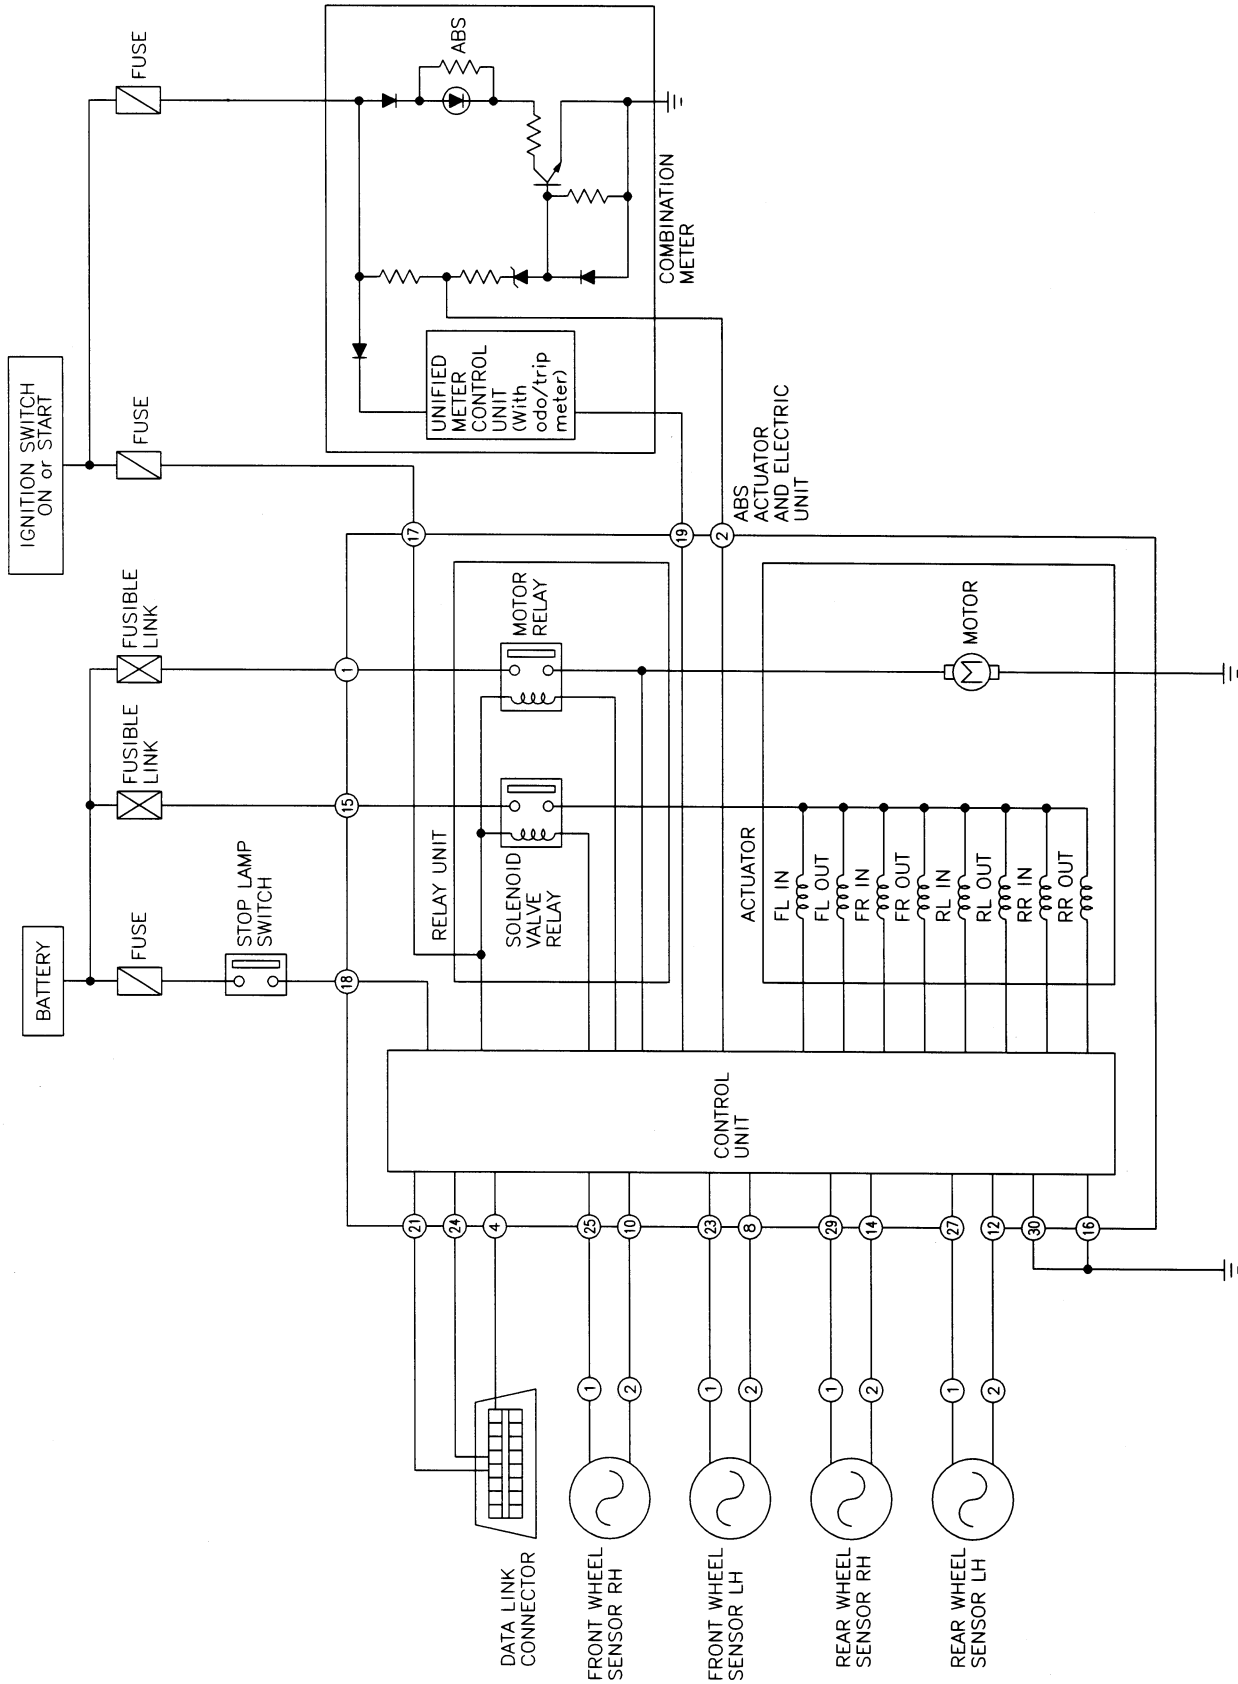

Wiring Diagram — ABS — (For M/T models)

NFBR0107

BR-ABS-01

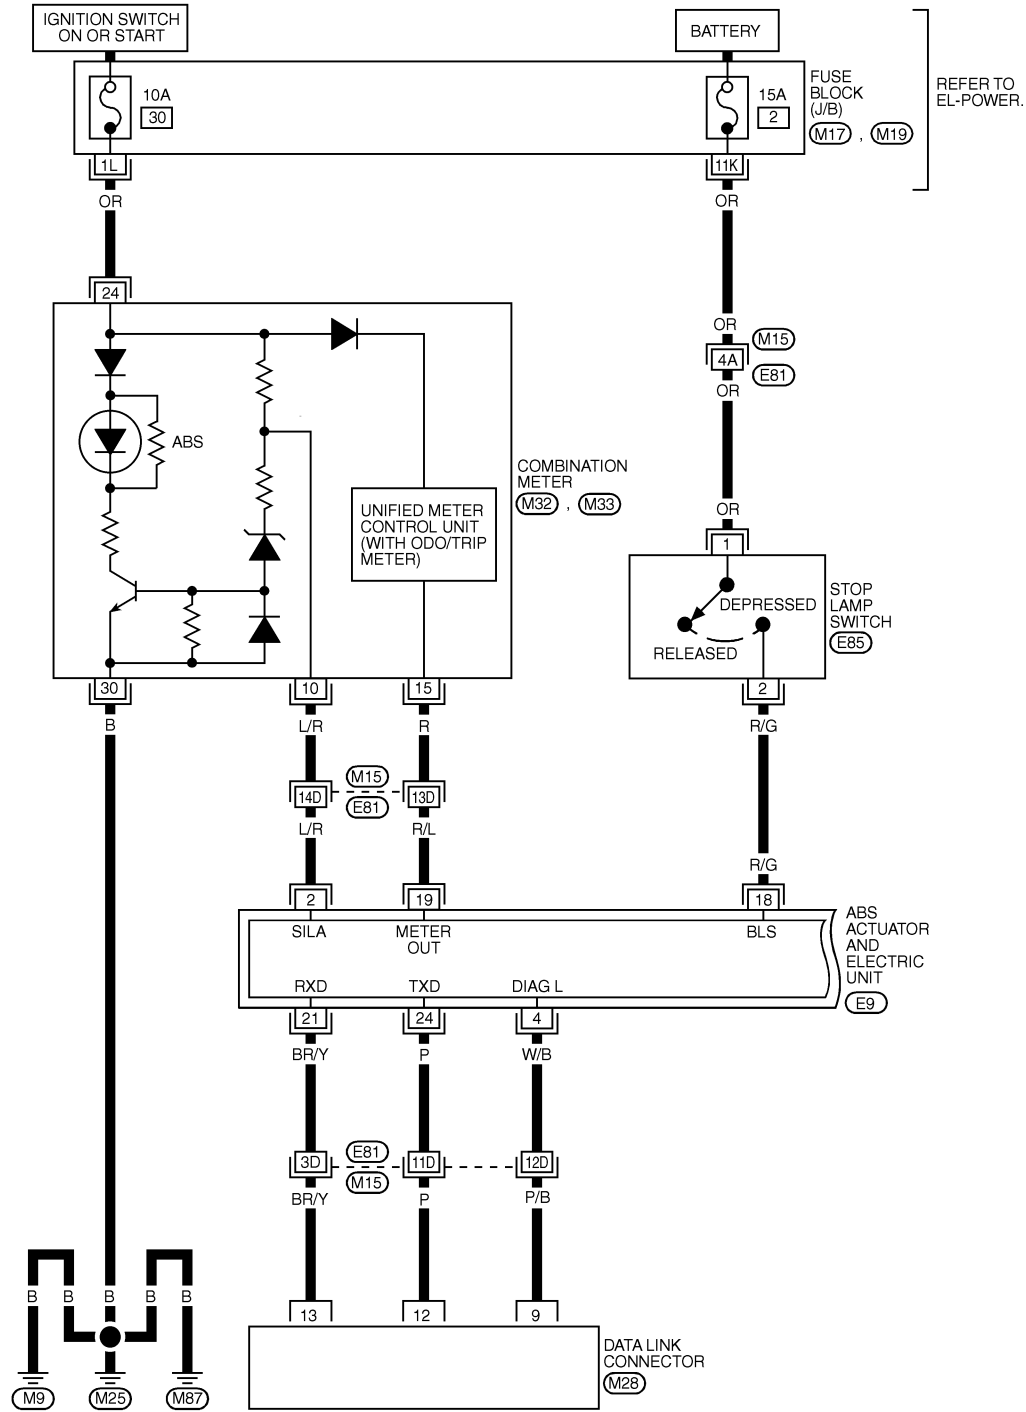


REFER TO THE FOLLOWING.  
 (M15) -SUPER  
 MULTIPLE JUNCTION (SMJ)  
 (M17) . (M19) -FUSE BLOCK-  
 JUNCTION BOX (J/B)

# DESCRIPTION

**ABS**



Wiring Diagram — ABS — (For M/T models) (Cont'd)

BR-ABS-02

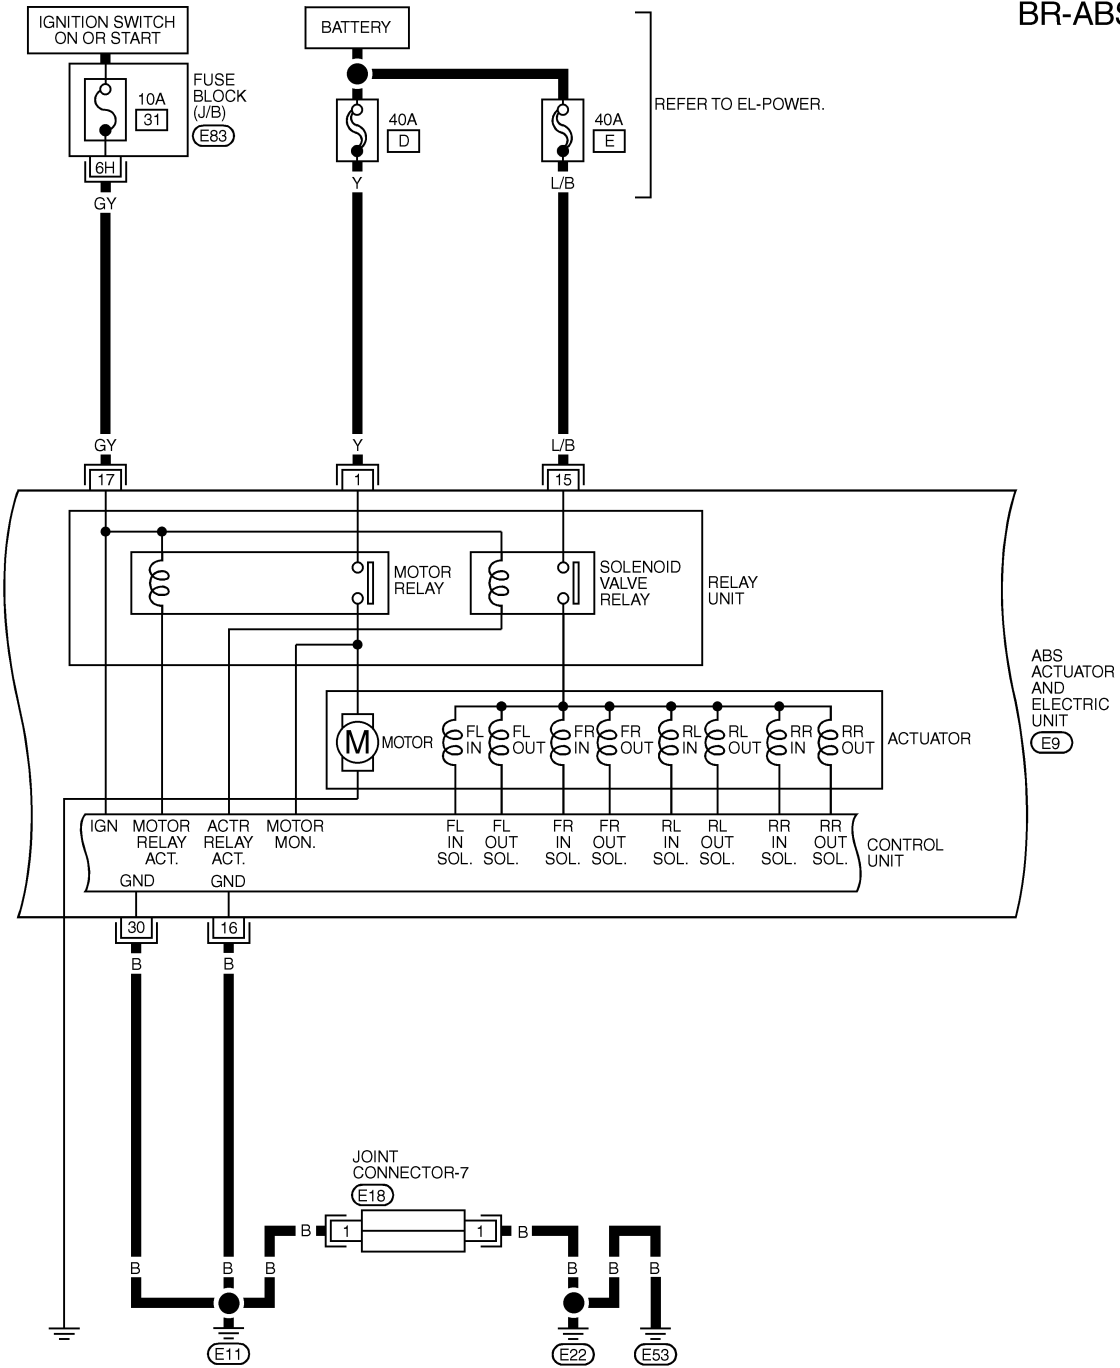

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
**BR**  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

ABS ACTUATOR AND ELECTRIC UNIT (E9)



REFER TO THE FOLLOWING.  
(E83) - FUSE BLOCK-JUNCTION BOX (J/B)




MBR616A

# DESCRIPTION

ABS

Wiring Diagram — ABS — (For M/T models) (Cont'd)

BR-ABS-03

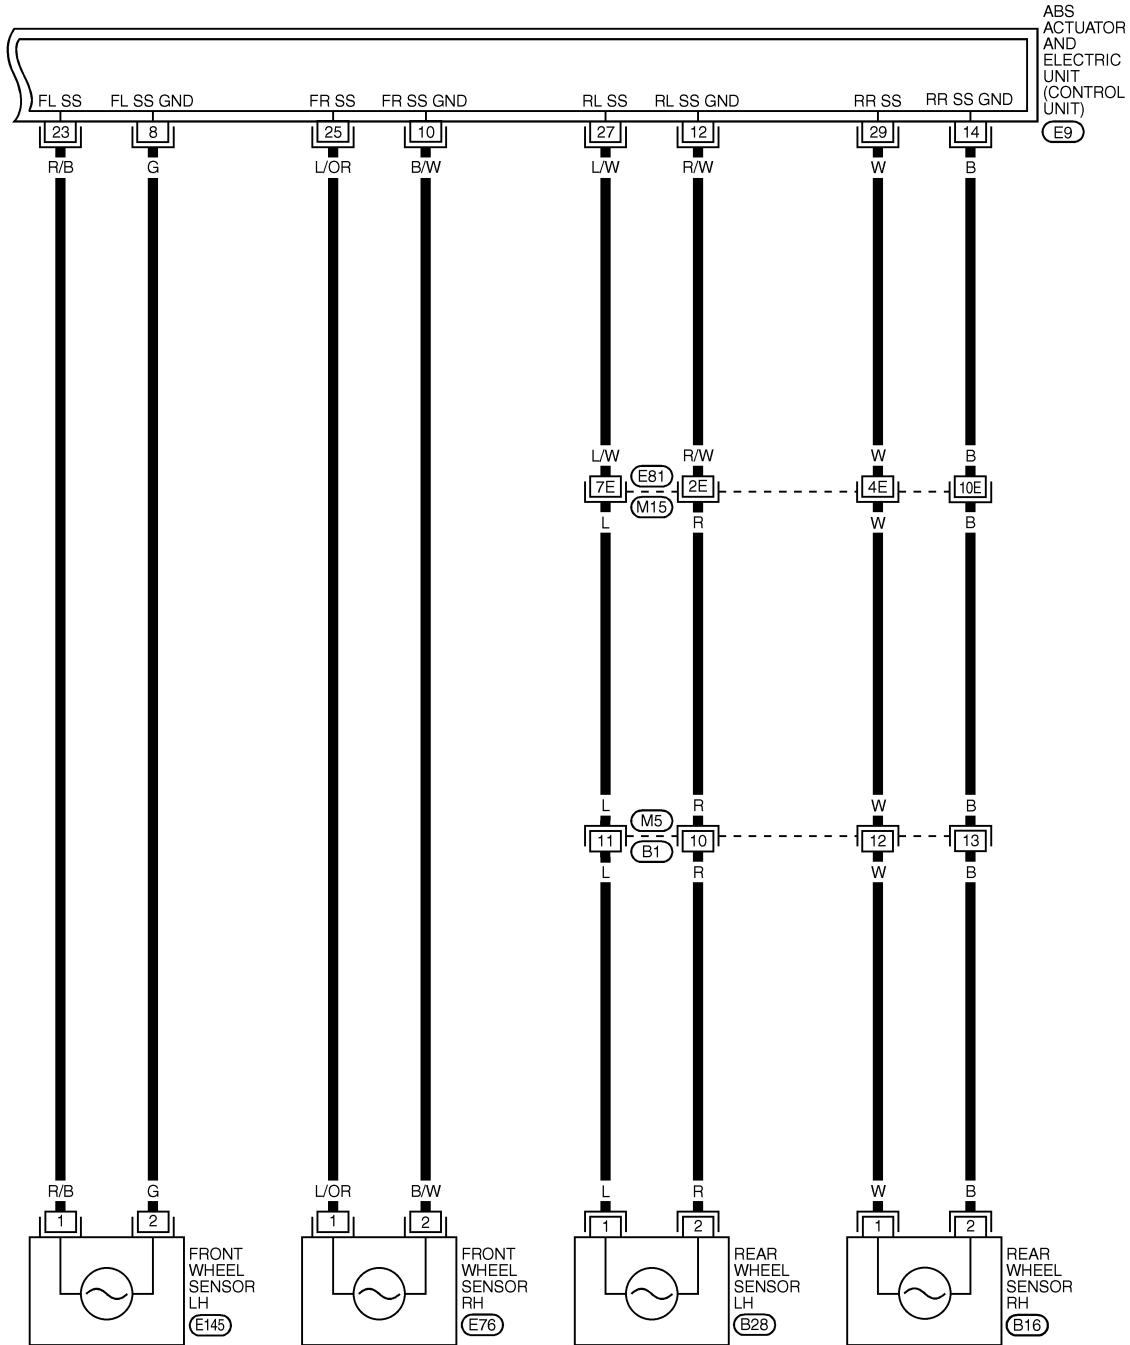


REFER TO THE FOLLOWING.  
 (M15) -SUPER  
 MULTIPLE JUNCTION (SMJ)

MBR617A

Schematic (For A/T models)

NFBR0210

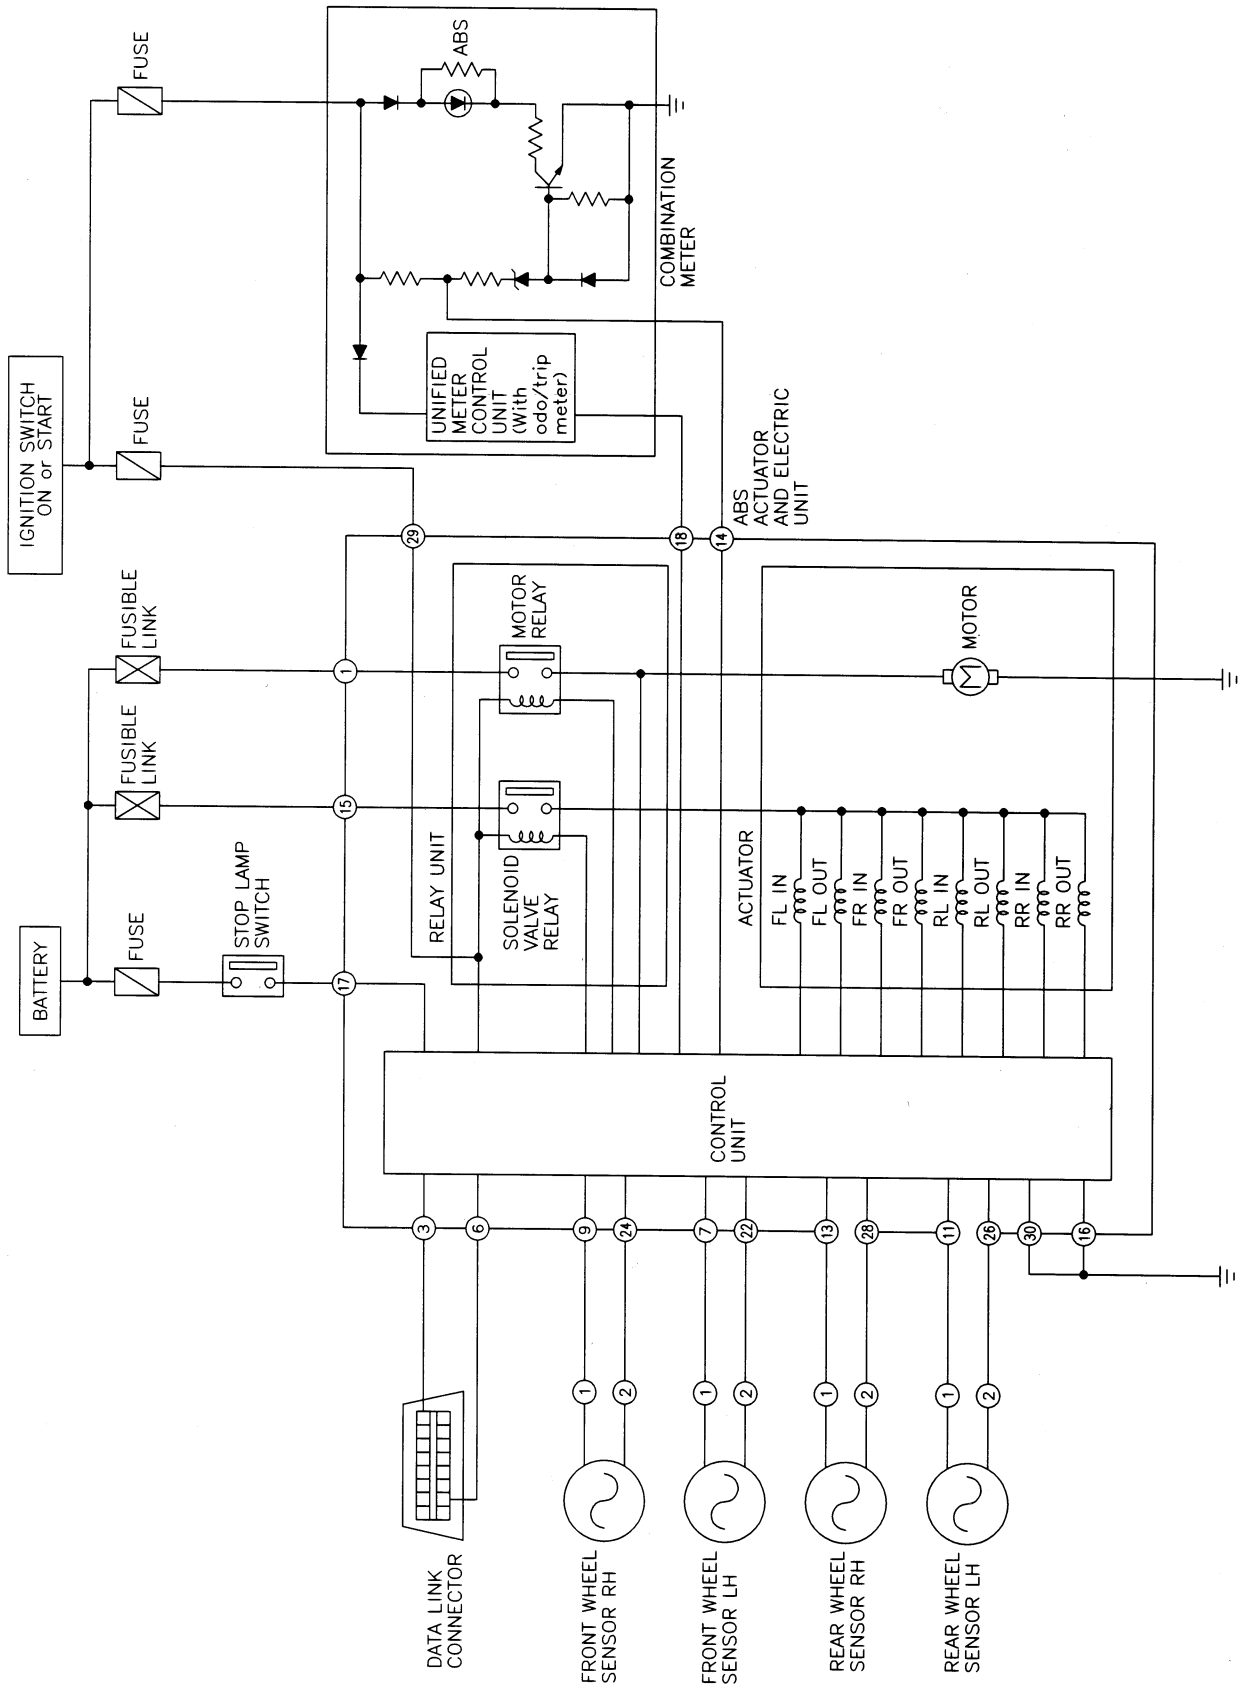


- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- AX
- SU
- BR**
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

Wiring Diagram — ABS — (For A/T models)




NFBR0211

BR-ABS-04

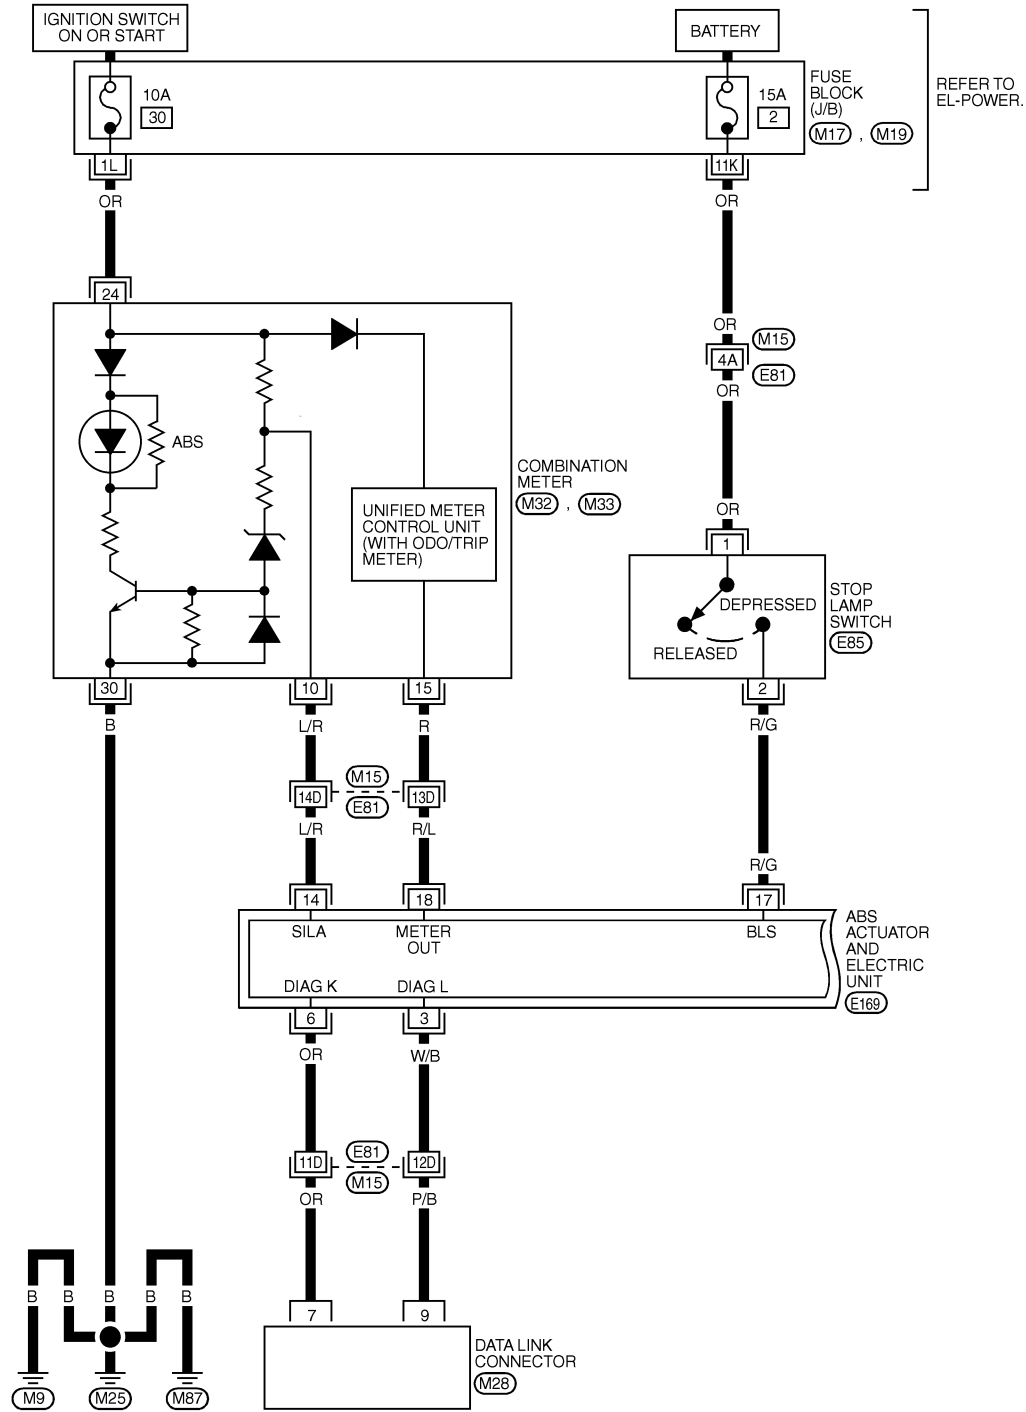

REFER TO EL-POWER.

REFER TO THE FOLLOWING.  
 (M15) -SUPER  
 MULTIPLE JUNCTION (SMJ)  
 (M17) . (M19) -FUSE BLOCK-  
 JUNCTION BOX (J/B)




# DESCRIPTION

**ABS**

Wiring Diagram — ABS — (For A/T models) (Cont'd)

BR-ABS-05

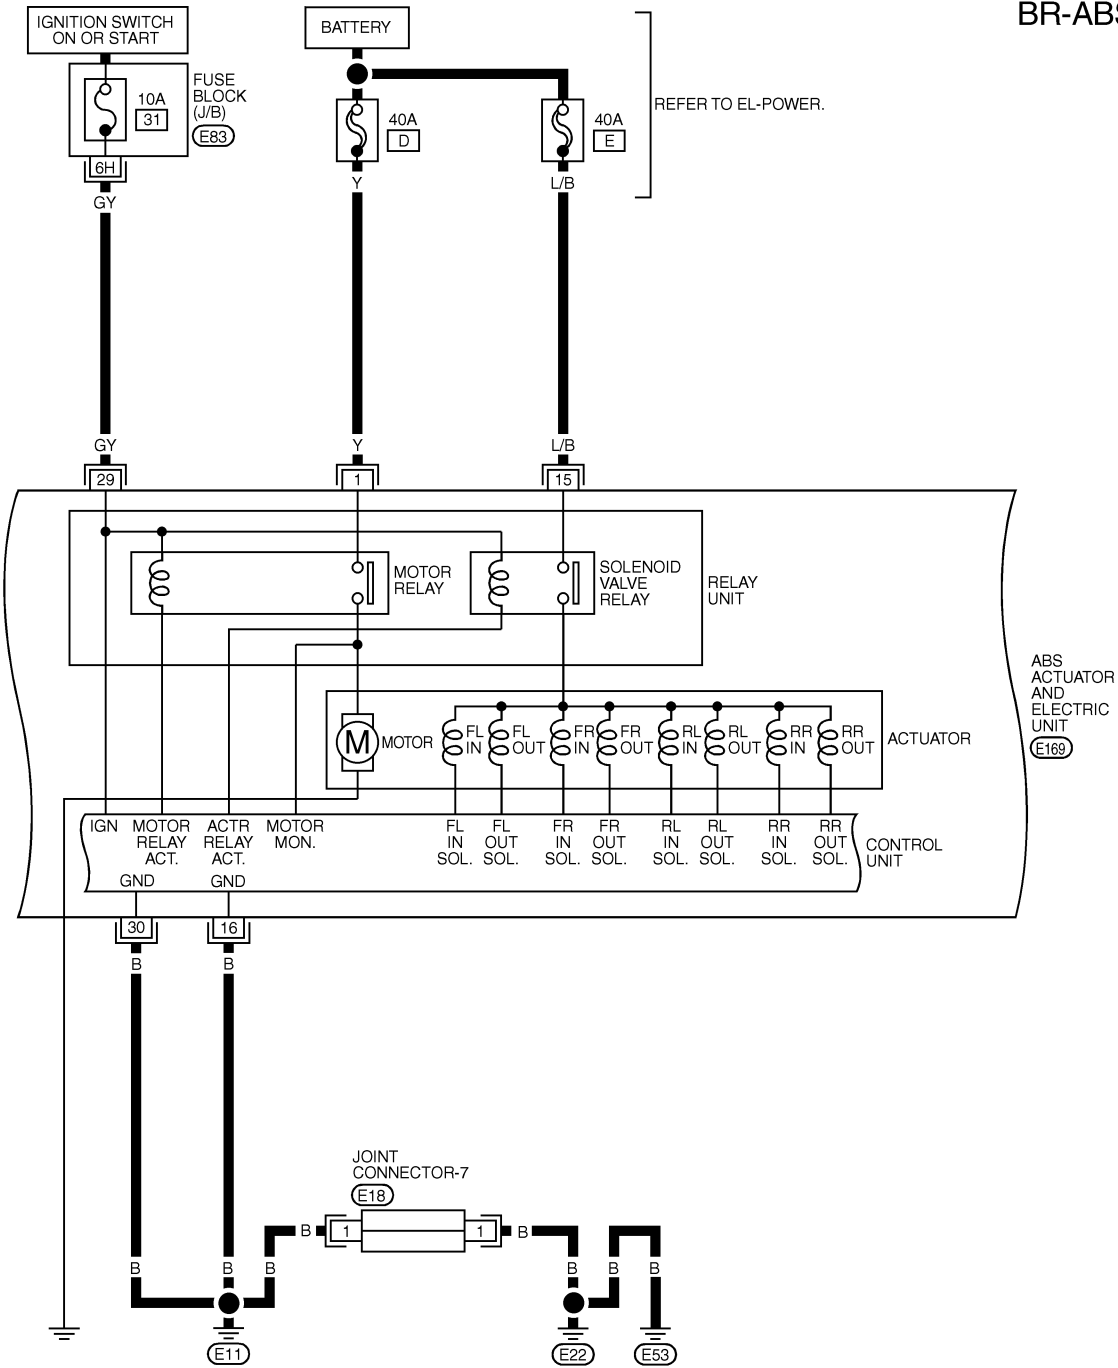


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
**BR**  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

ABS ACTUATOR AND ELECTRIC UNIT (E169)

REFER TO EL-POWER.

REFER TO THE FOLLOWING.  
(E83) - FUSE BLOCK-JUNCTION BOX (J/B)






MBR620A

# DESCRIPTION

ABS

Wiring Diagram — ABS — (For A/T models) (Cont'd)

BR-ABS-06

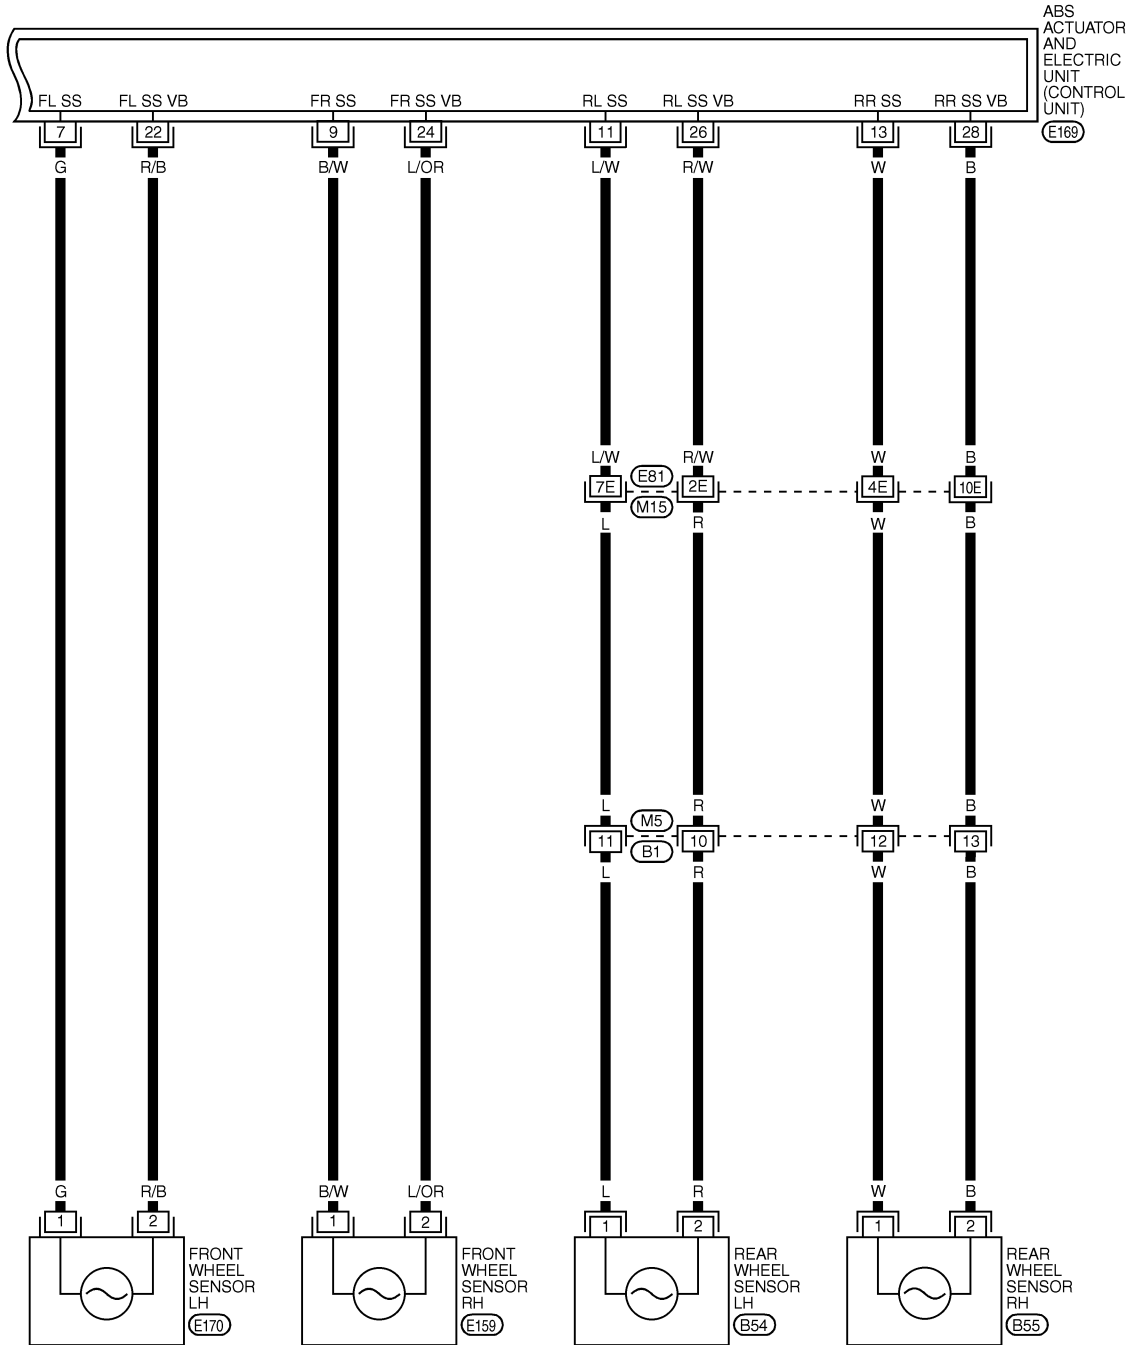

REFER TO THE FOLLOWING.  
 (M15) -SUPER  
 MULTIPLE JUNCTION (SMJ)

MBR621A



# DESCRIPTION

**ABS**

*Wiring Diagram — ABS — (For A/T models) (Cont'd)*

## For M/T models

ABS ACTUATOR AND ELECTRIC UNIT TERMINALS AND REFERENCE VALUE (MEASURED BETWEEN EACH TERMINAL AND 16 OR 30).

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC)
1	Y	POWER SOURCE	—	BATTERY VOLTAGE
2	L/R	ABS WARNING LAMP IN COMBINATION METER	WHEN ABS WARNING LAMP IS ACTIVE WHEN ABS WARNING LAMP IS NOT ACTIVE	BATTERY VOLTAGE APPROX. 0V
4	W/B	DATA LINK CONNECTOR	—	—
8	G	FRONT WHEEL SENSOR LH	WHEN VEHICLE CRUISES AT 30 KM/H (19 MPH)	PULSE FRONT: APPROX. 190 HZ REAR: APPROX. 190 HZ
10	B/W	FRONT WHEEL SENSOR RH		
12	R/W	REAR WHEEL SENSOR LH		
14	B	REAR WHEEL SENSOR RH		
23	R/B	FRONT WHEEL SENSOR LH		
25	L/OR	FRONT WHEEL SENSOR RH		
27	L/W	REAR WHEEL SENSOR LH		
29	W	REAR WHEEL SENSOR RH	—	—
15	L/B	POWER SOURCE	—	BATTERY VOLTAGE
16	B	GROUND	—	—
17	GY	POWER SOURCE	IGN ON IGN OFF	BATTERY VOLTAGE APPROX. 0V
18	R/G	STOP LAMP SWITCH	WHEN BRAKE PEDAL DEPRESSED WHEN BRAKE PEDAL RELEASED	BATTERY VOLTAGE APPROX. 0V
21	BR/Y	DATA LINK CONNECTOR	—	—
24	P	DATA LINK CONNECTOR	—	—
30	B	GROUND	—	—

SBR930EA

## For A/T models

ABS ACTUATOR AND ELECTRIC UNIT TERMINALS AND REFERENCE VALUE (MEASURED BETWEEN EACH TERMINAL AND 16 OR 30).

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC)
1	Y	POWER SOURCE	—	BATTERY VOLTAGE
3	W/B	DATA LINK CONNECTOR	—	—
14	L/R	ABS WARNING LAMP IN COMBINATION METER	WHEN ABS WARNING LAMP IS ACTIVE WHEN ABS WARNING LAMP IS NOT ACTIVE	BATTERY VOLTAGE APPROX. 0V
15	L/B	POWER SOURCE	—	BATTERY VOLTAGE
16	B	GROUND	—	—
29	GY	POWER SOURCE	IGN ON IGN OFF	BATTERY VOLTAGE APPROX. 0V
17	R/G	STOP LAMP SWITCH	WHEN BRAKE PEDAL DEPRESSED WHEN BRAKE PEDAL RELEASED	BATTERY VOLTAGE APPROX. 0V
6	OR	DATA LINK CONNECTOR	—	—
30	B	GROUND	—	—

SBR044FA

## CONSULT-II

NFBR0207

### CONSULT-II APPLICATION TO ABS

NFBR0207S01

ITEM	SELF-DIAGNOSTIC RESULTS	DATA MONITOR	ACTIVE TEST
Front right wheel sensor	X	X	—
Front left wheel sensor	X	X	—
Rear right wheel sensor	X	X	—
Rear left wheel sensor	X	X	—
Stop lamp switch	—	X	—
Front right inlet solenoid valve	X	X	X
Front right outlet solenoid valve	X	X	X
Front left inlet solenoid valve	X	X	X
Front left outlet solenoid valve	X	X	X
Rear right inlet solenoid valve	X	X	X
Rear right outlet solenoid valve	X	X	X
Rear left inlet solenoid valve	X	X	X
Rear left outlet solenoid valve	X	X	X
Actuator solenoid valve relay	—	X	—
Actuator motor relay (ABS MOTOR is shown on the ACTIVE TEST screen.)	X	X	X
ABS warning lamp	—	X	—
Battery voltage	X	X	—
Control unit	X	—	—
EBD operation (For A/T models)	—	X	—
ABS operation (For A/T models)	—	X	—
EBD fail safe (For A/T models)	—	X	—
ABS fail safe (For A/T models)	—	X	—


X: Applicable

—: Not applicable

### ECU (ABS CONTROL UNIT) PART NUMBER MODE

NFBR0207S02

Ignore the ECU part number displayed in the ECU PART NUMBER MODE. Refer to parts catalog to order the ABS actuator and electric unit.

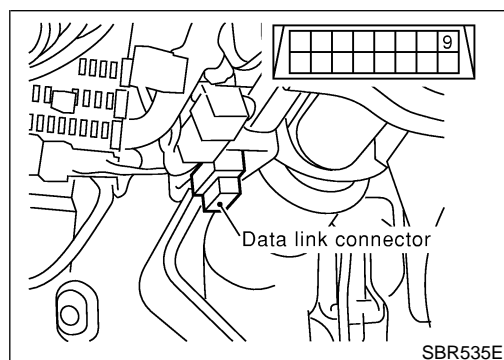

### CONSULT-II Inspection Procedure SELF-DIAGNOSIS PROCEDURE

NFBR0110


NFBR0110S01

1. Turn ignition switch OFF.
2. Connect CONSULT-II to Data Link Connector.
3. Start engine.
4. Drive vehicle over 30 km/h (19 MPH) for at least one minute.


# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

**ABS**


CONSULT-II Inspection Procedure (Cont'd)

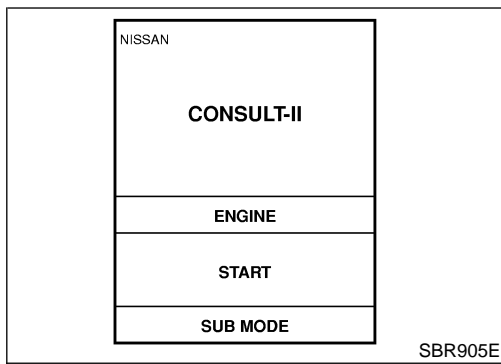


5. Stop vehicle with engine running and touch "START" on CONSULT-II screen.

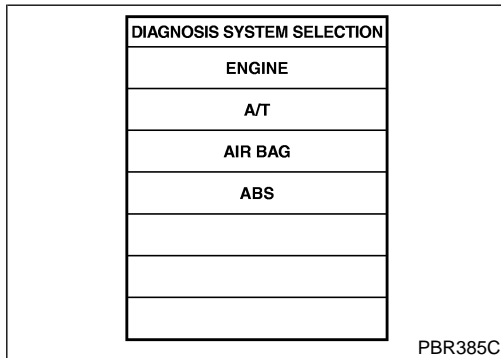

6. Touch "ABS".

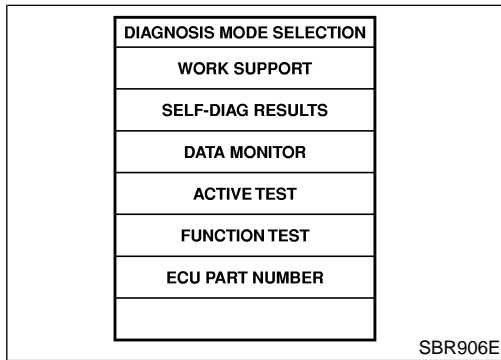

7. Touch "SELF-DIAG RESULTS".
  - The screen shows the detected malfunction and how many times the ignition switch has been turned since the malfunction.
8. Make the necessary repairs following the diagnostic procedures.

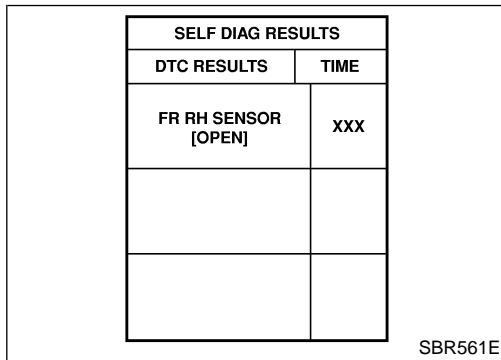

9. After the malfunctions are repaired, erase the self-diagnostic results stored in the control unit by touching "ERASE".
10. Check ABS warning lamp for deactivation after driving vehicle over 30 km/h (19 MPH) for at least one minute.

**NOTE:**  
"SELF-DIAG RESULTS" screen shows the detected malfunction and how many times the ignition switch has been turned since the malfunction.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
**BR**  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

ABS

CONSULT-II Inspection Procedure (Cont'd)

## SELF-DIAGNOSTIC RESULTS MODE (FOR M/T MODELS)


=NFBR0110S02

Diagnostic item	Diagnostic item is detected when ...	Reference Page
FR RH SENSOR [OPEN]*1	<ul style="list-style-type: none"> <li>● Circuit for front right wheel sensor is open. (An abnormally high input voltage is entered.)</li> </ul>	BR-63
FR LH SENSOR [OPEN]*1	<ul style="list-style-type: none"> <li>● Circuit for front left wheel sensor is open. (An abnormally high input voltage is entered.)</li> </ul>	BR-63
RR RH SENSOR [OPEN]*1	<ul style="list-style-type: none"> <li>● Circuit for rear right sensor is open. (An abnormally high input voltage is entered.)</li> </ul>	BR-63
RR LH SENSOR [OPEN]*1	<ul style="list-style-type: none"> <li>● Circuit for rear left sensor is open. (An abnormally high input voltage is entered.)</li> </ul>	BR-63
FR RH SENSOR [SHORT]*1	<ul style="list-style-type: none"> <li>● Circuit for front right wheel sensor is shorted. (An abnormally low input voltage is entered.)</li> </ul>	BR-63
FR LH SENSOR [SHORT]*1	<ul style="list-style-type: none"> <li>● Circuit for front left wheel sensor is shorted. (An abnormally low input voltage is entered.)</li> </ul>	BR-63
RR RH SENSOR [SHORT]*1	<ul style="list-style-type: none"> <li>● Circuit for rear right sensor is shorted. (An abnormally low input voltage is entered.)</li> </ul>	BR-63
RR LH SENSOR [SHORT]*1	<ul style="list-style-type: none"> <li>● Circuit for rear left sensor is shorted. (An abnormally low input voltage is entered.)</li> </ul>	BR-63
FR RH IN ABS SOL [OPEN]	<ul style="list-style-type: none"> <li>● Circuit for front right inlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-68
FR LH IN ABS SOL [OPEN]	<ul style="list-style-type: none"> <li>● Circuit for front left inlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-68
RR RH IN ABS SOL [OPEN]	<ul style="list-style-type: none"> <li>● Circuit for rear right inlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-68
RR LH IN ABS SOL [OPEN]	<ul style="list-style-type: none"> <li>● Circuit for rear left inlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-68
FR RH IN ABS SOL [SHORT]	<ul style="list-style-type: none"> <li>● Circuit for front right inlet solenoid valve is shorted. (An abnormally high output voltage is entered.)</li> </ul>	BR-68
FR LH IN ABS SOL [SHORT]	<ul style="list-style-type: none"> <li>● Circuit for front left inlet solenoid valve is shorted. (An abnormally high output voltage is entered.)</li> </ul>	BR-68
RR RH IN ABS SOL [SHORT]	<ul style="list-style-type: none"> <li>● Circuit for rear right inlet solenoid valve is shorted. (An abnormally high output voltage is entered.)</li> </ul>	BR-68
RR LH IN ABS SOL [SHORT]	<ul style="list-style-type: none"> <li>● Circuit for rear left inlet solenoid valve is shorted. (An abnormally high output voltage is entered.)</li> </ul>	BR-68
FR RH OUT ABS SOL [OPEN]	<ul style="list-style-type: none"> <li>● Circuit for front right outlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-68
FR LH OUT ABS SOL [OPEN]	<ul style="list-style-type: none"> <li>● Circuit for front left outlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-68
RR RH OUT ABS SOL [OPEN]	<ul style="list-style-type: none"> <li>● Circuit for rear right outlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-68
RR LH OUT ABS SOL [OPEN]	<ul style="list-style-type: none"> <li>● Circuit for rear left outlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-68
FR RH OUT ABS SOL [SHORT]	<ul style="list-style-type: none"> <li>● Circuit for front right outlet solenoid valve is shorted. (An abnormally high output voltage is entered.)</li> </ul>	BR-68
FR LH OUT ABS SOL [SHORT]	<ul style="list-style-type: none"> <li>● Circuit for front left outlet solenoid valve is shorted. (An abnormally high output voltage is entered.)</li> </ul>	BR-68

Diagnostic item	Diagnostic item is detected when ...	Reference Page
RR RH OUT ABS SOL [SHORT]	<ul style="list-style-type: none"> <li>● Circuit for rear right outlet solenoid valve is shorted. (An abnormally high output voltage is entered.)</li> </ul>	BR-68
RR LH OUT ABS SOL [SHORT]	<ul style="list-style-type: none"> <li>● Circuit for rear left outlet solenoid valve is shorted. (An abnormally high output voltage is entered.)</li> </ul>	BR-68
ABS ACTUATOR RELAY [ABNORMAL]	<ul style="list-style-type: none"> <li>● Actuator solenoid valve relay is ON, even control unit sends off signal.</li> <li>● Actuator solenoid valve relay is OFF, even control unit sends on signal.</li> </ul>	BR-68
ABS MOTOR RELAY [ABNORMAL]	<ul style="list-style-type: none"> <li>● Circuit for actuator motor is open or shorted.</li> <li>● Actuator motor relay is stuck.</li> </ul>	BR-72
BATTERY VOLT [ABNORMAL]	<ul style="list-style-type: none"> <li>● Power source voltage supplied to ABS control unit is abnormally low.</li> </ul>	BR-75
CONTROL UNIT*2	<ul style="list-style-type: none"> <li>● Function of calculation in ABS control unit has failed.</li> </ul>	BR-77

\*1: Be sure to confirm the ABS warning lamp illuminates when the ignition switch is turned ON after repairing the shorted sensor circuit, but the lamp goes out when driving the vehicle over 30 km/h (19 MPH) for one minute in accordance with SELF-DIAGNOSIS PROCEDURE.


\*2: When "CONTROL UNIT 5" is displayed, check to see if the ABS warning lamp is burned out, and check the circuit between the ABS warning lamp and ABS actuator/electric unit for open or short. Then check the ABS actuator/electric unit and circuit. When "CONTROL UNIT XX (except "CONTROL UNIT 5")" is displayed, "CONTROL UNIT DIAGNOSTIC PROCEDURE" (BR-77).

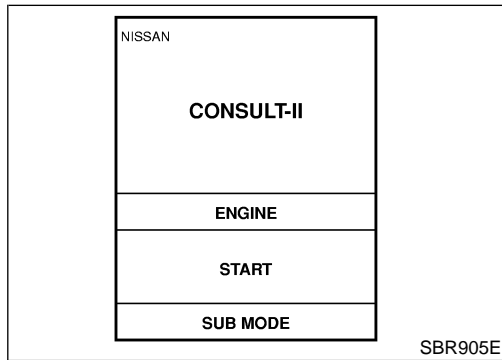


## DATA MONITOR PROCEDURE

*NFBR0110S03*

1. Turn ignition switch OFF.
2. Connect CONSULT-II to data link connector.
3. Turn ignition switch ON.
4. Touch "START" on CONSULT-II screen.

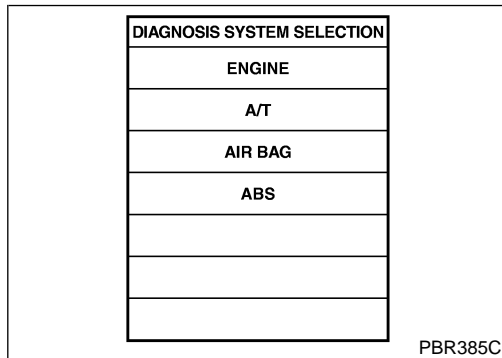

5. Touch "ABS".

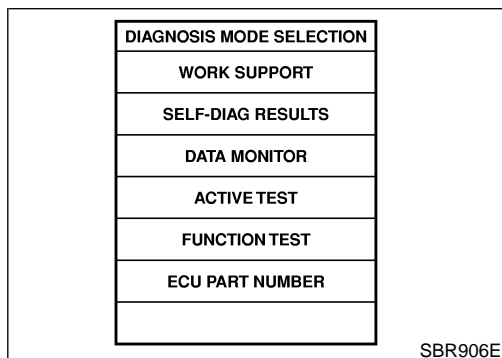


6. Touch "DATA MONITOR".
7. Touch "SETTING" on "SELECT MONITOR ITEM" screen.
8. Touch "START" on "SELECT MONITOR ITEM".

## SELF-DIAGNOSTIC RESULTS MODE (FOR A/T MODELS)

=NFBR0110S07

Diagnostic item	Diagnostic item is detected when ...	Reference Page
FR RH SENSOR	<ul style="list-style-type: none"> <li>● Circuit for front right wheel sensor is open.</li> </ul>	BR-63
FR LH SENSOR	<ul style="list-style-type: none"> <li>● Circuit for front left wheel sensor is open.</li> </ul>	BR-63
RR RH SENSOR	<ul style="list-style-type: none"> <li>● Circuit for rear right sensor is open.</li> </ul>	BR-63
RR LH SENSOR	<ul style="list-style-type: none"> <li>● Circuit for rear left sensor is open.</li> </ul>	BR-63
FR RH SENSOR	<ul style="list-style-type: none"> <li>● Power supply for sensors is out of specification.</li> <li>● Control unit cannot confirm pulse from sensors.</li> </ul>	BR-63
FR LH SENSOR	<ul style="list-style-type: none"> <li>● Power supply for sensors is out of specification.</li> <li>● Control unit cannot confirm pulse from sensors.</li> </ul>	BR-63
RR RH SENSOR	<ul style="list-style-type: none"> <li>● Power supply for sensors is out of specification.</li> <li>● Control unit cannot confirm pulse from sensors.</li> </ul>	BR-63
RR LH SENSOR	<ul style="list-style-type: none"> <li>● Power supply for sensors is out of specification.</li> <li>● Control unit cannot confirm pulse from sensors.</li> </ul>	BR-63
FR RH IN ABS SOL	<ul style="list-style-type: none"> <li>● Control unit detects malfunction on FR RH inlet solenoid.</li> </ul>	BR-68
FR LH IN ABS SOL	<ul style="list-style-type: none"> <li>● Control unit detects malfunction on FR LH inlet solenoid.</li> </ul>	BR-68
RR RH IN ABS SOL	<ul style="list-style-type: none"> <li>● Control unit detects malfunction on RR RH inlet solenoid.</li> </ul>	BR-68
RR LH IN ABS SOL	<ul style="list-style-type: none"> <li>● Control unit detects malfunction on RR LH inlet solenoid.</li> </ul>	BR-68
FR RH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Control unit detects malfunction on FR RH outlet solenoid.</li> </ul>	BR-68
FR LH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Control unit detects malfunction on FR LH outlet solenoid.</li> </ul>	BR-68
RR RH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Control unit detects malfunction on RR RH outlet solenoid.</li> </ul>	BR-68
RR LH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Control unit detects malfunction on RR LH outlet solenoid.</li> </ul>	BR-68
ABS ACTUATOR RELAY [ABNORMAL]	<ul style="list-style-type: none"> <li>● Control unit detects malfunction on ABS actuator relay.</li> </ul>	BR-68
PUMP MOTOR	<ul style="list-style-type: none"> <li>● Control unit detects malfunction on ABS motor and/or ABS motor relay.</li> </ul>	BR-72
BATTERY VOLT [ABNORMAL]	<ul style="list-style-type: none"> <li>● Power source voltage supplied to ABS control unit is abnormally low.</li> </ul>	BR-75
CONTROL UNIT	<ul style="list-style-type: none"> <li>● Function of calculation in ABS control unit has failed.</li> </ul>	BR-77


\*1: Be sure to confirm the ABS warning lamp illuminates when the ignition switch is turned ON after repairing the shorted sensor circuit, but the lamp goes out when driving the vehicle over 30 km/h (19 MPH) for one minute in accordance with SELF-DIAGNOSIS PROCEDURE.

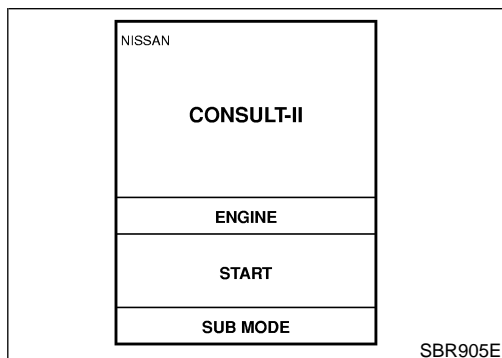

### DATA MONITOR PROCEDURE

NFBR0110S08

1. Turn ignition switch OFF.
2. Connect CONSULT-II to data link connector.
3. Turn ignition switch ON.
4. Touch "START" on CONSULT-II screen.

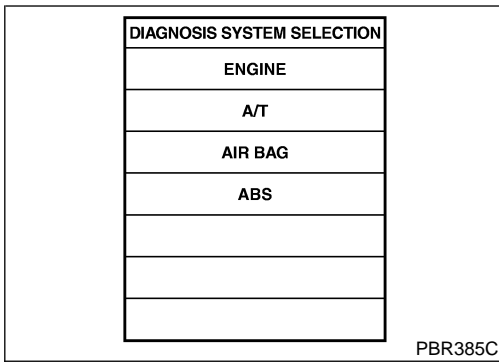


5. Touch "ABS".

GI

MA

EM

LC

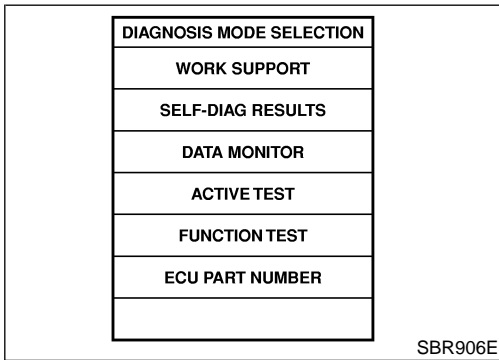

6. Touch "DATA MONITOR".

7. Touch "SETTING" on "SELECT MONITOR ITEM" screen.


8. Touch "START" on "SELECT MONITOR ITEM".

EC

FE

CL

MT

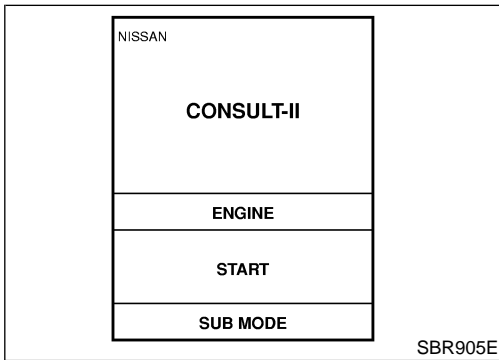

### ACTIVE TEST PROCEDURE

NFBR0110S04


- When conducting Active test, vehicle must be stationary.
  - When ABS warning lamp stays on, never conduct Active test.
1. Turn ignition switch OFF.
  2. Connect CONSULT-II to Data Link Connector.
  3. Start engine.
  4. Touch "START" on CONSULT-II screen.

AT

AX

SU

**BR**

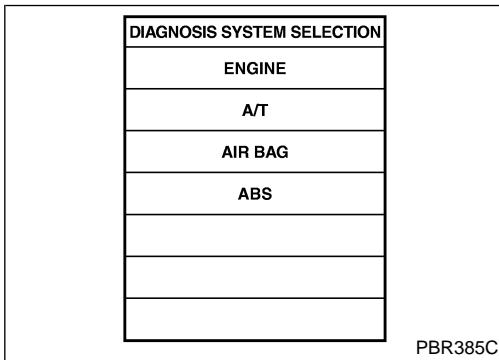


5. Touch "ABS".

ST

RS

BT

HA

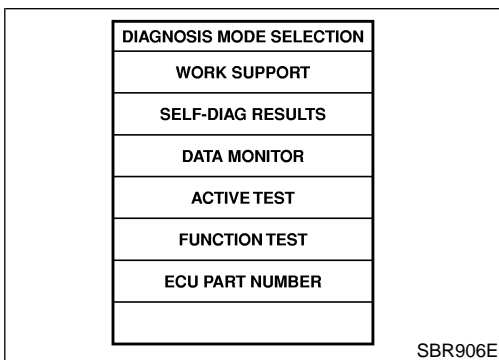

6. Touch "ACTIVE TEST".

SC

EL

IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

**ABS**

CONSULT-II Inspection Procedure (Cont'd)

SELECT TEST ITEM
FR RH SOL
FR LH SOL
RR RH SOL
RR LH SOL
ABS MOTOR
FR RH ABS SOLENOID (ACT)

SBR932E

7. Select active test item by touching screen.

FR RH SOL
SELECT MONITOR ITEM
MAIN SIGNALS
SELECTION FROM MENU

SBR933E

8. Touch "START".

9. Carry out the active test by touching screen key.

## DATA MONITOR MODE

NFBR0110S05

MONITOR ITEM	CONDITION	SPECIFICATION
FR RH SENSOR FR LH SENSOR RR RH SENSOR RR LH SENSOR	Drive vehicle. (Each wheel is rotating.)	Displays computed vehicle speed from wheel sensor signal. Almost the same speed as speedometer.
STOP LAMP SW	Turn ignition switch ON and depress brake pedal.	Depress the pedal: ON Release the pedal: OFF
FR RH IN SOL FR RH OUT SOL FR LH IN SOL FR LH OUT SOL RR RH IN SOL RR RH OUT SOL RR LH IN SOL RR LH OUT SOL	Ignition switch is turned ON or engine is running.	Operating conditions for each solenoid valve are indicated. ABS is not operating: OFF
ACTUATOR RLY	Ignition switch is turned ON or engine is running.	Displays ON/OFF condition of ABS actuator relay. When turning ignition switch ON, ABS actuator relay is operated.
MOTOR RELAY		ABS is not operating: OFF ABS is operating: ON
ABS WARNING LAMP		Warning lamp is turned on: ON Warning lamp is turned off: OFF
BATTERY VOLT		Power supply voltage for control unit



# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

**ABS**

*CONSULT-II Inspection Procedure (Cont'd)*

MONITOR ITEM	CONDITION	SPECIFICATION	
EBD SIGNAL (12 For A/T models)	Ignition switch is turned ON.	EBD is operating: ON EBD is not operating: OFF	GI
ABS SIGNAL (12 For A/T models)		ABS is operating: ON ABS is not operating: OFF	MA
EBD FAIL SIG (12 For A/T models)		EBD system fails: ON EBD system does not fail: OFF	EM
ABS FAIL SIG (12 For A/T models)		ABS fails: ON ABS does not fail: OFF	LC

## ACTIVE TEST MODE

*NFBR0110S06*



TEST ITEM	CONDITION	JUDGEMENT			
FR RH SOLENOID FR LH SOLENOID RR RH SOLENOID RR LH SOLENOID	Ignition switch is turned ON.	Brake fluid pressure control operation			EC
			IN SOL	OUT SOL	FE
		UP (Increase):	OFF	OFF	CL
		KEEP (Hold):	ON	OFF	MT
		DOWN (Decrease):	ON	ON	AT
ABS MOTOR		ABS actuator motor ON: Motor runs OFF: Motor stops			AT

**NOTE:**

Active test will automatically stop ten seconds after the test starts. (TEST IS STOPPED monitor shows ON.)

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
**BR**  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

How to Perform Trouble Diagnoses for Quick and Accurate Repair

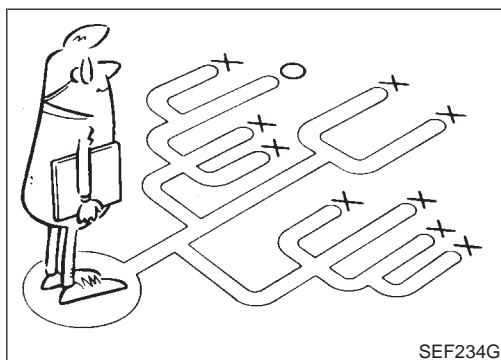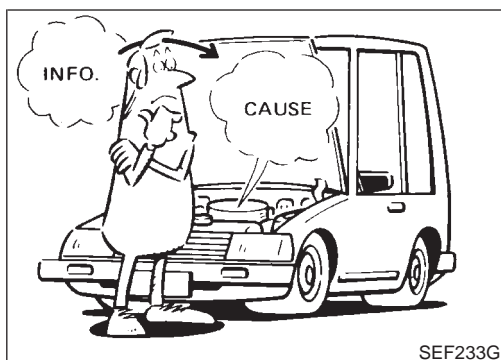

## How to Perform Trouble Diagnoses for Quick and Accurate Repair

### INTRODUCTION

NFBR0111

NFBR0111S01

The ABS system has an electronic control unit to control major functions. The control unit accepts input signals from sensors and instantly drives actuator. It is essential that both kinds of signals are proper and stable. It is also important to check for conventional problems: such as air leaks in the booster or lines, lack of brake fluid, or other problems with the brake system.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or faulty wiring. In this case, careful checking of suspicious circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the problems, so a road test should be performed.


Before undertaking actual checks, take just a few minutes to talk with a customer who approaches with a ABS complaint. The customer is a very good source of information on such problems; especially intermittent ones. Through the talks with the customer, find out what symptoms are present and under what conditions they occur.

Start your diagnosis by looking for “conventional” problems first. This is one of the best ways to troubleshoot brake problems on an ABS controlled vehicle. Also check related Service Bulletins for information.

Preliminary Check


NFBR0112

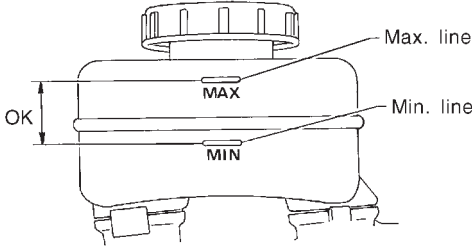
<b>1</b>	<b>CHECK BRAKE FLUID LEVEL</b>		
		<p><b>Check brake fluid level in reservoir tank.</b>                  Low fluid level may indicate brake pad wear or leakage from brake line.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SBR451D</p>	GI MA EM LC EC FE CL
<p style="text-align: center;"><b>Is brake fluid filled between MAX and MIN lines on reservoir tank and/or has brake fluid been contaminated?</b></p>			
Yes	▶	GO TO 2.	CL
No	▶	Repair. GO TO 2.	

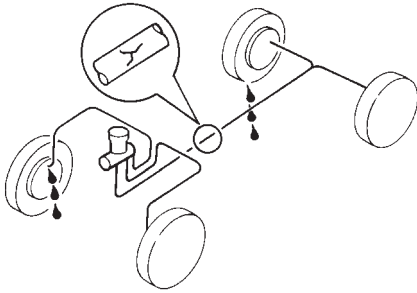
<b>2</b>	<b>CHECK BRAKE LINE</b>		
		<p>Check brake line for leakage.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SBR389C</p>	MT AT AX SU <b>BR</b>
<p style="text-align: center;"><b>Is leakage present at or around brake lines, tubes or hoses or are any of these parts cracked or damaged?</b></p>			
Yes	▶	Repair. GO TO 3.	ST
No	▶	GO TO 3.	RS

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 AX  
 SU  
**BR**  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 IDX


Preliminary Check (Cont'd)
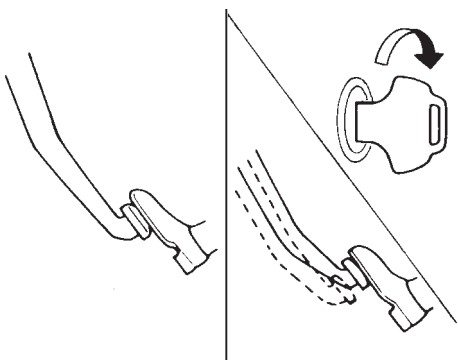
<b>3</b>	<b>CHECK BRAKE BOOSTER OPERATION</b>	
<p>Check brake booster for operation and air tightness. Refer to BR-20.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SBR058C</p>		
<b>Is brake booster airtight and functioning properly?</b>		
Yes	▶	GO TO 4.
No	▶	Replace. GO TO 4.
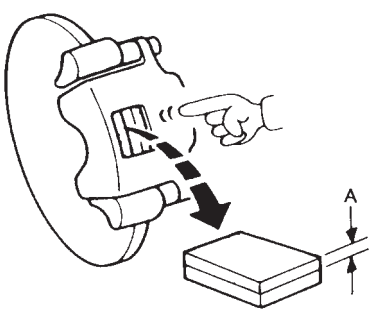
<b>4</b>	<b>CHECK BRAKE PAD AND ROTOR</b>	
<p>Check brake pad and rotor. Refer to BR-23, BR-25, BR-27, BR-31.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SBR059C</p>		
<b>Are brake pads and rotors functioning properly?</b>		
Yes	▶	GO TO 5.
No	▶	Replace.
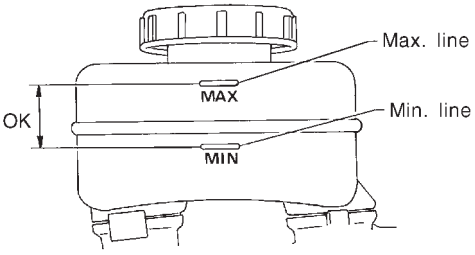
<b>5</b>	<b>RECHECK BRAKE FLUID LEVEL</b>	
Check brake fluid level in reservoir tank again.		
		
SBR451D		
<b>Is brake fluid filled between MAX and MIN lines on reservoir tank and/or has brake fluid been contaminated?</b>		
Yes	▶	GO TO 6.
No	▶	Fill up brake fluid.

GI  
MA  
EM  
LC  
EC  
FE  
CL
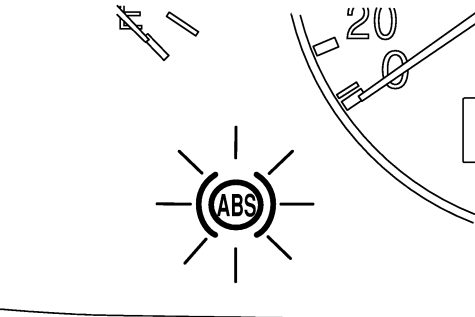
<b>6</b>	<b>CHECK WARNING LAMP ACTIVATION</b>	
Check warning lamp activation.		
		
SBR588E		
<b>Does warning lamp turn on when ignition switch is turned "ON"?</b>		
Yes	▶	GO TO 7.
No	▶	Check fuse, warning lamp bulb and warning lamp circuit.

MT  
AT  
AX  
SU

**BR**


<b>7</b>	<b>CHECK WARNING LAMP DEACTIVATION</b>	
Check warning lamp for deactivation after engine is started.		
<b>Does warning lamp turn off when engine is started?</b>		
Yes	▶	GO TO 8.
No	▶	Go to Self-diagnosis. Refer to BR-50.

RS  
BT  
HA

<b>8</b>	<b>DRIVE VEHICLE</b>	
Drive vehicle at speeds over 30 km/h (19 MPH) for at least one minute.		
<b>Does warning lamp remain off after vehicle has been driven at 30 km/h (19 MPH) for at least one minute?</b>		
Yes	▶	END
No	▶	Go to Self-diagnosis. Refer to BR-50.

SC  
EL  
IDX

## Ground Circuit Check

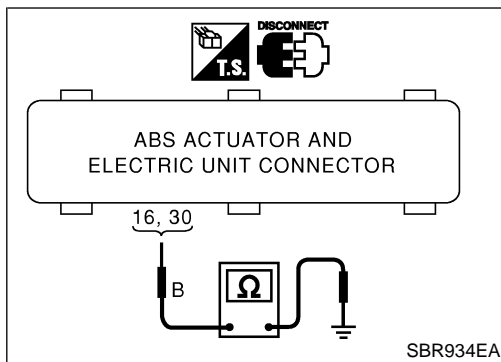

## Ground Circuit Check

## ABS ACTUATOR AND ELECTRIC UNIT GROUND

NFBR0113

NFBR0113S01

- Check continuity between ABS actuator and electric unit harness connector E9 (M/T models), E169 (A/T models) terminals 16 (B), 30 (B) and ground.

**Continuity should exist.**

Wheel Sensor or Rotor  
DIAGNOSTIC PROCEDURE


NFBR0136


NFBR0136S01

<b>1</b>	<b>INSPECTION START</b>	<p>Wheel sensor inspection</p> <div style="text-align: center;"> <p>For M/T models</p> <p>Wheel sensor connectors (sensor side)</p> <p>Front RH Front LH Rear RH Rear LH</p> <p>(1, 2) E76 (1, 2) E145 (1, 2) B16 (1, 2) B28</p> </div> <div style="text-align: center; margin-top: 20px;"> <p>For A/T models</p> <p>Wheel sensor connectors (sensor side)</p> <p>Front RH Front LH Rear RH Rear LH</p> <p>(1, 2) E159 (1, 2) E170 (1, 2) B55 (1, 2) B54</p> </div>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>AX</p>
▶ GO TO 2.		<p>SBR138F</p> <p>SBR139F</p>	<p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>

<b>2</b>	<b>CHECK CONNECTOR</b>	<p>1. Disconnect connectors from control unit and wheel sensor of malfunction detected. Check terminals for damage or loose connections. Then reconnect connectors.</p> <p>2. Carry out self-diagnosis again.</p> <p style="text-align: center;"><b>Does warning lamp activate again?</b></p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">Yes</td> <td style="width: 5%; text-align: center;">▶</td> <td>For M/T models: GO TO 3.</td> </tr> <tr> <td></td> <td style="text-align: center;">▶</td> <td>For A/T models: GO TO 4.</td> </tr> <tr> <td>No</td> <td style="text-align: center;">▶</td> <td><b>INSPECTION END</b></td> </tr> </table>	Yes	▶	For M/T models: GO TO 3.		▶	For A/T models: GO TO 4.	No	▶	<b>INSPECTION END</b>	<p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
Yes	▶	For M/T models: GO TO 3.										
	▶	For A/T models: GO TO 4.										
No	▶	<b>INSPECTION END</b>										

Wheel Sensor or Rotor (Cont'd)
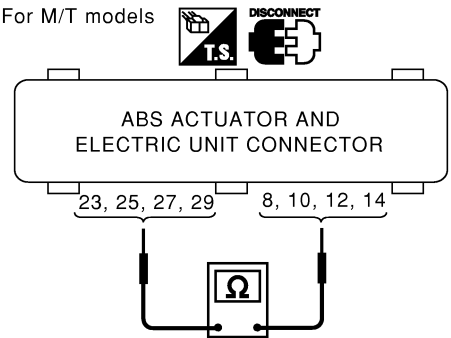
<b>3</b>	<b>CHECK WHEEL SENSOR CIRCUIT FOR M/T MODELS</b>
<p>1. Disconnect control unit connector.                  2. Check resistance between control unit harness connector E9 terminals.                  Front RH wheel                  Terminals 10 (B/W) and 25 (L/OR)                  Front LH wheel                  Terminals 8 (G) and 23 (R/B)                  Rear RH wheel                  Terminals 14 (B) and 29 (W)                  Rear LH wheel                  Terminals 12 (R/W) and 27 (L/W)  <b>Resistance: 0.8 - 1.85 kΩ</b></p>	
<p>For M/T models</p>  <p style="text-align: right;">SBR936EA</p>	
<b>Is resistance 0.8 - 1.85 kΩ?</b>	
Yes	▶ GO TO 6.
No	▶ GO TO 5.
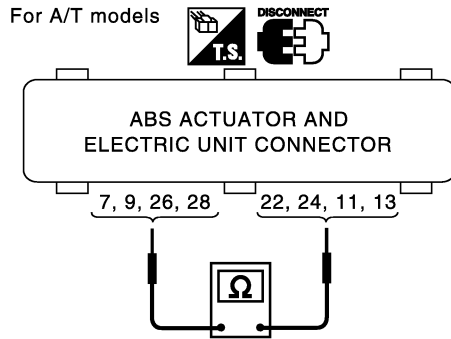
<b>4</b>	<b>CHECK WHEEL SENSOR CIRCUIT FOR A/T MODELS</b>
<p>1. Disconnect control unit connector.                  2. Check resistance between control unit connector terminals.                  Front RH wheel                  Terminals 9 (B/W) and 24 (L/OR)                  Front LH wheel                  Terminals 7 (G) and 22 (R/B)                  Rear RH wheel                  Terminals 28 (B) and 13 (W)                  Rear LH wheel                  Terminals 26 (R/W) and 11 (L/W)  <b>Resistance: 0.8 - 1.85 kΩ</b></p>	
<p>For A/T models</p>  <p style="text-align: right;">SBR045F</p>	
<b>Is resistance 0.8 - 1.85 kΩ?</b>	
Yes	▶ GO TO 6.
No	▶ GO TO 5.



<b>5</b>	<b>CHECK WHEEL SENSOR</b>	<ul style="list-style-type: none"> <li>● Check resistance of each sensor. (See NOTE.)  <span style="color: blue;"><b>Resistance: 0.8 - 1.85 kΩ (For M/T model)</b></span></li> <li>● Check signal from sensors by "Simple oscilloscope" function of CONSULT-II (For A/T model) (Scale: 0.2 V/Div, 20 ms/Div)</li> </ul> <div style="text-align: center; margin: 20px 0;"> <p>For M/T models</p> <p>Front RH sensor (E76)    Front LH sensor (E145)    Rear RH sensor (B16)    Rear LH sensor (B28)</p> </div> <div style="text-align: center; margin: 20px 0;"> <p>For A/T models</p> <p>Front RH sensor (E159)    Front LH sensor (E170)    Rear RH sensor (B55)    Rear LH sensor (B54)</p> </div> <p style="text-align: right; margin-right: 20px;">SBR140F</p> <p style="text-align: right; margin-right: 20px;">SBR141F</p> <p style="text-align: center; margin: 10px 0;"><b>Is resistance 0.8 - 1.85 kΩ? (For M/T model)/Does the wave appear on screen when wheel is rotated? (For A/T model)</b></p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 25%; padding: 5px;">Yes</td> <td style="width: 5%; text-align: center;">▶</td> <td style="padding: 5px;">Repair harness and connectors between control unit connector and wheel sensor connector.</td> </tr> <tr> <td style="padding: 5px;">No</td> <td style="text-align: center;">▶</td> <td style="padding: 5px;">Replace wheel sensor.</td> </tr> </table>	Yes	▶	Repair harness and connectors between control unit connector and wheel sensor connector.	No	▶	Replace wheel sensor.	GI MA EM LC EC FE CL MT AT AX SU
Yes	▶	Repair harness and connectors between control unit connector and wheel sensor connector.							
No	▶	Replace wheel sensor.							
		BR							

<b>6</b>	<b>CHECK TIRE</b>	<p>Check for inflation pressure, wear and size of each tire.</p> <p style="text-align: center;"><b>Are tire pressure and size correct and is tire wear within specifications?</b></p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 25%; padding: 5px;">Yes</td> <td style="width: 5%; text-align: center;">▶</td> <td style="padding: 5px;">GO TO 7.</td> </tr> <tr> <td style="padding: 5px;">No</td> <td style="text-align: center;">▶</td> <td style="padding: 5px;">Adjust tire pressure or replace tire(s).</td> </tr> </table>	Yes	▶	GO TO 7.	No	▶	Adjust tire pressure or replace tire(s).	ST RS BT HA SC EL IDX
Yes	▶	GO TO 7.							
No	▶	Adjust tire pressure or replace tire(s).							

<b>7</b>	<b>CHECK WHEEL BEARING</b>
<p>Check wheel bearing axial end play. Check clearance between sensor and rotor.</p> <p><b>Clearance:</b>  <b>Front</b>  <b>0.273 - 0.925 mm (0.0107 - 0.0364 in)</b>  <b>Rear</b>  <b>0.385 - 0.973 mm (0.0152 - 0.0383 in)</b></p>	
SBR333E	
SBR069CA	
<b>Is axial end play and clearance within specifications?</b>	
Yes	▶ GO TO 8.
No	▶ Clean sensor fixing portion, or replace sensor.

<b>8</b>	<b>CHECK SENSOR ROTOR</b>
Check sensor rotor for teeth damage.	
<b>Is sensor rotor free from damage?</b>	
Yes	▶ For M/T models: Check control unit pin terminals for damage or the connection of control unit harness connector. Reconnect control unit harness connector. Then retest. For A/T models: GO TO 9.
No	▶ Replace sensor rotor.

<b>9</b>	<b>CHECK POWER SUPPLY</b>	
<p>1. Disconnect wheel sensor connector.                  2. Check voltage between body side terminal of wheel sensor connectors and body ground.</p>		
<div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p>(A/T models)</p> </div> <div style="text-align: center;"> <p>(M/T models)</p> </div> </div> <div style="text-align: center; margin-top: 10px;"> </div>		
SBR142F		
<b>Is voltage more than 8V?</b>		
Yes	▶	Replace wheel sensor.
No	▶	Replace ABS control unit.

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 IDX

## ABS Actuator Solenoid Valve or Solenoid Valve Relay



### DIAGNOSTIC PROCEDURE

=NFBR0116



NFBR0116S01

**1 INSPECTION START**

Solenoid valve relay inspection

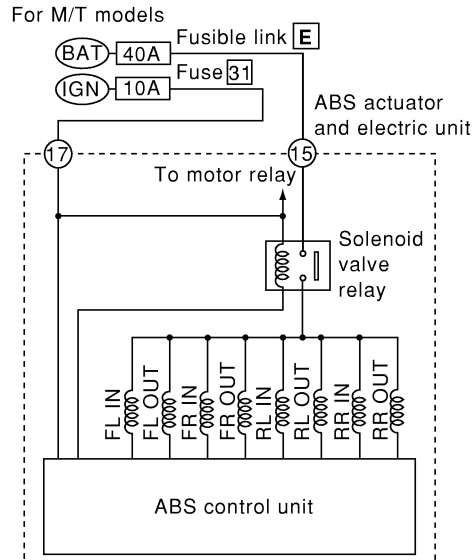

SBR938E

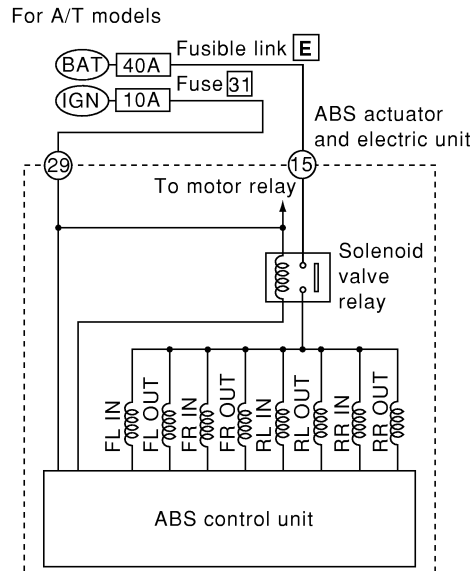

SBR987E

▶ GO TO 2.

# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS

**ABS**

*ABS Actuator Solenoid Valve or Solenoid Valve Relay (Cont'd)*

<b>2</b>	<b>CHECK SOLENOID VALVE POWER SUPPLY CIRCUIT</b>	
Check 40A [E] fusible link (ABS ACTR) for ABS solenoid valve relay. For fusible link layout, refer to POWER SUPPLY ROUTING in EL section.		
<b>Is fusible link OK?</b>		
Yes	▶	GO TO 3.
No	▶	GO TO 7.

GI  
MA  
EM

<b>3</b>	<b>CHECK FUSE</b>	
Check 10A fuse No. 31. For fuse layout, refer to "POWER SUPPLY ROUTING" in EL section.		
<b>Is fuse OK?</b>		
Yes	▶	GO TO 4.
No	▶	GO TO 9.

LC  
EC  
FE

<b>4</b>	<b>CHECK CONNECTOR</b>	
1. Disconnect connectors from control unit and ABS actuator. Check terminals for damage or loose connection. Then reconnect connectors. 2. Carry out self-diagnosis again.		
<b>Does warning lamp activate again?</b>		
Yes	▶	GO TO 5.
No	▶	<b>INSPECTION END</b>

CL  
MT  
AT

<b>5</b>	<b>CHECK GROUND CIRCUIT</b>	
Refer to ABS ACTUATOR AND ELECTRIC UNIT in Ground Circuit Check, BR-62.		
<b>Is ground circuit OK?</b>		
Yes	▶	GO TO 6.
No	▶	Repair harness and connectors.

AX  
SU  
**BR**

ST  
RS  
BT  
HA  
SC  
EL  
IDX

# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS

ABS

ABS Actuator Solenoid Valve or Solenoid Valve Relay (Cont'd)

<b>6</b>	<b>CHECK SOLENOID VALVE POWER SUPPLY CIRCUIT</b>	
<p>1. Disconnect ABS actuator and electric unit connector.</p> <p>2. Check voltage between ABS actuator and electric unit harness connector E9 for M/T models/E169 for A/T models, terminals 17 (GY) for M/T models/29 (GY) for A/T models and ground.</p>		
<p>For M/T models</p>		
<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> <p style="margin: 0;">ABS ACTUATOR AND ELECTRIC UNIT CONNECTOR</p> </div>		
SBR049F		
<p>For A/T models</p>		
<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> <p style="margin: 0;">ABS ACTUATOR AND ELECTRIC UNIT CONNECTOR</p> </div>		
SBR993EA		
<b>Does battery voltage exist when ignition switch is turned ON?</b>		
Yes	▶	Replace ABS actuator and electric unit.
No	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E9 for M/T models and E169 for A/T models.</li> <li>● Harness for open or short between ABS actuator and electric unit and fusible link</li> </ul> <p>If NG, repair harness or connectors.</p>

<b>7</b>	<b>REPLACE FUSIBLE LINK</b>	
Replace fusible link.		
<b>Does the fusible link blow out when ignition switch is turned "ON"?</b>		
Yes	▶	GO TO 8.
No	▶	<b>INSPECTION END</b>

# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS

**ABS**

ABS Actuator Solenoid Valve or Solenoid Valve Relay (Cont'd)

<b>8</b>	<b>CHECK RELAY UNIT POWER SUPPLY CIRCUIT FOR SHORT</b>	
<p>1. Disconnect battery cable and ABS actuator and electric unit connector.                  2. Check continuity between ABS actuator and electric unit harness connector E9 for M/T models/E169 for A/T models, terminal 15 (L/B) and ground.</p>		
SBR940EA		
<b>Does continuity exist?</b>		
Yes	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E9 for M/T models and E169 for A/T models.</li> <li>● Harness for open or short between ABS actuator and electric unit and fusible link. If NG, repair harness or connectors.</li> </ul>
No	▶	Replace ABS actuator and electric unit.

GI

MA

EM

LC

EC

FE

CL

MT

<b>9</b>	<b>REPLACE FUSE</b>	
Replace fuse.		
<b>Does the fuse blow out when ignition switch is turned "ON"?</b>		
Yes	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E9 for M/T models and E169 for A/T models.</li> <li>● Harness for open or short between ABS actuator and electric unit and fuse. If NG, repair harness or connectors.</li> </ul>
No	▶	<b>INSPECTION END</b>

AT

AX

SU

**BR**

ST

RS

BT

HA

SC

EL

IDX

## Motor Relay or Motor DIAGNOSTIC PROCEDURE



=NFBR0117

NFBR0117S01

### 1 INSPECTION START



ABS motor relay inspection

For M/T models

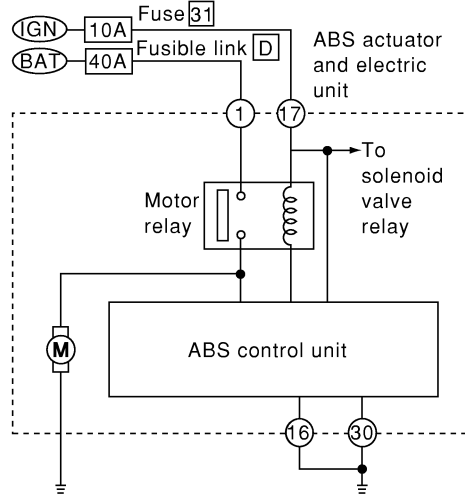

SBR990E

For A/T models

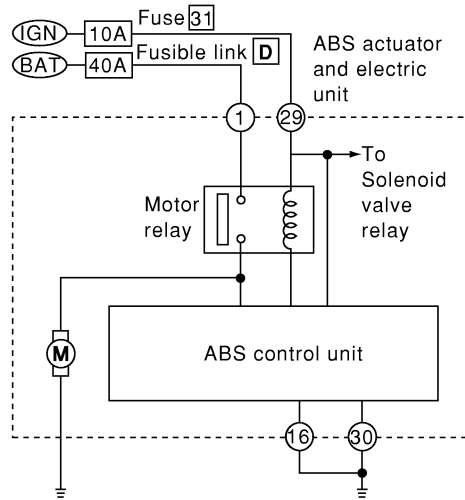

SBR941E



GO TO 2.



# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS

**ABS**




*Motor Relay or Motor (Cont'd)*

<b>2</b>	<b>CHECK MOTOR POWER SUPPLY CIRCUIT</b>	
Check 40A [D] fusible link (ABS MTR) for ABS motor relay. For fusible link layout, refer to POWER SUPPLY ROUTING in EL section.		
<b>Is fusible link OK?</b>		
Yes	▶	GO TO 3.
No	▶	GO TO 6.

GI  
MA  
EM

<b>3</b>	<b>CHECK CONNECTOR</b>	
1. Disconnect ABS actuator and electric unit connector. Check terminals for damage or loose connection. Then reconnect connectors. 2. Carry out self-diagnosis again.		
<b>Does warning lamp activate again?</b>		
Yes	▶	GO TO 4.
No	▶	<b>INSPECTION END</b>

LC  
EC  
FE
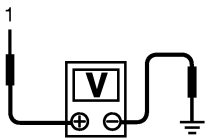
<b>4</b>	<b>CHECK MOTOR RELAY POWER SUPPLY CIRCUIT</b>	
1. Disconnect ABS actuator and electric unit connector. 2. Check voltage between ABS actuator and electric unit harness connector E9 for M/T models/E169 for A/T models, terminal 1 (Y) and ground.		
<div style="display: flex; justify-content: center; align-items: center; gap: 20px;">   </div> <div style="border: 1px solid black; border-radius: 10px; padding: 5px; text-align: center; margin: 10px auto; width: 60%;">             ABS ACTUATOR AND ELECTRIC UNIT CONNECTOR         </div> <div style="text-align: center; margin: 10px auto;">  </div>		
SBR942EA		
<b>Does battery voltage exist?</b>		
Yes	▶	GO TO 5.
No	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>Harness connector E9 for M/T models and E169 for A/T models.</li> <li>Harness for open or short between ABS actuator and electric unit and fusible link If NG, repair harness or connectors.</li> </ul>

CL  
MT  
AT  
AX  
SU  
**BR**

<b>5</b>	<b>CHECK ABS ACTUATOR AND ELECTRIC UNIT GROUND CIRCUIT</b>	
Refer to ABS ACTUATOR AND ELECTRIC UNIT GROUND in Ground Circuit Check, BR-62.		
<b>Is ground circuit OK?</b>		
Yes	▶	Replace ABS actuator and electric unit.
No	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>Harness connector E9 for M/T models and E169 for A/T models.</li> <li>Harness for open or short between ABS actuator and electric unit and ground If NG, repair harness or connectors.</li> </ul>


ST  
RS  
BT  
HA  
SC  
EL  
IDX

# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS

ABS

*Motor Relay or Motor (Cont'd)*



<b>6</b>	<b>REPLACE FUSIBLE LINK</b>	
Replace fusible link.		
<b>Does the fusible link blow out when ignition switch is turned "ON"?</b>		
Yes	▶	GO TO 7.
No	▶	<b>INSPECTION END</b>
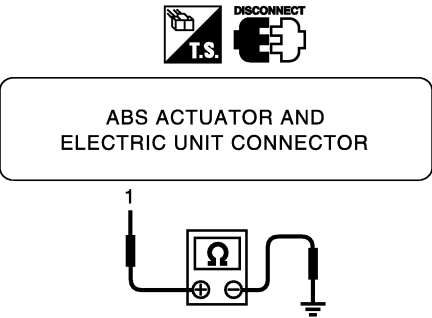
<b>7</b>	<b>CHECK ABS ACTUATOR MOTOR POWER SUPPLY CIRCUIT</b>	
<p>1. Disconnect battery cable and ABS actuator and electric unit connector.</p> <p>2. Check continuity between ABS actuator and electric unit harness connector E9 for M/T models/E169 for A/T models, terminal 1 (Y) and ground.</p>		
		
SBR037F		
<b>Does continuity exist?</b>		
Yes	▶	Check ABS actuator and electric unit pin terminals for damage or the connection of ABS actuator and electric unit harness connector. Reconnect ABS actuator and electric unit harness connector. Then retest.
No	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E9 for M/T models and E169 for A/T models.</li> <li>● Harness for open or short between ABS actuator and electric unit and fusible link</li> </ul> <p>If NG, repair harness or connectors.</p>

## Low Voltage DIAGNOSTIC PROCEDURE



NFBR0154

NFBR0154S01
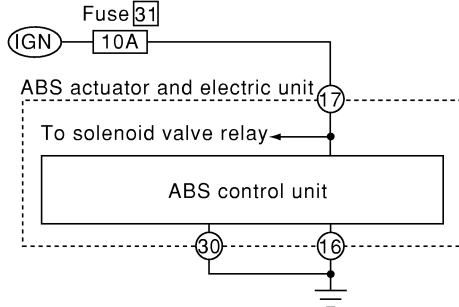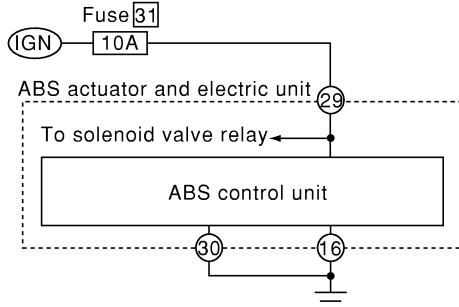
<b>1</b>	<b>INSPECTION START</b>	<p>ABS actuator and electric unit power supply and ground circuit inspection</p> <p>For M/T models</p>  <p style="text-align: right;">SBR943E</p> <p>For A/T models</p>  <p style="text-align: right;">SBR992E</p>	GI MA EM LC EC FE CL MT AT AX
▶ GO TO 2.			SU <b>BR</b> ST RS BT HA SC EL IDX

<b>2</b>	<b>CHECK CONNECTOR</b>	<p>1. Disconnect ABS actuator and electric unit connector. Check terminals for damage or loose connections. Then reconnect connector.</p> <p>2. Carry out self-diagnosis again.</p> <p style="text-align: center;"><b>Does warning lamp activate again?</b></p>	
Yes	▶	GO TO 3.	
No	▶	<b>INSPECTION END</b>	

Low Voltage (Cont'd)
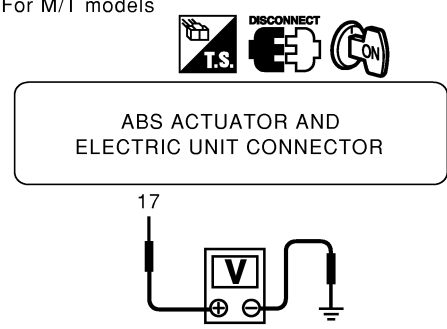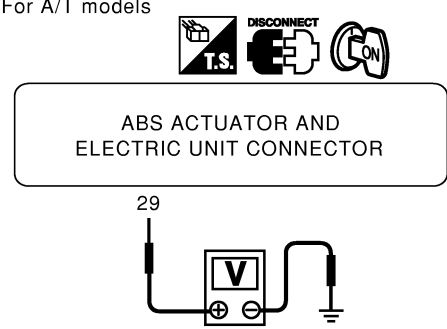
<b>3</b>	<b>CHECK ABS ACTUATOR AND ELECTRIC UNIT POWER SUPPLY CIRCUIT</b>	
<p>1. Disconnect ABS actuator and electric unit connector.</p> <p>2. Check voltage between ABS actuator and electric unit harness connector E9 for M/T models/E169 for A/T models, terminal 17 (GY) for M/T models/29 (GY) for A/T models and ground.</p>		
<p>For M/T models</p> 		
SBR944EA		
<p>For A/T models</p> 		
SBR993EA		
<b>Does battery voltage exist when ignition switch is turned ON?</b>		
Yes	▶	GO TO 4.
No	▶	GO TO 5.

<b>4</b>	<b>CHECK ABS ACTUATOR AND ELECTRIC UNIT GROUND</b>	
Refer to ABS ACTUATOR AND ELECTRIC UNIT GROUND in Ground Circuit Check, BR-62.		
<b>Is ground circuit OK?</b>		
OK	▶	Check ABS actuator and electric unit pin terminals for damage or the connection of ABS actuator and electric unit harness connector. Reconnect ABS actuator and electric unit harness connector. Then retest.
NG	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E9 for M/T models and E169 for A/T models.</li> <li>● Harness for open or short between ABS actuator and electric unit and ground</li> </ul> <p>If NG, repair harness or connectors.</p>

<b>5</b>	<b>CHECK FUSE</b>	
Check 10A fuse 31 (Engine control) for control unit. Refer to POWER SUPPLY ROUTING in EL section.		
<b>Is fuse OK?</b>		
Yes	▶	GO TO 6.
No	▶	Replace fuse.

# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS

**ABS**

*Low Voltage (Cont'd)*

<b>6</b>	<b>CHECK ABS ACTUATOR AND ELECTRIC UNIT POWER SUPPLY CIRCUIT</b>	
Check continuity between battery and ABS actuator and electric unit connector terminal 17 for M/T models/29 for A/T models.		
<b>Does continuity exist?</b>		
Yes	▶	Check battery. Refer to BATTERY in EL section.
No	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>● Harness connector E9 for M/T models and E169 for A/T models.</li> <li>● Harness for open or short between ABS actuator and electric unit and fuse</li> </ul> If NG, repair harness or connectors.

GI  
MA  
EM  
LC

## Control Unit DIAGNOSTIC PROCEDURE

NFBR0137

NFBR0137S01

<b>1</b>	<b>INSPECTION START</b>	
ABS actuator and electric unit power supply and ground circuit inspection For M/T models		
<small>SBR945E</small>		
For A/T models		
<small>SBR994E</small>		
▶		GO TO 2.

FE  
CL  
MT  
AT  
AX  
SU  
**BR**  
ST  
RS

<b>2</b>	<b>CHECK CONNECTOR</b>	
1. Disconnect ABS actuator and electric unit connector. Check terminals for damage or loose connections. Then reconnect connectors. 2. Carry out self-diagnosis again.		
<b>Does warning lamp activate again?</b>		
Yes	▶	GO TO 3.
No	▶	<b>INSPECTION END</b>

HA  
SC  
EL  
IDX

# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS

ABS

Control Unit (Cont'd)

<b>3</b>	<b>CHECK ABS ACTUATOR AND ELECTRIC UNIT POWER SUPPLY CIRCUIT</b>
Check voltage. Refer to "3. CHECK ABS ACTUATOR AND ELECTRIC UNIT POWER SUPPLY CIRCUIT" in "Low Voltage", BR-75.	
<b>Does battery voltage exist when ignition switch is turned ON?</b>	
Yes	▶ GO TO 4.
No	▶ Repair.

<b>4</b>	<b>CHECK SELF-DIAGNOSIS RESULT</b>
Is "Control unit" indicated on SELF-DIAGNOSIS RESULT again?	
Yes	▶ Replace ABS actuator and electric unit.
No	▶ Inspect the system according to the SELF-DIAGNOSIS RESULT.

## 1. ABS Works Frequently

NFBR0138

<b>1</b>	<b>CHECK WHEEL SENSOR</b>	
1. Check wheel sensor connector for terminal damage or loose connections. 2. Perform wheel sensor mechanical check. Refer to "Wheel Sensor or Rotor", BR-63.		
<b>Are wheel sensors functioning properly?</b>		
Yes	▶	GO TO 2.
No	▶	Repair.

GI

MA

EM

LC

<b>2</b>	<b>CHECK FRONT AND REAR AXLES</b>	
Check front and rear axles for excessive looseness. Refer to AX section, "Front Wheel Bearing", "ON-VEHICLE SERVICE" and "Rear Wheel Bearing", "ON-VEHICLE SERVICE".		
<b>Is front axle installed properly?</b>		
Yes	▶	Go to "3. CHECK WARNING LAMP INDICATION" in "2. Unexpected Pedal Action", BR-79.
No	▶	Repair.

EC


FE

CL

MT

## 2. Unexpected Pedal Action

NFBR0139
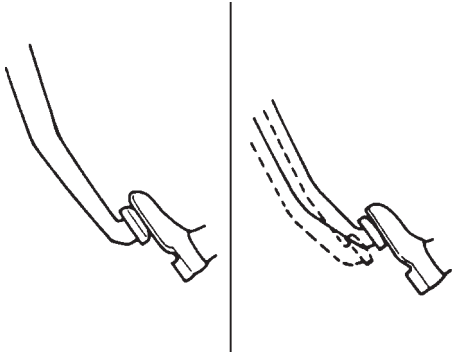
<b>1</b>	<b>CHECK BRAKE PEDAL STROKE</b>	
Check brake pedal stroke. Is stroke excessively large?		
		
SBR540A		
Yes	▶	Perform Preliminary Check. Refer to BR-59.
No	▶	GO TO 2.

AT

AX

SU

**BR**

ST

RS

BT

<b>2</b>	<b>CHECK CONNECTOR AND PERFORMANCE</b>	
1. Disconnect ABS actuator and electric unit connector. 2. Check whether brake is effective.		
<b>Yes or No?</b>		
Yes	▶	GO TO 3.
No	▶	Perform Preliminary Check. Refer to BR-59.

HA

SC


EL

IDX

# TROUBLE DIAGNOSES FOR SYMPTOMS

ABS

## 2. Unexpected Pedal Action (Cont'd)
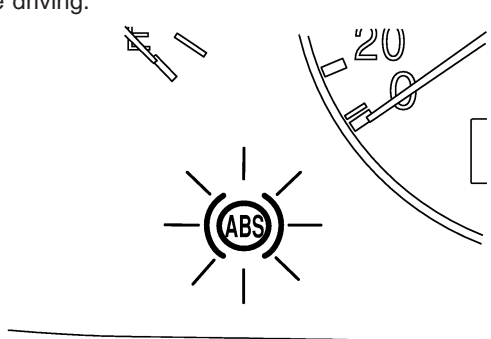
<b>3</b>	<b>CHECK WARNING LAMP INDICATION</b>	
<p>Ensure warning lamp remains off while driving.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SBR588E</p>		
<b>Is warning lamp turned off?</b>		
Yes	▶	GO TO 4.
No	▶	Carry out self-diagnosis. Refer to BR-50.

<b>4</b>	<b>CHECK WHEEL SENSOR</b>	
<p>1. Check wheel sensor connector for terminal damage or loose connection. 2. Perform wheel sensor mechanical check.</p>		
<b>Is wheel sensor mechanism OK?</b>		
Yes	▶	Check ABS actuator and electric unit pin terminals for damage or the connection of ABS actuator and electric unit harness connector. Reconnect ABS actuator and electric unit harness connector. Then retest.
No	▶	Repair.

## 3. Long Stopping Distance

NFBR0140

<b>1</b>	<b>CHECK CONNECTOR AND PERFORMANCE</b>	
<p>1. Cancel ABS by disconnecting ABS actuator and electric unit connector. 2. Check whether stopping distance is still long.</p>		
<b>OK or NG</b>		
OK	▶	Perform Preliminary Check and air bleeding.
NG	▶	Go to "3. CHECK WARNING LAMP INDICATION" in "2. Unexpected Pedal Action", BR-79.

**NOTE:**

Stopping distance may be longer than vehicles without ABS when road condition is slippery.



## 4. ABS Does Not Work

NFBR0141

<b>1</b>	<b>CHECK WARNING LAMP INDICATION</b>	
Does the ABS warning lamp activate?		
Yes	▶	Carry out self-diagnosis. Refer to BR-50.
No	▶	Go to "3. CHECK WARNING LAMP INDICATION" in "2. Unexpected Pedal Action", BR-79.


**NOTE:**

ABS does not work when vehicle speed is under 10 km/h (6 MPH).

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- AX
- SU
- BR**
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

## 5. Pedal Vibration and Noise

=NFBR0142

<b>1</b>	<b>INSPECTION START</b>
Pedal vibration and noise inspection	
	
SAT797A	
▶	GO TO 2.

<b>2</b>	<b>CHECK SYMPTOM</b>
1. Apply brake. 2. Start engine.	
<b>Does the symptom appear only when engine is started?</b>	
Yes	▶ Carry out self-diagnosis. Refer to BR-50.
No	▶ GO TO 3.

<b>3</b>	<b>RECHECK SYMPTOM</b>
Does the symptom appear when electrical equipment switches (such as headlamp) are operated?	
Yes	▶ <b>INSPECTION END</b>
No	▶ Go to "3. CHECK WARNING LAMP INDICATION" in "2. Unexpected Pedal Action", BR-79.

**NOTE:**

ABS may operate and cause vibration under any of the following conditions.

- Applying brake gradually when shifting or operating clutch.
- Low friction (slippery) road.
- High speed cornering.
- Driving over bumps and pot holes.
- Engine speed is over 5,000 rpm with vehicle stopped.

**6. ABS Warning Lamp Does Not Come On When Ignition Switch Is Turned On**

=NFBR0143


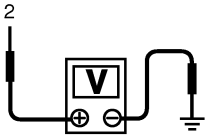

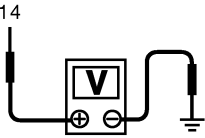
<b>1</b>	<b>INSPECTION START</b>	<p>Warning lamp circuit inspection</p> <div style="text-align: center;"> <p>For M/T models</p> </div> <div style="text-align: center; margin-top: 20px;"> <p>For A/T models</p> </div>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>AX</p> <p>SBR946E</p> <p>SBR996E</p>
▶ GO TO 2.			


<b>2</b>	<b>CHECK FUSE</b>	<p>Check 10A fuse No. 30 for warning lamp. For fuse layout, refer to "POWER SUPPLY ROUTING" in EL section.</p> <p style="text-align: center;"><b>Is fuse OK?</b></p>	<p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
Yes	▶	GO TO 3.	
No	▶	Replace fuse.	

# TROUBLE DIAGNOSES FOR SYMPTOMS

ABS

## 6. ABS Warning Lamp Does Not Come On When Ignition Switch Is Turned On (Cont'd)



<b>3</b>	<b>CHECK ABS CONTROL UNIT POWER SUPPLY CIRCUIT</b>	
<p>1. Install 10A fuse.</p> <p>2. Check voltage between control unit harness connector E9 for M/T models/E169 for A/T models, terminal 2 (L/R) for M/T models/14 (L/R) for A/T models and ground after turning ignition switch "ON".</p>		
<p>For M/T models</p>  <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;">             ABS ACTUATOR AND ELECTRIC UNIT CONNECTOR         </div> 		
SBR947EA		
<p>For A/T models</p>  <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;">             ABS ACTUATOR AND ELECTRIC UNIT CONNECTOR         </div> 		
SBR995EA		
<b>Does battery voltage exist after turning ignition switch "ON"?</b>		
Yes	▶	GO TO 5.
No	▶	GO TO 4.
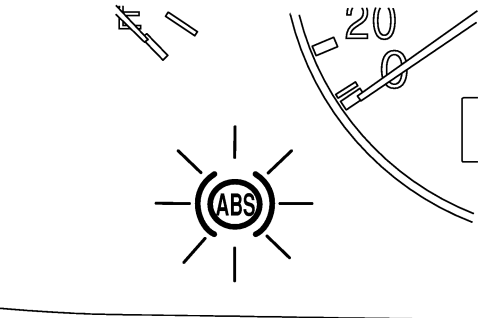
<b>4</b>	<b>CHECK WARNING LAMP INDICATION</b>	
<p>Disconnect ABS actuator and electric unit connector.</p>		
		
SBR588E		
<b>Does the ABS warning lamp activate?</b>		
Yes	▶	GO TO 6.
No	▶	GO TO 5.

# TROUBLE DIAGNOSES FOR SYMPTOMS

**ABS**

*6. ABS Warning Lamp Does Not Come On When Ignition Switch Is Turned On (Cont'd)*
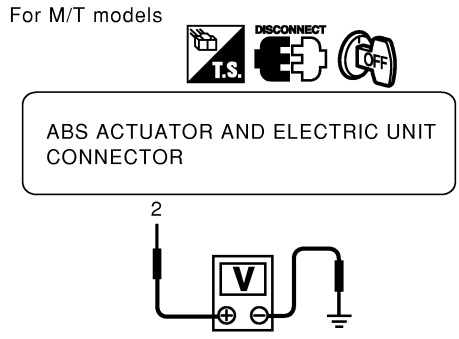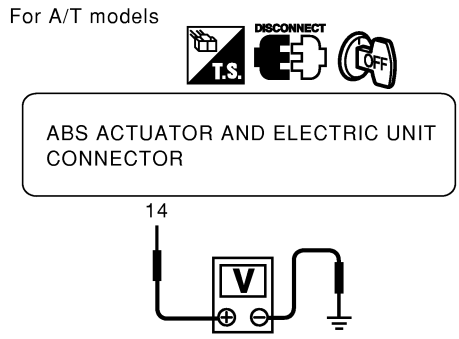
<b>5</b>	<b>CHECK HARNESS FOR SHORT</b>	
<p>1. Disconnect ABS actuator and electric unit connector.</p> <p>2. Check voltage between ABS actuator and electric unit harness connector E9 for M/T models/E169 for A/T models, terminal 2 (L/R) for M/T models/14 (L/R) for A/T models and ground.</p>		
<p>For M/T models</p>  <p style="text-align: right;">SBR948EA</p>		
<p>For A/T models</p>  <p style="text-align: right;">SBR997EA</p>		
<b>Does battery voltage exist?</b>		
Yes	▶	Check combination meter. Refer to WARNING LAMPS in EL section.
No	▶	Repair harness and connectors between fuse and ABS actuator and electric unit connector terminal 2 for M/T models and 14 for A/T models.

<b>6</b>	<b>CHECK HARNESS CONNECTOR</b>	
Check ABS actuator and electric unit pin terminals for damage or connection of ABS actuator and electric unit harness connector. Reconnect ABS actuator and electric unit harness connector. Then reset.		
OK	▶	<b>INSPECTION END</b>
NG	▶	Replace ABS actuator and electric unit.


GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 IDX

## 7. ABS Warning Lamp Stays On When Ignition Switch Is Turned On


=NFBR0144

### 1 INSPECTION START

ABS control unit inspection

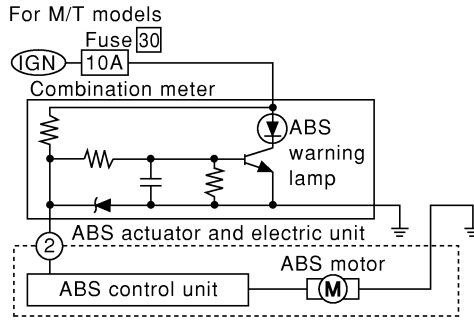

SBR949E

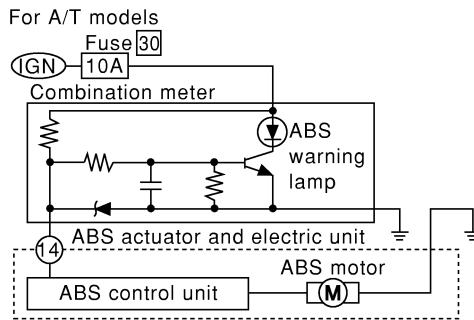

SBR998E





GO TO 2.

# TROUBLE DIAGNOSES FOR SYMPTOMS

**ABS**

## 7. ABS Warning Lamp Stays On When Ignition Switch Is Turned On (Cont'd)
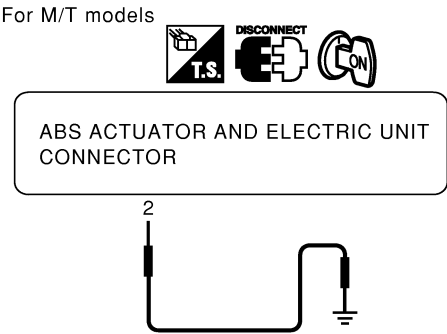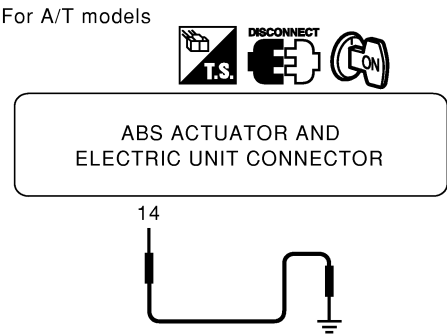
<b>2</b>	<b>CHECK WARNING LAMP</b>	
<p>1. Disconnect ABS actuator and electric unit connector.                  2. Connect suitable wire between ABS actuator and electric unit harness connector E9 for M/T models/E169 for A/T models, terminal 2 (L/R) for M/T models/14 (L/R) for A/T models and ground.</p>		
<p>For M/T models</p> 		
SBR950EA		
<p>For A/T models</p> 		
SBR999EA		
<b>Does warning lamp activate?</b>		
Yes	▶	GO TO 3.
No	▶	<p><b>Repair combination meter. Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E9 for M/T models/14 for A/T models.</li> <li>● Harness for open or short between ABS actuator and electric unit and fuse</li> </ul> <p>If NG, repair harness or connector.</p>

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
**BR**

<b>3</b>	<b>CHECK HARNESS CONNECTOR</b>	
<p>Check ABS actuator and electric unit pin terminals for damage or the connection of ABS actuator and electric unit harness connector. Reconnect ABS actuator and electric unit harness connector. Then retest.</p>		
OK	▶	<b>INSPECTION END</b>
NG	▶	GO TO 4.

ST  
RS  
BT

<b>4</b>	<b>CHECK ABS MOTOR GROUND</b>	
<p>1. Turn ignition switch "OFF".                  2. Check continuity between ABS motor and ground.</p>		
<b>Does continuity exist?</b>		
Yes	▶	Replace ABS actuator and electric unit.
No	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● ABS motor ground harness</li> <li>● ABS motor ground harness for open or short between ABS motor and ground</li> </ul> <p>If NG, repair harness.</p>

HA  
SC  
EL  
IDX

## Purpose

## Purpose

The ABS consists of electronic and hydraulic components. It allows for control of braking force so that locking of the wheels can be avoided. NFBR0048

The ABS:

- 1) Ensures proper tracking performance through steering wheel operation.
- 2) Enables obstacles to be avoided through steering wheel operation.
- 3) Ensures vehicle stability by preventing flat spins.


## ABS (Anti-Lock Brake System) Operation

NFBR0049

- When the vehicle speed is less than 10 km/h (6 MPH) this system does not work.
- The Anti-Lock Brake System (ABS) has self-test capabilities. The system turns on the ABS warning lamp for 1 second after turning the ignition switch ON. The system performs another test the first time the vehicle reaches 6 km/h (4 MPH). A mechanical noise may be heard as the ABS performs a self-test. This is a normal part of the self-test feature. If a malfunction is found during this check, the ABS warning lamp will come on.
- During ABS operation, a mechanical noise may be heard. This is a normal condition.

## ABS Hydraulic Circuit

NFBR0050

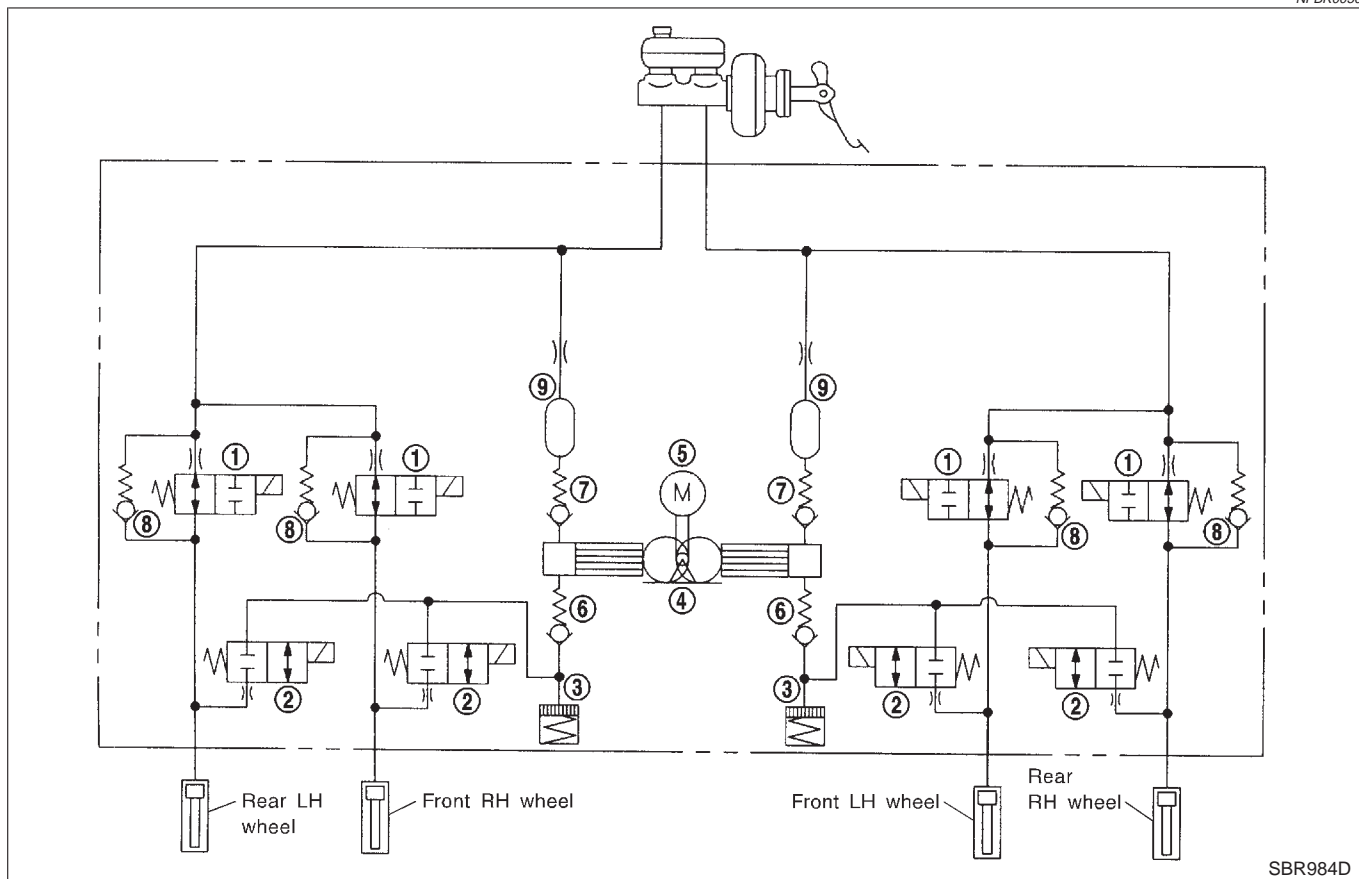

- |                          |                |                       |
|--------------------------|----------------|-----------------------|
| 1. Inlet solenoid valve  | 4. Pump        | 7. Outlet valve       |
| 2. Outlet solenoid valve | 5. Motor       | 8. Bypass check valve |
| 3. Reservoir             | 6. Inlet valve | 9. Damper             |



TCS (Traction Control System) Operation


=NFBR0145

- This system is designed to limit wheel slip during acceleration by cutting fuel to selected cylinders and changing transmission shift schedule. The ABS/TCS control unit monitors wheel speed slips through the ABS wheel sensors and determines the desired torque reduction needed to minimize wheel spin. The torque reduction by the ABS/TCS control unit may result in a combination of fuel cutoff, throttle control, and change shift timing of the transmission. The torque reduction is sent from the ABS/TCS control unit through the data link to the ECM and TCM. The ECM will cut off fuel and/or close throttle valve little bit, and/or TCM change shift schedule to achieve torque reduction. The TCS will be enabled when the TCS switch is in the ON position (TCS OFF indicator not illuminated), and if the catalytic converter temperature is within normal operating range.
- This system has a self-diagnostic function. When the ignition switch is initially turned "ON", the SLIP indicator lamp and TCS OFF indicator lamp light. If there is no problem with the ABS and TCS, both indicator lamps will go out as soon as the engine starts.
- The TCS OFF switch cancels the TCS function. The TCS OFF indicator lamp then lights to indicate that the TCS is not operating.
- This system utilizes a fuel-cut function to control drive torque. If fuel cut continues for an extended period of time during high-speed operations, the catalyst may melt and deteriorate. During continued TCS operations, the system will sometimes suspend the drive torque control function, preventing catalyst melting and deterioration.

GI  
MA  
EM  
LC  
EC  
FE  
CL


System Components

NFBR0146

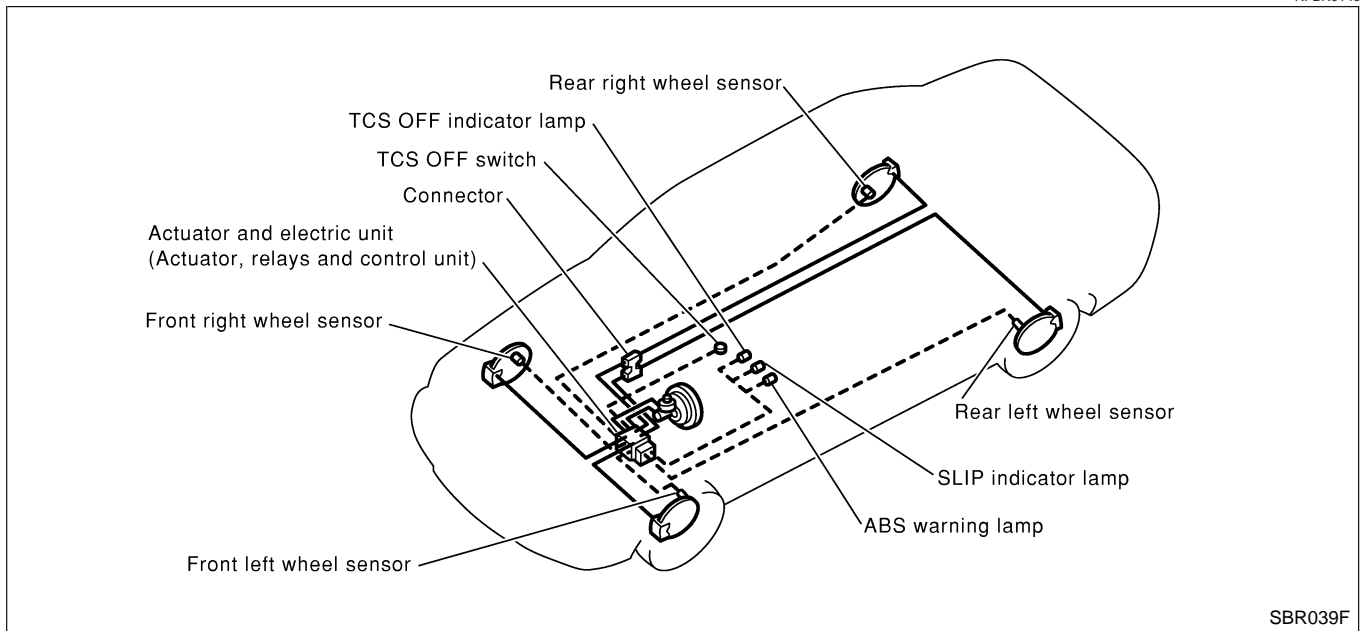

SBR039F

MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT

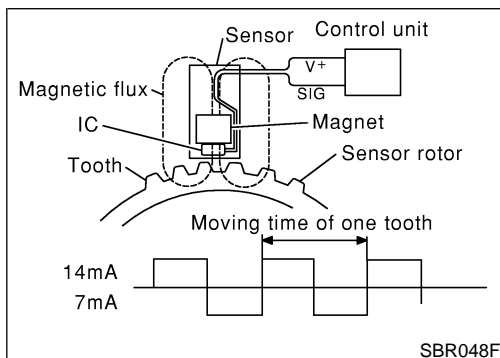

SBR048F

System Description


SENSOR

NFBR0147

NFBR0147S01

The front sensor units consist of a gear-shaped sensor rotor and a sensor element. The element contains a magnet and IC. The front wheel sensors are installed on the front of the wheel knuckles. As the wheel rotates, the sensor generates a square-wave signal. The frequency increase as the wheel speed increases.

SC  
EL  
IDX

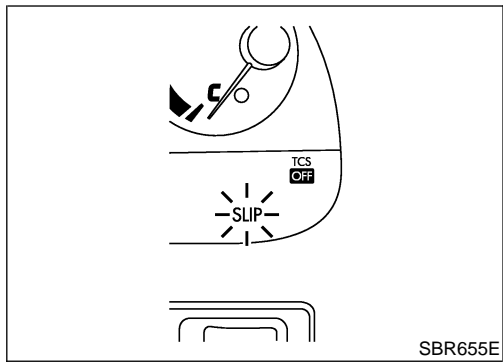

**CONTROL UNIT**

NFBR0147S02

**ABS Function**


NFBR0147S0201

The control unit computes the wheel rotating speed by the signal current sent from the sensor. Then it supplies a DC current to the actuator solenoid valve. It also controls ON-OFF operation of the valve relay and motor relay. If any electrical malfunction should be detected in the system, the warning lamp is turned on. In this condition, the ABS will be deactivated, and the vehicle's brake system reverts to normal operation.

**TCS Function**

NFBR0147S0202

Drive wheel slippage is detected by the 4-wheel rotating speed signal. When the wheel slip becomes excessive, the TCS operates, causing the SLIP indicator lamp to flash. And, at the same time, fuel-cut and throttle opening signals are sent to the ECM and a signal requiring a change in the shift schedule is sent to the TCM. When the TCS OFF switch is used to cancel TCS function, the TCS OFF indicator lamp will light. (TCS does not activate.) In case of a malfunction in the TCS, both the SLIP indicator lamp and the TCS OFF indicator lamp will light, while shutting down the TCS system operation. The vehicle will operate in the same way as a vehicle not equipped with the TCS.

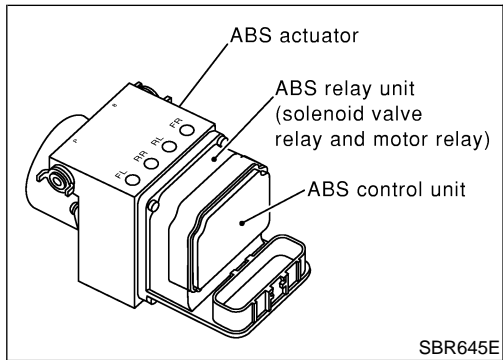

**ACTUATOR**

NFBR0147S03

The actuator contains:

- An electric motor and pump
- Two relays
- Eight solenoid valves, each inlet and outlet for
  - LH front
  - RH front
  - LH rear
  - RH rear

These components control the hydraulic circuit. The ABS control unit directs the actuator to increase, hold or decrease hydraulic pressure to all or individual wheels.


**ABS Actuator Operation**

NFBR0147S0301


		Inlet solenoid valve	Outlet solenoid valve	
Normal brake operation		OFF (Open)	OFF (Closed)	Master cylinder brake fluid pressure is directly transmitted to caliper via the inlet solenoid valve.
ABS operation	Pressure hold	ON (Closed)	OFF (Closed)	Hydraulic circuit is shut off to hold the caliper brake fluid pressure.
	Pressure decrease	ON (Closed)	ON (Open)	Caliper brake fluid is sent to reservoir via the outlet solenoid valve. Then it is pushed up to the master cylinder by pump.
	Pressure increase	OFF (Open)	OFF (Closed)	Master cylinder brake fluid pressure is transmitted to caliper.

Component Parts and Harness Connector Location

NFBR0053

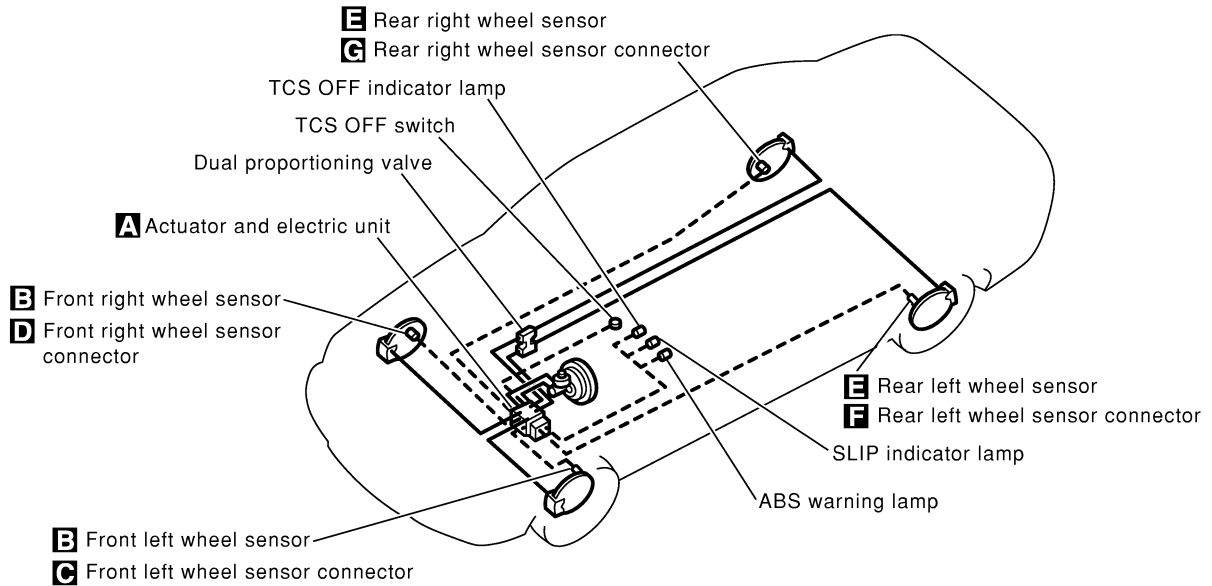


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

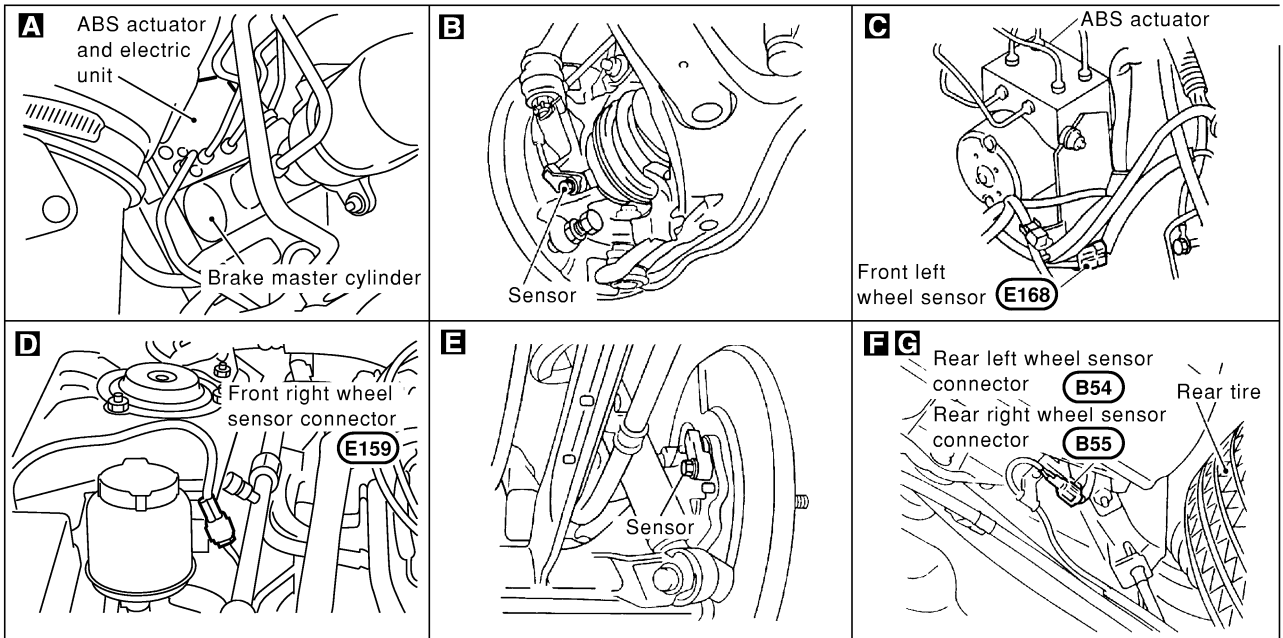

SBR903E

Schematic





NFBR0148

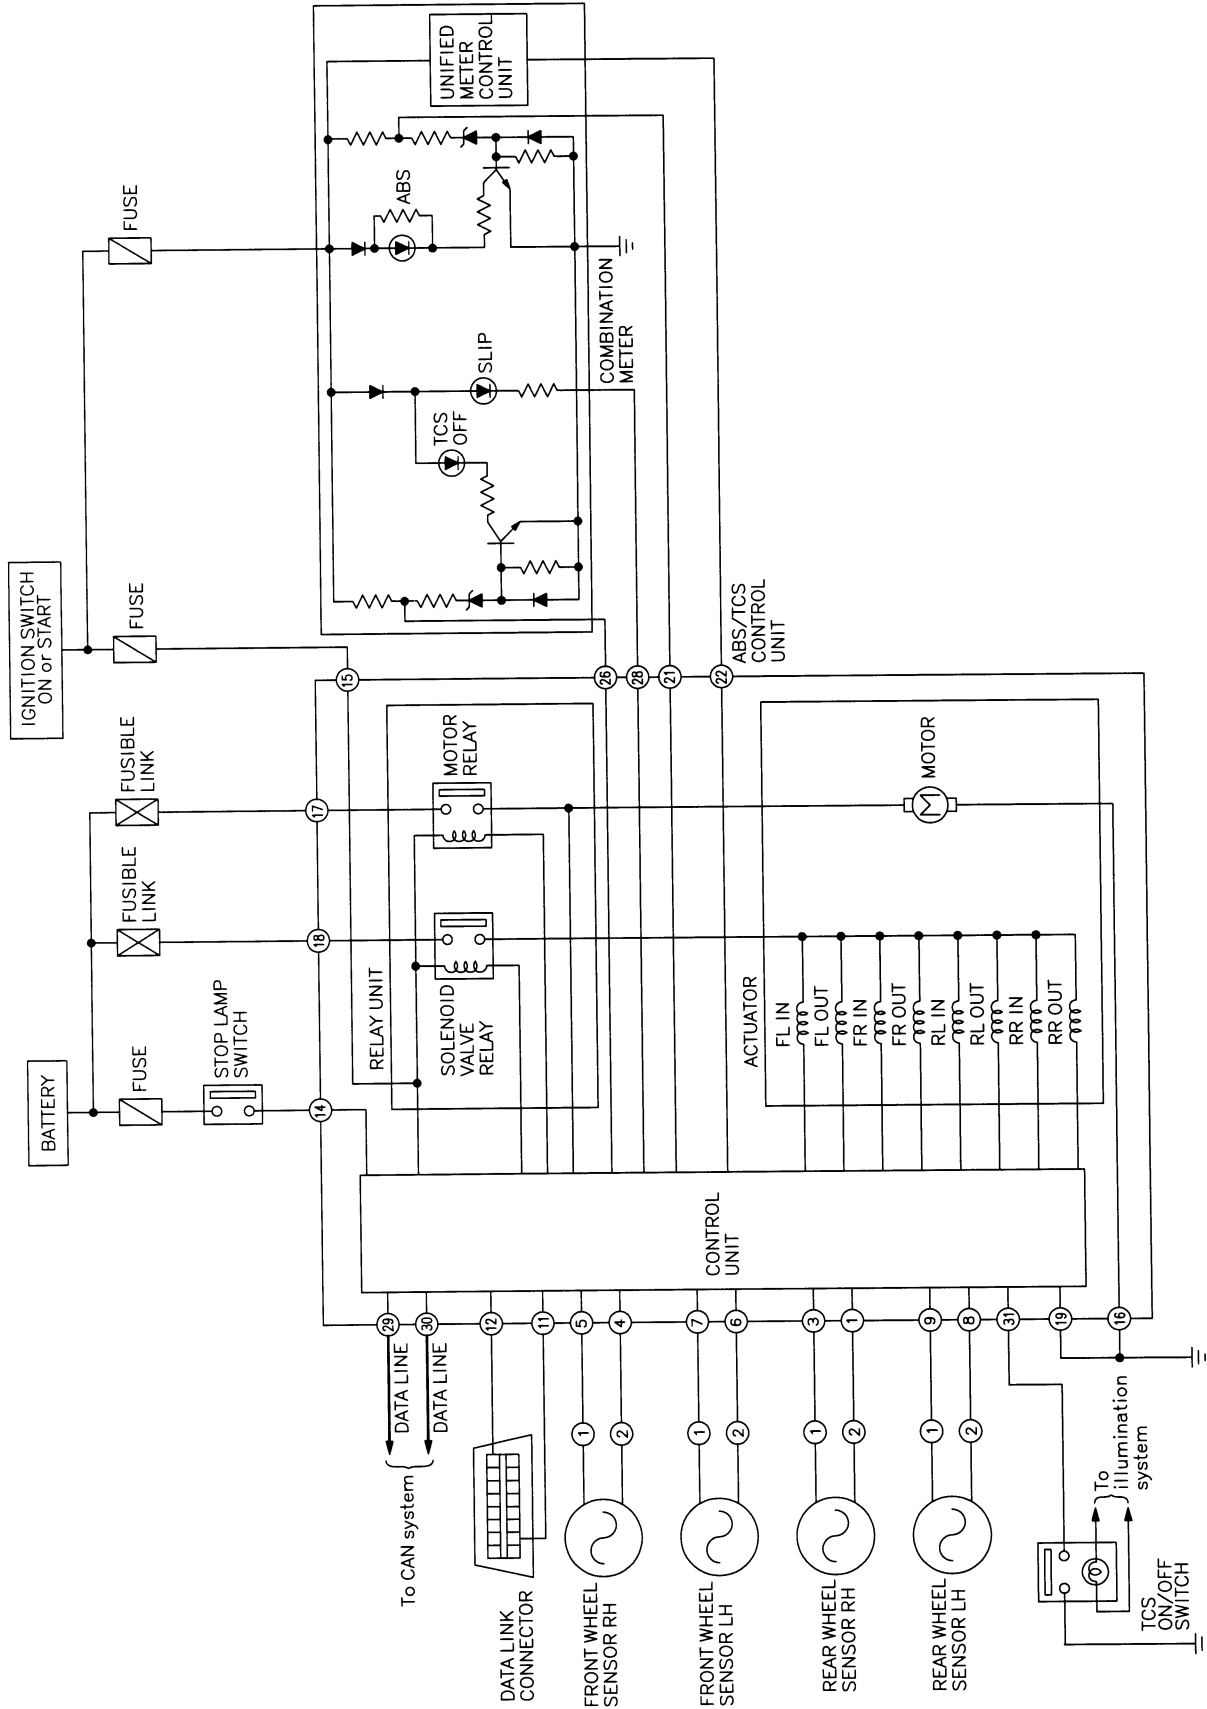

MBR602A

Wiring Diagram — TCS —



NFBR0149

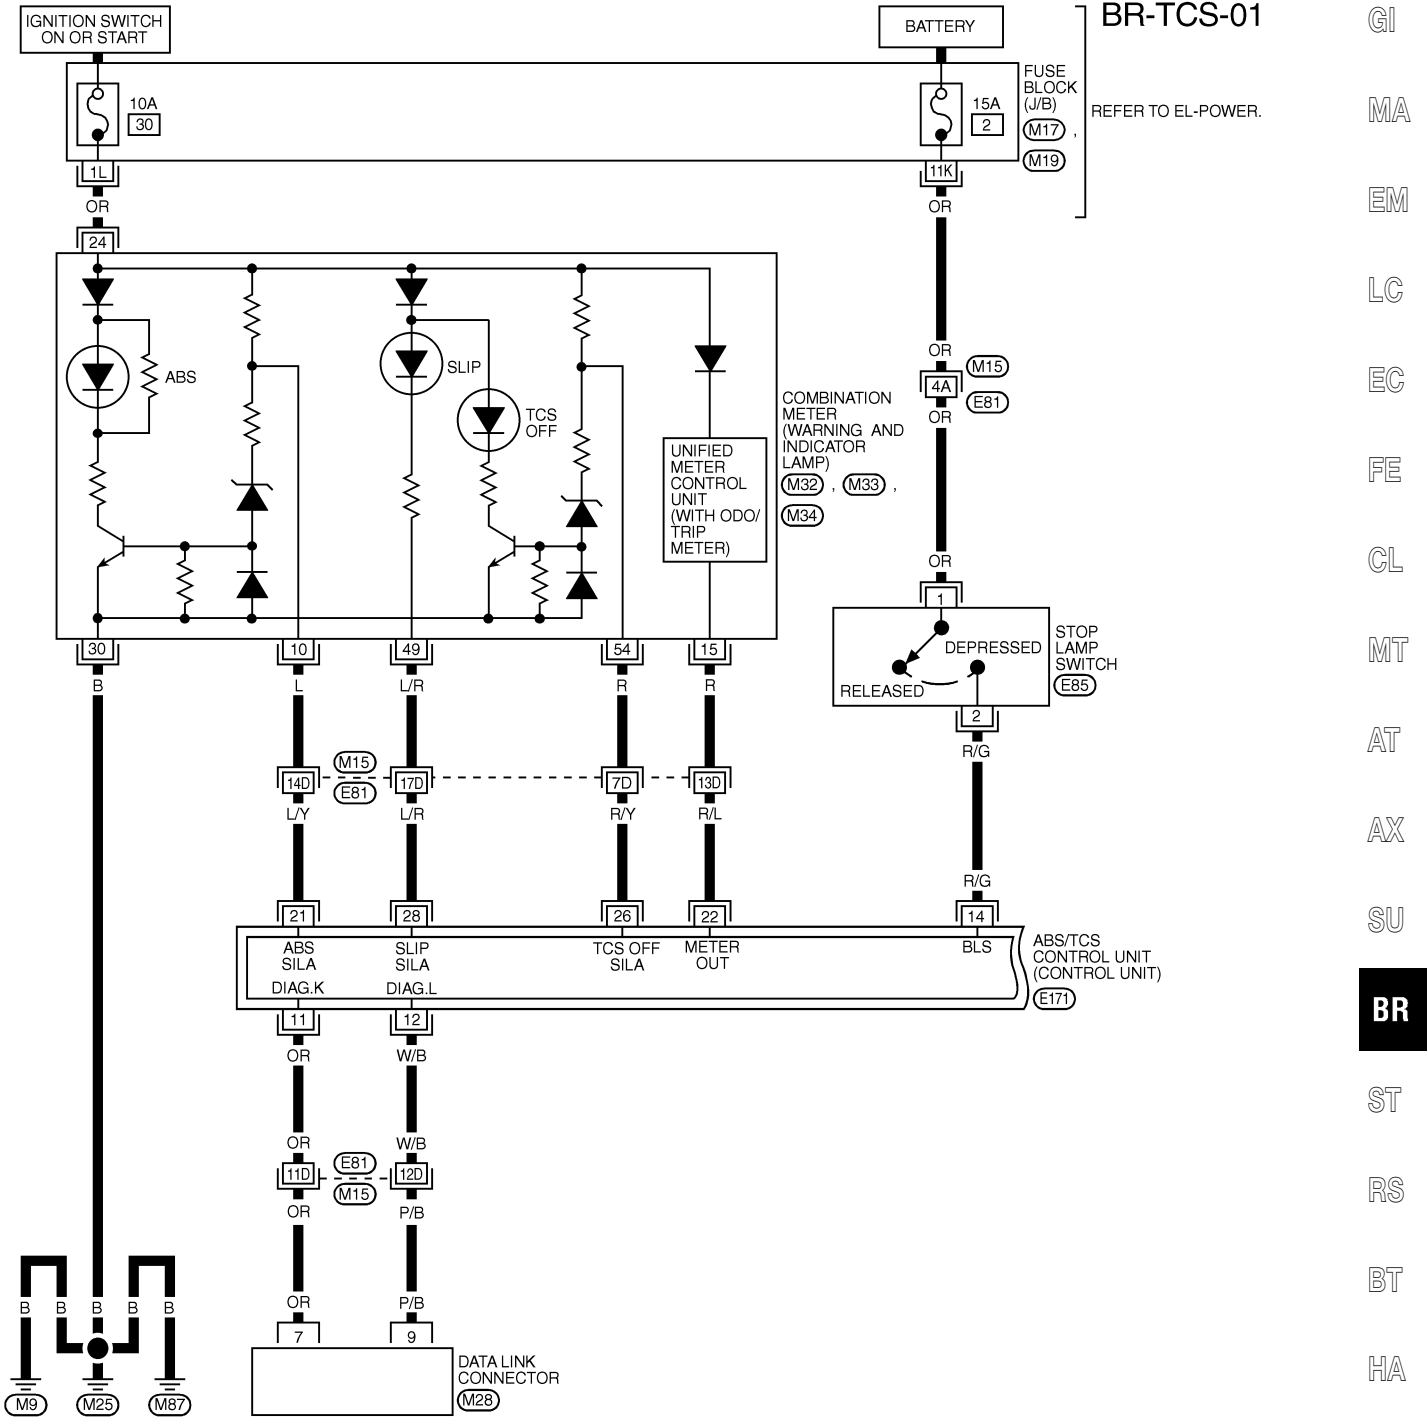

REFER TO THE FOLLOWING.  
 (M15) -SUPER  
 MULTIPLE JUNCTION (SMJ)  
 (M17), (M19) -FUSE BLOCK-  
 JUNCTION BOX (J/B)

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- AX
- SU
- BR**
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

BR-TCS-02

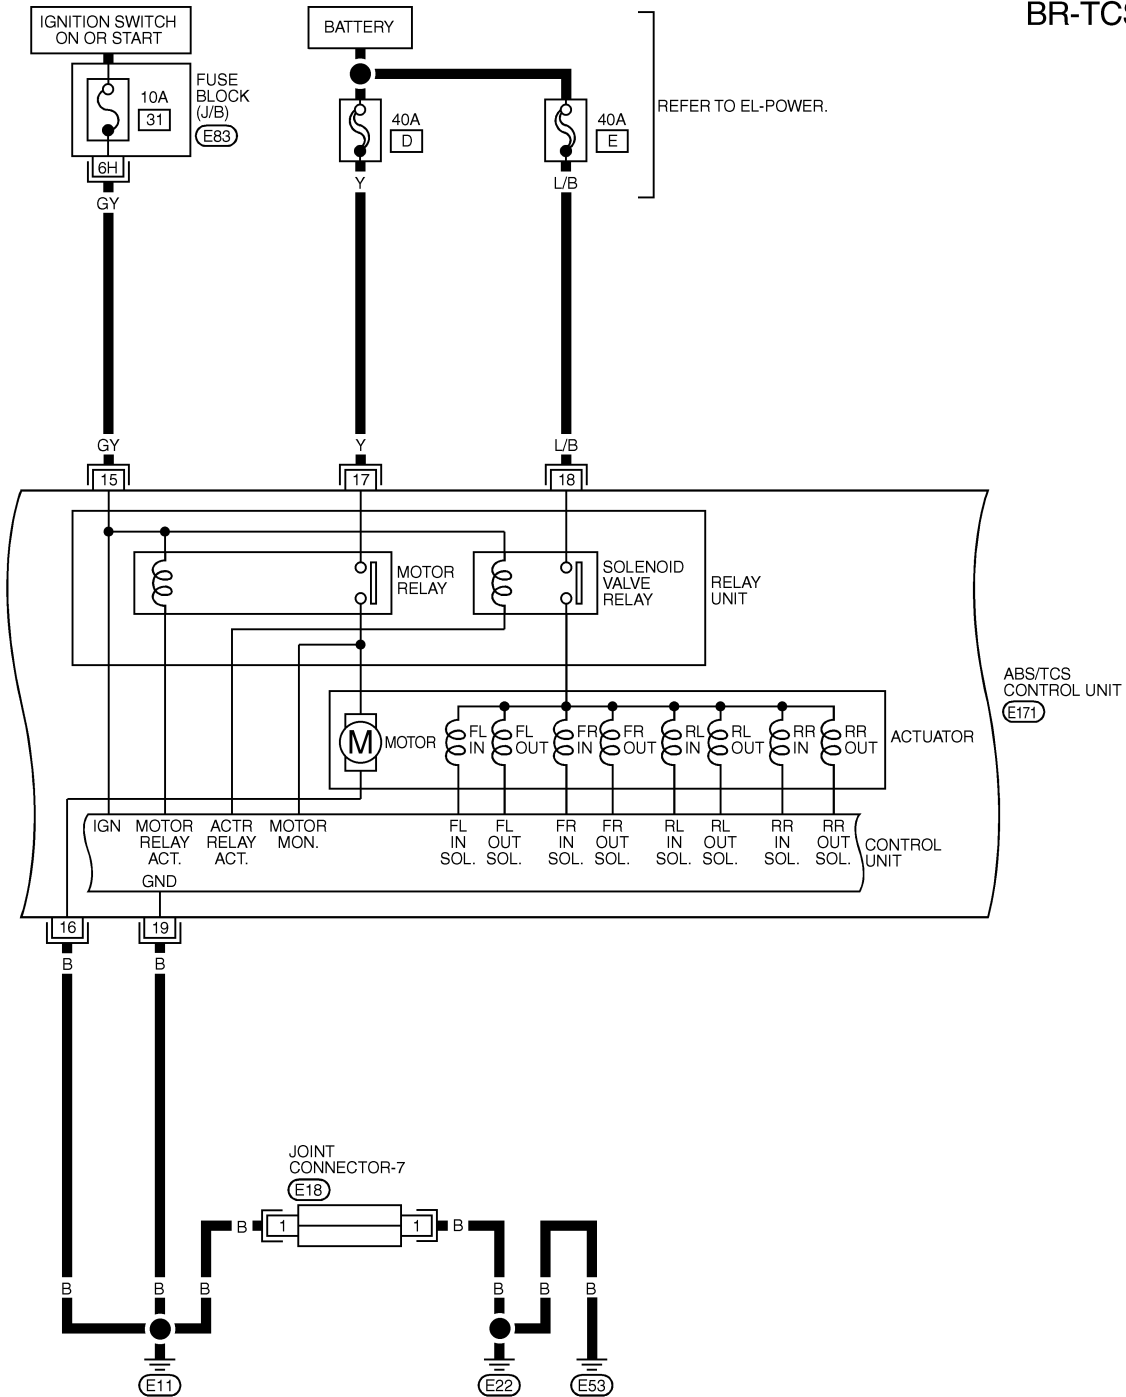


REFER TO THE FOLLOWING.  
 (E83) - FUSE BLOCK-JUNCTION BOX (J/B)

# DESCRIPTION


**TCS**

Wiring Diagram — TCS — (Cont'd)

BR-TCS-03

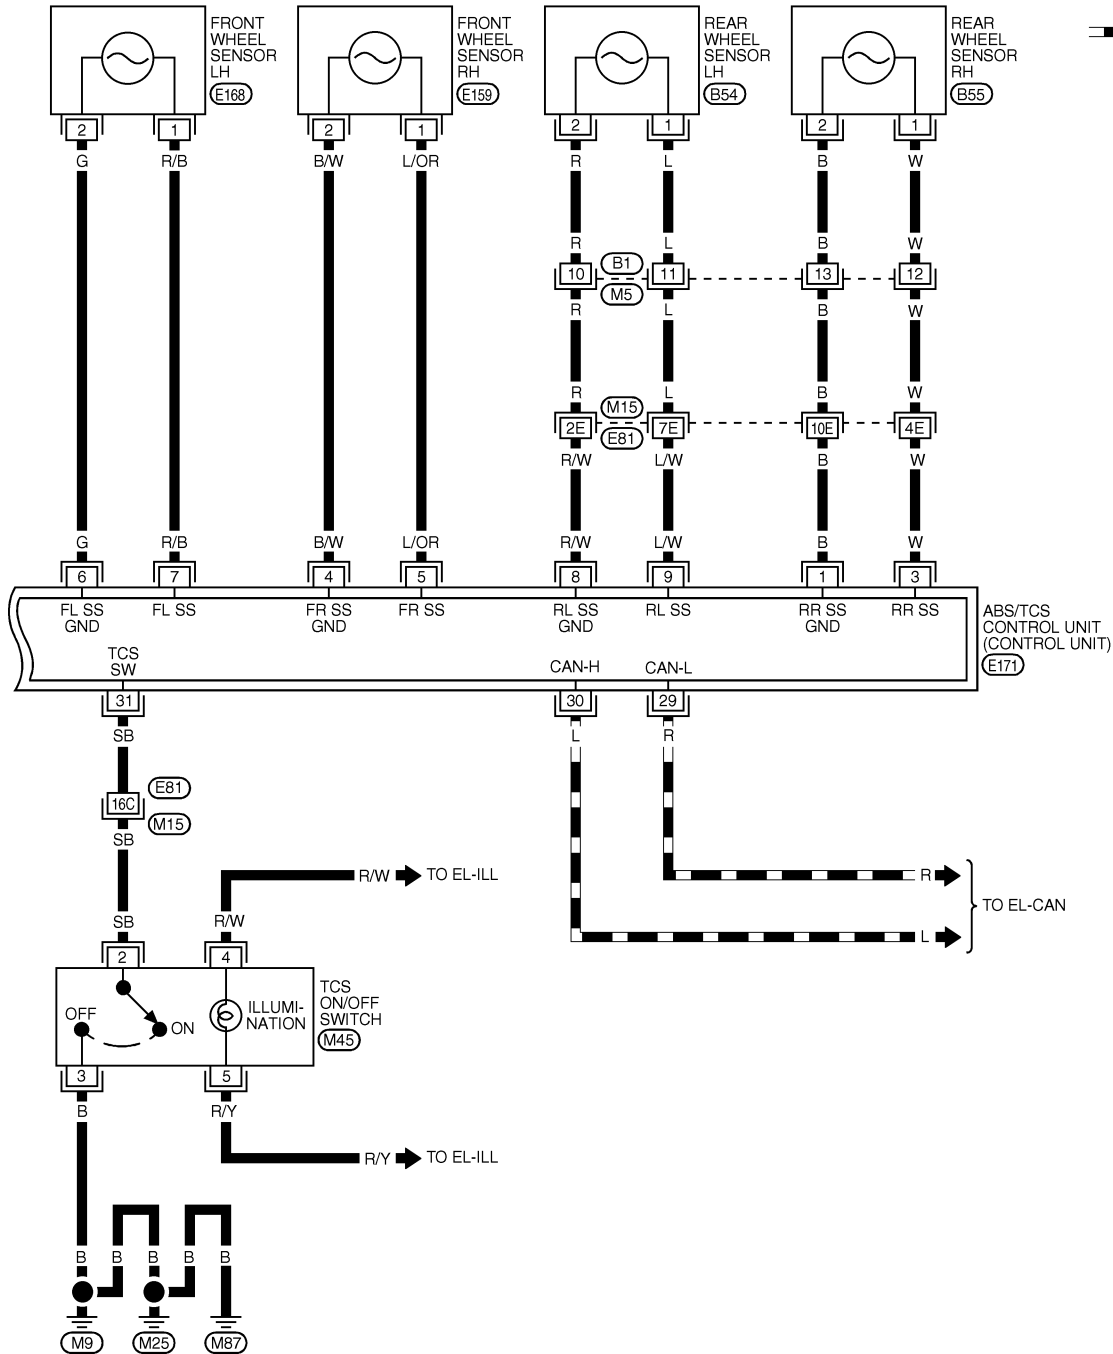

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
**BR**  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

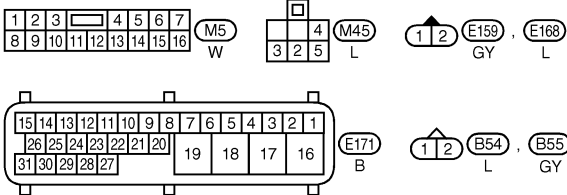

REFER TO THE FOLLOWING.  
(M15) - SUPER MULTIPLE JUNCTION (SMJ)

MBR605A

# DESCRIPTION

TCS

Wiring Diagram — TCS — (Cont'd)

WIRING DIAGRAM -TCS- (CONT'D)

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC)
1	B	REAR WHEEL SENSOR RH	WHEN VEHICLE CRUISE AT 30 KM/H (19 MPH)	PULSE FRONT: APPROX. 190 HZ REAR: APPROX. 190 HZ
3	W	REAR WHEEL SENSOR RH		
4	B/W	FRONT WHEEL SENSOR RH		
5	L/OR	FRONT WHEEL SENSOR RH		
6	G	FRONT WHEEL SENSOR LH		
7	R/B	FRONT WHEEL SENSOR LH		
8	R/W	REAR WHEEL SENSOR LH		
9	L/W	REAR WHEEL SENSOR LH		
11	OR	DATA LINK CONNECTOR		
12	W/B	DATA LINK CONNECTOR	-	-
14	R/G	STOP LAMP SWITCH	WHEN BRAKE PEDAL DEPRESSED	BATTERY VOLTAGE
			WHEN BRAKE PEDAL RELEASED	APPROX. 0V
15	GY	POWER SOURCE	IGN ON	BATTERY VOLTAGE
			IGN OFF	APPROX. 0V
16	B	GROUND	-	-
17	Y	POWER SOURCE	-	BATTERY VOLTAGE
18	L/B	POWER SOURCE	-	BATTERY VOLTAGE
19	B	GROUND	-	-
21	L/Y	ABS WARNING LAMP IN	WHEN ABS WARNING LAMP IS ACTIVE	APPROX. 0V
			WHEN ABS WARNING LAMP IS NOT ACTIVE	BATTERY VOLTAGE
22	R/L	UNIFIED METER CONTROL UNIT	-	-
26	R/Y	TCS OFF INDICATOR LAMP IN	WHEN TCS OFF INDICATOR LAMP IS ACTIVE	APPROX. 0V
			WHEN TCS OFF INDICATOR LAMP IS NOT ACTIVE	BATTERY VOLTAGE
28	L/R	SLIP INDICATOR LAMP	WHEN SLIP INDICATOR LAMP IS ACTIVE	APPROX. 0V
			WHEN SLIP INDICATOR LAMP IS NOT ACTIVE	BATTERY VOLTAGE
29	R	CAN COMMUNICATION INPUT/OUTPUT SIGNAL (L)	-	-
30	L	CAN COMMUNICATION INPUT/OUTPUT SIGNAL (H)	-	-
31	SB	TCS ON/OFF SWITCH	WHEN TCS OFF SWITCH IS "ON (TCS IS CANCELED)"	APPROX. 0V
			WHEN TCS OFF SWITCH IS "OFF (TCS CAN BE OPERATED)"	APPROX. 4.5V

SBR904EB



## CONSULT-II Functions

NFBR0151



### CONSULT-II MAIN FUNCTION

In a diagnosis function (main function), there are “SELF-DIAGNOSTIC RESULTS”, “DATA MONITOR”, “CAN DIAG SUPPORT MNTR”, “ACTIVE TEST”, “FUNCTION TEST”, “ECU PART NUMBER”. NFBR0151S01

Diagnostic test mode	Function	Reference
SELF-DIAGNOSTIC RESULTS	Self-diagnostic results can be read and erased quickly.	Refer to BR-97.
DATA MONITOR	Input/Output data in the ABS actuator and electric unit (control unit) can be read.	Refer to BR-100.
CAN DIAG SUPPORT MNTR	The results of transmit/receive diagnosis of communication can be read.	—
ACTIVE TEST	Diagnostic Test Mode in which CONSULT-II drives some actuators apart from the ABS actuator and electric unit (control unit) and also shifts some parameters in a specified range.	Refer to BR-101.
FUNCTION TEST	Conducted by CONSULT-II instead of a technician to determine whether each system is “OK” or “NG”.	—
ECU PART NUMBER	ABS actuator and electric unit (control unit) part number can be read.	—

### ECU (ABS/TCS CONTROL UNIT) PART NUMBER MODE

Ignore the ECU part number displayed in the ECU PART NUMBER MODE. Refer to parts catalog to order the ECU. NFBR0151S02

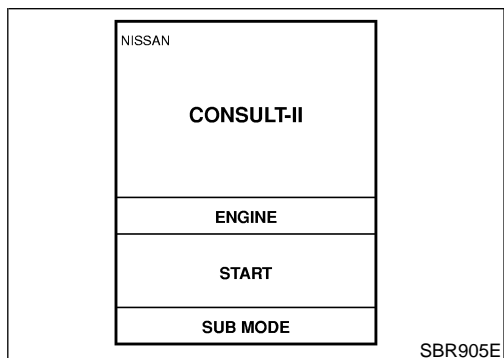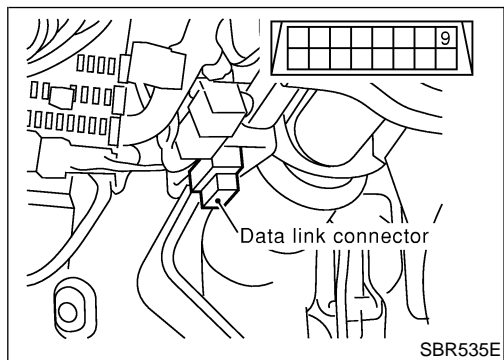

### CONSULT-II Inspection Procedure

#### SELF-DIAGNOSIS PROCEDURE

NFBR0152

NFBR0152S01

1. Turn ignition switch OFF.
2. Connect CONSULT-II to Data Link Connector.
3. Start engine.
4. Drive vehicle over 30 km/h (19 MPH) for at least one minute.
5. Stop vehicle with engine running and touch “START” on CONSULT-II screen.

<b>DIAGNOSIS SYSTEM SELECTION</b>	
ENGINE	
A/T	
AIR BAG	
ABS	

PBR385C

6. Touch "ABS".

SELECT DIAG MODE		
SELF-DAIG RESULTS		
DATA MONITOR		
CAN DIAG SUPPORT MNTR		
ACTIVE TEST		
FUNCTION TEST		
ECU PART NUMBER		
BACK	LIGHT	COPY

SFIA2435E

7. Touch "SELF DIAG RESULTS".

- The screen shows the detected malfunction and how many times the ignition switch has been turned since the malfunction.

8. Make the necessary repairs following the diagnostic procedures.

<b>SELF DIAG RESULTS</b>	
<b>DTC RESULTS</b>	<b>TIME</b>
FR RH SENSOR [OPEN]	xxx

SBR561E

9. After the malfunctions are repaired, erase the self-diagnostic results stored in the control unit by touching "ERASE".

10. Check ABS warning lamp, SLIP indicator lamp, TCS OFF indicator lamp for deactivation after driving vehicle over 30 km/h (19 MPH) for at least one minute.

**NOTE:**

"SELF-DIAG RESULTS" screen shows the detected malfunction and how many times the ignition switch has been turned since the malfunction.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

**TCS**

*CONSULT-II Inspection Procedure (Cont'd)*

## SELF-DIAGNOSTIC RESULTS MODE


=NFB0152S02

Diagnostic item	Diagnostic item is detected when ...	Reference Page	
FR RH SENSOR-1	<ul style="list-style-type: none"> <li>● Circuit for front right wheel sensor is open. (An abnormally high input voltage is entered.)</li> </ul>	BR-112	GI MA
FR LH SENSOR-1	<ul style="list-style-type: none"> <li>● Circuit for front left wheel sensor is open. (An abnormally high input voltage is entered.)</li> </ul>	BR-112	EM
RR RH SENSOR-1	<ul style="list-style-type: none"> <li>● Circuit for rear right sensor is open. (An abnormally high input voltage is entered.)</li> </ul>	BR-112	LC
RR LH SENSOR-1	<ul style="list-style-type: none"> <li>● Circuit for rear left sensor is open. (An abnormally high input voltage is entered.)</li> </ul>	BR-112	EC
FR RH SENSOR-2	<ul style="list-style-type: none"> <li>● Circuit for front right wheel sensor is shorted. (An abnormally low input voltage is entered.)</li> </ul>	BR-112	FE
FR LH SENSOR-2	<ul style="list-style-type: none"> <li>● Circuit for front left wheel sensor is shorted. (An abnormally low input voltage is entered.)</li> </ul>	BR-112	CL
RR RH SENSOR-2	<ul style="list-style-type: none"> <li>● Circuit for rear right sensor is shorted. (An abnormally low input voltage is entered.)</li> </ul>	BR-112	MT
RR LH SENSOR-2	<ul style="list-style-type: none"> <li>● Circuit for rear left sensor is shorted. (An abnormally low input voltage is entered.)</li> </ul>	BR-112	AT
ABS SENSOR [ABNORMAL SIGNAL]	<ul style="list-style-type: none"> <li>● Teeth damage on sensor rotor or improper installation of wheel sensor. (Abnormal wheel sensor signal is entered.)</li> </ul>	BR-112	AX
FR RH IN ABS SOL	<ul style="list-style-type: none"> <li>● Circuit for front right inlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-116	SU
FR LH IN ABS SOL	<ul style="list-style-type: none"> <li>● Circuit for front left inlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-116	<b>BR</b>
RR RH IN ABS SOL	<ul style="list-style-type: none"> <li>● Circuit for rear right inlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-116	ST
RR LH IN ABS SOL	<ul style="list-style-type: none"> <li>● Circuit for rear left inlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-116	RS
FR RH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Circuit for front right outlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-116	BT
FR LH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Circuit for front left outlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-116	HA
RR RH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Circuit for rear right outlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-116	SC
RR LH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Circuit for rear left outlet solenoid valve is open. (An abnormally low output voltage is entered.)</li> </ul>	BR-116	EL
ABS ACTUATOR RELAY [ABNORMAL]	<ul style="list-style-type: none"> <li>● Actuator solenoid valve relay is ON, even control unit sends off signal.</li> <li>● Actuator solenoid valve relay is OFF, even control unit sends on signal.</li> </ul>	BR-116	IDX
PUMP MOTOR	<ul style="list-style-type: none"> <li>● Circuit for actuator motor is open or shorted.</li> <li>● Actuator motor relay is stuck.</li> </ul>	BR-119	
BATTERY VOLTAGE [ABNORMAL]	<ul style="list-style-type: none"> <li>● Power source voltage supplied to ABS/TCS control unit is abnormally low or high.</li> </ul>	BR-121	
CONTROLLER FAILURE	<ul style="list-style-type: none"> <li>● Function of calculation in ABS/TCS control unit has failed.</li> </ul>	BR-123	
FR LH IN ABS SOL	<ul style="list-style-type: none"> <li>● Circuit of the front LH wheel inlet solenoid valve is open or short, or the control line is open or short to the power supply or the ground.</li> </ul>	BR-116	
FR LH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Circuit of the front LH wheel outlet solenoid valve is open or short, or the control line is open or short to the power supply or the ground.</li> </ul>	BR-116	

Diagnostic item	Diagnostic item is detected when ...	Reference Page
RR RH IN ABS SOL	<ul style="list-style-type: none"> <li>● Circuit of the front LH wheel inlet solenoid valve is open or short, or the control line is open or short to the power supply or the ground.</li> </ul>	BR-116
RR RH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Circuit of the front LH wheel outlet solenoid valve is open or short, or the control line is open or short to the power supply or the ground.</li> </ul>	BR-116
FR RH IN ABS SOL	<ul style="list-style-type: none"> <li>● Circuit of the front LH wheel inlet solenoid valve is open or short, or the control line is open or short to the power supply or the ground.</li> </ul>	BR-116
FR RH OUT ABS SOL RR LH IN ABS SOL RR LH OUT ABS SOL	<ul style="list-style-type: none"> <li>● Circuit of the front LH wheel outlet solenoid valve is open or short, or the control line is open or short to the power supply or the ground.</li> </ul>	BR-116
ENGINE SIGNAL 1, 2, 3, 4	Engine related part has malfunction.	EC-140
CAN COMM CIRCUIT*2	<ul style="list-style-type: none"> <li>● CAN communication line is open or short.</li> <li>● TCS/ABS control unit internal malfunction.</li> <li>● Power supply for ECM is interrupted instantaneously for approx. 0.5 seconds or more.</li> </ul>	EL-440
A/T SIGNAL	CAN communication with TCM is not normal.	AT-105

\*1: When “## ## SENSOR 2” is displayed, check power supply for TCS/ABS control unit in addition to wheel sensor circuit.


\*2: When any diagnosis results is detected with “CAN COMM CIRCUIT” CAN communication circuit first.

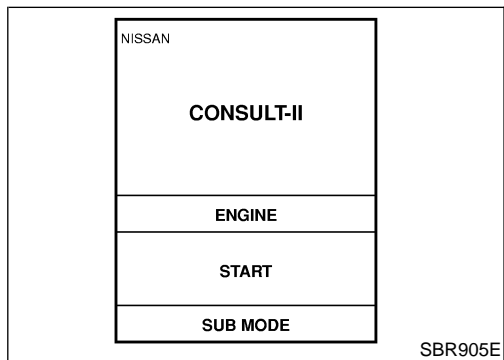


## DATA MONITOR PROCEDURE

NFBR0152S03


1. Turn ignition switch OFF.
2. Connect CONSULT-II to data link connector.
3. Turn ignition switch ON.
4. Touch “START” on CONSULT-II screen.

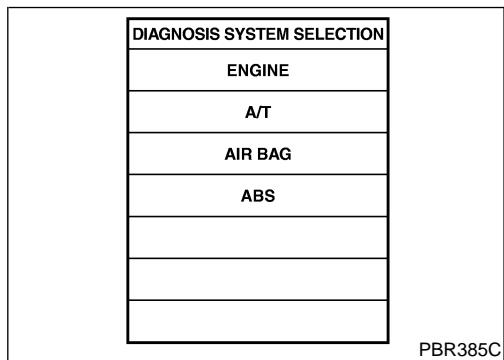

5. Touch “ABS”.

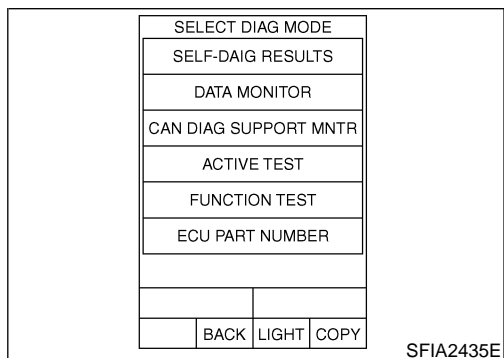

6. Touch “DATA MONITOR”.
7. Touch “SETTING” on “SELECT MONITOR ITEM” screen.
8. Touch “START” on “SELECT MONITOR ITEM”.

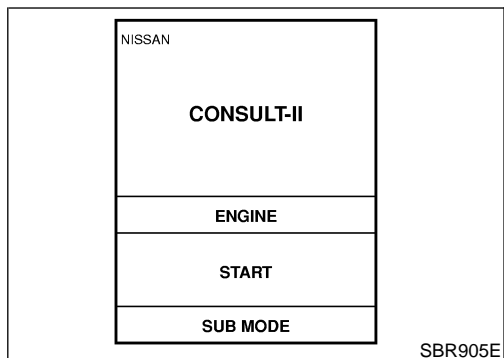

## ACTIVE TEST PROCEDURE

NFBR0152S04


- When conducting Active test, vehicle must be stationary.
  - When ABS warning lamp or SLIP indicator lamp stays on, never conduct Active test.
1. Turn ignition switch OFF.
  2. Connect CONSULT-II to Data Link Connector.
  3. Start engine.
  4. Touch "START" on CONSULT-II screen.

GI

MA

EM

LC

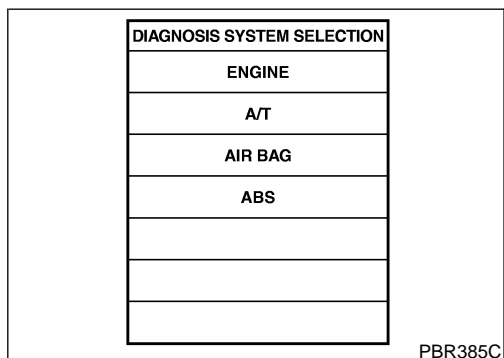


5. Touch "ABS".

EC

FE

CL

MT

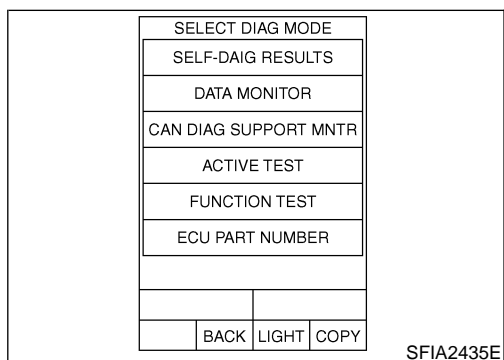


6. Touch "ACTIVE TEST".

AT

AX

SU

**BR**

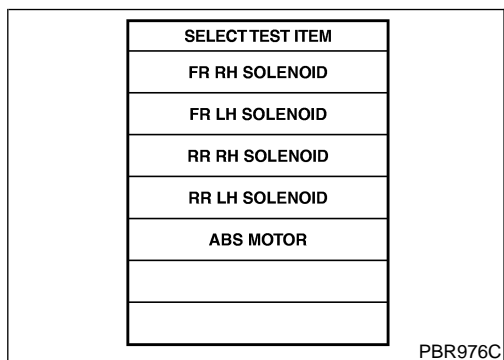


7. Select active test item by touching screen.

ST

RS

BT

HA

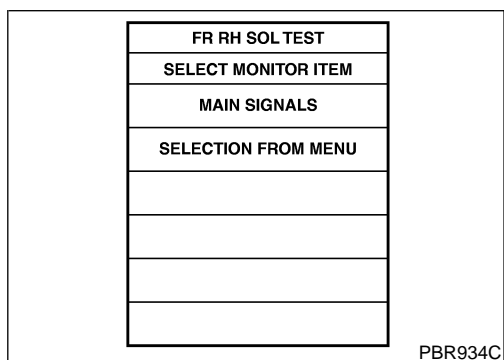

8. Touch "START".
9. Carry out the active test by touching screen key.

SC

EL

IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

TCS

CONSULT-II Inspection Procedure (Cont'd)

## DATA MONITOR MODE

NFBR0152S05

MONITOR ITEM	CONDITION	SPECIFICATION
FR RH SENSOR FR LH SENSOR RR RH SENSOR RR LH SENSOR	Drive vehicle. (Each wheel is rotating.)	Displays computed vehicle speed from wheel sensor signal. Almost the same speed as speedometer.
STOP LAMP SW	Turn ignition switch ON and depress brake pedal.	Depress the pedal: ON Release the pedal: OFF
ENGINE SPEED	Engine is running. (rpm)	Engine speed: 0 - 12,800 (rpm)
FR RH IN SOL FR RH OUT SOL FR LH IN SOL FR LH OUT SOL RR RH IN SOL RR RH OUT SOL RR LH IN SOL RR LH OUT SOL	Ignition switch is turned ON or engine is running.	Operating conditions for each solenoid valve are indicated. ABS is not operating: OFF
ACTUATOR RLY	Ignition switch is turned ON or engine is running.	Displays ON/OFF condition of ABS actuator relay. When turning ignition switch ON, ABS actuator relay is operated.
MOTOR RELAY		ABS is not operating: OFF ABS is operating: ON
ABS WARN LAMP		Warning lamp is turned on: ON Warning lamp is turned off: OFF
BATTERY VOLT		Power supply voltage for control unit
GEAR	A/T gear position signal detected by TCM is displayed.	Gear position: 1st: 1 2nd: 2 3rd: 3 4th: 4
NEXT GR POSI	A/T next gear position is displayed.	Gear position: 1st: 1 2nd: 2 3rd: 3 4th: 4
OFF SW	ON/OFF condition of signal from TCS switch is displayed.	TCS OFF S/W (all the time switch is pressed): ON TCS OFF S/W (released): OFF
OFF LAMP	<ul style="list-style-type: none"> <li>● TCS OFF condition is displayed.</li> <li>● The condition of malfunctioning TCS is displayed.</li> </ul>	TCS OFF indicator "OFF": OFF TCS OFF indicator "ON": ON
SLIP LAMP	The TCS functioning state is displayed by detecting rear wheel slip.	SLIP indicator "ON": ON SLIP indicator "OFF": OFF
SLCT LVR POSI	Shift lever position detected through TCM is displayed.	1st: 1 2nd: 2 3rd: 3 4th: 4 D range: D N range: N R range: R P range: P

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

**TCS**

CONSULT-II Inspection Procedure (Cont'd)

## ACTIVE TEST MODE

NFBR0152S06


TEST ITEM	CONDITION	JUDGEMENT			
FR RH SOL FR LH SOL RR RH SOL RR LH SOL	Ignition switch is turned ON.	Brake fluid pressure control operation			GI
			IN SOL	OUT SOL	MA
		UP (Increase):	OFF	OFF	
		KEEP (Hold):	ON	OFF	EM
		DOWN (Decrease):	ON	ON*	
ABS MOTOR		ABS actuator motor ON: Motor runs OFF: Motor stops			LC

**NOTE:**


Active test will automatically stop ten seconds after the test starts. (TEST IS STOPPED monitor shows ON.)

\*: "ON" lasts for 1 to 2 seconds after touching screen, then it goes to "OFF".

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
**BR**  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

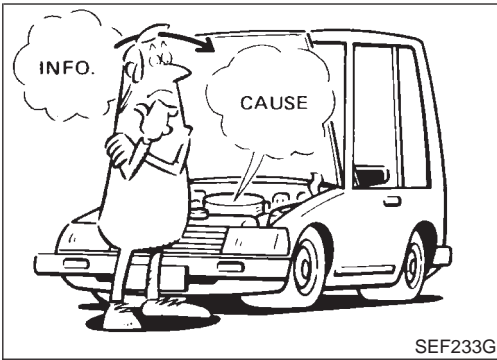

SEF233G

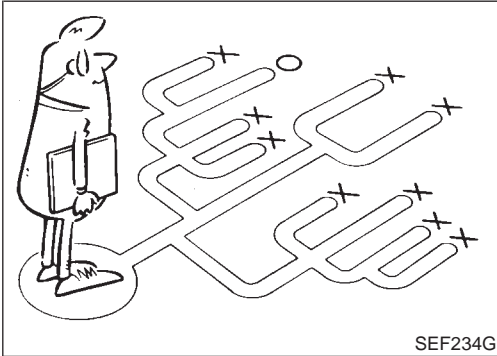

SEF234G

## How to Perform Trouble Diagnoses for Quick and Accurate Repair

NFBR0153

### INTRODUCTION

NFBR0153S01

The ABS/TCS system has an electronic control unit to control major functions. The control unit accepts input signals from sensors and instantly drives actuator. It is essential that both kinds of signals are proper and stable. It is also important to check for conventional problems: such as air leaks in the booster or lines, lack of brake fluid, or other problems with the brake system.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or faulty wiring. In this case, careful checking of suspicious circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the problems, so a road test should be performed.


Before undertaking actual checks, take just a few minutes to talk with a customer who approaches with an ABS/TCS complaint. The customer is a very good source of information on such problems; especially intermittent ones. Through the talks with the customer, find out what symptoms are present and under what conditions they occur.


Start your diagnosis by looking for “conventional” problems first. This is one of the best ways to troubleshoot brake problems on an ABS/TCS controlled vehicle. Also check related Service Bulletins for information.




Preliminary Check


NFBR0155
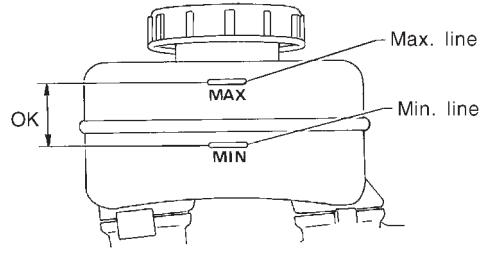
<b>1</b>	<b>CHECK BRAKE FLUID LEVEL</b>		
		<p><b>Check brake fluid level in reservoir tank.</b> Low fluid level may indicate brake pad wear or leakage from brake line.</p>  <p style="text-align: right;">SBR451D</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p>
		<p><b>Is brake fluid filled between MAX and MIN lines on reservoir tank and/or has brake fluid been contaminated?</b></p>	
Yes	▶	GO TO 2.	CL
No	▶	Repair. GO TO 2.	
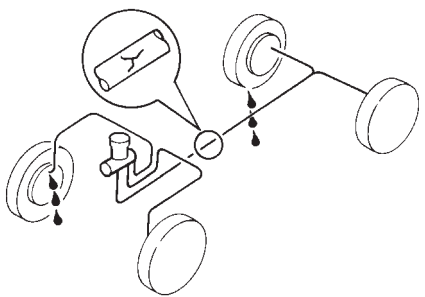
<b>2</b>	<b>CHECK BRAKE LINE</b>		
		<p>Check brake line for leakage.</p>  <p style="text-align: right;">SBR389C</p>	<p>MT</p> <p>AT</p> <p>AX</p> <p>SU</p> <p><b>BR</b></p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
		<p><b>Is leakage present at or around brake lines, tubes or hoses or are any of these parts cracked or damaged?</b></p>	
Yes	▶	Repair. GO TO 3.	
No	▶	GO TO 3.	

Preliminary Check (Cont'd)
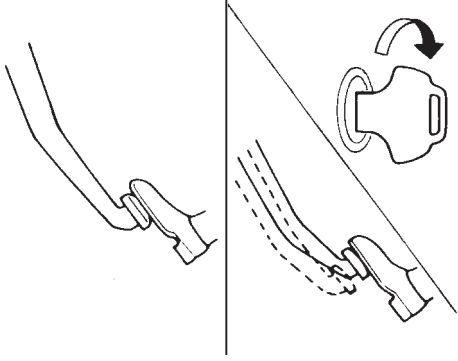
<b>3</b>	<b>CHECK BRAKE BOOSTER OPERATION</b>	
<p>Check brake booster for operation and air tightness. Refer to BR-20.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SBR058C</p>		
<b>Is brake booster airtight and functioning properly?</b>		
Yes	▶	GO TO 4.
No	▶	Replace. GO TO 4.
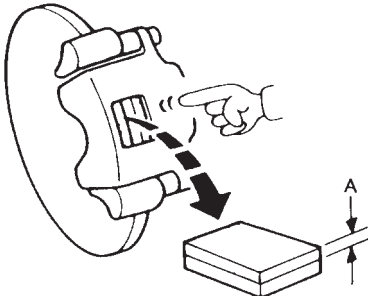
<b>4</b>	<b>CHECK BRAKE PAD AND ROTOR</b>	
<p>Check brake pad and rotor. Refer to BR-23, 25, 27, 31.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SBR059C</p>		
<b>Are brake pads and rotors functioning properly?</b>		
Yes	▶	GO TO 5.
No	▶	Replace.

<b>5</b>	<b>RECHECK BRAKE FLUID LEVEL</b>
Check brake fluid level in reservoir tank again.	
SBR451D	
<b>Is brake fluid filled between MAX and MIN lines on reservoir tank and/or has brake fluid been contaminated?</b>	
Yes	▶ GO TO 6.
No	▶ Fill up brake fluid.

GI  
MA  
EM  
LC  
EC  
FE  
CL

<b>6</b>	<b>CHECK WARNING LAMP ACTIVATION</b>
Check warning lamp activation.	
SBR655E	
<b>Does warning lamp turn on when ignition switch is turned "ON"?</b>	
Yes	▶ GO TO 7.
No	▶ Check fuse, warning lamp bulb and warning lamp circuit.

MT  
AT  
AX  
SU

**BR**


<b>7</b>	<b>CHECK WARNING LAMP DEACTIVATION</b>
Check warning lamp for deactivation after engine is started.	
<b>Does warning lamp turn off when engine is started?</b>	
Yes	▶ GO TO 8.
No	▶ Go to Self-diagnosis. Refer to BR-97.

RS  
BT  
HA

<b>8</b>	<b>DRIVE VEHICLE</b>
Drive vehicle at speeds over 30 km/h (19 MPH) for at least one minute.	
<b>Does warning lamp remain off after vehicle has been driven at 30 km/h (19 MPH) for at least one minute?</b>	
Yes	▶ END
No	▶ Go to Self-diagnosis. Refer to BR-97.

SC  
EL  
IDX

## Ground Circuit Check

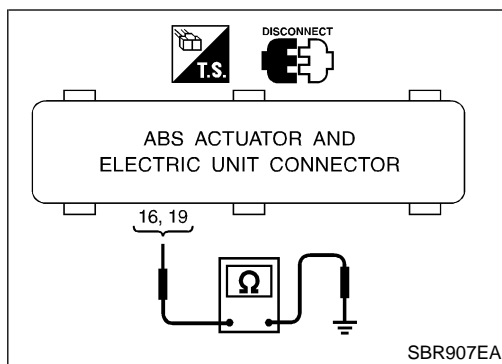**Ground Circuit Check****ABS ACTUATOR AND ELECTRIC UNIT GROUND**

NFBR0157

NFBR0157S01

- Check continuity between ABS actuator and electric unit harness connector E171 terminals 16 (B), 19 (B) and ground.

**Continuity should exist.**

## Malfunction Code/Symptom Chart

NFB0158

Code No. (FAIL CODE No.)	Malfunctioning part	Warning lamp	Indicator		Fail-safe	Reference Page
			ABS	TCS OFF		
U1000	CAN communication system failure	ON or OFF	ON	ON	X	BR-124
C1101	Rear right sensor (open-circuit)	ON	ON	ON	X	BR-112
C1102	Rear left sensor (open-circuit)	ON	ON	ON	X	BR-112
C1103	Front right sensor (open-circuit)	ON	ON	ON	X	BR-112
C1104	Front left sensor (open-circuit)	ON	ON	ON	X	BR-112
C1105	Rear right sensor (short-circuit)*2	ON	ON	ON	X	BR-112
C1106	Rear left sensor (short-circuit)*2	ON	ON	ON	X	BR-112
C1107	Front right sensor (short-circuit)*2	ON	ON	ON	X	BR-112
C1108	Front left sensor (short-circuit)*2	ON	ON	ON	X	BR-112
C1109	Power supply (Low or high voltage)	ON	ON	ON	—*1	BR-121
C1110	Control unit	ON	ON	ON	X	BR-123
C1111	Actuator motor or motor relay	ON	ON	ON	X	BR-119
C1114	Solenoid valve relay	ON	ON	ON	X	BR-116
C1120	Actuator front left inlet solenoid valve	ON	ON	ON	X	BR-116
C1121	Actuator front left outlet solenoid valve	ON	ON	ON	X	BR-116
C1122	Actuator front right inlet solenoid valve	ON	ON	ON	X	BR-116
C1123	Actuator front right outlet solenoid valve	ON	ON	ON	X	BR-116
C1124	Actuator rear left inlet solenoid valve	ON	ON	ON	X	BR-116
C1125	Actuator rear left outlet solenoid valve	ON	ON	ON	X	BR-116
C1126	Actuator rear right inlet solenoid valve	ON	ON	ON	X	BR-116
C1127	Actuator rear right outlet solenoid valve	ON	ON	ON	X	BR-116
C1130	CAN communication line or ECM*4	—*3	X	X	X	BR-124
C1131	CAN communication line or ECM*4	—*3	X	X	X	BR-124
C1132	CAN communication line or ECM*4	—*3	X	X	X	BR-124
C1133	CAN communication line or ECM*4	—*3	X	X	X	BR-124
C1135	CAN communication line or TCM*5	—*3	X	X	X	BR-124
C1155	Wheel sensor or the circuit	X	X	X	X	BR-112

X: Available —: Not available

\*1: Fail-safe operation does not activate. A signal from control unit suspends TCS and ABS control operation. Brakes operate conventionally. After specified power supply voltage resumes, TCS OFF and SLIP indicator and ABS warning lamp go out, allowing for TCS and ABS control operation.

\*2: If a wheel or wheels spin on bad or slippery road surfaces for a period of approximately 10 to 80 seconds, the ABS warning lamp and the TCS OFF indicator lamp light. But this is not a malfunction. When the ignition switch is turned "ON" after a shorted wheel sensor circuit has been repaired, the ABS warning lamp and the TCS OFF indicator lamp light. Drive the vehicle at about 30 km/h (19 MPH) to ensure these lamps go out within 1 minute.

\*3: TCS control stops due to fail safe operation, however ABS keeps operation.

\*4: For more detail, refer to BR-124.

\*5: For more detail, refer to BR-125.

*Malfunction Code/Symptom Chart (Cont'd)*

---

**NOTE:**

When a system part have electric malfunction, ABS warning lamp is illuminated by fail safe function. According to malfunctioning condition, both ABS and EBD system become in following conditions.

- 1) ABS is not operated. EBD is operated.
- 2) Both ABS and EBD are operated. (Same condition as the vehicle without ABS and EBD)

On the condition 1), some sound for ABS system self diagnosis can be heard same as usual, when kye smith is turned ON or first starting.


## System Description

NFBR0209

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### FOR A/T MODELS

#### System Diagram

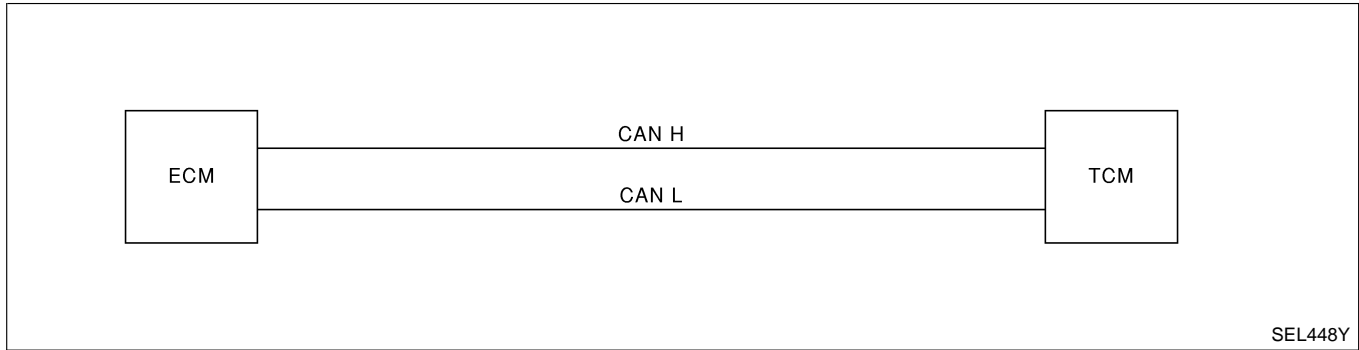NFBR0209S01
NFBR0209S0101

SEL448Y

#### Input/Output Signal Chart


**T: Transmit R: Receive**

NFBR0209S0102

Signals	ECM	TCM
Accelerator pedal position signal	T	R
Output shaft revolution signal	R	T

### FOR TCS MODELS

#### System Diagram

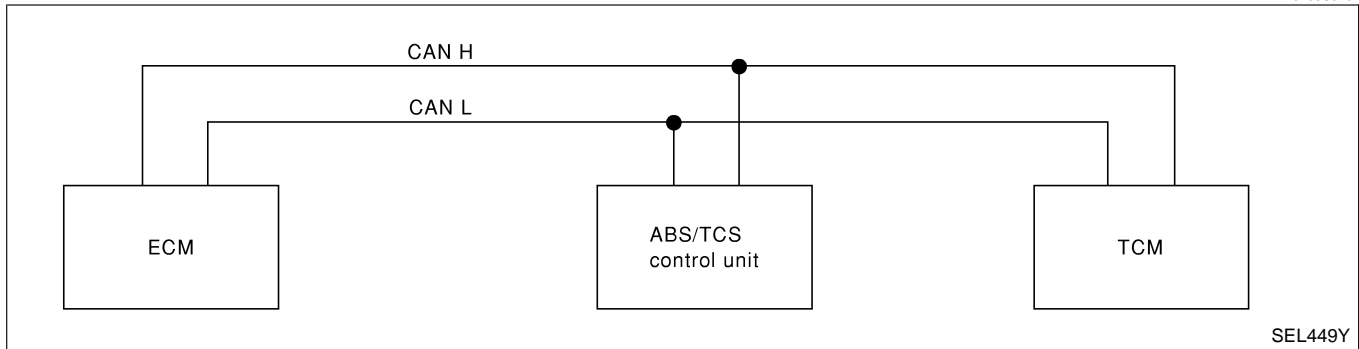NFBR0209S02
NFBR0209S0201

SEL449Y

#### Input/Output Signal Chart

**T: Transmit R: Receive**

NFBR0209S0202

Signals	ECM	ABS/TCS control unit	TCM
Accelerator pedal position signal	T	R	R
Output shaft revolution signal	R		T

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 IDX

## Wheel Sensor or Rotor DIAGNOSTIC PROCEDURE

NFBR0159

NFBR0159S01

<b>1</b>	<b>INSPECTION START</b>
Wheel sensor inspection	
SBR046F	
▶	GO TO 2.

<b>2</b>	<b>CHECK CONNECTOR</b>
1. Disconnect connectors from control unit and wheel sensor of malfunction code No. Check terminals for damage or loose connections. Then reconnect connectors. 2. Carry out self-diagnosis again.	
<b>Does warning lamp activate again?</b>	
Yes	▶ GO TO 3.
No	▶ <b>INSPECTION END</b>

<b>3</b>	<b>CHECK WHEEL SENSOR CIRCUIT</b>
1. Disconnect control unit connector. 2. Check resistance between control unit connector terminals.	
Front RH wheel Terminals 4 (B/W) and 5 (L/OR)	
Front LH wheel Terminals 6 (G) and 7 (R/B)	
Rear RH wheel Terminals 1 (B) and 3 (W)	
Rear LH wheel Terminals 8 (R/W) and 9 (L/W)	
<b>Resistance: 0.8 - 1.85 kΩ</b>	
<b>Is resistance 0.8 - 1.85 kΩ?</b>	
Yes	▶ GO TO 5.
No	▶ GO TO 4.

SBR143F



# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS



**TCS**

Wheel Sensor or Rotor (Cont'd)








<b>4</b>	<b>CHECK WHEEL SENSOR</b>	
<p>Check signal from sensors by "Simple oscilloscope" function of CONSULT-II (Scale: 0.2 V/Div, 20 ms/Div)</p> <div style="text-align: center;"> <p>Front RH sensor (E159)    Front LH sensor (E168)    Rear RH sensor (B55)    Rear LH sensor (B54)</p> </div> <p style="text-align: right;">SBR144F</p>		
<b>Does the wave appear on screen when wheel is rotated?</b>		
Yes	▶	Repair harness and connectors between control unit connector and wheel sensor connector.
No	▶	Replace wheel sensor.
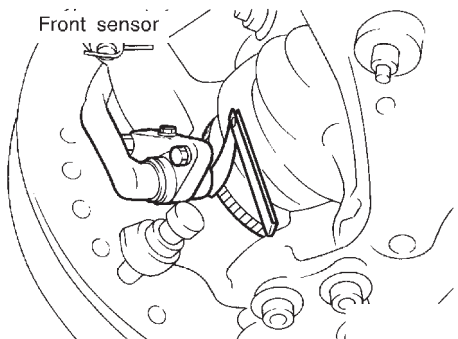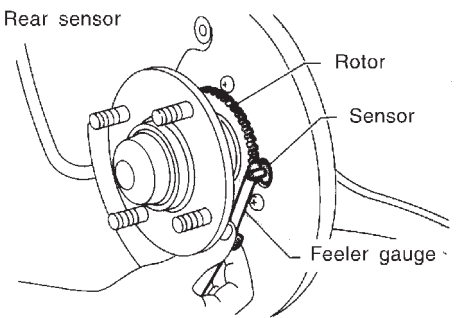
<b>5</b>	<b>CHECK TIRE</b>	
<p>Check for inflation pressure, wear and size of each tire.</p> <p style="text-align: center;"><b>Are tire pressure and size correct and is tire wear within specifications?</b></p>		
Yes	▶	GO TO 6.
No	▶	Adjust tire pressure or replace tire(s).

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

<b>6</b>	<b>CHECK WHEEL BEARING</b>	
		<p>Check wheel bearing axial end play. Check clearance between sensor and rotor.</p> <p><b>Clearance:</b>  <b>Front</b>  <b>0.273 - 0.925 mm (0.0107 - 0.0364 in)</b>  <b>Rear</b>  <b>0.387 - 0.992 mm (0.0152 - 0.0391 in)</b></p> <div style="text-align: center;">   </div> <p style="text-align: right;">SBR605AA</p> <p style="text-align: right;">SBR069CA</p>
		<b>Is axial end play and clearance within specifications?</b>
Yes	▶	GO TO 7.
No	▶	Clean sensor fixing portion, or replace sensor.

<b>7</b>	<b>CHECK SENSOR ROTOR</b>	
		Check sensor rotor for teeth damage.
		<b>Is sensor rotor free from damage?</b>
Yes	▶	Check control unit pin terminals for damage or the connection of control unit harness connector. Reconnect control unit harness connector. Then retest.
No	▶	Replace sensor rotor.
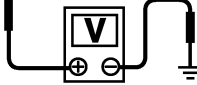
<b>8</b>	<b>CHECK POWER SUPPLY</b>	
<ol style="list-style-type: none"> <li>1. Disconnect wheel sensor connector.</li> <li>2. Check voltage between body side terminal of wheel sensor connectors and body ground.</li> </ol>		<div style="display: flex; flex-direction: column; align-items: center; justify-content: center;"> <div style="display: flex; align-items: center; margin-bottom: 10px;"> <div style="text-align: center; margin-right: 10px;">  </div> <div style="text-align: center;">  </div> </div> <div style="display: flex; justify-content: space-around; width: 100%;"> <div style="text-align: center;">FR-RH</div> <div style="text-align: center;">FR-LH</div> <div style="text-align: center;">RR-RH</div> <div style="text-align: center;">RR-LH</div> </div> <div style="display: flex; justify-content: space-around; width: 100%;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <div style="display: flex; justify-content: space-around; width: 100%; margin-top: 5px;"> <div style="text-align: center;">1</div> <div style="text-align: center;">1</div> <div style="text-align: center;">1</div> <div style="text-align: center;">1</div> </div> <div style="text-align: center; margin-top: 20px;">  </div> <div style="margin-top: 20px;"> <p><b>Is voltage more than 8V?</b></p> </div> </div> <div style="text-align: right; margin-top: 10px;">SBR145F</div>
Yes	▶	Replace wheel sensor.
No	▶	Replace ABS control unit.

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 AX  
 SU  
**BR**  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 IDX

## ABS Actuator Solenoid Valve or Solenoid Valve Relay

### DIAGNOSTIC PROCEDURE

=NFBR0171

NFBR0171S01

<b>1</b>	<b>INSPECTION START</b>
Solenoid valve relay inspection	
SBR952E	
▶	GO TO 2.

<b>2</b>	<b>CHECK SOLENOID VALVE POWER SUPPLY CIRCUIT</b>
Check 40A [E] fusible link (ABS ACTR) for ABS solenoid valve relay. For fusible link layout, refer to POWER SUPPLY ROUTING in EL section.	
<b>Is fusible link OK?</b>	
Yes	▶ GO TO 3.
No	▶ GO TO 7.

<b>3</b>	<b>CHECK FUSE</b>
Check 10A fuse No. 31. For fuse layout, refer to "POWER SUPPLY ROUTING" in EL section.	
<b>Is fuse OK?</b>	
Yes	▶ GO TO 4.
No	▶ GO TO 9.

# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS

TCS


*ABS Actuator Solenoid Valve or Solenoid Valve Relay (Cont'd)*

<b>4</b>	<b>CHECK CONNECTOR</b>	
1. Disconnect connectors from control unit and ABS actuator. Check terminals for damage or loose connection. Then reconnect connectors. 2. Carry out self-diagnosis again.		
<b>Does warning lamp activate again?</b>		
Yes	▶	GO TO 5.
No	▶	<b>INSPECTION END</b>

GI  
MA  
EM

<b>5</b>	<b>CHECK GROUND CIRCUIT</b>	
Refer to ABS ACTUATOR AND ELECTRIC UNIT in Ground Circuit Check, BR-108.		
<b>Is ground circuit OK?</b>		
Yes	▶	GO TO 6.
No	▶	Repair harness and connectors.

LC  
EC  
FE
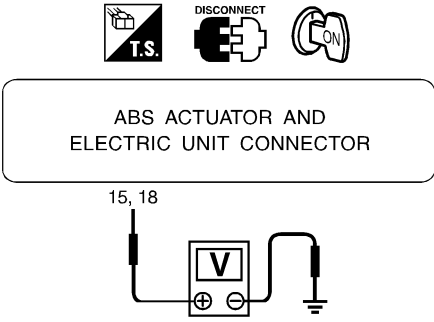
<b>6</b>	<b>CHECK SOLENOID VALVE POWER SUPPLY CIRCUIT</b>	
1. Disconnect ABS actuator and electric unit connector. 2. Check voltage between ABS actuator and electric unit harness connector E171 terminals 15 (GY) and 18 (L/B) and ground.		
		
SBR040F		
<b>Does battery voltage exist when ignition switch is turned ON?</b>		
Yes	▶	Replace ABS actuator and electric unit.
No	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between ABS actuator and electric unit and fusible link or fuse</li> </ul> If NG, repair harness or connectors.

CL  
MT  
AT  
AX  
SU  
**BR**




<b>7</b>	<b>REPLACE FUSIBLE LINK</b>	
Replace fusible link.		
<b>Does the fusible link blow out when ignition switch is turned "ON"?</b>		
Yes	▶	GO TO 8.
No	▶	<b>INSPECTION END</b>

HA  
SC  
EL  
IDX

# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS

TCS

ABS Actuator Solenoid Valve or Solenoid Valve Relay (Cont'd)
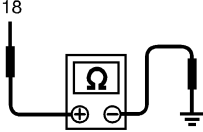
<b>8</b>	<b>CHECK RELAY UNIT POWER SUPPLY CIRCUIT FOR SHORT</b>	
<p>1. Disconnect battery cable and ABS actuator and electric unit connector.                  2. Check continuity between ABS actuator and electric unit harness connector E171 terminal 18 (L/B) and ground.</p> <div style="text-align: center;">   </div> <div style="text-align: center; margin: 10px 0;"> <div style="border: 1px solid black; border-radius: 10px; padding: 5px; display: inline-block;">                     ABS ACTUATOR AND ELECTRIC UNIT CONNECTOR                 </div> </div> <div style="text-align: center;">  </div> <p style="text-align: right; margin-right: 20px;">SBR041F</p> <p style="text-align: center;"><b>Does continuity exist?</b></p>		
Yes	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between ABS actuator and electric unit and fusible link</li> </ul> <p>If NG, repair harness or connectors.</p>
No	▶	Replace ABS actuator and electric unit.

<b>9</b>	<b>REPLACE FUSE</b>	
<p>Replace fuse.</p> <p style="text-align: center;"><b>Does the fuse blow out when ignition switch is turned "ON"?</b></p>		
Yes	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between ABS actuator and electric unit and fuse</li> </ul> <p>If NG, repair harness or connectors.</p>
No	▶	<b>INSPECTION END</b>

Motor Relay or Motor  
DIAGNOSTIC PROCEDURE

=NFBR0172

NFBR0172S01


<b>1</b>	<b>INSPECTION START</b>
<p>ABS motor relay inspection</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SBR953E</p>	
<b>▶</b>	GO TO 2.

<b>2</b>	<b>CHECK MOTOR POWER SUPPLY CIRCUIT</b>
<p>Check 40A [D] fusible link (ABS MTR) for ABS motor relay. For fusible link layout, refer to POWER SUPPLY ROUTING in EL section.</p> <p style="text-align: center;"><b>Is fusible link OK?</b></p>	
Yes	<b>▶</b> GO TO 3.
No	<b>▶</b> GO TO 6.

<b>3</b>	<b>CHECK CONNECTOR</b>
<p>1. Disconnect ABS/TCS CONTROL UNIT connector. Check terminals for damage or loose connection. Then reconnect connectors.</p> <p>2. Carry out self-diagnosis again.</p> <p style="text-align: center;"><b>Does warning lamp activate again?</b></p>	
Yes	<b>▶</b> GO TO 4.
No	<b>▶</b> INSPECTION END

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 IDX

Motor Relay or Motor (Cont'd)
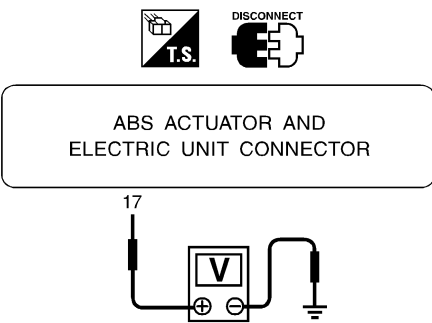
<b>4</b>	<b>CHECK MOTOR RELAY POWER SUPPLY CIRCUIT</b>	
<p>1. Disconnect ABS actuator and electric unit connector.                  2. Check voltage between ABS actuator and electric unit harness connector E171 terminal 17 (Y) and ground.</p> <div style="text-align: center;">  <p style="text-align: right; font-size: small;">SBR898EB</p> </div> <p style="text-align: center;"><b>Does battery voltage exist?</b></p>		
Yes	▶	GO TO 5.
No	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between ABS actuator and electric unit and fusible link</li> </ul> <p>If NG, repair harness or connectors.</p>

<b>5</b>	<b>CHECK ABS ACTUATOR AND ELECTRIC UNIT GROUND CIRCUIT</b>	
<p>Refer to ABS ACTUATOR AND ELECTRIC UNIT GROUND in Ground Circuit Check, BR-108.</p> <p style="text-align: center;"><b>Is ground circuit OK?</b></p>		
Yes	▶	Replace ABS actuator and electric unit.
No	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between ABS actuator and electric unit and ground</li> </ul> <p>If NG, repair harness or connectors.</p>

<b>6</b>	<b>REPLACE FUSIBLE LINK</b>	
<p>Replace fusible link.</p> <p style="text-align: center;"><b>Does the fusible link blow out when ignition switch is turned "ON"?</b></p>		
Yes	▶	GO TO 7.
No	▶	<b>INSPECTION END</b>



<b>7</b>	<b>CHECK ABS ACTUATOR MOTOR POWER SUPPLY CIRCUIT FOR SHORT</b>	
<p>1. Disconnect battery cable and ABS actuator and electric unit connector.                  2. Check continuity between ABS actuator and electric unit harness connector E171 terminal 17 (Y) and ground.</p> <div style="text-align: center;"> <p style="text-align: center;"><b>Does continuity exist?</b></p> </div> <p style="text-align: right;">SBR042F</p>		
Yes	▶	Check ABS actuator and electric unit pin terminals for damage or the connection of ABS actuator and electric unit harness connector. Reconnect ABS actuator and electric unit harness connector. Then retest.
No	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between ABS actuator and electric unit and fusible link</li> </ul> <p>If NG, repair harness or connectors.</p>

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU

**BR**

## Low Voltage DIAGNOSTIC PROCEDURE

NFBR0173


NFBR0173S01

<b>1</b>	<b>INSPECTION START</b>	
<p>ABS actuator and electric unit power supply and ground circuit inspection</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SBR914E</p>		
▶		GO TO 2.

ST  
RS  
BT  
HA  
SC  
EL  
IDX

Low Voltage (Cont'd)

<b>2</b>	<b>CHECK CONNECTOR</b>	
1. Disconnect ABS actuator and electric unit connector. Check terminals for damage or loose connections. Then reconnect connector. 2. Carry out self-diagnosis again.		
<b>Does warning lamp activate again?</b>		
Yes	▶	GO TO 3.
No	▶	<b>INSPECTION END</b>
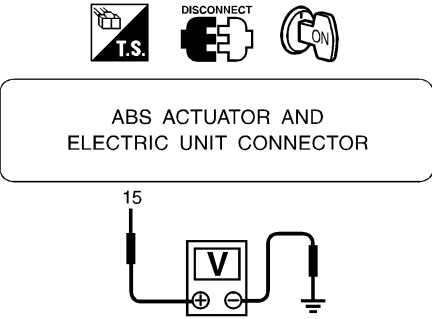
<b>3</b>	<b>CHECK ABS ACTUATOR AND ELECTRIC UNIT POWER SUPPLY CIRCUIT</b>	
1. Disconnect ABS actuator and electric unit connector. 2. Check voltage between ABS actuator and electric unit harness connector E171 terminal 15 (GY) and ground.		
		
<b>Does battery voltage exist when ignition switch is turned ON?</b>		
Yes	▶	GO TO 4.
No	▶	GO TO 5.

SBR915EB

<b>4</b>	<b>CHECK ABS ACTUATOR AND ELECTRIC UNIT GROUND</b>	
Refer to ABS ACTUATOR AND ELECTRIC UNIT GROUND in Ground Circuit Check, BR-108.		
<b>Is ground circuit OK?</b>		
OK	▶	Check ABS actuator and electric unit pin terminals for damage or the connection of ABS actuator and electric unit harness connector. Reconnect ABS actuator and electric unit harness connector. Then retest.
NG	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between ABS actuator and electric unit and ground</li> </ul> If NG, repair harness or connectors.

<b>5</b>	<b>CHECK FUSE</b>	
Check 10A fuse 31 (Engine control) for control unit. Refer to POWER SUPPLY ROUTING in EL section.		
<b>Is fuse OK?</b>		
Yes	▶	GO TO 6.
No	▶	Replace fuse.

<b>6</b>	<b>CHECK ABS ACTUATOR AND ELECTRIC UNIT POWER SUPPLY CIRCUIT</b>	
Check continuity between battery and ABS actuator and electric unit connector terminal 15.		
<b>Does continuity exist?</b>		
Yes	▶	Check battery. Refer to BATTERY in EL section.
No	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between ABS actuator and electric unit and fuse</li> </ul> If NG, repair harness or connectors.

GI  
MA  
EM  
LC

## Control Unit DIAGNOSTIC PROCEDURE

NFB0174  
NFB0174S01

<b>1</b>	<b>INSPECTION START</b>	
ABS actuator and electric unit power supply and ground circuit inspection		
SBR916E		
▶		GO TO 2.

FE  
CL  
MT  
AT  
AX

<b>2</b>	<b>CHECK CONNECTOR</b>	
1. Disconnect ABS actuator and electric unit connector. Check terminals for damage or loose connections. Then reconnect connectors. 2. Carry out self-diagnosis again.		
<b>Does warning lamp activate again?</b>		
Yes	▶	GO TO 3.
No	▶	<b>INSPECTION END</b>

SU  
**BR**  
ST  
RS

<b>3</b>	<b>CHECK ABS ACTUATOR AND ELECTRIC UNIT POWER SUPPLY CIRCUIT</b>	
Check voltage. Refer to "3. CHECK ABS ACTUATOR AND ELECTRIC UNIT POWER SUPPLY CIRCUIT" in "Low Voltage", BR-121.		
<b>Does battery voltage exist when ignition switch is turned ON?</b>		
Yes	▶	GO TO 4.
No	▶	Repair.

BT  
HA  
SC

<b>4</b>	<b>CHECK WARNING LAMP INDICATION</b>	
Check "SELF DIAGNOSIS RESULTS", if "CONTROLLER FAILRE" is indicated on the screen.		
Yes	▶	Replace ABS actuator and electric unit.
No	▶	Inspect the system according to the code No.

EL  
IDX

# TROUBLE DIAGNOSES FOR SELF-DIAGNOSTIC ITEMS

**TCS**

CAN Communication System

## CAN Communication System INSPECTION PROCEDURE

NFBR0175

NFBR0175S01

<b>1</b>	<b>CHECK CONNECTOR</b>	
1. Turn ignition switch OFF, disconnect the ABS actuator and electric unit connector, and check the terminal for deformation, disconnection, looseness, and so on. If there is a malfunction, repair or replace the terminal. 2. Reconnect connector to perform self-diagnosis.		
<b>Is "CAN COMM CIRCUIT" displayed in the self-diagnosis display items?</b>		
Yes	▶	Print out the self-diagnostic results, and refer to EL-440.
No	▶	Connector terminal connection is loose, damaged, open, or shorted.

## Engine System DIAGNOSTIC PROCEDURE

NFBR0176

NFBR0176S01

<b>1</b>	<b>SELF-DIAGNOSIS RESULT CHECK 1</b>					
Check the self-diagnosis results.						
<table style="margin: auto; border-collapse: collapse;"> <tr><td style="border-top: 1px solid black; border-bottom: 1px solid black; padding: 2px 20px;">Self-diagnosis results</td></tr> <tr><td style="border-top: 1px solid black; border-bottom: 1px solid black; padding: 2px 20px;">ENGINE_SIGNAL_1</td></tr> <tr><td style="border-top: 1px solid black; border-bottom: 1px solid black; padding: 2px 20px;">ENGINE_SIGNAL_2</td></tr> <tr><td style="border-top: 1px solid black; border-bottom: 1px solid black; padding: 2px 20px;">ENGINE_SIGNAL_3</td></tr> </table>			Self-diagnosis results	ENGINE_SIGNAL_1	ENGINE_SIGNAL_2	ENGINE_SIGNAL_3
Self-diagnosis results						
ENGINE_SIGNAL_1						
ENGINE_SIGNAL_2						
ENGINE_SIGNAL_3						
MTBL1189						
<b>Are any items other than above indicated in self-diagnosis results?</b>						
Yes	▶	Repair or replace harness or connector.				
No	▶	GO TO 2.				

<b>2</b>	<b>SELF-DIAGNOSIS RESULT CHECK 2</b>	
1. Perform the ECM self-diagnosis, and repair or replace harness or connector, then perform the ECM self-diagnosis again. 2. Perform the TCS/ABS control unit self-diagnosis again.		
<b>Is inspection result OK?</b>		
OK	▶	<b>INSPECTION END</b>
NG	▶	Repair or replace harness or connector. Perform the self-diagnosis again.

**A/T System**  
**DIAGNOSTIC PROCEDURE**

NFBR0208

NFBR0208S01

<b>1</b>	<b>SELF-DIAGNOSIS RESULT CHECK 1</b>		MTBL1190				
Check the self-diagnosis results.							
<table border="1" style="margin: auto;"> <tr> <td style="width: 50%;"></td> <td style="width: 50%; text-align: center;">Self-diagnosis results</td> </tr> <tr> <td></td> <td style="text-align: center;">A/T_SIGNAL</td> </tr> </table>					Self-diagnosis results		A/T_SIGNAL
	Self-diagnosis results						
	A/T_SIGNAL						
<b>Are any items other than above indicated in self-diagnosis results?</b>							
Yes	▶	Repair or replace related parts.					
No	▶	GO TO 2.					

<b>2</b>	<b>SELF-DIAGNOSIS RESULT CHECK 2</b>	
1. Perform the TCM self-diagnosis, and replace harness or connector, then perform the TCM self-diagnosis again. 2. Perform the ABS/TCS control unit self-diagnosis again.		
<b>Is inspection result OK?</b>		
OK	▶	<b>INSPECTION END</b>
NG	▶	Repair or replace related parts.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

## 1. ABS Works Frequently


NFBR0188

<b>1</b>	<b>CHECK WHEEL SENSOR</b>	
1. Check wheel sensor connector for terminal damage or loose connections. 2. Perform wheel sensor mechanical check. Refer to "Wheel Sensor or Rotor", BR-112.		
<b>Are wheel sensors functioning properly?</b>		
Yes	▶	GO TO 2.
No	▶	Repair.

<b>2</b>	<b>CHECK FRONT AXLE</b>	
Check front and rear axles for excessive looseness. Refer to AX section, "Front Wheel Bearing", "ON-VEHICLE SERVICE" and "Rear Wheel Bearing", "ON-VEHICLE SERVICE".		
<b>Is front axle installed properly?</b>		
Yes	▶	Go to "3. CHECK WARNING LAMP INDICATION" in "2. Unexpected Pedal Action", BR-126.
No	▶	Repair.

## 2. Unexpected Pedal Action

NFBR0189

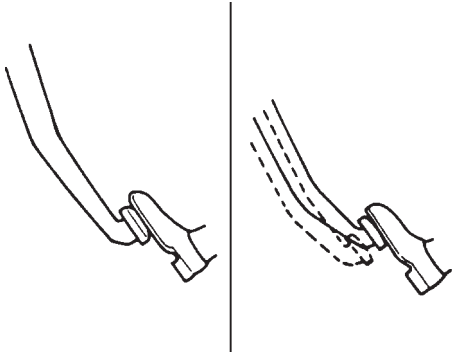
<b>1</b>	<b>CHECK BRAKE PEDAL STROKE</b>	
Check brake pedal stroke. Is stroke excessively large?		
		
SBR540A		
Yes	▶	Perform Preliminary Check. Refer to BR-105.
No	▶	GO TO 2.

<b>2</b>	<b>CHECK CONNECTOR AND PERFORMANCE</b>	
1. Disconnect ABS actuator and electric unit connector. 2. Check whether brake is effective.		
<b>Yes or No?</b>		
Yes	▶	GO TO 3.
No	▶	Perform Preliminary Check. Refer to BR-105.

# TROUBLE DIAGNOSES FOR SYMPTOMS

**TCS**

2. Unexpected Pedal Action (Cont'd)
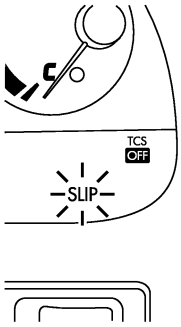
<b>3</b>	<b>CHECK WARNING LAMP INDICATION</b>	
Ensure warning lamp remains off while driving.		
		
SBR655E		
<b>Is warning lamp turned off?</b>		
Yes	▶	GO TO 4.
No	▶	Carry out self-diagnosis. Refer to BR-97.

GI  
MA  
EM  
LC  
EC  
FE

<b>4</b>	<b>CHECK WHEEL SENSOR</b>	
1. Check wheel sensor connector for terminal damage or loose connection. 2. Perform wheel sensor mechanical check. Refer to "Wheel Sensor Rotor", BR-112.		
<b>Is wheel sensor mechanism OK?</b>		
Yes	▶	Check control unit pin terminals for damage or the connection of control unit harness connector. Reconnect control unit harness connector. Then retest.
No	▶	Repair.

CL  
MT  
AT  
AX

SU

**BR**

## 3. Long Stopping Distance

NFBR0190

<b>1</b>	<b>CHECK CONNECTOR AND PERFORMANCE</b>	
1. Cancel ABS by removing 40A [E] fusible link (ABS ACTR) for ABS solenoid valve relay. 2. Check stopping distance.		
<b>OK or NG</b>		
OK	▶	Perform Preliminary Check and air bleeding.
NG	▶	Go to "3. CHECK WARNING LAMP INDICATION" in "2. Unexpected Pedal Action", BR-126.

ST  
RS  
BT  
HA

**NOTE:**

Stopping distance may be longer than vehicles without ABS when road condition is slippery.

SC  
EL

IDX

## 4. ABS Does Not Work

NFBR0191

1	<b>CHECK WARNING LAMP INDICATION</b>	
Does the ABS warning lamp activate?		
Yes	▶	Carry out self-diagnosis. Refer to BR-97.
No	▶	Go to "3. CHECK WARNING LAMP INDICATION" in "2. Unexpected Pedal Action", BR-126.


**NOTE:**

ABS does not work when vehicle speed is under 10 km/h (6 MPH).



5. Pedal Vibration and Noise

=NFBR0192

<b>1</b>	<b>INSPECTION START</b>
Pedal vibration and noise inspection	
	
SAT797A	
▶	GO TO 2.

<b>2</b>	<b>CHECK SYMPTOM</b>
1. Apply brake. 2. Start engine.	
<b>Does the symptom appear only when engine is started?</b>	
Yes	▶ Carry out self-diagnosis. Refer to BR-97.
No	▶ GO TO 3.

<b>3</b>	<b>RECHECK SYMPTOM</b>
Does the symptom appear when electrical equipment switches (such as headlamp) are operated?	
Yes	▶ Check control unit pin for damage or the connection of control unit harness connector. Then reconfirm the continuity.
No	▶ Go to "3. CHECK WARNING LAMP INDICATION" in "2. Unexpected Pedal Action", BR-126.

**NOTE:**

ABS may operate and cause vibration under any of the following conditions.

- Applying brake gradually when shifting or operating clutch.
- Low friction (slippery) road.
- High speed cornering.
- Driving over bumps and pot holes.
- Engine speed is over 5,000 rpm with vehicle stopped.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

## 6. ABS Warning Lamp Does Not Come On When Ignition Switch Is Turned On

### 6. ABS Warning Lamp Does Not Come On When Ignition Switch Is Turned On

=NFBR0193

<b>1</b>	<b>INSPECTION START</b>
Warning lamp circuit inspection	
SBR917E	
▶	GO TO 2.

<b>2</b>	<b>CHECK FUSE</b>
Check 10A fuse No. 30 for warning lamp. For fuse layout, refer to "POWER SUPPLY ROUTING" in EL section.	
<b>Is fuse OK?</b>	
Yes	▶ GO TO 3.
No	▶ Replace fuse.

<b>3</b>	<b>CHECK ABS CONTROL UNIT POWER SUPPLY CIRCUIT</b>
<ol style="list-style-type: none"> <li>1. Install 10A fuse.</li> <li>2. Check voltage between control unit harness connector E171 terminal 21 (LY) and ground after turning ignition switch "ON".</li> </ol>	
SBR918EB	
<b>Does battery voltage exist after turning ignition switch "ON"?</b>	
Yes	▶ GO TO 4.
No	▶ Repair.

<b>4</b>	<b>CHECK WARNING LAMP</b>
Check warning lamp bulb.	
<b>Is warning lamp bulb OK?</b>	
Yes	▶ Repair harness and connectors between fuse and control unit connector terminal 30 (including combination meter).
No	▶ Replace bulb.

## 7. ABS Warning Lamp Stays On When Ignition Switch Is Turned On

=NFBR0194

<b>1</b>	<b>INSPECTION START</b>	
ABS control unit inspection		
SBR919E		
▶		GO TO 2.

<b>2</b>	<b>CHECK FUSE</b>	
Check 10A fuse No. 31 for control unit. For fuse layout, refer to "POWER SUPPLY ROUTING" in EL section.		
<b>Is fuse OK?</b>		
Yes ▶		GO TO 3.
No ▶		GO TO 5.


<b>3</b>	<b>CHECK ABS/TCS CONTROL UNIT POWER SUPPLY CIRCUIT</b>	
<ol style="list-style-type: none"> <li>1. Disconnect connector from control unit.</li> <li>2. Check voltage between control unit harness connector E171 terminal 15 (GY) and ground after turning ignition switch "ON".</li> </ol>		
<b>Does battery voltage exist?</b>		
Yes ▶		GO TO 4.
No ▶		<b>Check the following.</b> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between control unit and fuse</li> </ul> If NG, repair harness or connectors.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX


# TROUBLE DIAGNOSES FOR SYMPTOMS

TCS

## 7. ABS Warning Lamp Stays On When Ignition Switch Is Turned On (Cont'd)
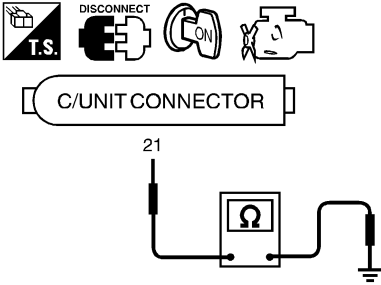
<b>4</b>	<b>CHECK WARNING LAMP GROUND CIRCUIT</b>	
<p>1. Turn ignition switch "OFF".                  2. Disconnect connectors from control unit.                  3. Check continuity between control unit harness connector E171 terminal 21 (LY) and body ground.</p>		
		
SBR921EB		
<b>Does continuity exist?</b>		
Yes	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between control unit and fuse</li> </ul> <p>If NG, repair harness or connectors.</p>
No	▶	<p>Check control unit pin terminals for damage or the connection of control unit harness connector. Reconnect control unit harness connector. Then retest.</p>

<b>5</b>	<b>REPLACE FUSE</b>	
<p>Replace 10A fuse No. 31.</p>		
<b>Does the fuse blow out when ignition switch is turned "ON"?</b>		
Yes	▶	GO TO 6.
No	▶	<b>INSPECTION END</b>
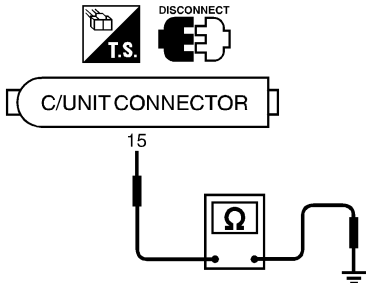
<b>6</b>	<b>CHECK ABS/TCS CONTROL UNIT POWER SUPPLY CIRCUIT FOR SHORT</b>	
<p>1. Disconnect control unit connector.                  2. Check continuity between control unit harness connector E171 terminal 15 (GY) and body ground.</p>		
		
SBR922EB		
<b>Does continuity exist?</b>		
Yes	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Harness connector E171</li> <li>● Harness for open or short between control unit and fuse</li> </ul> <p>If NG, repair harness or connectors.</p>
No	▶	<p>Check control unit pin terminals for damage or the connection of control unit harness connector. Reconnect control unit harness connector. Then retest.</p>

## 8. SLIP Indicator Lamp Does Not Come On When Ignition Switch Is Turned On

=NFBR0195

<b>1</b>	<b>INSPECTION START</b>
Indicator lamp circuit inspection	
SBR923E	
▶	GO TO 2.

<b>2</b>	<b>CHECK FUSE</b>
Check 10A fuse No. 30 for control unit. For fuse layout, refer to "POWER SUPPLY ROUTING" in EL section.	
<b>Is fuse OK?</b>	
Yes	▶ GO TO 3.
No	▶ Replace fuse.

<b>3</b>	<b>CHECK CONTROL UNIT POWER SUPPLY CIRCUIT</b>
<ol style="list-style-type: none"> <li>1. Install 10A fuse.</li> <li>2. Disconnect connector from control unit.</li> <li>3. Check voltage between control unit harness connector E171 terminal 28 (L/R) and ground after turning ignition switch "ON".</li> </ol>	
<b>Does battery voltage exist?</b>	
Yes	▶ GO TO 5.
No	▶ GO TO 4.

<b>4</b>	<b>CHECK INDICATOR LAMP</b>
Check indicator lamp bulb.	
<b>Is indicator lamp bulb OK?</b>	
Yes	▶ Repair harness and connectors between fuse and control unit harness connector M32 (including combination meter harness connector M34).
No	▶ Replace bulb.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

## 8. SLIP Indicator Lamp Does Not Come On When Ignition Switch Is Turned On (Cont'd)

<b>5</b>	<b>CHECK CIRCUIT</b>	<ol style="list-style-type: none"> <li>1. Disconnect control unit connector.</li> <li>2. Check continuity between control unit harness connector E171 terminal 12 (W/B) and data link harness connector M28 terminal 9 (P/B).</li> </ol> <div style="text-align: center; margin: 10px 0;"> <p style="font-size: small;">ABS/TCS control unit connector      Data link connector</p> <p style="font-size: small;">C/UNITCONNECTOR      9</p> <p style="font-size: small;">12</p> <p style="font-size: small;">Ω</p> </div> <p style="text-align: right; font-size: x-small;">SBR925EB</p>
		<b>Does continuity exist?</b>
Yes	▶	GO TO 6.
No	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>● Harness connectors E171, M28</li> <li>● Harness for open or short between control unit and data link connector</li> </ul>

<b>6</b>	<b>CHECK CONNECTOR</b>	<ol style="list-style-type: none"> <li>1. Disconnect connector from control unit. Check terminals for damage or loose connection. Then reconnect connector.</li> <li>2. Carry out self-diagnosis again.</li> </ol> <p style="text-align: center; margin: 10px 0;"><b>Does warning lamp activate again?</b></p>
Yes	▶	Check items the self-diagnosis detected as faulty.
No	▶	<b>INSPECTION END</b>

## 9. TCS OFF Indicator Lamp Does Not Come On When Ignition Switch Is Turned On

NFBR0196

<b>1</b>	<b>INSPECTION START</b>	<p>Indicator lamp circuit inspection</p> <div style="text-align: center; margin: 10px 0;"> <p style="font-size: small;">30      ABS warning lamp</p> <p style="font-size: small;">IGN      10A</p> <p style="font-size: small;">TCS OFF indicator lamp</p> <p style="font-size: small;">SLIP indicator lamp</p> <p style="font-size: small;">28      26      21</p> <p style="font-size: small;">ABS/TCS control unit</p> <p style="font-size: small;">To ABS actuator</p> </div> <p style="text-align: right; font-size: x-small;">SBR926E</p>
		▶      GO TO 2.

# TROUBLE DIAGNOSES FOR SYMPTOMS

**TCS**

9. TCS OFF Indicator Lamp Does Not Come On When Ignition Switch Is Turned On (Cont'd)

<b>2</b>	<b>CHECK FUSE</b>
Check 10A fuse No. 30 for control unit. For fuse layout, refer to "POWER SUPPLY ROUTING" in EL section.	
<b>Is fuse OK?</b>	
Yes	▶ GO TO 3.
No	▶ Replace fuse.

<b>3</b>	<b>CHECK CONTROL UNIT POWER SUPPLY CIRCUIT</b>
<p>1. Install 10A fuse.                  2. Disconnect connector from control unit.                  3. Check voltage between control unit harness connector E171 terminal 26 (R/Y) and ground after turning ignition switch "ON".</p>	
<p style="text-align: center;">ABS/TCS control unit</p> <p style="text-align: center;">C/UNIT CONNECTOR</p> <p style="text-align: center;">26</p> <p style="text-align: center;">V</p> <p style="text-align: center;">+</p> <p style="text-align: center;">-</p> <p style="text-align: center;">-</p>	
<b>Does battery voltage exist?</b>	
Yes	▶ GO TO 5.
No	▶ GO TO 4.

SBR927EB

<b>4</b>	<b>CHECK INDICATOR LAMP</b>
Check indicator lamp bulb.	
<b>Is indicator lamp bulb OK?</b>	
Yes	▶ Repair harness and connectors between control unit harness connector terminal 26 (R/Y) and fuse box (including combination meter harness connector M32).
No	▶ Replace bulb.

<b>5</b>	<b>CHECK CONNECTOR</b>
<p>1. Disconnect connector from control unit. Check terminals for damage or loose connection. Then reconnect connector.                  2. Carry out self-diagnosis again.</p>	
<b>Does warning lamp activate again?</b>	
Yes	▶ Check items the self-diagnosis detected as faulty.
No	▶ <b>INSPECTION END</b>

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

## 10. TCS OFF Switch Is Inoperative

=NFBR0197

<b>1</b>	<b>INSPECTION START</b>	<p>Inspect TCS OFF switch.</p> <div style="text-align: center;"> </div>	SBR928E
▶		GO TO 2.	

<b>2</b>	<b>CHECK TCS OFF SWITCH</b>	<p>1. Remove TCS OFF switch and disconnect TCS OFF switch connector.                  2. Check continuity between terminal 2 and 3 for TCS OFF switch connector M45.</p> <div style="text-align: center;"> </div> <p style="color: blue; margin-top: 10px;"> <b>When TCS OFF switch is pressed:</b>                      Continuity should exist.  <b>When TCS OFF switch is released:</b>                      Continuity should not exist.                 </p>	SBR544EA
▶		GO TO 3.	
▶		Replace TCS OFF switch.	



# TROUBLE DIAGNOSES FOR SYMPTOMS

**TCS**

10. TCS OFF Switch Is Inoperative (Cont'd)

<b>3</b>	<b>CHECK TCS OFF SWITCH POWER SUPPLY CIRCUIT</b>	
<ul style="list-style-type: none"> <li>● Disconnect connector from control unit.</li> <li>● Check continuity between control unit harness connector E171 terminal 31 (SB) and TCS OFF switch harness connector M45 terminal 2 (SB).</li> </ul>		
SBR929EB		
Yes	▶	GO TO 4.
No	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>● Harness connectors E171, M45</li> <li>● Harness for open or short between TCS OFF switch terminal (body side) and control unit</li> </ul> If NG, repair harness or connectors.


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

<b>4</b>	<b>CHECK TCS OFF SWITCH POWER SUPPLY</b>	
Check continuity between TCS OFF switch harness connector M45 terminal 2 (SB) and ground.		
SBR546EA		
Yes	▶	GO TO 5.
No	▶	Repair harness and connectors.

# TROUBLE DIAGNOSES FOR SYMPTOMS

TCS

## 10. TCS OFF Switch Is Inoperative (Cont'd)

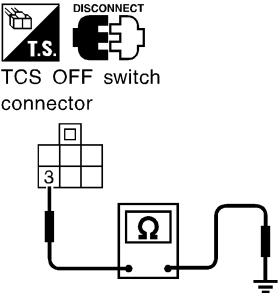5	CHECK TCS OFF SWITCH GROUND CIRCUIT
<p data-bbox="155 197 1162 222">Check continuity between TCS OFF switch harness connector M45 terminal 3 (B) and ground.</p> <div data-bbox="639 243 915 533" style="text-align: center;"><p data-bbox="639 243 802 352">DISCONNECT TCS OFF switch connector</p></div> <p data-bbox="1373 550 1471 571" style="text-align: right;">SBR547EA</p> <p data-bbox="682 592 941 617" style="text-align: center;"><b>Does continuity exist?</b></p>	
Yes	▶ Connect TCS OFF switch connector and check switch operation.
No	▶ Repair harness and connectors.

## 11. Poor Acceleration

=NFB0198

<b>1</b>	<b>INSPECTION START</b>		
		Engine acceleration is poor while TCS is operating. Vehicle instability is caused by unstable engine rpm operation. (Engine is shaking.)	GI
		▶	MA
		GO TO 2.	

<b>2</b>	<b>CHECK PERFORMANCE</b>		
		1. Cancel TCS operation using TCS OFF switch. (TCS OFF indicator lamp lights.) 2. Drive vehicle or accelerate engine.	EM
		<b>Is engine acceleration poor or does automatic transaxle shift when TCS is not operating?</b>	LC
		Yes ▶	EC
		Go to "TROUBLE DIAGNOSES" in BR section.	
		No ▶	FE
		GO TO 3.	

<b>3</b>	<b>CHECK SELF-DIAGNOSIS</b>		
		Perform self-diagnostic procedures for TCM.	CL
		<b>Does any of the following self-diagnostic items appear on the display?</b>	MT
		Yes ▶	AT
		Go to "TROUBLE DIAGNOSES" in AT section.	
		No ▶	AX
		GO TO 4.	

<b>4</b>	<b>CHECK SELF-DIAGNOSIS</b>		
		Perform self-diagnostic procedures for ABS/TCS.	SU
		<b>Does any of the following self-diagnostic items appear on the display?</b>	BR
		Yes ▶	ST
		Go to "TROUBLE DIAGNOSES" in BR section.	
		No ▶	RS
		GO TO 5.	



<b>5</b>	<b>CHECK SELF-DIAGNOSIS</b>		
		Perform self-diagnostic procedures for ECM.	BT
		<b>Does any of the following self-diagnostic items appear on the display?</b>	HA
		Yes ▶	SC
		Go to "TROUBLE DIAGNOSES" in EC section.	
		No ▶	EL
		<b>INSPECTION END</b>	IDX

**CAUTION:**

Be careful not to damage sensor edge and sensor rotor teeth. When removing the front or rear wheel hub assembly, first remove the ABS wheel sensor from the assembly. Failure to do so may result in damage to the sensor wires making the sensor inoperative.

## Wheel Sensors

NFBR0199S01

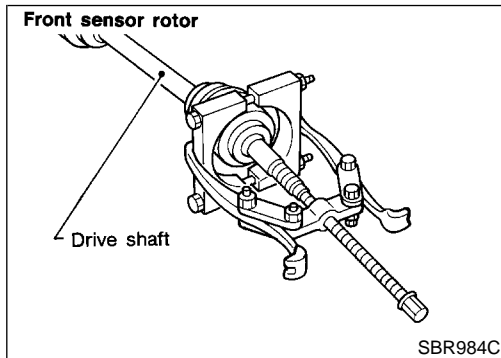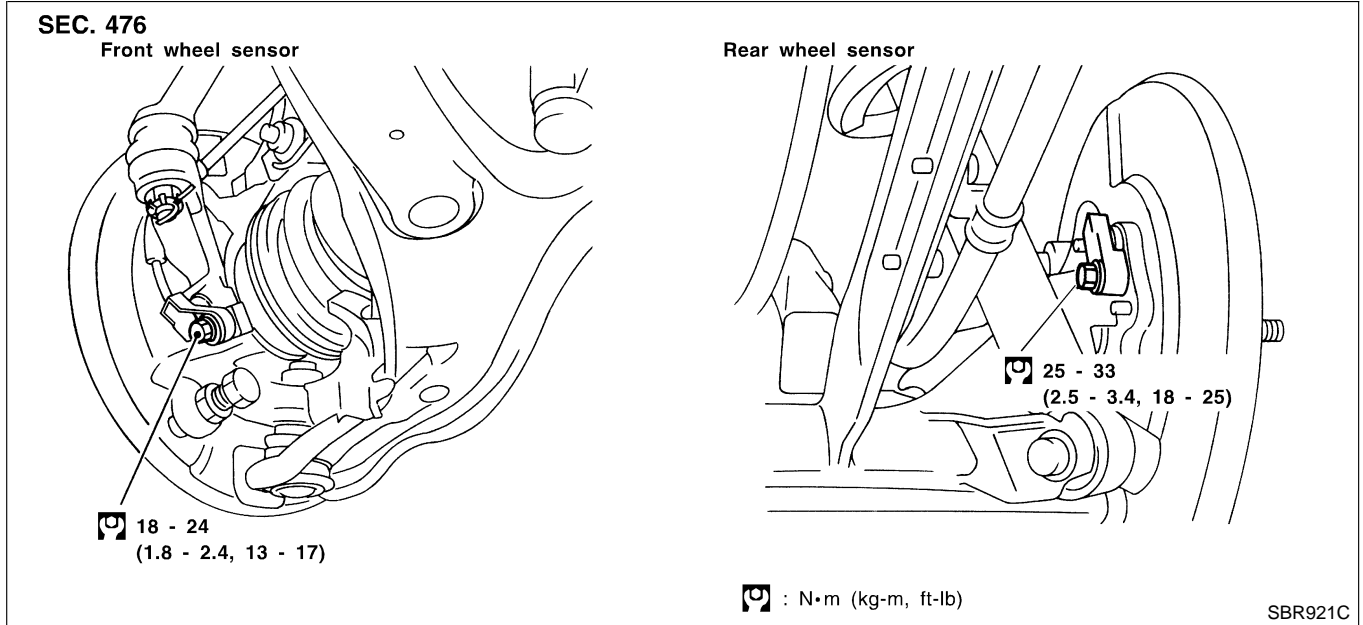





## Sensor Rotor REMOVAL

NFBR0199S02

NFBR0199S0201

1. Remove the drive shaft and rear wheel hub. Refer to "Drive Shaft" and "Wheel Hub" in AX section.
2. Remove the sensor rotor using suitable puller, drift and bearing replacer.

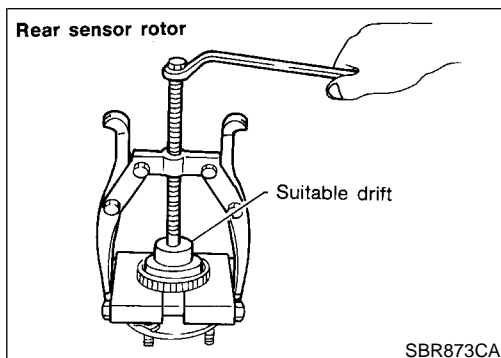

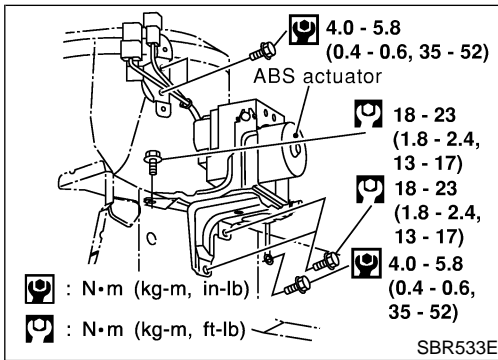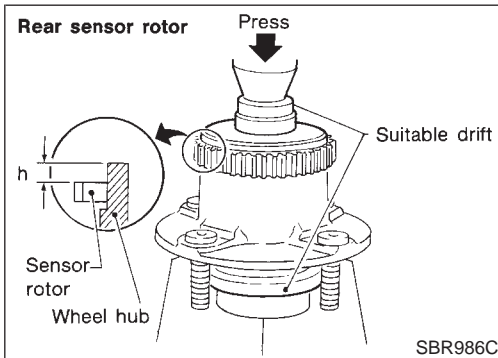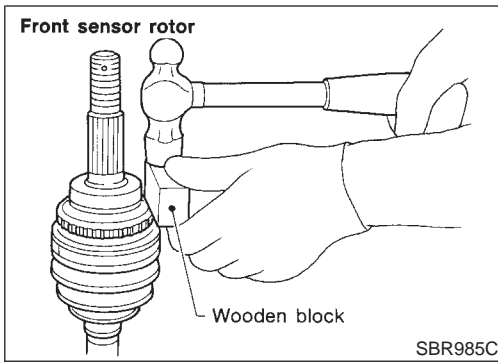

### INSTALLATION

Install the sensor rotor. For front sensor rotor, use hammer and wooden block. For rear sensor rotor, use suitable drift and press. NFBR0199S0202

- Always replace sensor rotor with new one.

- Pay attention to the dimension of rear sensor rotor as show in figure.

**h: 12.5 - 13.5 mm (0.492 - 0.531 in)**

### ABS Actuator and Electric Unit

#### REMOVAL

1. Disconnect battery cable.
2. Drain brake fluid. Refer to "Changing Brake Fluid" (BR-8).
3. Remove air cleaner and duct.
4. Apply different colored paint to each pipe connector and actuator to prevent incorrect connection.
5. Disconnect harness connectors and brake pipes, then remove ABS actuator and electric unit and remove fixing nuts and actuator ground cable.

#### INSTALLATION

##### CAUTION:

- After installation, refill brake fluid. Then bleed air. Refer to "Bleeding Brake System" (BR-9).

1. Temporarily install actuator on the bracket.
2. Tighten actuator ground cable.
3. Connect brake pipes temporarily.
4. Tighten fixing nuts.
5. Tighten brake pipes.
6. Connect harness connectors and battery cable.
7. Install air cleaner and duct.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

## General Specifications

NFBR0200  
Unit: mm (in)

Front brake	Brake model		CLZ25VD disc brake
	Cylinder bore diameter		57.2 (2.252)
	Pad Length × width × thickness		125.6 × 46 × 9.5 (4.94 × 1.81 × 0.374)
	Rotor outer diameter × thickness		296 × 24 (11.65 × 0.94)
Rear brake	Brake model		CL9HE disc brake
	Cylinder bore diameter		33.96 (1.3370)
	Pad Length × width × thickness		89.1 × 39.5 × 10 (3.508 × 1.555 × 0.39)
	Rotor outer diameter × thickness		278 × 9 (10.94 × 0.35)
Master cylinder	Cylinder bore diameter		23.81 (15/16)
Brake booster	Booster model		M215T
	Diaphragm diameter	Primary	230 (9.06)
		Secondary	205 (8.07)
Recommended brake fluid			DOT 3

## Disc Brake

NFBR0201  
Unit: mm (in)

Brake model		CLZ25VD	CL9HE
Pad wear limit	Minimum thickness	2.0 (0.079)	1.5 (0.059)
	Maximum runout	0.07 (0.0028)	0.07 (0.0028)
Rotor repair limit	Minimum thickness	22.0 (0.866)	8.0 (0.315)

## Brake Pedal

NFBR0202  
Unit: mm (in)

Pedal play	3 - 11 (0.12 - 0.43)
Free height "H"*	167 - 174 (6.57 - 6.85)
Clearance "C" between pedal stopper and threaded end of stop lamp switch or ASCD switch	0.74 - 1.96 (0.0291 - 0.0772)

\*: Measured from surface of dash reinforcement panel to surface of pedal pad

## Parking Brake

NFBR0203

Control type	Center lever
Number of notches [under force of 196 N (20 kg, 44 lb)]	10 - 11
Number of notches when warning lamp switch comes on	1

## Brake Booster

NFBR0205  
Unit: mm (in)

Output rod length	10.275 - 10.525 (0.4045 - 0.4144)
Clevis length (Dimension "A")	130 (5.12)

# SERVICE DATA AND SPECIFICATIONS (SDS)

ABS Wheel Sensor

## ABS Wheel Sensor

NFBR0206

Clearance	Front		0.273 - 0.925 mm (0.0107 - 0.0364 in)	GI
	Rear		0.385 - 0.973 mm (0.0252 - 0.0383 in)	
Resistance	Front	M/T	0.8 - 1.85Ω	MA
		A/T	—	
	Rear	M/T	0.8 - 1.85Ω	EM
		A/T	—	
Dimension of rear sensor rotor			12.5 - 13.5 mm (0.4921 - 0.5315 in)	LC

EC

FE

CL

MT

AT

AX

SU

**BR**

ST

RS

BT

HA

SC

EL

IDX

## NOTES