

SECTION **RF**
ROOF

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

CONTENTS

WITH SINGLE PANEL SUNROOF

| | | | |
|--|----|---|----|
| BASIC INSPECTION | 4 | SUNROOF MOTOR ASSEMBLY : Component Function Check | 14 |
| DIAGNOSIS AND REPAIR WORKFLOW | 4 | SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure | 14 |
| Work Flow | 4 | SUNROOF MOTOR ASSEMBLY : Component In- spection | 17 |
| INSPECTION AND ADJUSTMENT | 7 | SUNROOF MOTOR ASSEMBLY : Special Repair Requirement | 17 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT | 7 | DOOR SWITCH | 19 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description | 7 | Description | 19 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement | 7 | Component Function Check | 19 |
| BASIC INSPECTION | 7 | Diagnosis Procedure | 19 |
| BASIC INSPECTION : Special Repair Require- ment | 7 | Component Inspection | 21 |
| FUNCTION DIAGNOSIS | 9 | ECU DIAGNOSIS | 22 |
| SUNROOF SYSTEM | 9 | BCM (BODY CONTROL MODULE) | 22 |
| System Diagram | 9 | Reference Value | 22 |
| System Description | 9 | Terminal Layout | 27 |
| Component Parts Location | 10 | Physical Values | 27 |
| Component Description | 10 | Wiring Diagram | 46 |
| DIAGNOSIS SYSTEM (BCM) | 12 | Fail Safe | 54 |
| COMMON ITEM | 12 | DTC Inspection Priority Chart | 56 |
| COMMON ITEM : Diagnosis Description | 12 | DTC Index | 57 |
| COMMON ITEM : CONSULT-III Function | 12 | SUNROOF SYSTEM | 60 |
| RETAINED PWR | 12 | Reference Value | 60 |
| RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR) | 13 | Wiring Diagram | 61 |
| COMPONENT DIAGNOSIS | 14 | SYMPTOM DIAGNOSIS | 67 |
| POWER SUPPLY AND GROUND CIRCUIT | 14 | SUNROOF DOES NOT OPERATE PROPER- LY | 67 |
| SUNROOF MOTOR ASSEMBLY | 14 | Diagnosis Procedure | 67 |
| SUNROOF MOTOR ASSEMBLY : Description | 14 | AUTO OPERATION DOES NOT OPERATE | 68 |
| | | Diagnosis Procedure | 68 |
| | | DOES NOT STOP FULLY-OPEN OR FULLY- CLOSED POSITION | 69 |
| | | Diagnosis Procedure | 69 |

RF

| | | | |
|---|-----------|--|------------|
| RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY | 70 | COMMON ITEM : Diagnosis Description | 94 |
| Diagnosis Procedure | 70 | COMMON ITEM : CONSULT-III Function | 94 |
| SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION | 71 | RETAINED PWR | 94 |
| Diagnosis Procedure | 71 | RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR) | 95 |
| SQUEAK AND RATTLE TROUBLE DIAGNOSES | 72 | COMPONENT DIAGNOSIS | 96 |
| Work Flow | 72 | POWER SUPPLY AND GROUND CIRCUIT | 96 |
| Inspection Procedure | 74 | BCM | 96 |
| Diagnostic Worksheet | 76 | BCM : Diagnosis Procedure | 96 |
| PRECAUTION | 78 | BCM : Special Repair Requirement | 97 |
| PRECAUTIONS | 78 | SUNROOF MOTOR ASSEMBLY | 97 |
| Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 78 | SUNROOF MOTOR ASSEMBLY : | |
| Precautions | 78 | Diagnosis Procedure | 97 |
| Precautions Necessary for Steering Wheel Rotation after Battery Disconnect | 78 | SUNSHADE MOTOR ASSEMBLY | 98 |
| PREPARATION | 80 | SUNSHADE MOTOR ASSEMBLY : | |
| PREPARATION | 80 | Diagnosis Procedure | 98 |
| Special Service Tools | 80 | COMMUNICATION SIGNAL CIRCUIT | 100 |
| Commercial Service Tools | 80 | Description | 100 |
| ON-VEHICLE REPAIR | 81 | Diagnosis Procedure | 100 |
| SUNROOF UNIT ASSEMBLY | 81 | SUNROOF SWITCH | 101 |
| Inspection | 81 | Description | 101 |
| Exploded View | 85 | Diagnosis Procedure | 101 |
| Removal and Installation | 85 | Component Inspection | 102 |
| WITH DUAL PANEL SUNROOF | | DOOR SWITCH | 104 |
| BASIC INSPECTION | 88 | Description | 104 |
| DIAGNOSIS AND REPAIR WORKFLOW | 88 | Component Function Check | 104 |
| WorkFlow | 88 | Diagnosis Procedure | 104 |
| INSPECTION AND ADJUSTMENT | 89 | Component Inspection | 106 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT | 89 | ECU DIAGNOSIS | 107 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description | 89 | BCM (BODY CONTROL MODULE) | 107 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement | 89 | Reference Value | 107 |
| FUNCTION DIAGNOSIS | 90 | Terminal Layout | 112 |
| SUNROOF SYSTEM | 90 | Physical Values | 112 |
| System Diagram | 90 | Wiring Diagram | 131 |
| System Description | 90 | Fail Safe | 139 |
| Component Parts Location | 92 | DTC Inspection Priority Chart | 141 |
| Component Description | 93 | DTC Index | 142 |
| DIAGNOSIS SYSTEM (BCM) | 94 | SUNROOF MOTOR ASSEMBLY | 145 |
| COMMON ITEM | 94 | Reference Value | 145 |
| | | Wiring Diagram | 147 |
| | | SUNSHADE MOTOR ASSEMBLY | 154 |
| | | Reference Value | 154 |
| | | Wiring Diagram | 155 |
| | | SYMPTOM DIAGNOSIS | 162 |
| | | SUNROOF DOES NOT OPERATE PROPERLY | 162 |
| | | Diagnosis Procedure | 162 |

| | | | | |
|---|------------|--------------------------------------|------------|---|
| SUNSHADE SYSTEM DOES NOT OPERATE PROPERLY | 163 | PREPARATION | 175 | A |
| Diagnosis Procedure | 163 | PREPARATION | 175 | B |
| AUTO OPERATION DOES NOT OPERATE .. | 164 | Special Service Tools | 175 | |
| Diagnosis Procedure | 164 | Commercial Service Tools | 175 | B |
| RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY | 165 | ON-VEHICLE REPAIR | 176 | C |
| Diagnosis Procedure | 165 | SUNROOF UNIT ASSEMBLY | 176 | D |
| ANTI-PINCH FUNCTION DOES NOT OPERATE | 166 | Inspection and Adjustment | 176 | |
| Diagnosis Procedure | 166 | Exploded View | 179 | |
| SQUEAK AND RATTLE TROUBLE DIAGNOSES | 167 | Removal and Installation | 179 | D |
| Work Flow | 167 | GLASS LID | 183 | E |
| Inspection Procedure | 169 | Removal and Installation | 183 | |
| Diagnostic Worksheet | 171 | SUNROOF MOTOR ASSEMBLY | 185 | F |
| PRECAUTION | 173 | Removal and Installation | 185 | |
| PRECAUTIONS | 173 | SUNSHADE MOTOR ASSEMBLY | 186 | G |
| Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 173 | Removal and Installation | 186 | |
| Precautions | 173 | WIND DEFLECTOR | 187 | H |
| Precautions Necessary for Steering Wheel Rotation after Battery Disconnect | 173 | Removal and Installation | 187 | |
| | | SUNSHADE | 188 | I |
| | | Exploded View | 188 | |
| | | Removal and Installation | 188 | |
| | | SUNROOF SWITCH | 189 | J |
| | | Removal and Installation | 189 | |

RF

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITH SINGLE PANEL SUNROOF]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000003898651

OVERALL SEQUENCE

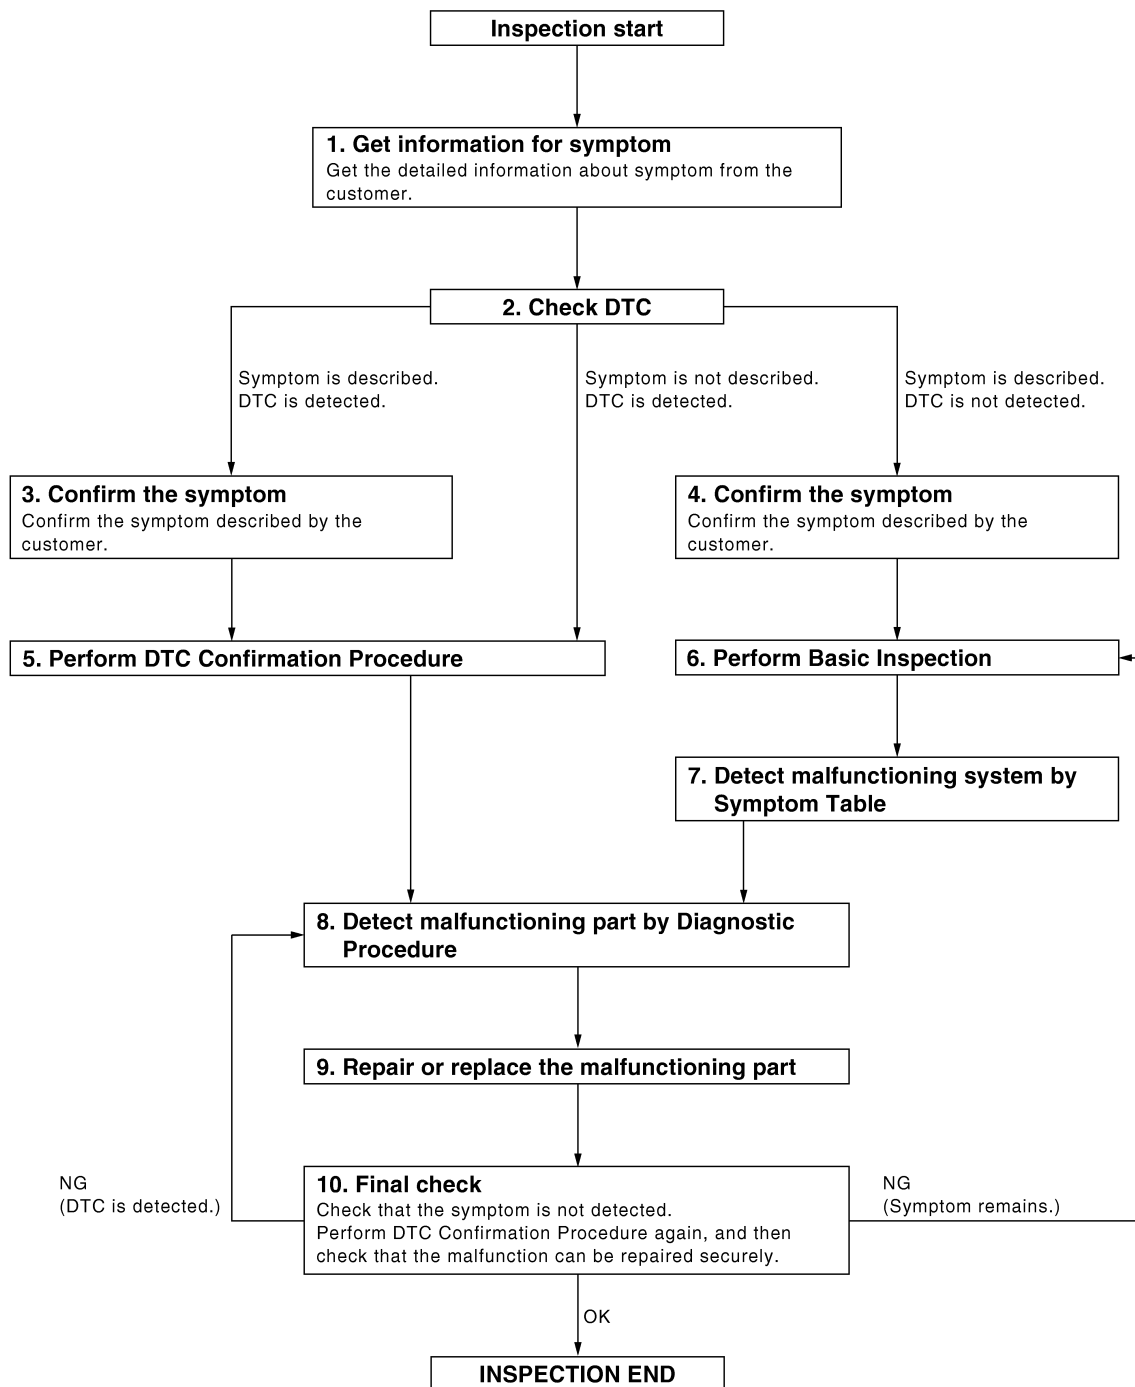

DETAILED FLOW

JMKIA0101GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITH SINGLE PANEL SUNROOF]

1. GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is displayed.
 - Record DTC and freeze frame data.
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3

Symptom is described, DTC is not displayed>>GO TO 4

Symptom is not described, DTC is displayed>>GO TO 5

3. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results. Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5

4. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results. Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again. At this time, always connect CONSULT-III to the vehicle, and check diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-81. "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC Confirmation Procedure is not included in Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check. If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC Confirmation Procedure.

Is DTC detected?

YES >> GO TO 8

NO >> Refer to [GI-39. "Intermittent Incident"](#).

6. PERFORM BASIC INSPECTION

Perform [RF-7. "BASIC INSPECTION : Special Repair Requirement"](#).

Inspection End>>GO TO 7

7. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to symptom diagnosis based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 8

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITH SINGLE PANEL SUNROOF]

8. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

NOTE:

The Diagnostic Procedure described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

Is malfunctioning part detected?

YES >> GO TO 9

NO >> Check voltage of related BCM terminals using CONSULT-III.

9. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

>> GO TO 10

10. FINAL CHECK

When DTC was detected in step 2, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunction has been repaired securely.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 8

YES (Symptom remains)>>GO TO 6

NO >> Inspection End.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITH SINGLE PANEL SUNROOF]

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000004392482

MEMORY RESET PROCEDURE

1. Please observe the following instructions at confirming the sunroof operation.

NOTE:

Do not disconnect the electronic power while the sunroof is operating or within 5 seconds after the sunroof stops (to wipe-out the memory of lid position and operating friction).

2. Initialization of system should be conducted after the following conditions.
 - When the sunroof motor is changed.
 - When the sunroof does not operate normally (incomplete initialization conditions).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000004392483

INITIALIZATION PROCEDURE

If the sunroof does not open or close automatically, use the following procedure to return sunroof operation to normal.

NOTE:

If the sunroof switch is released at any time during step 4, the procedure must be started over again. Leave the ignition switch ON for at least 2 seconds after this procedure.

1. Push the ignition switch to the ON position.
2. Hold the sunroof switch in the tilt up position. Release the switch when the sunroof has reached the full tilt up position.
3. Hold the sunroof switch in the tilt up position again. After a delay, the sunroof will back up. Release the switch.
4. Within 5 seconds of releasing the switch in step 3, hold the sunroof switch in the tilt up position again. The sunroof will move from the full tilt up position, to the open position and back to the close position. Release the switch only when the sunroof has reached the full closed position.

ANTI-PINCH FUNCTION

1. Full open the sunroof.
2. Place a piece of wood near fully closed position.
3. Close the sunroof completely with auto-slide close.

Check that sunroof lowers for approximately 150mm (5.91 in) or 2 seconds without pinching a piece of wood and stops.

CAUTION:

- Do not check with hands and other part of body because they may be pinched. Do not get pinched.
- Depending on environment and driving conditions, if a similar impact or load is applied to the sunroof it may lower.
- Check that auto-slide operates before inspection when system initialization is performed.
- Perform initial setting when auto-slide operation or anti-pinch function does not operate normally.

BASIC INSPECTION

BASIC INSPECTION : Special Repair Requirement

INFOID:000000004392484

BASIC INSPECTION

1.INSPECTION START

1. Check the service history.
2. Check the following parts.
 - Fuse/circuit breaker blown.
 - Poor connection, open or short circuit of harness connector.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITH SINGLE PANEL SUNROOF]

- Battery voltage.

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace the malfunctioning parts.

SUNROOF SYSTEM

< FUNCTION DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]


FUNCTION DIAGNOSIS

SUNROOF SYSTEM

System Diagram

INFOID:000000003898655

SUNROOF

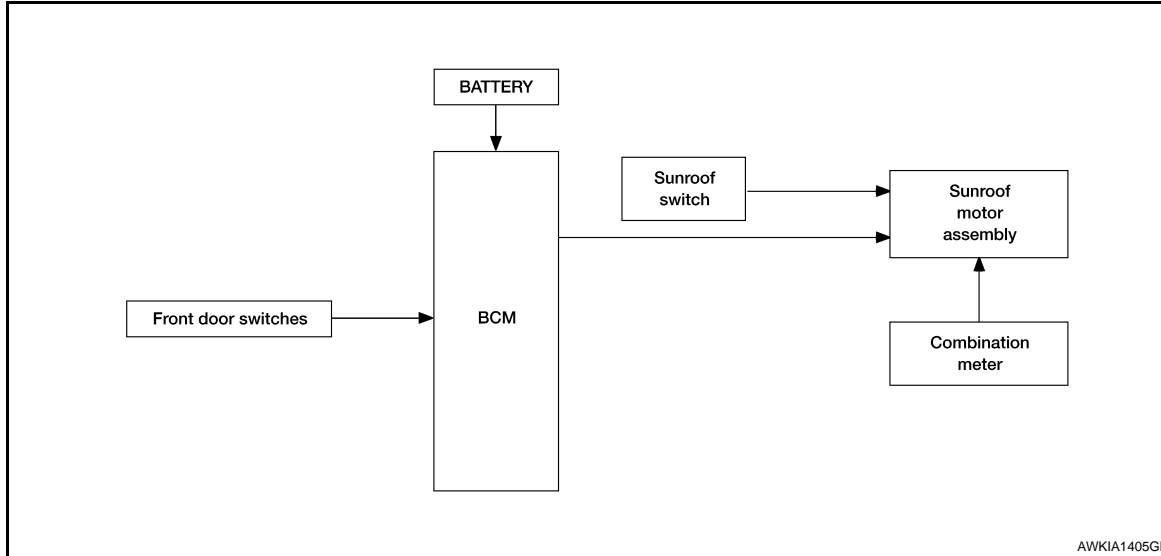

System Description

INFOID:000000003898656

SUNROOF SYSTEM

INPUT/OUTPUT SIGNAL CHART

| Item | Input signal to sunroof motor assembly | Sunroof motor function | Actuator |
|-------------------|---|------------------------|---------------|
| Sunroof switch | Sunroof switch signal (tilt down or slide open) | Sunroof control | Sunroof motor |
| | Sunroof switch signal (tilt up or slide close) | | |
| Combination meter | Vehicle speed signal | | |
| BCM | RAP signal | | |

SUNROOF OPERATION

- Sunroof motor assembly operates with the power supply that is output from BCM while ignition switch is ON or retained power is operating.
- Tilt up/ down & slide open/ close signals from sunroof switch enable sunroof motor to move arbitrarily.
- Sunroof motor assembly receives a vehicle speed signal from combination meter and controls the sunroof motor torque of tilt down at the time of high speed operation.

AUTO OPERATION

Sunroof AUTO feature makes it possible to slide open and slide close or tilt up and tilt down the sunroof without holding the sunroof switch in the slide open/tilt down or slide close/tilt up position.

RETAINED POWER OPERATION

- Retained power operation is an additional power supply function that enables the sunroof system to operate during 45 seconds, even when ignition switch is turned OFF.

Retained power function cancel conditions

- Door CLOSE (door switch OFF)→OPEN (door switch ON).
- When ignition switch is ON again.
- When timer time passes (45 seconds).

ANTI-PINCH FUNCTION

SUNROOF SYSTEM

[WITH SINGLE PANEL SUNROOF]

< FUNCTION DIAGNOSIS >


The CPU of sunroof motor assembly monitors the sunroof motor operation and the sunroof position (fully-closed or other) by the signals from sunroof motor.

When sunroof motor detects an interruption during the following slide close and tilt down operation, sunroof switch controls the motor for open and the sunroof will operate until full up position (when tilt down operates) or 150 mm (5.91 in) or more in an open direction (when slide close operates):

- close operation and tilt down when ignition switch is in the "ON" position

Component Parts Location

INFOID:000000003898657

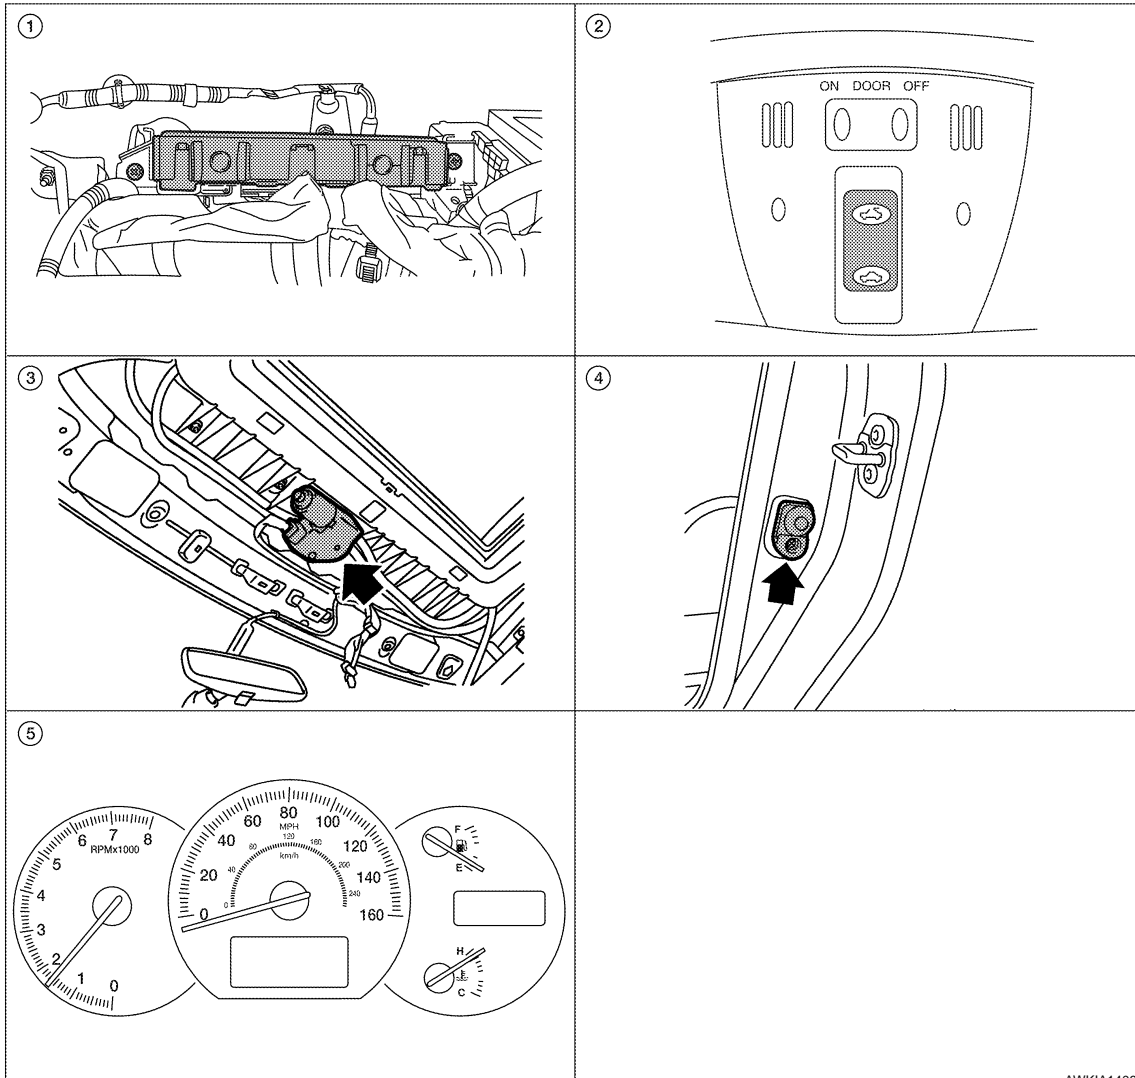

AWKIA1406ZZ

- | | | |
|--|--------------------------|------------------------------|
| 1. BCM M16, M17, M18 (view with instrument panel removed) | 2. Sunroof switch R6 | 3. Sunroof motor assembly R5 |
| 4. Front door switch LH B8, RH B108 | 5. Combination meter M24 | |

Component Description

INFOID:000000003898658

| Component | Function |
|------------------------|--|
| BCM | Supplies the power supply to sunroof motor assembly. |
| Sunroof switch | Transmits tilt up/down & slides open/close operation signal to sunroof motor assembly. |
| Sunroof motor assembly | It is sunroof motor and CPU integrated type that enables tilt up/down & slide open/close by sunroof switch operation |

SUNROOF SYSTEM

< FUNCTION DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| Component | Function |
|-------------------|---|
| Front door switch | Detects door open/close condition and transmits to BCM. |
| Combination meter | Transmits vehicle speed signal to sunroof motor assembly. |

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : Diagnosis Description

INFOID:000000004399693

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

| Diagnosis mode | Function Description |
|-----------------------|--|
| WORK SUPPORT | Changes the setting for each system function. |
| SELF-DIAG RESULTS | Displays the diagnosis results judged by BCM. |
| CAN DIAG SUPPORT MNTR | Monitors the reception status of CAN communication viewed from BCM. |
| DATA MONITOR | The BCM input/output signals are displayed. |
| ACTIVE TEST | The signals used to activate each device are forcibly supplied from BCM. |
| ECU IDENTIFICATION | The BCM part number is displayed. |
| CONFIGURATION | This function is not used even though it is displayed. |

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

| System | Sub system selection item | Diagnosis mode | | |
|--------------------------------------|---------------------------|----------------|--------------|-------------|
| | | WORK SUPPORT | DATA MONITOR | ACTIVE TEST |
| Door lock | DOOR LOCK | × | × | × |
| Rear window defogger | REAR DEFOGGER | | × | × |
| Warning chime | BUZZER | | × | × |
| Interior room lamp timer | INT LAMP | × | × | × |
| Exterior lamp | HEADLAMP | × | × | × |
| Wiper and washer | WIPER | × | × | × |
| Turn signal and hazard warning lamps | FLASHER | × | × | × |
| Air conditioner | AIR CONDITONER | | × | |
| Intelligent Key system | INTELLIGENT KEY | × | × | × |
| Combination switch | COMB SW | | × | |
| BCM | BCM | × | | |
| Immobilizer | IMMU | | × | × |
| Interior room lamp battery saver | BATTERY SAVER | × | × | × |
| Trunk open | TRUNK | | × | |
| Vehicle security system | THEFT ALM | × | × | × |
| RAP system | RETAINED PWR | | × | |
| Signal buffer system | SIGNAL BUFFER | | × | × |
| TPMS | AIR PRESSURE MONITOR | × | × | |

COMMON ITEM : CONSULT-III Function

INFOID:000000004399694

ECU IDENTIFICATION

Displays the BCM part No.

SELF-DIAG RESULT

Refer to [BCS-82, "DTC Index"](#).

RETAINED PWR

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)

INFOID:000000004399695

Data monitor

| Monitor Item [Unit] | Description |
|------------------------|--|
| DOOR SW-DR [ON/OFF] | Indicates condition of front door switch LH. |
| DOOR SW-AS [ON/OFF] | Indicates condition of front door switch RH. |

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

COMPONENT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT SUNROOF MOTOR ASSEMBLY

SUNROOF MOTOR ASSEMBLY : Description

INFOID:000000003898661

- BCM supplies power.
- CPU is integrated in sunroof motor assembly.
- Tilts up/down & slides open/close by sunroof switch operation.
- In order to close sunroof lid certainly with the signal from combination meter at the time of high speed run, the sunroof motor torque at the time of tilt-down operation is controlled.

SUNROOF MOTOR ASSEMBLY : Component Function Check

INFOID:000000003898662

1. CHECK SUNROOF MOTOR FUNCTION

Do tilt up/down & slide open/close functions operate normally with sunroof switch?

Is the inspection result normal?

YES >> Sunroof motor assembly is OK.

NO >> Refer to [RF-14. "SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure"](#).

SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure


INFOID:000000003898663

SUNROOF MOTOR ASSEMBLY

1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly.
3. Turn ignition switch ON.
4. Check voltage between sunroof motor assembly connector and ground.

| Terminal (+) | | Terminal (-) | Voltage (V) (Approx.) |
|----------------------------------|----------|--------------|--------------------------|
| Sunroof motor assembly connector | Terminal | | |
| R5 | 4 | Ground | Battery voltage |
| | 19 | | |

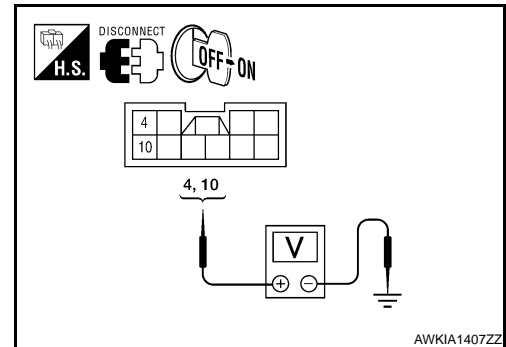

Is the measurement value within the specification?


YES >> GO TO 2

NO >> GO TO 3

2. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between sunroof motor assembly connector and ground.

| Sunroof motor assembly connector | Terminal | Ground | Continuity |
|----------------------------------|----------|--------|------------|
| R5 | 8 | | Yes |

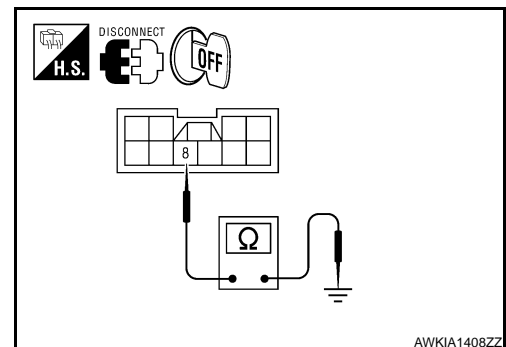

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair or replace harness.

3. CHECK SUNROOF MOTOR CIRCUIT

POWER SUPPLY AND GROUND CIRCUIT

[WITH SINGLE PANEL SUNROOF]

< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check continuity between BCM connector (A) and sunroof motor assembly connector (B).

| BCM connector | Terminal | Sunroof motor assembly connector | Terminal | Continuity |
|---------------|----------|----------------------------------|----------|------------|
| M16 (A) | 2 | R5 (B) | 10 | Yes |
| | 3 | | 4 | |

4. Check continuity between BCM connector (A) and ground.

| BCM connector | Terminal | Continuity |
|---------------|----------|------------|
| M16 (A) | 2 | No |
| | 3 | |

Is the inspection result normal?

- YES >> GO TO 4
 NO >> Repair or replace harness.

4. CHECK BCM OUTPUT SIGNAL

1. Connect BCM.
2. Turn ignition switch ON.
3. Check voltage between BCM connector and ground.

| Terminals | | Voltage (V) (Approx.) |
|---------------|----------|--------------------------|
| (+) | (-) | |
| BCM connector | Terminal | Battery voltage |
| M16 | 2 | |
| | 3 | Ground |

Is the measurement value within the specification?

- YES >> Check condition of harness and connector.
 NO >> Replace BCM. Refer to [BCS-87, "Removal and Installation"](#).

5. CHECK SUNROOF SWITCH INPUT SIGNAL




1. Connect sunroof motor assembly.
2. Turn ignition switch ON.
3. Check voltage between sunroof motor assembly connector and ground.

| Sunroof motor assembly connector | Terminals | | Condition | Voltage (V) (Approx.) |
|----------------------------------|-----------|--------|--|--------------------------|
| | (+) | (-) | | |
| R5 | 6 | Ground | Sunroof switch is operated TILT DOWN or SLIDE OPEN | 0 |
| | | | Other than above | Battery voltage |
| | 2 | Ground | Sunroof switch is operated TILT UP or SLIDE CLOSE | 0 |
| | | | Other than above | Battery voltage |

Is the measurement value within the specification?

- YES >> GO TO 8
 NO >> GO TO 6

6. CHECK SUNROOF SWITCH CIRCUIT

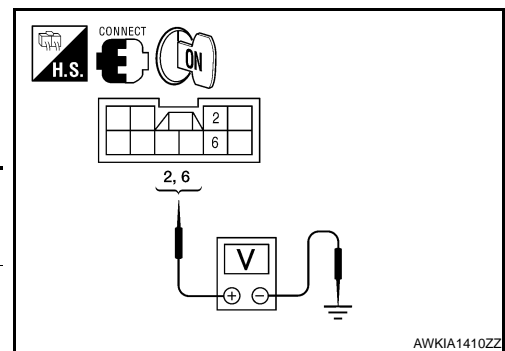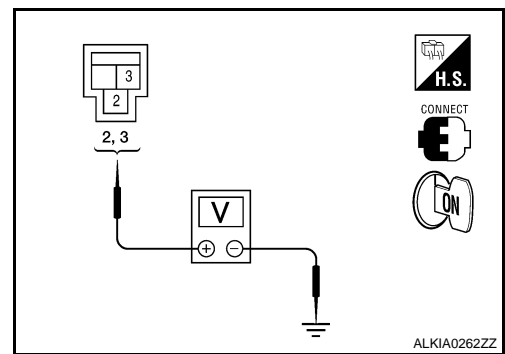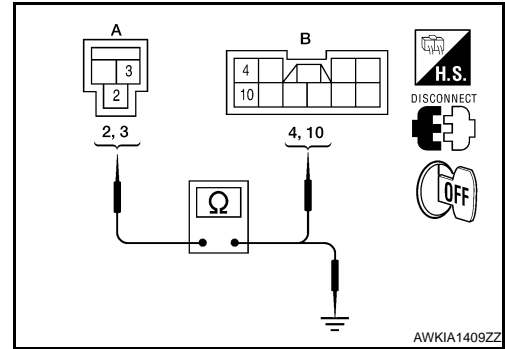


POWER SUPPLY AND GROUND CIRCUIT

[WITH SINGLE PANEL SUNROOF]

< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly and sunroof switch.
3. Check continuity between sunroof motor assembly connector (A) and sunroof switch connector (B).

| Sunroof motor assembly connector | Terminal | Sunroof switch connector | Terminal | Continuity |
|----------------------------------|----------|--------------------------|----------|------------|
| R5 (A) | 6 | R6 (B) | 1 | Yes |
| | 2 | | 3 | |

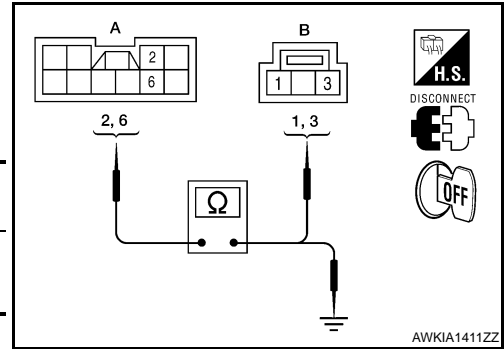

4. Check continuity between sunroof motor assembly connector (A) and ground.

| Sunroof motor assembly connector | Terminal | Ground | Continuity |
|----------------------------------|----------|--------|------------|
| R5 (A) | 6 | Ground | No |
| | 2 | | |


Is the inspection result normal?

- YES >> GO TO 7
 NO >> Repair or replace harness.

7. CHECK SUNROOF SWITCH GROUND CIRCUIT

1. Connect sunroof motor assembly.
2. Check continuity between sunroof switch connector and ground.

| Sunroof switch connector | Terminal | Ground | Continuity |
|--------------------------|----------|--------|------------|
| R6 | 2 | Ground | Yes |

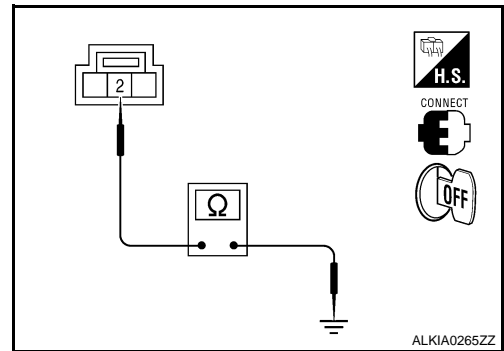


Is the inspection result normal?

- YES >> Refer to [RF-17. "SUNROOF MOTOR ASSEMBLY : Component Inspection"](#).
 NO >> Repair or replace harness.

8. CHECK COMBINATION METER SIGNAL

1. Connect sunroof motor assembly.
2. Turn ignition switch ON.
3. Check signal between sunroof motor assembly connector and ground with oscilloscope.

| Terminals | | Condition | Signal (Reference value) |
|----------------------------------|----------|--|---|
| (+) | (-) | | |
| Sunroof motor assembly connector | Terminal | Speedometer operated [When vehicle speed is approx.40km/h (25MPH)] | <p>(V) 6 4 2 0 ← 50ms</p> <p>ELF1080D</p> |
| R5 | 9 | | |

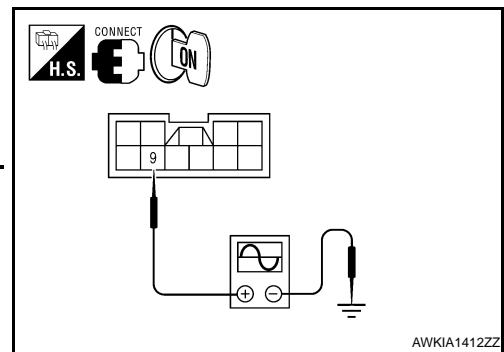

Is the inspection result normal?

POWER SUPPLY AND GROUND CIRCUIT

[WITH SINGLE PANEL SUNROOF]

< COMPONENT DIAGNOSIS >

- YES >> Replace sunroof motor assembly. Refer to [RF-85, "Removal and Installation"](#). After that, refer to [RF-7, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).
- NO >> GO TO 9

9. CHECK COMBINATION METER CIRCUIT

- Turn ignition switch OFF.
- Disconnect combination meter.
- Check continuity between combination meter connector (A) and sunroof motor assembly connector (B).


| Combination meter connector | Terminal | Sunroof motor assembly connector | Terminal | Continuity |
|-----------------------------|----------|----------------------------------|----------|------------|
| M24 (A) | 30 | R5 (B) | 9 | Yes |

- Check continuity between combination meter connector (A) and ground.

| Combination meter connector | Terminal | Ground | Continuity |
|-----------------------------|----------|--------|------------|
| M24 (A) | 30 | | No |

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-144, "Removal and Installation"](#).
- NO >> Repair or replace harness.

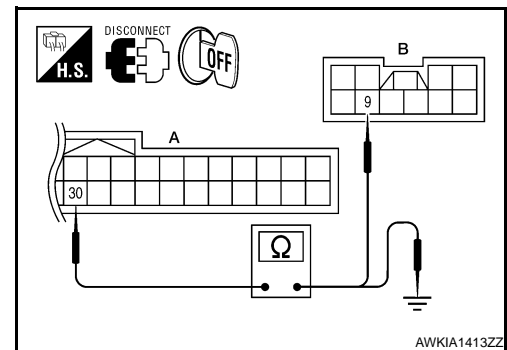

SUNROOF MOTOR ASSEMBLY : Component Inspection


INFOID:000000003898664

SUNROOF SWITCH

1. CHECK SUNROOF SWITCH

- Turn ignition switch OFF.
- Disconnect sunroof switch.
- Check continuity between sunroof switch terminals.

| Terminals | Condition | Continuity |
|-----------|--|------------|
| 1 | Sunroof switch is operated TILT DOWN or SLIDE OPEN | Yes |
| | Other than above | No |
| 3 | Sunroof switch is operated TILT UP or SLIDE CLOSE | Yes |
| | Other than above | No |

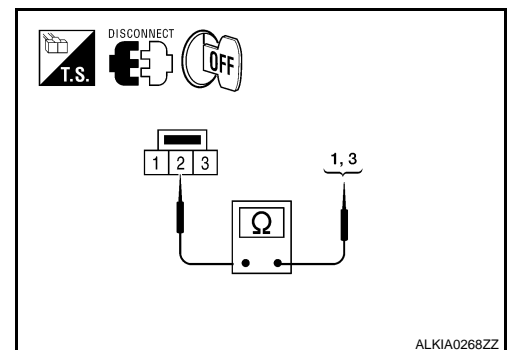

Is the inspection result normal?

- YES >> Sunroof switch is OK.
- NO >> Replace sunroof switch (map lamp assembly). Refer to [INL-96, "Removal and Installation"](#).

SUNROOF MOTOR ASSEMBLY : Special Repair Requirement

INFOID:000000003898665

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [RF-7, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

>> GO TO 2

2. CHECK ANTI-PINCH OPERATION

Check anti-pinch operation.

Refer to [RF-7, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

Is the inspection result normal?

YES >> Inspection End.

NO >> Check fitting adjustment. Refer to [RF-81. "Inspection"](#).

DOOR SWITCH

< COMPONENT DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

DOOR SWITCH

Description

INFOID:000000004392492

Detects door open/close condition.

Component Function Check

INFOID:000000004392493

1.CHECK FUNCTION

With CONSULT-III

Check door switches DOOR SW-DR, DOOR SW-AS in Data Monitor mode with CONSULT-III.

| Monitor item | Condition |
|--------------|------------------------|
| DOOR SW-DR | CLOSE → OPEN: OFF → ON |
| DOOR SW-AS | |

Is the inspection result normal?


- YES >> Door switch is OK.
- NO >> Refer to [RF-19, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000004392494

1.CHECK DOOR SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Check signal between BCM connector and ground with oscilloscope.

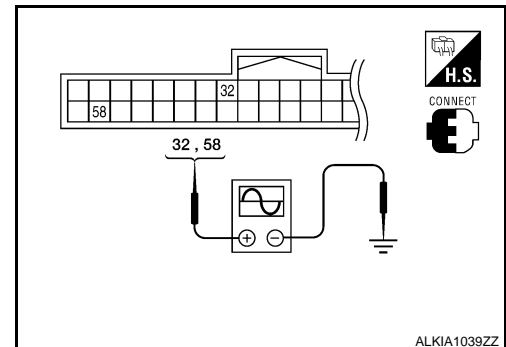

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

DOOR SWITCH

< COMPONENT DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| Terminals | | (-) | Door condition | Voltage (V) (Approx.) | |
|-------------------|----------------|--------|----------------|--------------------------|---|
| (+) BCM connector | | | | | |
| Terminal | BCM connector | | | | |
| 58 | A: M18 | Ground | Driver side | OPEN | 0 |
| | | | Driver side | CLOSE | |
| Passenger side | OPEN | | 0 | | |
| | Passenger side | | CLOSE | | |
| 32 | | | | | |

Is the inspection result normal?

- YES >> GO TO 4
- NO >> GO TO 2

2. CHECK DOOR SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM connector and door switch connector.

| BCM connector | Terminal | Door switch connector | Terminal | Continuity |
|---------------|----------|--------------------------|----------|------------|
| A: M18 | 58 | C: B8 (Driver side) | 2 | Yes |
| | 32 | C: B108 (Passenger side) | | |

3. Check continuity between BCM connector and ground.

| BCM connector | Terminal | Ground | Continuity |
|---------------|----------|--------|------------|
| A: M18 | 58 | Ground | No |
| | 32 | | |

Is the inspection result normal?

- YES >> GO TO 3
- NO >> Repair or replace harness between BCM and door switch.

3. CHECK DOOR SWITCH


Refer to [RF-21, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4
- NO >> Replace malfunctioning door switch.

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

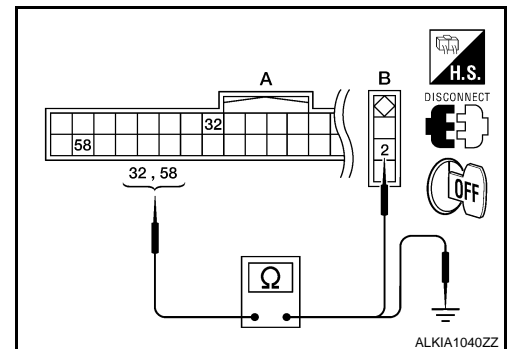

DOOR SWITCH

< COMPONENT DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

>> Inspection End.

Component Inspection

INFOID:000000004392495


1. CHECK DOOR SWITCH

1. Turn ignition switch OFF.
2. Disconnect door switch connector.
3. Check door switch.

| Terminal | | Door switch condition | Continuity |
|-------------|----------------------------|-----------------------|------------|
| Door switch | | | |
| 2 | Ground part of door switch | Pressed | No |
| | | Released | Yes |

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace malfunctioning door switch.

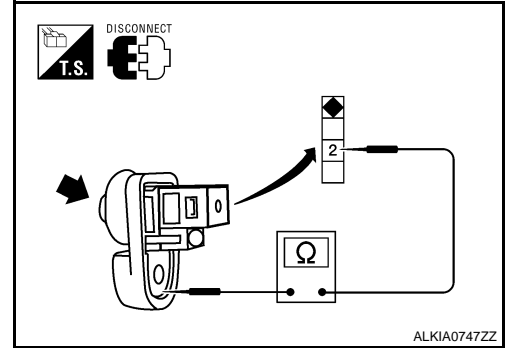

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000004392496

VALUES ON THE DIAGNOSIS TOOL

| Monitor Item | Condition | Value/Status |
|----------------|---|----------------------------------|
| FR WIPER HI | Other than front wiper switch HI | OFF |
| | Front wiper switch HI | ON |
| FR WIPER LOW | Other than front wiper switch LO | OFF |
| | Front wiper switch LO | ON |
| FR WASHER SW | Front washer switch OFF | OFF |
| | Front washer switch ON | ON |
| FR WIPER INT | Other than front wiper switch INT | OFF |
| | Front wiper switch INT | ON |
| FR WIPER STOP | Front wiper is not in STOP position | OFF |
| | Front wiper is in STOP position | ON |
| INT VOLUME | Wiper intermittent dial is in a dial position 1 - 7 | Wiper intermittent dial position |
| TURN SIGNAL R | Other than turn signal switch RH | OFF |
| | Turn signal switch RH | ON |
| TURN SIGNAL L | Other than turn signal switch LH | OFF |
| | Turn signal switch LH | ON |
| TAIL LAMP SW | Other than lighting switch 1ST and 2ND | OFF |
| | Lighting switch 1ST or 2ND | ON |
| HI BEAM SW | Other than lighting switch HI | OFF |
| | Lighting switch HI | ON |
| HEAD LAMP SW 1 | Other than lighting switch 2ND | OFF |
| | Lighting switch 2ND | ON |
| HEAD LAMP SW 2 | Other than lighting switch 2ND | OFF |
| | Lighting switch 2ND | ON |
| PASSING SW | Other than lighting switch PASS | OFF |
| | Lighting switch PASS | ON |
| AUTO LIGHT SW | Other than lighting switch AUTO | OFF |
| | Lighting switch AUTO | ON |
| FR FOG SW | Front fog lamp switch OFF | OFF |
| | Front fog lamp switch ON | ON |
| DOOR SW-DR | Driver door closed | OFF |
| | Driver door opened | ON |
| DOOR SW-AS | Passenger door closed | OFF |
| | Passenger door opened | ON |
| DOOR SW-RR | Rear door RH closed | OFF |
| | Rear door RH opened | ON |
| DOOR SW-RL | Rear door LH closed | OFF |
| | Rear door LH opened | ON |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| Monitor Item | Condition | Value/Status | |
|----------------|---|--------------|----|
| DOOR SW-BK | NOTE: This item is displayed, but cannot be monitored. | OFF | A |
| CDL LOCK SW | Other than power door lock switch LOCK | OFF | B |
| | Power door lock switch LOCK | ON | |
| CDL UNLOCK SW | Other than power door lock switch UNLOCK | OFF | C |
| | Power door lock switch UNLOCK | ON | |
| KEY CYL LK-SW | Other than driver door key cylinder LOCK position | OFF | D |
| | Driver door key cylinder LOCK position | ON | |
| KEY CYL UN-SW | Other than driver door key cylinder UNLOCK position | OFF | D |
| | Driver door key cylinder UNLOCK position | ON | |
| KEY CYL SW-TR | NOTE: This item is displayed, but cannot be monitored. | OFF | E |
| HAZARD SW | When hazard switch is not pressed | OFF | F |
| | When hazard switch is pressed | ON | |
| REAR DEF SW | When rear window defogger switch is pressed | ON | |
| TR CANCEL SW | Trunk lid opener cancel switch OFF | OFF | G |
| | Trunk lid opener cancel switch ON | ON | |
| TR/BD OPEN SW | Trunk lid opener switch OFF | OFF | H |
| | While the trunk lid opener switch is turned ON | ON | |
| TRNK/HAT MNTR | Trunk lid closed | OFF | I |
| | Trunk lid opened | ON | |
| RKE-LOCK | When LOCK button of Intelligent Key is not pressed | OFF | J |
| | When LOCK button of Intelligent Key is pressed | ON | |
| RKE-UNLOCK | When UNLOCK button of Intelligent Key is not pressed | OFF | J |
| | When UNLOCK button of Intelligent Key is pressed | ON | |
| RKE-TR/BD | When TRUNK OPEN button of Intelligent Key is not pressed | OFF | RF |
| | When TRUNK OPEN button of Intelligent Key is pressed | ON | |
| RKE-PANIC | When PANIC button of Intelligent Key is not pressed | OFF | L |
| | When PANIC button of Intelligent Key is pressed | ON | |
| RKE-P/W OPEN | When UNLOCK button of Intelligent Key is not pressed and held | OFF | M |
| | When UNLOCK button of Intelligent Key is pressed and held | ON | |
| RKE-MODE CHG | When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously | OFF | N |
| | When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously | ON | |
| OPTICAL SENSOR | When outside of the vehicle is bright | Close to 5 V | O |
| | When outside of the vehicle is dark | Close to 0 V | |
| REQ SW-DR | When front door request switch is not pressed (driver side) | OFF | P |
| | When front door request switch is pressed (driver side) | ON | |
| REQ SW-AS | When front door request switch is not pressed (passenger side) | OFF | P |
| | When front door request switch is pressed (passenger side) | ON | |
| REQ SW-RL | When rear door request switch is not pressed (driver side) | OFF | |
| | When rear door request switch is pressed (driver side) | ON | |
| REQ SW-RR | When rear door request switch is not pressed (passenger side) | OFF | |
| | When rear door request switch is pressed (passenger side) | ON | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| Monitor Item | Condition | Value/Status |
|----------------|--|--------------|
| REQ SW-BD/TR | When trunk request switch is not pressed | OFF |
| | When trunk request switch is pressed | ON |
| PUSH SW | When engine switch (push switch) is not pressed | OFF |
| | When engine switch (push switch) is pressed | ON |
| IGN RLY 2-F/B | Ignition switch OFF or ACC | OFF |
| | Ignition switch ON | ON |
| ACC RLY-F/B | Ignition switch OFF | OFF |
| | Ignition switch ACC or ON | ON |
| CLUTCH SW | NOTE: This item is displayed, but cannot be monitored. | OFF |
| BRAKE SW 1 | When the brake pedal is not depressed | ON |
| | When the brake pedal is depressed | OFF |
| DETE/CANCL SW | When selector lever is in P position | OFF |
| | When selector lever is in any position other than P | ON |
| SFT PN/N SW | When selector lever is in any position other than P or N | OFF |
| | When selector lever is in P or N position | ON |
| S/L-LOCK | Electronic steering column lock LOCK status | OFF |
| | Electronic steering column lock UNLOCK status | ON |
| S/L-UNLOCK | Electronic steering column lock UNLOCK status | OFF |
| | Electronic steering column lock LOCK status | ON |
| S/L RELAY-F/B | Ignition switch OFF or ACC | OFF |
| | Ignition switch ON | ON |
| UNLK SEN-DR | Driver door UNLOCK status | OFF |
| | Driver door LOCK status | ON |
| PUSH SW-IPDM | When engine switch (push switch) is not pressed | OFF |
| | When engine switch (push switch) is pressed | ON |
| IGN RLY1 F/B | Ignition switch OFF or ACC | OFF |
| | Ignition switch ON | ON |
| DETE SW -IPDM | When selector lever is in P position | OFF |
| | When selector lever is in any position other than P | ON |
| SFT PN -IPDM | When selector lever is in any position other than P or N | OFF |
| | When selector lever is in P or N position | ON |
| SFT P-MET | When selector lever is in any position other than P | OFF |
| | When selector lever is in P position | ON |
| SFT N-MET | When selector lever is in any position other than N | OFF |
| | When selector lever is in N position | ON |
| ENGINE STATE | Engine stopped | STOP |
| | While the engine stalls | STALL |
| | At engine cranking | CRANK |
| | Engine running | RUN |
| S/L LOCK-IPDM | Electronic steering column lock LOCK status | OFF |
| | Electronic steering column lock UNLOCK status | ON |
| S/L UNLCK-IPDM | Electronic steering column lock UNLOCK status | OFF |
| | Electronic steering column lock LOCK status | ON |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| Monitor Item | Condition | Value/Status | |
|----------------|---|--|----|
| S/L RELAY-REQ | Ignition switch OFF or ACC | OFF | A |
| | Ignition switch ON | ON | |
| VEH SPEED 1 | While driving | Equivalent to speedometer reading | B |
| VEH SPEED 2 | While driving | Equivalent to speedometer reading | |
| DOOR STAT-DR | Driver door LOCK status | LOCK | C |
| | Wait with selective UNLOCK operation (5 seconds) | READY | |
| | Driver door UNLOCK status | UNLK | |
| DOOR STAT-AS | Passenger door LOCK status | LOCK | D |
| | Wait with selective UNLOCK operation (5 seconds) | READY | |
| | Passenger door UNLOCK status | UNLK | |
| ID OK FLAG | Ignition switch ACC or ON | RESET | E |
| | Ignition switch OFF | SET | |
| PRMT ENG STAT | When the engine start is prohibited | RESET | F |
| | When the engine start is permitted | SET | |
| PRMT RKE STAT | NOTE: This item is displayed, but cannot be monitored. | RESET | G |
| KEY SW -SLOT | When Intelligent Key is not inserted into key slot | OFF | H |
| | When Intelligent Key is inserted into key slot | ON | |
| RKE OPE COUN1 | During the operation of Intelligent Key | Operation frequency of Intelligent Key | I |
| RKE OPE COUN2 | NOTE: This item is displayed, but cannot be monitored. | Operation frequency of Intelligent Key | J |
| CONFIRM ID ALL | The key ID that the key slot receives does not accord with any key ID registered to BCM. | YES | |
| | The key ID that the key slot receives accords with any key ID registered to BCM. | DONE | |
| CONFIRM ID4 | The key ID that the key slot receives does not accord with the fourth key ID registered to BCM. | YES | RF |
| | The key ID that the key slot receives accords with the fourth key ID registered to BCM. | DONE | |
| CONFIRM ID3 | The key ID that the key slot receives does not accord with the third key ID registered to BCM. | YES | L |
| | The key ID that the key slot receives accords with the third key ID registered to BCM. | DONE | |
| CONFIRM ID2 | The key ID that the key slot receives does not accord with the second key ID registered to BCM. | YES | M |
| | The key ID that the key slot receives accords with the second key ID registered to BCM. | DONE | N |
| CONFIRM ID1 | The key ID that the key slot receives does not accord with the first key ID registered to BCM. | YES | O |
| | The key ID that the key slot receives accords with the first key ID registered to BCM. | DONE | |
| TP 4 | The ID of fourth key is not registered to BCM | YES | P |
| | The ID of fourth key is registered to BCM | DONE | |
| TP 3 | The ID of third key is not registered to BCM | YES | |
| | The ID of third key is registered to BCM | DONE | |
| TP 2 | The ID of second key is not registered to BCM | YES | |
| | The ID of second key is registered to BCM | DONE | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| Monitor Item | Condition | Value/Status |
|--------------|--|-------------------------------|
| TP 1 | The ID of first key is not registered to BCM | YET |
| | The ID of first key is registered to BCM | DONE |
| AIR PRESS FL | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of front LH tire |
| AIR PRESS FR | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of front RH tire |
| AIR PRESS RR | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of rear RH tire |
| AIR PRESS RL | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of rear LH tire |
| ID REGST FL1 | When ID of front LH tire transmitter is registered | DONE |
| | When ID of front LH tire transmitter is not registered | YET |
| ID REGST FR1 | When ID of front RH tire transmitter is registered | DONE |
| | When ID of front RH tire transmitter is not registered | YET |
| ID REGST RR1 | When ID of rear RH tire transmitter is registered | DONE |
| | When ID of rear RH tire transmitter is not registered | YET |
| ID REGST RL1 | When ID of rear LH tire transmitter is registered | DONE |
| | When ID of rear LH tire transmitter is not registered | YET |
| WARNING LAMP | Tire pressure indicator OFF | OFF |
| | Tire pressure indicator ON | ON |
| BUZZER | Tire pressure warning alarm is not sounding | OFF |
| | Tire pressure warning alarm is sounding | ON |


BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

Terminal Layout

INFOID:000000004392497

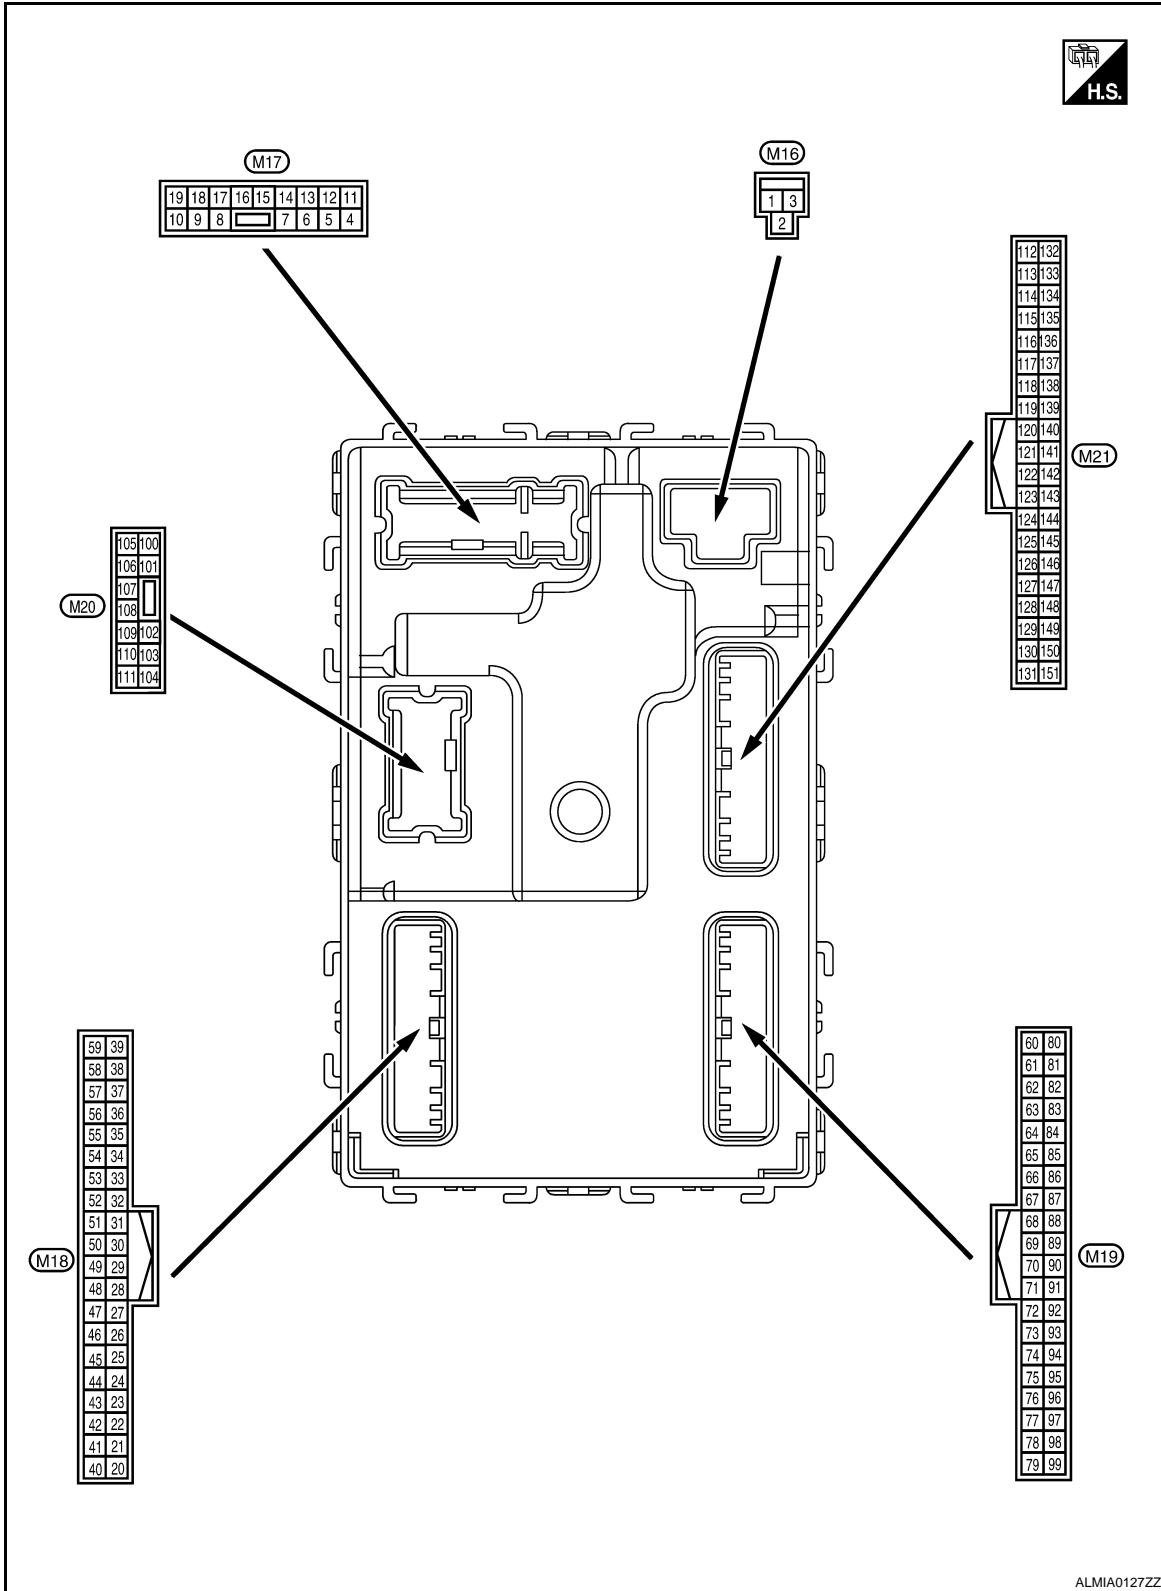

Physical Values


INFOID:000000004392498

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >




[WITH SINGLE PANEL SUNROOF]
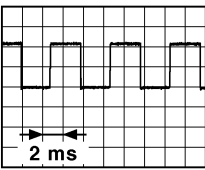
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|--|---|--|
| | | Signal name | Input/ Output | | | |
| (+) | (-) | | | | | |
| 1 (W/B) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 2 (R/Y) | Ground | Battery power supply output | Output | Ignition switch OFF | | Battery voltage |
| 3 (L/W) | Ground | Ignition power supply output | Output | Ignition switch ON | | Battery voltage |
| 4 (P/W) | Ground | Interior room lamp power supply | Output | After passing the interior room lamp battery saver operation time | | 0V |
| | | | | Any other time after passing the interior room lamp battery saver operation time | | Battery voltage |
| 5 (G) | Ground | Front door RH UNLOCK | Output | Front door RH | UNLOCK (actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (actuator is not activated) | 0V |
| 7 (R/W) | Ground | Step lamp | Output | Step lamp | ON | 0V |
| | | | | | OFF | Battery voltage |
| 8 (V) | Ground | All doors LOCK | Output | All doors | LOCK (actuator is activated) | Battery voltage |
| | | | | | Other than LOCK (actuator is not activated) | 0V |
| 9 (L) | Ground | Front door LH UNLOCK | Output | Front door LH | UNLOCK (actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (actuator is not activated) | 0V |
| 10 (G) | Ground | Rear door RH and rear door LH UNLOCK | Output | Rear door RH and rear door LH | UNLOCK (actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (actuator is not activated) | 0V |
| 11 (Y/R) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 13 (B) | Ground | Ground | — | Ignition switch ON | | 0V |
| 14 (GR/W) | Ground | Engine switch (push switch) illumination ground | Input | Tail lamp | OFF | 0V |
| | | | | | ON | <p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p> |
| 15 (Y/L) | Ground | ACC indicator lamp | Output | Ignition switch | OFF | Battery voltage |
| | | | | | ACC or ON | 0V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]
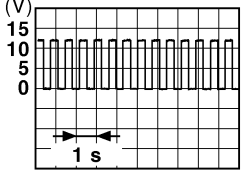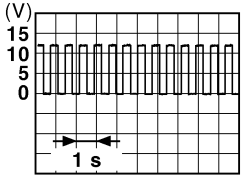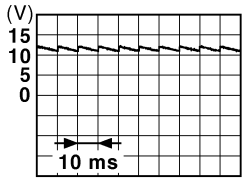
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|--|--|--|
| (+) | (-) | Signal name | Input/ Output | | | |
| 17 (G/B) | Ground | Turn signal (RH) | Output | Ignition switch ON | Turn signal switch OFF | 0V |
| | | | | | Turn signal switch RH |  <p style="text-align: center;">6.5 V</p> |
| 18 (G/Y) | Ground | Turn signal (LH) | Output | Ignition switch ON | Turn signal switch OFF | 0V |
| | | | | | Turn signal switch LH |  <p style="text-align: center;">6.5 V</p> |
| 19 (Y) | Ground | Room lamp timer control | Output | Interior room lamp | OFF | Battery voltage |
| | | | | | ON | 0V |
| 21 (P/B) | Ground | Optical sensor signal | Input | Ignition switch ON | When outside of the vehi- cle is bright | Close to 5V |
| | | | | | When outside of the vehi- cle is dark | Close to 0V |
| 24 (R/W) | Ground | Stop lamp switch 1 | Input | — | — | Battery voltage |
| 26 (O/L) | Ground | Stop lamp switch 2 | Input | Stop lamp switch | OFF (brake pedal is not de- pressed) | 0V |
| | | | | | ON (brake pedal is de- pressed) | Battery voltage |
| 27 (O) | Ground | Front door lock as- sembly LH (unlock sensor) | Input | Front door LH | LOCK status |  <p style="text-align: center;">11.8V</p> |
| | | | | | UNLOCK status | 0V |
| 29 (Y) | Ground | Key slot switch | Input | When Intelligent Key is inserted into key slot | Battery voltage | |
| | | | | When Intelligent Key is not inserted into key slot | 0V | |
| 30 (V/Y) | Ground | ACC feedback signal | Input | Ignition switch | OFF | 0 |
| | | | | — | ACC or ON | Battery voltage |
| 31 (G) | Ground | Rear window defog- ger feedback signal | Input | Rear window de- fogger switch | OFF | 0V |
| | | | | — | ON | Battery voltage |




A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >



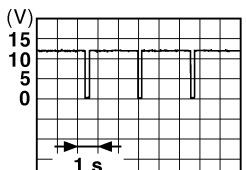
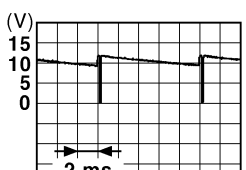
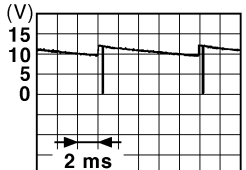
[WITH SINGLE PANEL SUNROOF]
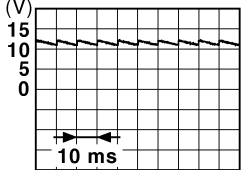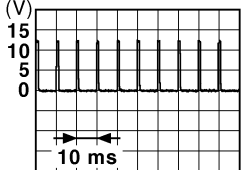
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|--|------------------|--|--|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 32 (R/B) | Ground | Front door RH switch | Input | Front door RH switch | OFF (when front door RH closes) |  <small>JPMIA0011GB</small> 11.8 V |
| | | | | | ON (when front door RH opens) | 0V |
| 37 (O) | Ground | Trunk lid opener cancel switch | Input | Trunk lid opener cancel switch | CANCEL |  <small>JPMIA0012GB</small> 1.1V |
| | | | | | ON | 0V |
| 38 (GR/W) | Ground | Rear window defogger ON signal | Input | Rear window defogger switch | OFF | 5V |
| | | | | | ON | 0V |
| 40 (Y/G) | Ground | Power window serial link | Input/ Output | Ignition switch ON |  <small>JPMIA0013GB</small> 10.2V | |
| | | | | Ignition switch OFF or ACC | 0V | |
| 41 (W) | Ground | Engine switch (push switch) illumination | Output | Engine switch (push switch) illumination | ON | 5.5V |
| | | | | | OFF | 0V |
| 42 (R) | Ground | LOCK indicator lamp | Output | LOCK indicator lamp | ON | 0V |
| | | | | | OFF | Battery voltage |
| 45 (P) | Ground | Receiver & sensor ground | Input | Ignition switch ON | | 0V |
| 46 (V/W) | Ground | Receiver & sensor power supply output | Output | Ignition switch | OFF | 0V |
| | | | | | ACC or ON | 5.0V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]
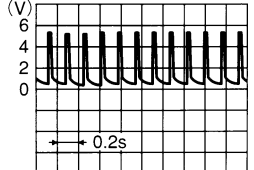
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|------------------------------------|------------------|---|--|--|
| | | Signal name | Input/ Output | | | |
| (+) | (-) | | | | | |
| 47 (G/O) | Ground | Tire pressure receiver signal | Input/ Output | Ignition switch ON | Standby state |  <small>OCC3881D</small> |
| | | | | | When receiving the signal from the transmitter |  <small>OCC3880D</small> |
| 48 (R/G) | Ground | Selector lever P/N position signal | Input | Selector lever | P or N position | 12.0V |
| | | | | | Except P and N positions | 0V |
| 49 (L/O) | Ground | Security indicator signal | Output | Security indicator | ON | 0V |
| | | | | | Blinking |  <small>JPMIA0014GB</small> 11.3V |
| 50 (LG/B) | Ground | Combination switch OUTPUT 5 | Output | Combination switch (Wiper intermittent dial 4) | All switch OFF | 0V |
| | | | | | Lighting switch 1ST |  <small>JPMIA0031GB</small> 10.7V |
| | | | | | Lighting switch high-beam | |
| | | | | | Lighting switch 2ND | |
| Turn signal switch RH | 0V | | | | | |
| 51 (L/W) | Ground | Combination switch OUTPUT 1 | Output | Combination switch | All switch OFF (Wiper intermittent dial 4) | 0V |
| | | | | | Front wiper switch HI (Wiper intermittent dial 4) |  <small>JPMIA0032GB</small> 10.7V |
| | | | | | Any of the conditions below with all switch OFF | |





A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >
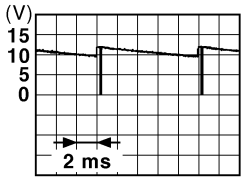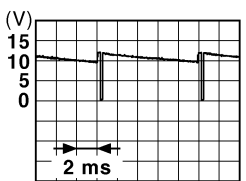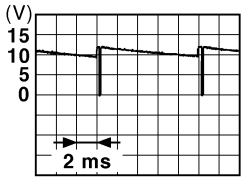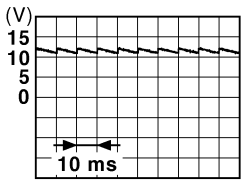
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|---|------------------|---|---|---|
| | | Signal name | Input/ Output | | | |
| (+) | (-) | | | | | |
| 52 (G/B) | Ground | Combination switch OUTPUT 2 | Output | Combination switch | All switch OFF (Wiper intermittent dial 4) | 0V |
| | | | | | Front washer switch ON (Wiper intermittent dial 4) |  |
| | | | | | Any of the conditions below with all switch OFF | |
| | | | | | <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 | |
| | | | | | 10.7V | |
| 53 (LG/ R) | Ground | Combination switch OUTPUT 3 | Output | Combination switch (Wiper intermit- tent dial 4) | All switch OFF | 0V |
| | | | | | Front wiper switch INT |  |
| | | | | | Front wiper switch LO | |
| | | | | | Lighting switch AUTO | |
| | | | | | 10.7V | |
| 54 (G/Y) | Ground | Combination switch OUTPUT 4 | Output | Combination switch (Wiper intermit- tent dial 4) | All switch OFF | 0V |
| | | | | | Front fog lamp switch ON |  |
| | | | | | Lighting switch 2ND | |
| | | | | | Lighting switch flash-to- pass | |
| | | | | | 10.7V | |
| 57 (W) | Ground | Tire pressure warn- ing check switch | Input | — | 5V | |
| 58 (SB) | Ground | Front door LH switch | Input | Front door LH switch | OFF (front door LH CLOSE) |  |
| | | | | | ON (front door LH OPEN) | |
| | | | | | 11.8V | |
| 59 (G/R) | Ground | Rear window defog- ger relay | Output | Rear window de- fogger | Active | Battery voltage |
| | | | | | Not activated | 0V |

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------------|------------------|--|--------------------|
| (+) | (-) | Signal name | Input/ Output | | |
| 60 (B/R) | Ground | Front console antenna 2 (-) | Output | Ignition switch OFF | <p>JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment | <p>JMKIA0063GB</p> |
| 61 (W/R) | Ground | Center console antenna 2 (+) | Output | Ignition switch OFF | <p>JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment | <p>JMKIA0063GB</p> |
| 62 (V) | Ground | Front outside handle RH antenna (-) | Output | When the front door RH request switch is operated with ignition switch OFF | <p>JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p>JMKIA0063GB</p> |







A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]





< ECU DIAGNOSIS >
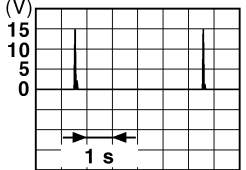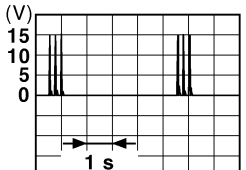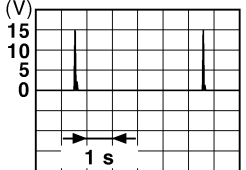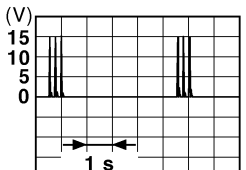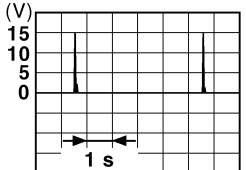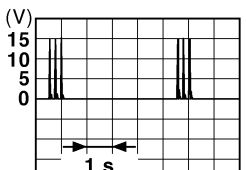
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|--|--|
| (+) | (-) | Signal name | Input/ Output | | |
| 63 (P) | Ground | Front outside handle RH antenna (+) | Output | When the front door RH request switch is operat- ed with ignition switch OFF | When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the antenna detection area  <small>JMKIA0063GB</small> | |
| 64 (V) | Ground | Front outside handle LH antenna (-) | Output | When the front door LH request switch is operat- ed with ignition switch OFF | When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the antenna detection area  <small>JMKIA0063GB</small> | |
| 65 (P) | Ground | Front outside handle LH antenna (+) | Output | When the front door LH request switch is operat- ed with ignition switch OFF | When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the antenna detection area  <small>JMKIA0063GB</small> | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]
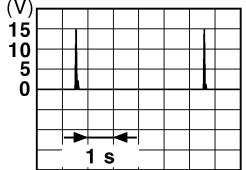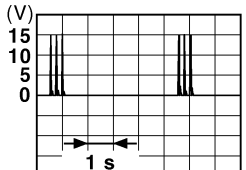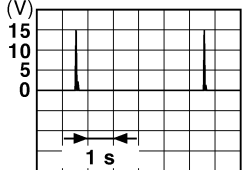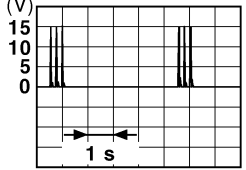
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--------------------------------------|------------------|--|---|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| | | | | | | Ignition switch OFF |
| 66 (R) | Ground | Instrument panel antenna (-) | Output | When Intelligent Key is in the passenger compartment |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> | |
| | | | | When Intelligent Key is not in the passenger compartment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> | |
| 67 (G) | Ground | Instrument panel antenna (+) | Output | When Intelligent Key is in the passenger compartment |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> | |
| | | | | When Intelligent Key is not in the passenger compartment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> | |
| 68 (G/O) | Ground | NATS antenna amp (built in key slot) | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. | Just after pressing ignition switch. Pointer of tester should move. |
| 69 (O) | Ground | NATS antenna amp (built in key slot) | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. | Just after pressing ignition switch. Pointer of tester should move. |
| 70 (R/B) | Ground | Ignition relay-2 control | Output | Ignition switch | OFF or ACC | 0V |
| | | | | ON | Battery voltage | |



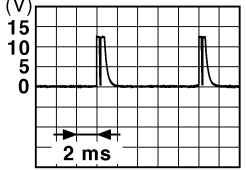

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]




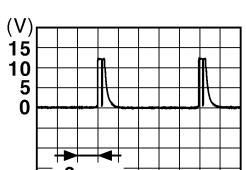
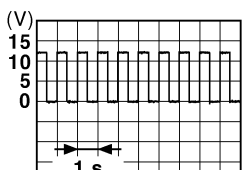
< ECU DIAGNOSIS >
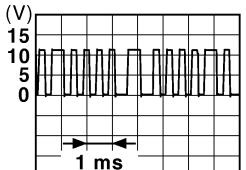
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|---|------------------|---|--|
| (+) | (-) | Signal name | Input/ Output | | |
| 71 (L/O) | Ground | Remote keyless entry receiver signal | Input/ Output | | |
| | | | | When operating either button on Intelligent Key |  <p style="text-align: right; font-size: small;">JMKIA0065GB</p> |
| 75 (R/Y) | Ground | Combination switch INPUT 5 | Input | All switch OFF (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4V</p> |
| | | | | Combination switch Front fog lamp switch ON (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3V</p> |
| | | | | Any of the conditions below with all switch OFF | <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3V</p> |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]
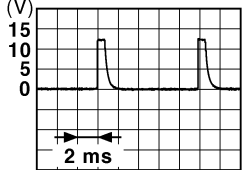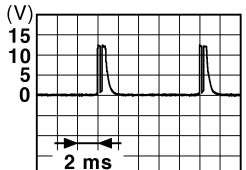
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--------------------------------|------------------|--------------------------------|--|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 76 (R/G) | Ground | Combination switch INPUT 3 | Input | Combination switch | All switch OFF (Wiper intermittent dial 4) |  <small>JPMIA0041GB</small> 1.4V |
| | | | | | Lighting switch high-beam (Wiper intermittent dial 4) |  <small>JPMIA0036GB</small> 1.3V |
| | | | | | Lighting switch 2ND (Wiper intermittent dial 4) |  <small>JPMIA0037GB</small> 1.3V |
| | | | | | Any of the conditions below with all switch OFF | <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3  <small>JPMIA0040GB</small> 1.3V |
| 77 (BR) | Ground | Engine switch (push switch) | Input | Engine switch (push switch) | Pressed Not pressed | 0V Battery voltage |
| 78 (P) | Ground | CAN-L | Input/ Output | — | — | — |
| 79 (L) | Ground | CAN-H | Input/ Output | — | — | — |
| 80 (R/L) | Ground | Key slot illumination | Output | Key slot illumina- tion | OFF | 0V |
| | | | | | Blinking |  <small>JPMIA0015GB</small> 6.5V |
| | | | | | ON | Battery voltage |



A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >




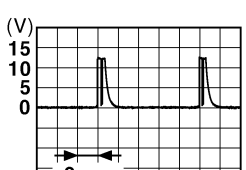

[WITH SINGLE PANEL SUNROOF]
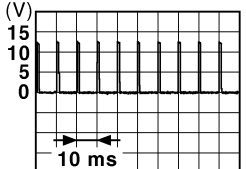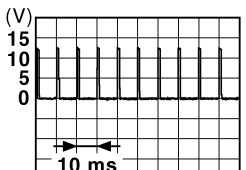
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|--------------------------------------|---------------------------|---|
| | | Signal name | Input/ Output | | | |
| (+) | (-) | | | | | |
| 81 (Y/L) | Ground | ON indicator lamp | Output | Ignition switch | OFF or ACC | 0V |
| | | | | | ON | Battery voltage |
| 83 (L) | Ground | ACC relay control | Output | Ignition switch | OFF | 0V |
| | | | | | ACC or ON | Battery voltage |
| 84 (Y/R) | Ground | A/T device | Output | — | | Battery voltage |
| 85 (L/O) | Ground | Electronic steering column lock condition No. 1 | Input | Electronic steer- ing column lock | Lock status | 0V |
| | | | | | Unlock status | Battery voltage |
| 86 (G/R) | Ground | Electronic steering column lock condition No. 2 | Input | Electronic steer- ing column lock | Lock status | Battery voltage |
| | | | | | Unlock status | 0V |
| 87 (G/B) | Ground | Selector lever P posi- tion switch | Input | Selector lever | P position | 0V |
| | | | | | Any position other than P | Battery voltage |
| 88 (R) | Ground | Front door RH re- quest switch | Input | Front door RH re- quest switch | ON (pressed) | 0V |
| | | | | | OFF (not pressed) |  <p style="text-align: center;">1.0V</p> |
| 89 (R) | Ground | Front door LH re- quest switch | Input | Front door LH re- quest switch | ON (pressed) | 0V |
| | | | | | OFF (not pressed) |  <p style="text-align: center;">1.0V</p> |
| 90 (Y) | Ground | Blower fan motor re- lay control | Output | Ignition switch | OFF or ACC | 0V |
| | | | | | ON | Battery voltage |
| 91 (L/R) | Ground | Remote keyless entry receiver power sup- ply | Output | Ignition switch OFF | | Battery voltage |
| 94 (G/Y) | Ground | Steering wheel lock unit power supply | Output | Ignition switch | OFF or ACC | Battery voltage |
| | | | | | ON | 0V |

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >
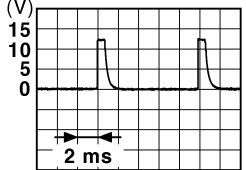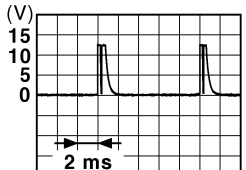
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|------------------------|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 95 (R/W) | Ground | Combination switch INPUT 1 | Input | All switch OFF |  1.4V |
| | | | | Turn signal switch LH |  1.3V |
| | | | | Turn signal switch RH |  1.3V |
| | | | | Front wiper switch LO |  1.3V |
| | | | | Front washer switch ON |  1.3V |





A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]




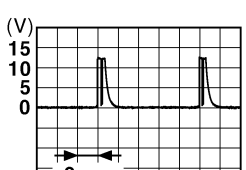

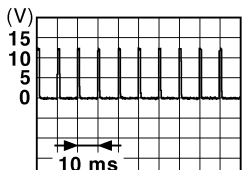
< ECU DIAGNOSIS >
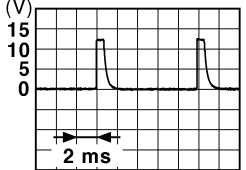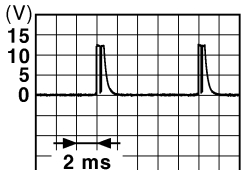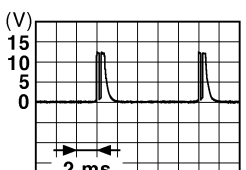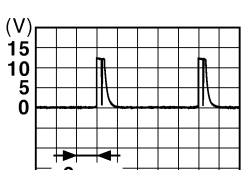
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|---|--|
| (+) | (-) | Signal name | Input/ Output | | |
| 96 (P/B) | Ground | Combination switch INPUT 4 | Input | Combination switch | All switch OFF (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0041GB</p> <p style="margin: 0;">1.4V</p> </div> |
| | | | | Lighting switch AUTO (Wiper intermittent dial 4) | <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0038GB</p> <p style="margin: 0;">1.3V</p> </div> |
| | | | | Lighting switch 1ST (Wiper intermittent dial 4) | <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0036GB</p> <p style="margin: 0;">1.3V</p> </div> |
| | | | | Any of the conditions below with all switch OFF | <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0039GB</p> <p style="margin: 0;">1.3V</p> </div> |

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >
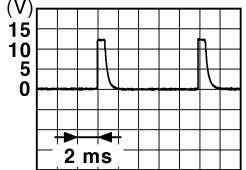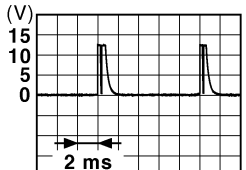
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|--|-------------------------------|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 97 (R/B) | Ground | Combination switch INPUT 2 | Input | Combination switch (Wiper intermittent dial 4) | All switch OFF |  1.4V |
| | | | | | Lighting switch flash-to-pass |  1.3V |
| | | | | | Lighting switch 2ND |  1.3V |
| | | | | | Front wiper switch INT |  1.3V |
| | | | | | Front wiper switch HI |  1.3V |
| | | | | | Pressed | 0 V |
| 98 (G/O) | Ground | Hazard switch | Input | Hazard switch | Not pressed |  1.1V |




A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]
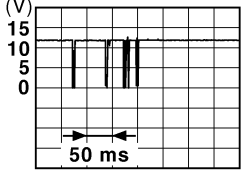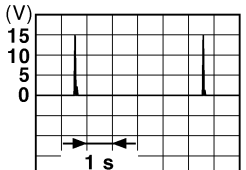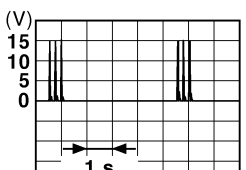
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--|------------------|--------------------------------------|--|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 99 (L/Y) | Ground | Electronic steering column lock unit com- munication | Input/ Output | Electronic steer- ing column lock | LOCK status | Battery voltage |
| | | | | | LOCK or UNLOCK |  <p style="text-align: right; font-size: small;">JMKIA0066GB</p> |
| | | | | | For 15 seconds after UN- LOCK | Battery voltage |
| | | | | | 15 seconds or later after UNLOCK | 0V |
| 103 (V) | Ground | Trunk lid opening. | Output | Trunk lid | Open (trunk lid opener ac- tuator is activated) | Battery voltage |
| | | | | | Close (trunk lid opener ac- tuator is not activated) | 0V |
| 110 (V/W) | Ground | Trunk room lamp | Output | Trunk room lamp | ON | 0V |
| | | | | | OFF | Battery voltage |
| 114 (B) | Ground | Trunk room antenna 1 (-) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | | When Intelligent Key is not in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|------------------------------|------------------|--|--------------------|
| (+) | (-) | Signal name | Input/ Output | | |
| 115 (W) | Ground | Trunk room antenna 1 (+) | Output | Ignition switch OFF | <p>JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compart- ment | <p>JMKIA0063GB</p> |
| 118 (L/O) | Ground | Rear bumper anten- na (-) | Output | When the trunk lid request switch is operated with ignition switch OFF | <p>JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p>JMKIA0063GB</p> |
| 119 (BR/ W) | Ground | Rear bumper anten- na (+) | Output | When the trunk lid request switch is operated with ignition switch OFF | <p>JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p>JMKIA0063GB</p> |




A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

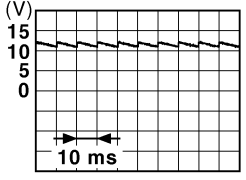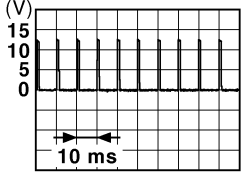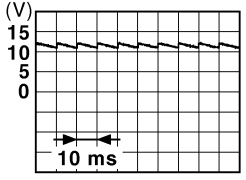
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--------------------------------------|------------------|--|--|---|
| | | Signal name | Input/ Output | | | |
| (+) | (-) | | | | | |
| 127 (BR/ W) | Ground | Ignition relay (IPDM E/R) control | Output | Ignition switch | OFF or ACC | Battery voltage |
| | | | | | ON | 0V |
| 130 (W) | Ground | Trunk room lamp switch | Input | Trunk room lamp switch | OFF (trunk is closed) |  <p style="text-align: right; margin-right: 50px;">11.8V</p> |
| | | | | | ON (trunk is open) | 0V |
| 132 (R) | Ground | Starter motor relay control | Output | Ignition switch OFF (M/T vehi- cle) | When the clutch pedal is depressed | Battery voltage |
| | | | | | When the clutch pedal is not depressed | 0V |
| | | | | Ignition switch ON (other than M/ T vehicle) | When selector lever is in P or N position and the brake is depressed | Battery voltage |
| | | | | | When selector lever is in P or N position and the brake is not depressed | 0V |
| 141 (BR) | Ground | Trunk request switch | Input | Trunk request switch | ON (pressed) | 0V |
| | | | | | OFF (not pressed) |  <p style="text-align: right; margin-right: 50px;">1.0V</p> |
| 144 (GR) | Ground | Request switch buzz- er | Output | Request switch buzzer | Sounding | 0V |
| | | | | | Not sounding | Battery voltage |
| 147 (L/R) | Ground | Trunk lid opener switch | Input | Trunk lid opener switch | Pressed | 0V |
| | | | | | Not pressed | Battery voltage |
| 148 (R/W) | Ground | Rear door RH switch | Input | Rear door RH switch | OFF (when rear door RH closes) |  <p style="text-align: right; margin-right: 50px;">11.8V</p> |
| | | | | | ON (when rear door RH opens) | 0V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|---------------------|------------------|------------------------------|--------------------------------|
| (+) | (-) | Signal name | Input/ Output | | |
| 149 (R/B) | Ground | Rear door LH switch | Input | Rear door LH switch | OFF (when rear door LH closes) |
| | | | | ON (when rear door LH opens) | 0V |

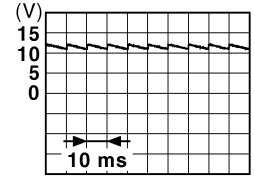

JPMIA0011GB

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)


[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

Wiring Diagram

INFOID:000000004392499

BCM (BODY CONTROL MODULE)

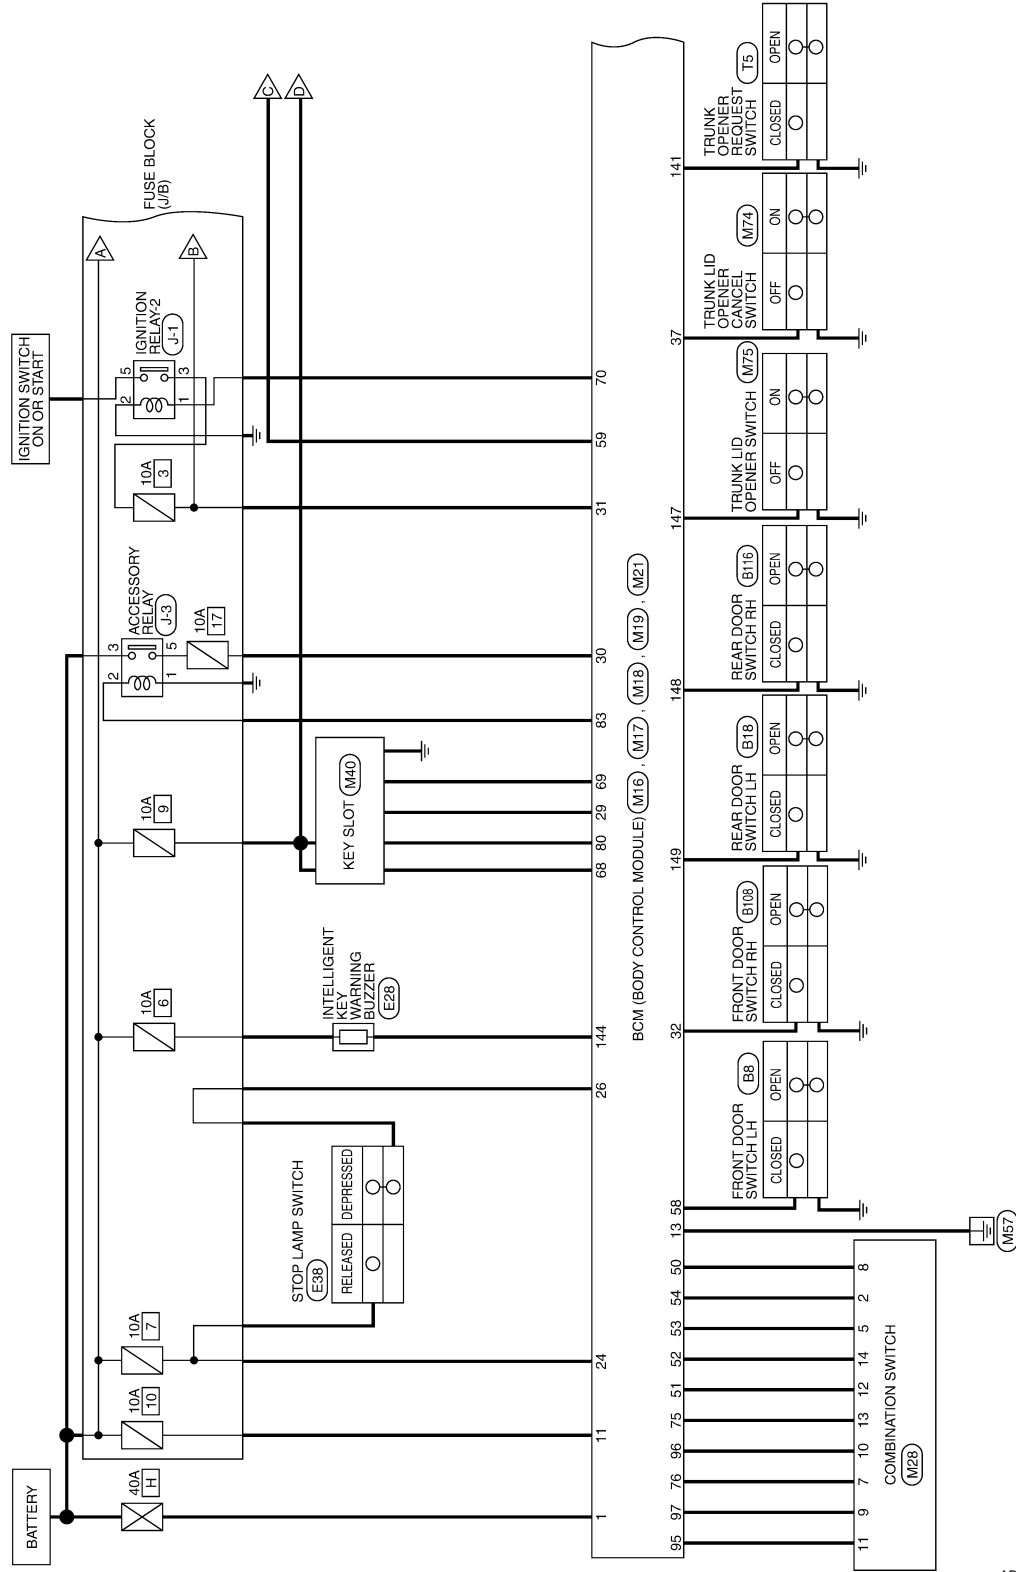


ABMWA0077GI

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

--- : DATA LINE

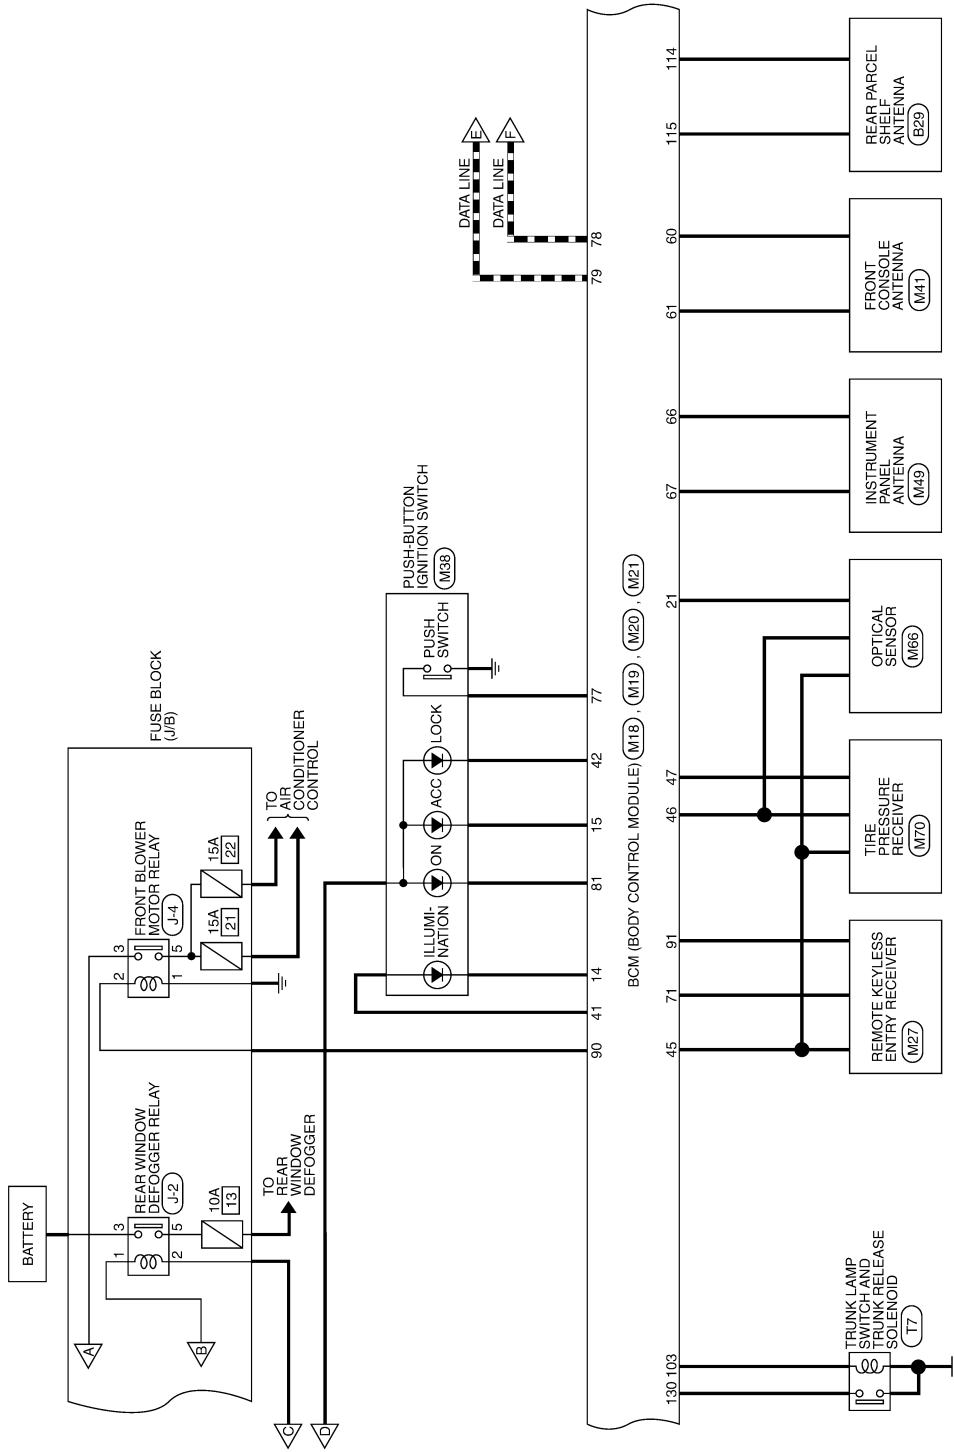

ABMWA0078GI


A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

■ : DATA LINE
 <AD> : WITH AUTOMATIC DRIVE POSITIONER
 <EN> : WITHOUT NAVI
 <NV> : WITH NAVI

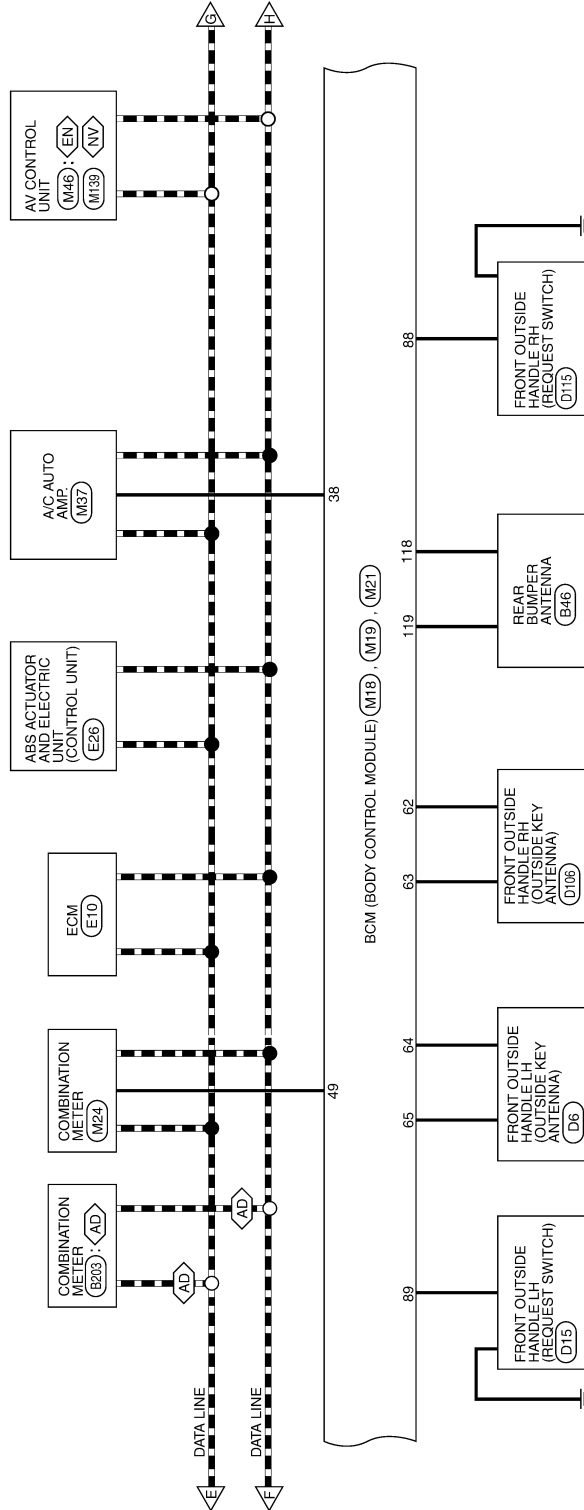


ABMWA0079GI

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

--- : DATA LINE

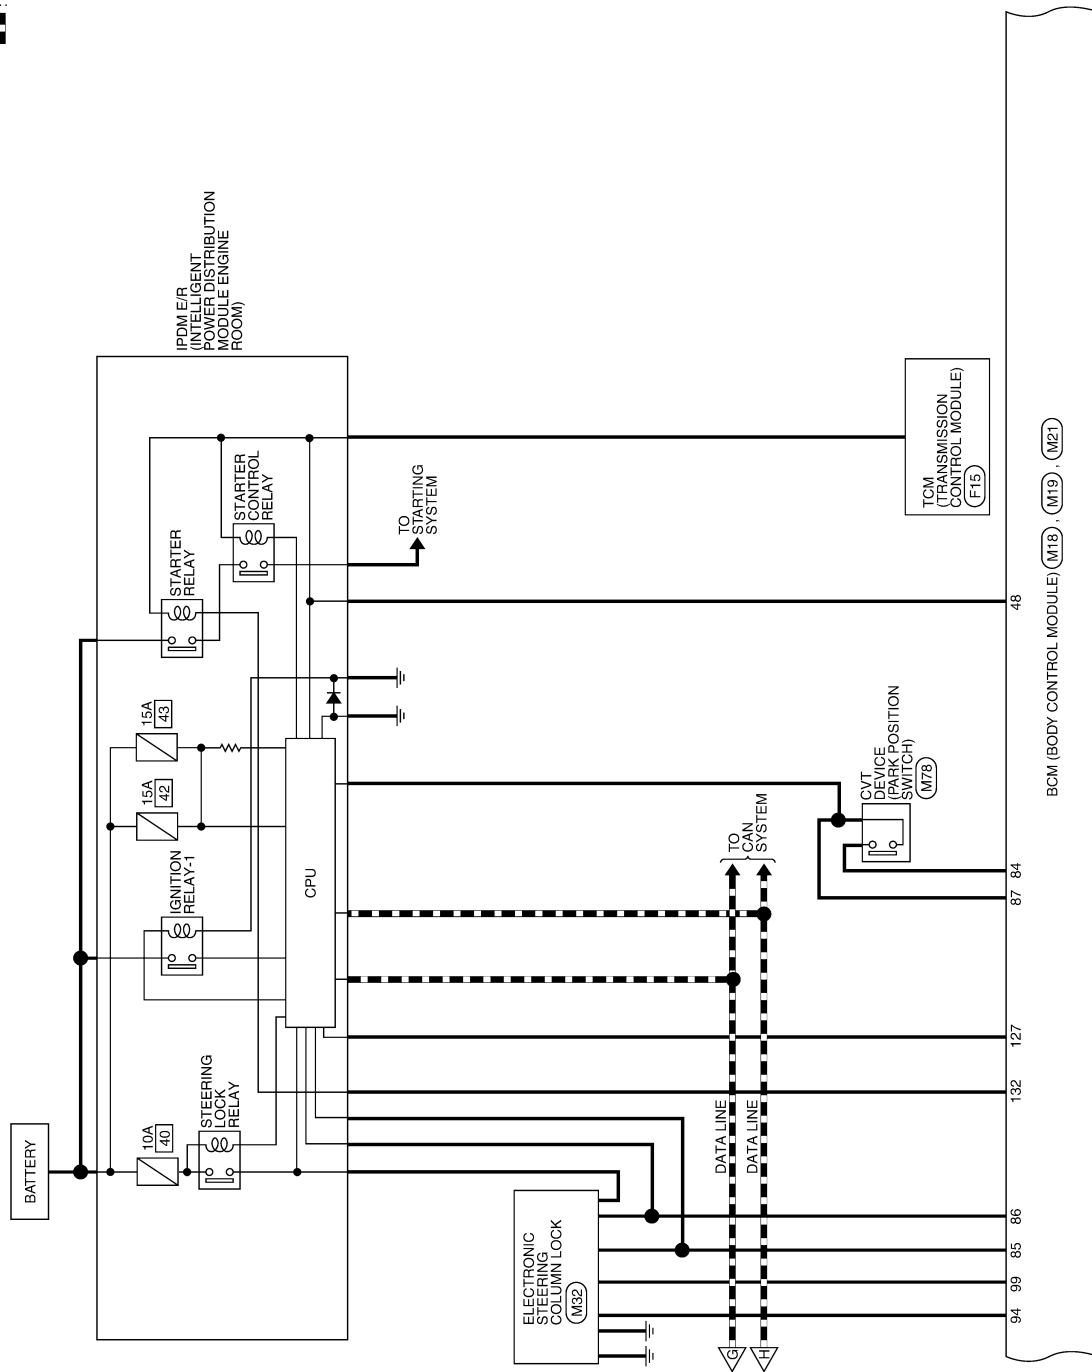

ABMWA0080GI


A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

- $\langle A2 \rangle$: WITH LEFT AND RIGHT FRONT POWER WINDOW ANTI-PINCH SYSTEM
- $\langle A3 \rangle$: WITH FRONT AND REAR POWER WINDOW ANTI-PINCH SYSTEM
- $\langle DP \rangle$: WITH DUAL PANEL SUNROOF
- $\langle DW \rangle$: WITHOUT DUAL PANEL SUNROOF

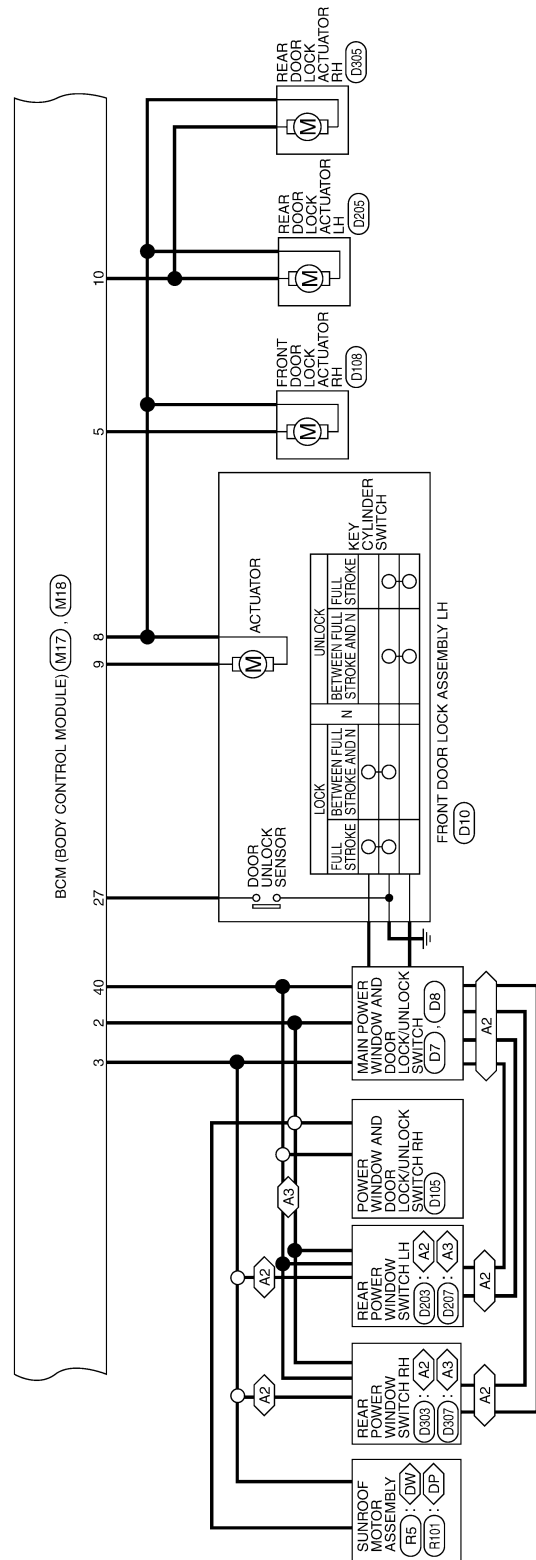


ABMWA0081GI

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

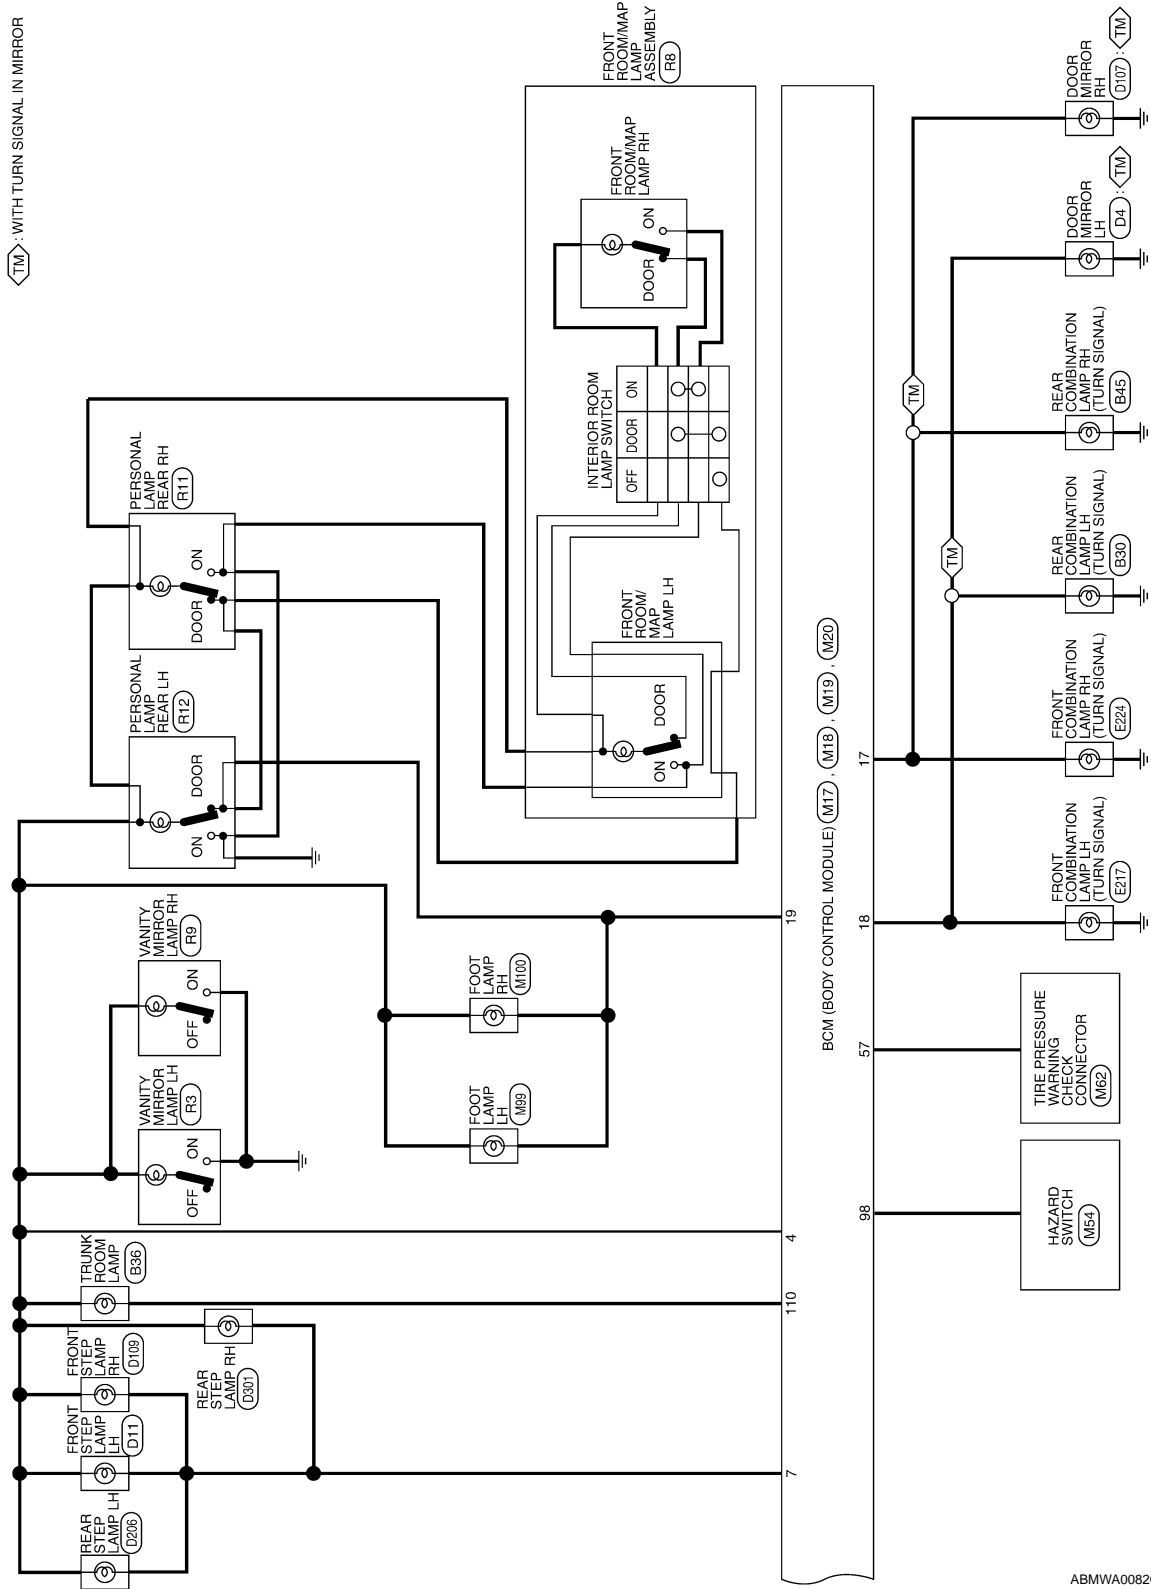

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >


BCM (BODY CONTROL MODULE) CONNECTORS

| | |
|-----------------|---------------------------|
| Connector No. | M16 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | BLACK |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------------|
| 1 | W/B | BAT POWER F/L |
| 2 | R/Y | P/W POWER SUPPLY PERM |
| 3 | L/W | P/W POWER SUPPLY IGN |


| | |
|-----------------|---------------------------|
| Connector No. | M17 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|----------------------------|
| 4 | P/W | R/L POWER SUPPLY |
| 5 | G | DOOR UNLOCK OUTPUT AS |
| 6 | - | - |
| 7 | R/W | STEP LAMP CONT |
| 8 | V | DOOR UNLOCK OUTPUT ALL |
| 9 | L | DOOR UNLOCK OUTPUT (DR/FL) |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|----------------------------|
| 10 | G | DOOR UNLOCK OUTPUT (RR/RL) |
| 11 | Y/R | BAT BCM FUSE |
| 12 | - | - |
| 13 | B | GND1 |
| 14 | GR/W | LOW SIDE PUSH LED |
| 15 | Y/L | ACC LED |
| 16 | - | - |
| 17 | G/B | FR FLASHER |
| 18 | G/Y | FL FLASHER |
| 19 | Y | ROOM LAMP CONT |

| | |
|-----------------|---------------------------|
| Connector No. | M18 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | GREEN |

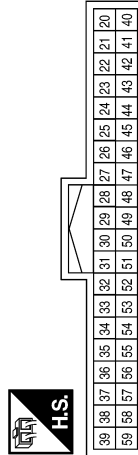

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------------|
| 20 | - | - |
| 21 | P/B | A/L SIGNAL TYPE 1 |
| 22 | - | - |
| 23 | - | - |
| 24 | R/W | BRAKE SW1 |
| 25 | - | - |
| 26 | O/L | BRAKE SW2 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|---------------------|
| 27 | O | DOOR LOCK STATUS DR |
| 28 | - | - |
| 29 | Y | FOB IN SW 1 |
| 30 | V/Y | ACC F/B |
| 31 | G | IGN F/B |
| 32 | R/B | AS DOOR SW 1 |
| 33 | - | - |
| 34 | - | - |
| 35 | - | - |
| 36 | - | - |
| 37 | O | TRUNK CANCEL SW |
| 38 | GR/W | REAR DEFOGGER SW |
| 39 | - | - |
| 40 | Y/G | PW K-LINE |
| 41 | W | PUSH LED |
| 42 | R | S/L LOCK LED |
| 43 | - | - |
| 44 | - | - |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------------------------|
| 45 | P | GND RF2 A/L |
| 46 | V/W | A/L POWER SUPPLY 5V |
| 47 | G/O | RF2 TUNER SIGNAL |
| 48 | R/G | SHIFT N/P/NEUTRAL SW |
| 49 | L/O | IMMO_LED (SECURITY INDICATOR) |
| 50 | LG/B | COMBI SW OUT 5 |
| 51 | L/W | COMBI SW OUT 1 |
| 52 | G/B | COMBI SW OUT 2 |
| 53 | LG/R | COMBI SW OUT 3 |
| 53 | G/Y | COMBI SW OUT 4 |
| 54 | - | - |
| 55 | - | - |
| 56 | W | TPMS MODE |
| 58 | SB | DR DOOR SW |
| 59 | G/R | REAR DEFOGGER |

ABMIA0177GB

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

| | |
|-----------------|---------------------------|
| Connector No. | M19 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | BLACK |



| | | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 79 | 78 | 77 | 76 | 75 | 74 | 73 | 72 | 71 | 70 | 69 | 68 | 67 | 66 | 65 | 64 | 63 | 62 | 61 | 60 |
| 59 | 58 | 57 | 56 | 55 | 54 | 53 | 52 | 51 | 50 | 49 | 48 | 47 | 46 | 45 | 44 | 43 | 42 | 41 | 40 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|---------------|
| 60 | B/R | ROOM ANT 2 B |
| 61 | W/R | ROOM ANT 2 A |
| 62 | V | AS DOOR ANT B |
| 63 | P | AS DOOR ANT A |
| 64 | V | DR DOOR ANT B |
| 65 | P | DR DOOR ANT A |
| 66 | R | ROOM ANT 1 B |



| | | | | | | |
|-----|-----|-----|-----|-----|-----|-----|
| 100 | 101 | 102 | 103 | 104 | | |
| 105 | 106 | 107 | 108 | 109 | 110 | 111 |

| | |
|-----------------|---------------------------|
| Connector No. | M20 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|----------------|
| 100 | - | - |
| 101 | - | - |
| 102 | - | - |
| 103 | V | CDL BACK TRUNK |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------------|
| 67 | G | ROOM ANT 1 A |
| 68 | G/O | FOB READER CLOCK |
| 69 | O | FOB READER DATA |
| 70 | R/B | IGN REL OUTPUT 2 |
| 71 | L/O | RF1 TUNER SIGNAL |
| 72 | - | - |
| 73 | - | - |
| 74 | - | - |
| 75 | R/Y | COMBI SW IN 5 |
| 76 | R/G | COMBI SW IN 3 |
| 77 | BR | ENG START SW |
| 78 | P | CAN-L |
| 79 | L | CAN-H |
| 80 | R/L | FOB SLOT ILLUMINATION |
| 81 | Y/L | IGN ON LED |
| 82 | - | - |
| 83 | L | ACC CONT |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|------------------------|
| 84 | Y/R | AT DEVICE OUT |
| 85 | L/O | S/L CONDITION 1 |
| 86 | G/R | S/L CONDITION 2 |
| 87 | G/B | SHIFT P/ASCD CANCEL SW |
| 88 | R | AS REQUEST SW |
| 89 | R | DR REQUEST SW |
| 90 | Y | BLOWER FAN RELAY |
| 91 | L/R | RF POWER SUPPLY 12V |
| 92 | - | - |
| 93 | - | - |
| 94 | G/Y | S/L POWER SUPPLY 12V |
| 95 | R/W | COMBI SW IN 1 |
| 96 | P/B | COMBI SW IN 4 |
| 97 | R/B | COMBI SW IN 2 |
| 98 | G/O | HAZARD SW |
| 99 | L/Y | S/L K-LINE |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------|
| 104 | - | - |
| 105 | - | - |
| 106 | - | - |
| 107 | - | - |
| 108 | - | - |
| 109 | - | - |
| 110 | V/W | TRUNK LAMP CONT |
| 111 | - | - |

ABMIA0178GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)


[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------------|
| 136 | - | - |
| 137 | - | - |
| 138 | - | - |
| 139 | - | - |
| 140 | - | - |
| 141 | BR | TRUNK REQUEST SW |
| 142 | - | - |
| 143 | - | - |
| 144 | GR | BUZZER |
| 145 | - | - |
| 146 | - | - |
| 147 | L/R | BACK TRUNK OPENER |
| 148 | R/W | RR DOOR SW |
| 149 | R/B | RL DOOR SW |
| 150 | - | - |
| 151 | - | - |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|------------------|
| 119 | BR/W | BACK DOOR ANT A |
| 120 | - | - |
| 121 | - | - |
| 122 | - | - |
| 123 | - | - |
| 124 | - | - |
| 125 | - | - |
| 126 | - | - |
| 127 | BR/W | IGN RELAY OUTPUT |
| 128 | - | - |
| 129 | - | - |
| 130 | W | TRUNK SW |
| 131 | - | - |
| 132 | R | ST RELAY OUTPUT |
| 133 | - | - |
| 134 | - | - |
| 135 | - | - |

| | |
|-----------------|---------------------------|
| Connector No. | M21 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | GRAY |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------|
| 112 | - | - |
| 113 | - | - |
| 114 | B | TRUNK ANT 1 B |
| 115 | W | TRUNK ANT 1 A |
| 116 | - | - |
| 117 | - | - |
| 118 | L/O | BACK DOOR ANT B |

ABMIA0179GB

INFOID:000000004392500

Fail Safe

| Display contents of CONSULT | Fail-safe | Cancellation |
|-----------------------------|-------------------------|--------------|
| B2013: ID DISCORD BCM-S/L | Inhibit engine cranking | Erase DTC |
| B2014: CHAIN OF S/L-BCM | Inhibit engine cranking | Erase DTC |
| B2190: NATS ANTENNA AMP | Inhibit engine cranking | Erase DTC |

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

| Display contents of CONSULT | Fail-safe | Cancellation | |
|-----------------------------|--|--|-----------------------|
| B2191: DIFFERENCE OF KEY | Inhibit engine cranking | Erase DTC | A |
| B2192: ID DISCORD BCM-ECM | Inhibit engine cranking | Erase DTC | |
| B2193: CHAIN OF BCM-ECM | Inhibit engine cranking | Erase DTC | B |
| B2195: ANTI-SCANNING | Inhibit engine cranking | Erase DTC | |
| B2557: VEHICLE SPEED | Inhibit electronic steering column lock | When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms | C |
| B2560: STARTER CONT RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal | D |
| B2562: LO VOLTAGE | <ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit electronic steering column lock | 100 ms after the power supply voltage increases to more than 8.8 V | E |
| B2601: SHIFT POSITION | Inhibit electronic steering column lock | 500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN) | F |
| B2602: SHIFT POSITION | Inhibit electronic steering column lock | 5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h or more | G |
| B2603: SHIFT POSI STATUS | Inhibit electronic steering column lock | 500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V) | H |
| B2604: PNP SW | Inhibit electronic steering column lock | 500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF | I J RF |
| B2605: PNP SW | Inhibit electronic steering column lock | 500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position <ul style="list-style-type: none"> - Power position: IGN - Selector lever P/N position signal: Except P and N positions (0 V) - Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON | K L M N O |
| B2606: S/L RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Electronic steering column lock relay signal (Request signal) • Electronic steering column lock relay signal (Condition signal) | P |
| B2607: S/L RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Electronic steering column lock relay signal (Request signal) • Electronic steering column lock relay signal (Condition signal) | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| Display contents of CONSULT | Fail-safe | Cancellation |
|-----------------------------|--|---|
| B2608: STARTER RELAY | Inhibit engine cranking | 500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN) |
| B2609: S/L STATUS | <ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit electronic steering column lock | When the following electronic steering column lock conditions agree <ul style="list-style-type: none"> • BCM electronic steering column lock control status • Electronic steering column lock condition No. 1 signal status • Electronic steering column lock condition No. 2 signal status |
| B260A: IGNITION RELAY | Inhibit engine cranking | 500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal) |
| B260F: ENG STATE SIG LOST | Maintains the power supply position attained at the time of DTC detection | When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN) |
| B2612: S/L STATUS | <ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit electronic steering column lock | When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Electronic steering column lock unit status signal (CAN) is received normally • The BCM electronic steering column lock control status matches the electronic steering column lock status recognized by the electronic steering column lock unit status signal (CAN from IPDM E/R) |
| B2617: STARTER RELAY CIRC | Inhibit engine cranking | 1 second after the starter motor relay control inside BCM becomes normal |
| B2618: BCM | Inhibit engine cranking | 1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal |
| B2619: BCM | Inhibit engine cranking | 1 second after the electronic steering column lock unit power supply output control inside BCM becomes normal |
| B26E1: ENG STATE NO RECIV | Inhibit engine cranking | When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN) |

DTC Inspection Priority Chart

INFOID:000000004392501

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | DTC |
|----------|---|
| 1 | <ul style="list-style-type: none"> • B2562: LO VOLTAGE |
| 2 | <ul style="list-style-type: none"> • U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN) |
| 3 | <ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| Priority | DTC | | |
|----------|--|--|--|
| 4 | <ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2612: S/L STATUS • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B26E1: ENG STATE NO RECIV • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG | <p style="text-align: center;">A</p> <p style="text-align: center;">B</p> <p style="text-align: center;">C</p> <p style="text-align: center;">D</p> <p style="text-align: center;">E</p> <p style="text-align: center;">F</p> <p style="text-align: center;">G</p> <p style="text-align: center;">H</p> <p style="text-align: center;">I</p> | |
| | <ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1712: [CHECKSUM ERR] FL • C1713: [CHECKSUM ERR] FR • C1714: [CHECKSUM ERR] RR • C1715: [CHECKSUM ERR] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1720: [CODE ERR] FL • C1721: [CODE ERR] FR • C1722: [CODE ERR] RR • C1723: [CODE ERR] RL • C1724: [BATT VOLT LOW] FL • C1725: [BATT VOLT LOW] FR • C1726: [BATT VOLT LOW] RR • C1727: [BATT VOLT LOW] RL • C1734: CONTROL UNIT | <p style="text-align: center;">J</p> <p style="text-align: center;">RF</p> <p style="text-align: center;">L</p> <p style="text-align: center;">M</p> <p style="text-align: center;">N</p> <p style="text-align: center;">O</p> <p style="text-align: center;">P</p> | |
| | 5 | | |
| | 6 | <ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA | |

DTC Index

INFOID:000000004392502

NOTE:

BCM (BODY CONTROL MODULE)

[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

Details of time display

- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

| CONSULT display | Fail-safe | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Reference page |
|--|-----------|---------------------------------|---------------------------------------|------------------------|
| No DTC is detected. further testing may be required. | — | — | — | — |
| U1000: CAN COMM CIRCUIT | — | — | — | BCS-37 |
| U1010: CONTROL UNIT (CAN) | — | — | — | BCS-38 |
| U0415: VEHICLE SPEED SIG | — | — | — | BCS-39 |
| B2013: ID DISCORD BCM-S/L | × | — | — | SEC-30 |
| B2014: CHAIN OF S/L-BCM | × | — | — | SEC-31 |
| B2190: NATS ANTENNA AMP | × | — | — | SEC-34 |
| B2191: DIFFERENCE OF KEY | × | — | — | SEC-37 |
| B2192: ID DISCORD BCM-ECM | × | — | — | SEC-38 |
| B2193: CHAIN OF BCM-ECM | × | — | — | SEC-39 |
| B2553: IGNITION RELAY | — | — | — | PCS-54 |
| B2555: STOP LAMP | — | — | — | SEC-40 |
| B2556: PUSH-BTN IGN SW | — | × | — | SEC-42 |
| B2557: VEHICLE SPEED | × | × | — | SEC-44 |
| B2560: STARTER CONT RELAY | × | × | — | SEC-45 |
| B2562: LOW VOLTAGE | — | — | — | BCS-40 |
| B2601: SHIFT POSITION | × | × | — | SEC-46 |
| B2602: SHIFT POSITION | × | × | — | SEC-49 |
| B2603: SHIFT POSI STATUS | × | × | — | SEC-51 |
| B2604: PNP SW | × | × | — | SEC-54 |
| B2605: PNP SW | × | × | — | SEC-56 |
| B2606: S/L RELAY | × | × | — | SEC-58 |
| B2607: S/L RELAY | × | × | — | SEC-59 |
| B2608: STARTER RELAY | × | × | — | SEC-61 |
| B2609: S/L STATUS | × | × | — | SEC-63 |
| B260A: IGNITION RELAY | × | × | — | PCS-56 |
| B260B: STEERING LOCK UNIT | — | × | — | SEC-67 |
| B260C: STEERING LOCK UNIT | — | × | — | SEC-68 |
| B260D: STEERING LOCK UNIT | — | × | — | SEC-69 |
| B260F: ENG STATE SIG LOST | × | × | — | SEC-70 |
| B2612: S/L STATUS | × | × | — | SEC-72 |
| B2614: ACC RELAY CIRC | — | × | — | PCS-58 |
| B2615: BLOWER RELAY CIRC | — | × | — | PCS-61 |
| B2616: IGN RELAY CIRC | — | × | — | PCS-64 |
| B2617: STARTER RELAY CIRC | × | × | — | PCS-64 |
| B2618: BCM | × | × | — | PCS-67 |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| CONSULT display | Fail-safe | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Reference page |
|---------------------------|-----------|------------------------------------|---|------------------------|
| B2619: BCM | × | × | — | SEC-78 |
| B261A: PUSH-BTN IGN SW | — | × | — | SEC-79 |
| B2621: INSIDE ANTENNA | — | — | — | DLK-57 |
| B2622: INSIDE ANTENNA | — | — | — | DLK-60 |
| B2623: INSIDE ANTENNA | — | — | — | DLK-63 |
| B26E1: ENG STATE NO RES | × | × | — | SEC-71 |
| C1704: LOW PRESSURE FL | — | — | × | WT-48 |
| C1705: LOW PRESSURE FR | — | — | × | WT-48 |
| C1706: LOW PRESSURE RR | — | — | × | WT-48 |
| C1707: LOW PRESSURE RL | — | — | × | WT-48 |
| C1708: [NO DATA] FL | — | — | × | WT-13 |
| C1709: [NO DATA] FR | — | — | × | WT-13 |
| C1710: [NO DATA] RR | — | — | × | WT-13 |
| C1711: [NO DATA] RL | — | — | × | WT-13 |
| C1712: [CHECKSUM ERR] FL | — | — | × | WT-15 |
| C1713: [CHECKSUM ERR] FR | — | — | × | WT-15 |
| C1714: [CHECKSUM ERR] RR | — | — | × | WT-15 |
| C1715: [CHECKSUM ERR] RL | — | — | × | WT-15 |
| C1716: [PRESSDATA ERR] FL | — | — | × | WT-17 |
| C1717: [PRESSDATA ERR] FR | — | — | × | WT-17 |
| C1718: [PRESSDATA ERR] RR | — | — | × | WT-17 |
| C1719: [PRESSDATA ERR] RL | — | — | × | WT-17 |
| C1720: [CODE ERR] FL | — | — | × | WT-15 |
| C1721: [CODE ERR] FR | — | — | × | WT-15 |
| C1722: [CODE ERR] RR | — | — | × | WT-15 |
| C1723: [CODE ERR] RL | — | — | × | WT-15 |
| C1724: [BATT VOLT LOW] FL | — | — | × | WT-15 |
| C1725: [BATT VOLT LOW] FR | — | — | × | WT-15 |
| C1726: [BATT VOLT LOW] RR | — | — | × | WT-15 |
| C1727: [BATT VOLT LOW] RL | — | — | × | WT-15 |
| C1729: VHCL SPEED SIG ERR | — | — | × | WT-18 |
| C1734: CONTROL UNIT | — | — | × | WT-19 |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

SUNROOF SYSTEM

< ECU DIAGNOSIS >


[WITH SINGLE PANEL SUNROOF]

SUNROOF SYSTEM

Reference Value

INFOID:000000003898671

TERMINAL LAYOUT

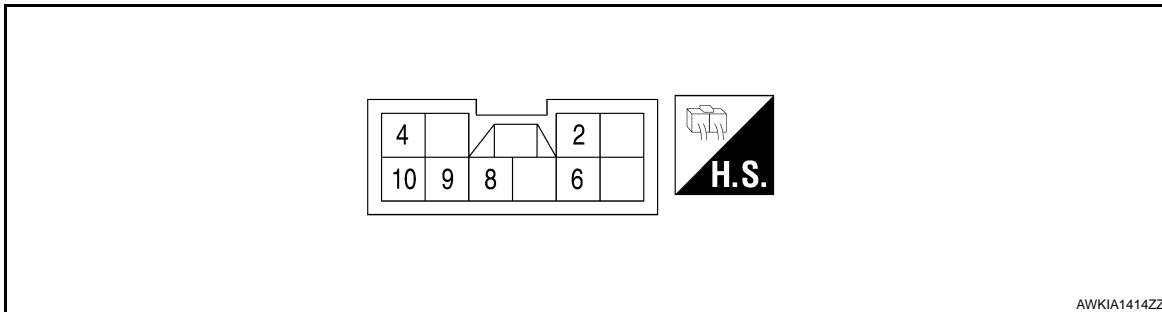

AWKIA1414ZZ

PHYSICAL VALUES

| Terminal No. (Wire color) | | Description | | Condition | Voltage (V) |
|------------------------------|--------|-------------------------------------|------------------|--|-----------------|
| + | - | Signal name | Input/ Output | | |
| 2 (LG) | Ground | Sunroof close switch (BIT 1) signal | Input | Sunroof switch in following position • TILT UP • SLIDE CLOSE | 0 |
| | | | | Other than above | Battery voltage |
| 4 (L/W) | Ground | RAP signal | Input | Ignition switch ON | Battery voltage |
| | | | | Within 45 seconds after ignition switch is turned to OFF. | Battery voltage |
| | | | | When driver side or passenger side door is opened during retained power operation. | 0 |
| 6 (Y) | Ground | Sunroof open switch (BIT 0) signal | Input | Sunroof switch in following position • TILT DOWN • SLIDE OPEN | 0 |
| | | | | Other than above | Battery voltage |
| 8 (B) | Ground | Ground | — | — | 0 |
| 9 (L/B) | Ground | Vehicle speed signal (2-pulse) | Input | Speedometer operated [When vehicle speed is approx. 40km/h (25MPH)] | |
| 10 (R/Y) | Ground | Sunroof power supply | Input | — | Battery voltage |

ELF1080D

SUNROOF SYSTEM


[WITH SINGLE PANEL SUNROOF]

< ECU DIAGNOSIS >

Wiring Diagram

INFOID:000000003898673

SINGLE PANEL SUNROOF

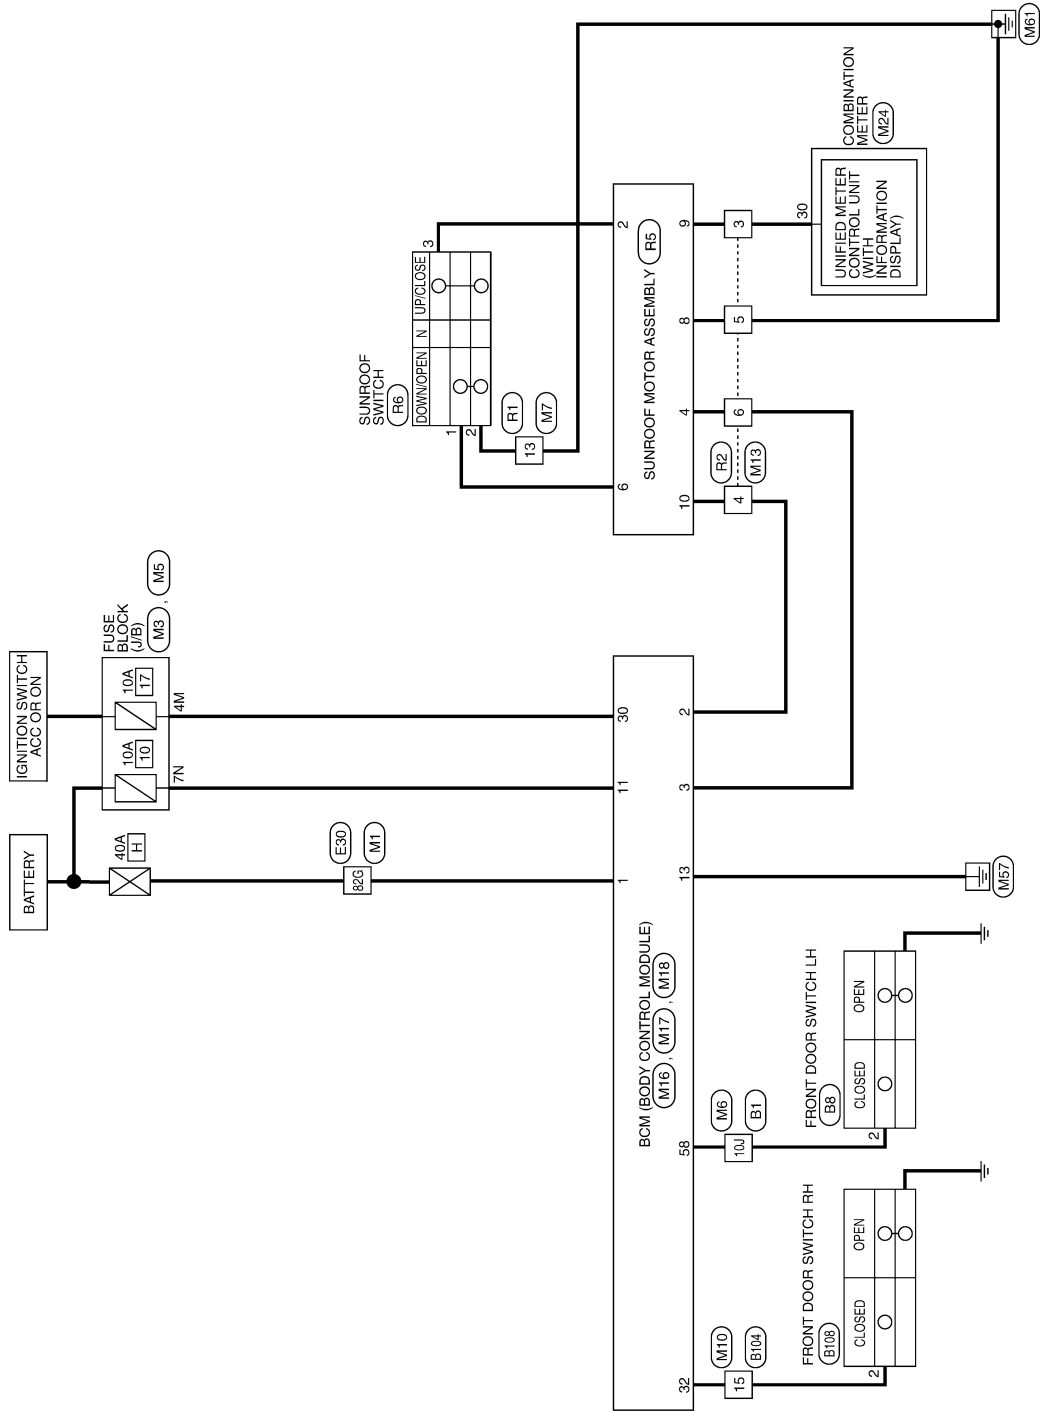


A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

ABKWA0129GE


SINGLE PANEL SUNROOF CONNECTORS

| | |
|-----------------|--------------|
| Connector No. | M1 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

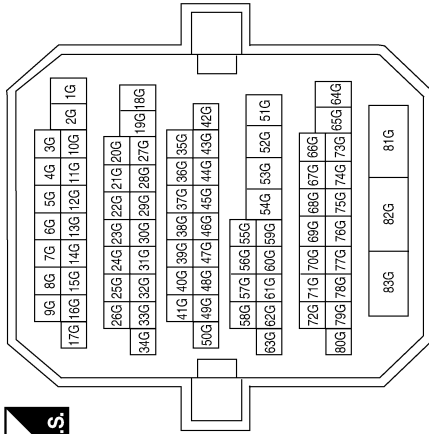

| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 82G | W/B | - |

| | |
|-----------------|------------------|
| Connector No. | M3 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Color | WHITE |



| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 7N | Y/R | - |

| | |
|-----------------|------------------|
| Connector No. | M5 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Color | WHITE |




| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 4M | V/Y | - |

SUNROOF SYSTEM

< ECU DIAGNOSIS >


[WITH SINGLE PANEL SUNROOF]

| | |
|-----------------|--------------|
| Connector No. | M6 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

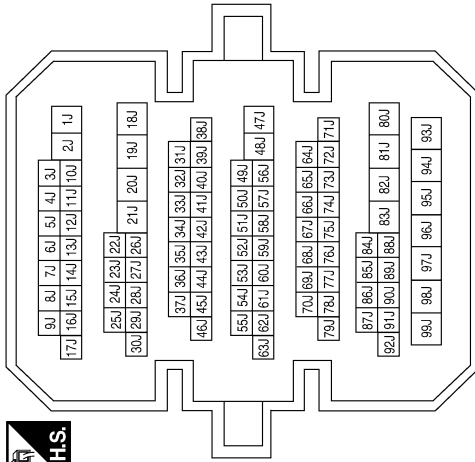


| | | | | | |
|--------------|-----|---------------|----|-------------|---|
| Terminal No. | 10J | Color of Wire | SB | Signal Name | - |
|--------------|-----|---------------|----|-------------|---|

| | |
|-----------------|--------------|
| Connector No. | M7 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |




| | | | | | |
|--------------|----|---------------|---|-------------|---|
| Terminal No. | 13 | Color of Wire | B | Signal Name | - |
|--------------|----|---------------|---|-------------|---|

| | |
|-----------------|--------------|
| Connector No. | M10 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| | |
|-----------------|--------------|
| Connector No. | M13 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| | | | | | |
|--------------|----|---------------|-----|-------------|---|
| Terminal No. | 15 | Color of Wire | R/B | Signal Name | - |
|--------------|----|---------------|-----|-------------|---|

| | |
|-----------------|---------------------------|
| Connector No. | M16 |
| Connector Name | ECM (BODY CONTROL MODULE) |
| Connector Color | BLACK |



| | | | | | |
|--------------|---|---------------|-----|-------------|-----------------------|
| Terminal No. | 1 | Color of Wire | W/B | Signal Name | BAT POWER F/L |
| Terminal No. | 2 | Color of Wire | R/Y | Signal Name | P/W POWER SUPPLY PERM |
| Terminal No. | 3 | Color of Wire | L/W | Signal Name | P/W POWER SUPPLY IGN |

A B C D E F G H I J L M N O P

RF


ABKIA0420GB

SUNROOF SYSTEM

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| | |
|-----------------|---------------------------|
| Connector No. | M17 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|--------------|
| 11 | Y/R | BAT BCM FUSE |
| 13 | B | GND1 |

| | |
|-----------------|---------------------------|
| Connector No. | M18 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | GREEN |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 30 | V/Y | ACC F/B |
| 32 | R/B | AS DOOR SW |
| 58 | SB | DR DOOR SW |

| | |
|-----------------|-------------------|
| Connector No. | M24 |
| Connector Name | COMBINATION METER |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 30 | L/B | 2P/R OUT |

| | |
|-----------------|--------------|
| Connector No. | E30 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

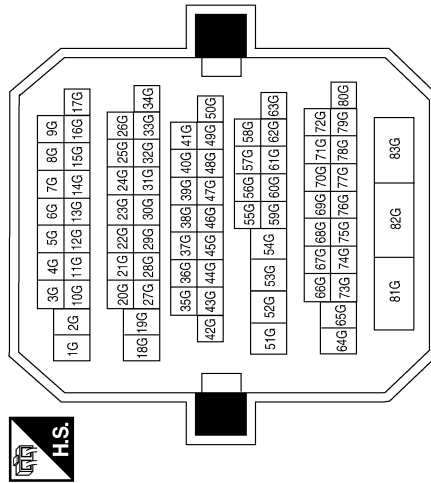

ABKIA0421GB

SUNROOF SYSTEM

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]


| | |
|-----------------|----------------------|
| Connector No. | B8 |
| Connector Name | FRONT DOOR SWITCH LH |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2 | SB | - |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10J | SB | - |

| | |
|-----------------|--------------|
| Connector No. | B1 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

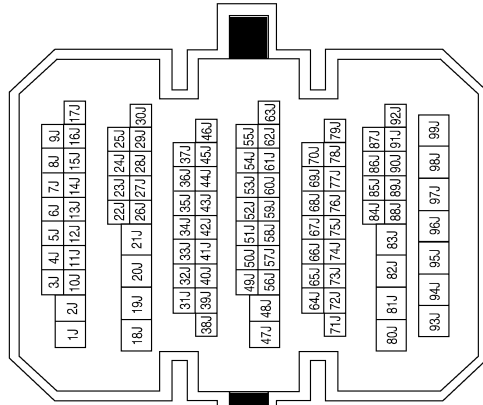

| | |
|-----------------|--------------|
| Connector No. | R1 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 13 | B | - |

| | |
|-----------------|----------------------|
| Connector No. | B108 |
| Connector Name | FRONT DOOR SWITCH RH |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2 | GR | - |

| | |
|-----------------|--------------|
| Connector No. | B104 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 15 | GR | - |

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

SUNROOF SYSTEM

< ECU DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

| | |
|-----------------|---|
| Connector No. | R6 |
| Connector Name | SUNROOF SWITCH (WITHOUT DUAL PANEL SUNROOF) |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | Y | DOWN OPEN |
| 2 | B | GND |
| 3 | LG | UP CLOSE |

| | |
|-----------------|---|
| Connector No. | R5 |
| Connector Name | SUNROOF MOTOR ASSEMBLY (WITHOUT DUAL PANEL SUNROOF) |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------------|
| 2 | LG | CLOSE/TILT-UP SW |
| 4 | L/W | + IGN |
| 6 | Y | OPEN/TILT-DOWN SW |
| 8 | B | GND |
| 9 | L/B | SPEED SENSOR (2P) |
| 10 | R/Y | +B |

| | |
|-----------------|--------------|
| Connector No. | R2 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3 | L/B | - |
| 4 | R/Y | - |
| 5 | B | - |
| 6 | L/W | - |

ABKIA0423GB

SUNROOF DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

SYMPTOM DIAGNOSIS

SUNROOF DOES NOT OPERATE PROPERLY

Diagnosis Procedure

INFOID:000000003898674

1. CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit.
Refer to [BCS-41, "Diagnosis Procedure"](#).

>> GO TO 2

2. CHECK SUNROOF MOTOR ASSEMBLY POWER SUPPLY AND GROUND CIRCUIT

Check sunroof motor assembly power supply and ground circuit.
Refer to [RF-14, "SUNROOF MOTOR ASSEMBLY : Component Function Check"](#).

>> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

AUTO OPERATION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

AUTO OPERATION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000003898675

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [RF-7, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

>> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

DOES NOT STOP FULLY-OPEN OR FULLY-CLOSED POSITION

< SYMPTOM DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

DOES NOT STOP FULLY-OPEN OR FULLY-CLOSED POSITION

Diagnosis Procedure

INFOID:000000003898676

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [RF-7, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

>> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

Diagnosis Procedure

INFOID:000000003898677

1. CHECK FRONT DOOR SWITCH

Check front door switch.

Refer to [DLK-68, "Component Function Check"](#).

Is the inspection result normal?

>> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION

< SYMPTOM DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION

Diagnosis Procedure

INFOID:000000003898678

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [RF-7, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

>> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

SQUEAK AND RATTLE TROUBLE DIAGNOSES


< SYMPTOM DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

SQUEAK AND RATTLE TROUBLE DIAGNOSES

Work Flow

INFOID:000000003898679

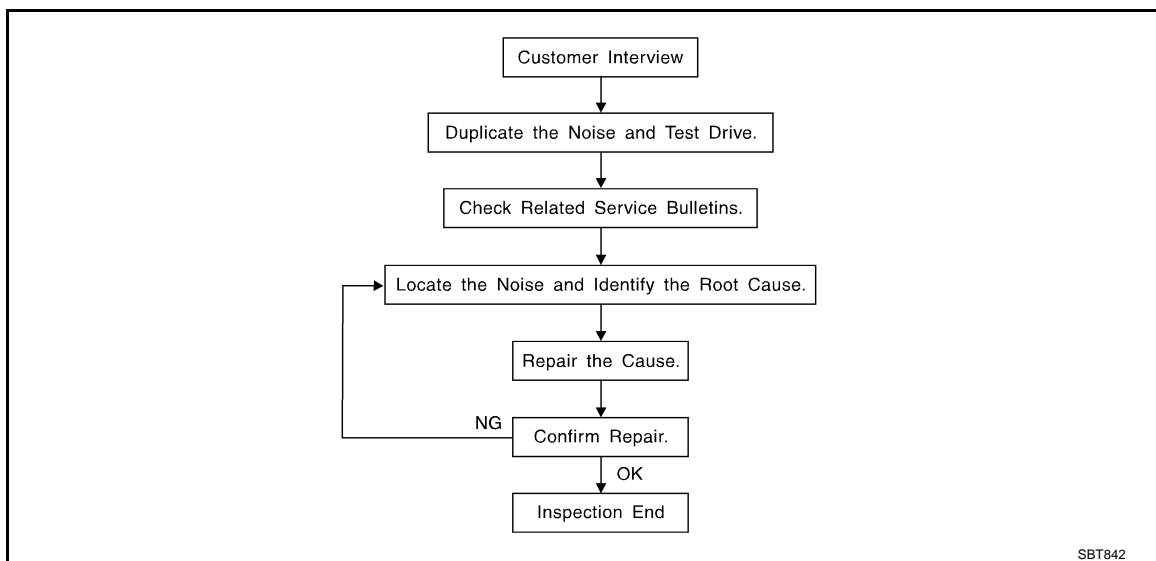

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [RF-76, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces=higher pitch noise/softer surfaces=lower pitch noises/edge to surface=chirping
- Creak—(Like walking on an old wooden floor)
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

[WITH SINGLE PANEL SUNROOF]

< SYMPTOM DIAGNOSIS >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
 - 2) Tap or push/pull around the area where the noise appears to be coming from.
 - 3) Rev the engine.
 - 4) Use a floor jack to recreate vehicle "twist".
 - 5) At idle, apply engine load (electrical load, half-clutch on M/T model, drive position on A/T model).
 - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
 - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear: J-39565, and mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - removing the components in the area that you suspect the noise is coming from.
Do not use too much force when removing clips and fasteners, otherwise clips and fastener can be broken or lost during the repair, resulting in the creation of new noise.
 - tapping or pushing/pulling the component that you suspect is causing the noise.
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
 - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
 - placing a piece of paper between components that you suspect are causing the noise.
 - looking for loose components and contact marks.
Refer to [RF-74. "Inspection Procedure"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - separate components by repositioning or loosening and retightening the component, if possible.
 - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A Nissan Squeak and Rattle Kit (J-43980) is available through your authorized Nissan Parts Department.

CAUTION:

Do not use excessive force as many components are constructed of plastic and may be damaged.

NOTE:

Always check with the Parts Department for the latest parts information.

The following materials are contained in the Nissan Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100 × 135 mm (3.94 × 5.31 in)/76884-71L01: 60 × 85 mm (2.36 × 3.35 in)/76884-71L02: 15 × 25 mm (0.59 × 0.98 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50 × 50 mm (1.97 × 1.97 in)/73982-

50Y00: 10 mm (0.39 in) thick, 50 × 50 mm (1.97 × 1.97 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30 × 50 mm (1.18 × 1.97 in)

FELT CLOTHTAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15 × 25 mm (0.59 × 0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll

The following materials, not found in the kit, can also be used to repair squeaks and rattles.

UHMW (TEFLON) TAPE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

[WITH SINGLE PANEL SUNROOF]

< SYMPTOM DIAGNOSIS >

Insulates where slight movement is present. Ideal for instrument panel applications.

SILICONE GREASE

Used in place of UHMW tape that will be visible or not fit. Will only last a few months.

SILICONE SPRAY

Use when grease cannot be applied.

DUCT TAPE

Use to eliminate movement.

CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Inspection Procedure

INFOID:000000003898680

Refer to Table of Contents for specific component removal and installation information.

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.

CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the Nissan Squeak and Rattle Kit (J-43980) to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid dumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

SQUEAK AND RATTLE TROUBLE DIAGNOSES

[WITH SINGLE PANEL SUNROOF]

< SYMPTOM DIAGNOSIS >

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sunvisor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

Diagnostic Worksheet

INFOID:00000003898681





Dear Customer:

We are concerned about your satisfaction with your vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your vehicle right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

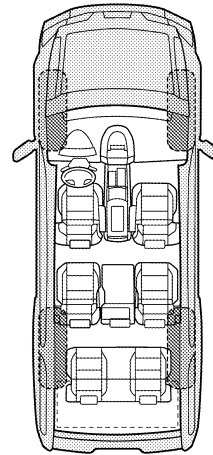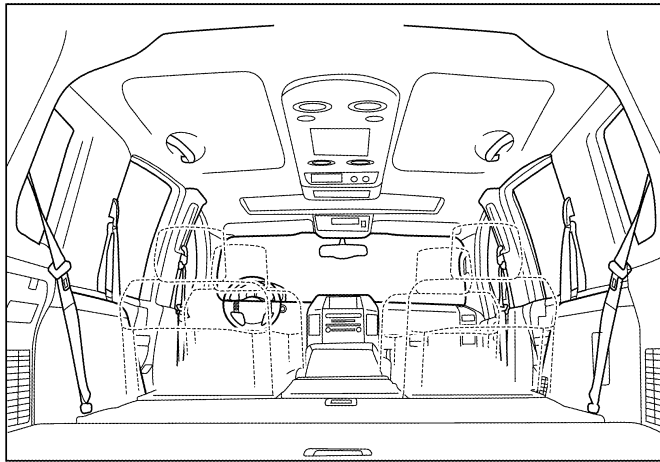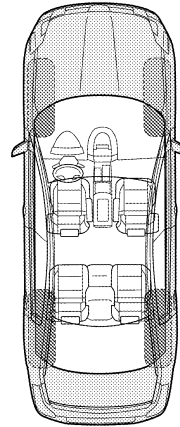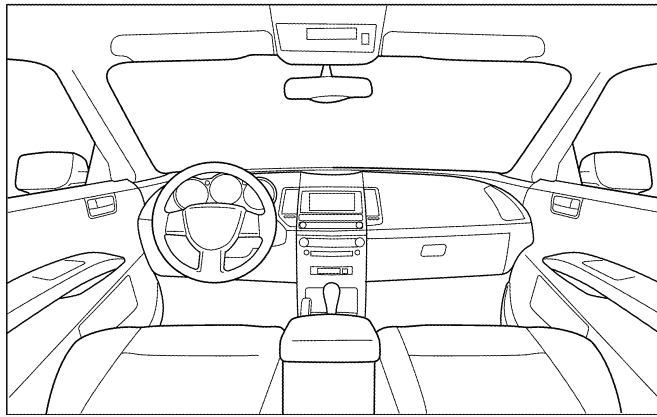

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

[WITH SINGLE PANEL SUNROOF]

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- | | |
|---|--|
| <input type="checkbox"/> Anytime | <input type="checkbox"/> After sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning | <input type="checkbox"/> When it is raining or wet |
| <input type="checkbox"/> Only when it is cold outside | <input type="checkbox"/> Dry or dusty conditions |
| <input type="checkbox"/> Only when it is hot outside | <input type="checkbox"/> Other: |

III. WHEN DRIVING:

- Through driveways
- Over rough roads
- Over speed bumps
- Only about ____ mph
- On acceleration
- Coming to a stop
- On turns: left, right or either (circle)
- With passengers or cargo
- Other: _____
- After driving ____ miles or ____ minutes

IV. WHAT TYPE OF NOISE

- Squeak (like tennis shoes on a clean floor)
- Creak (like walking on an old wooden floor)
- Rattle (like shaking a baby rattle)
- Knock (like a knock at the door)
- Tick (like a clock second hand)
- Thump (heavy muffled knock noise)
- Buzz (like a bumble bee)

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

| | YES | NO | Initials of person performing |
|--|--------------------------|--------------------------|-------------------------------|
| Vehicle test driven with customer | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Noise verified on test drive | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Noise source located and repaired | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Follow up test drive performed to confirm repair | <input type="checkbox"/> | <input type="checkbox"/> | _____ |

VIN: _____ Customer Name _____

W.O.# _____ Date: _____

This form must be attached to Work Order

LAI A0071E

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003898682

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions

INFOID:000000003898683

- After removing and installing any opening/closing parts, make sure to perform all adjustments for proper operation.
- Check the lubrication level, damage, and wear of each part. If necessary, grease or replace it.
- When removing or disassembling any part, be careful not to damage or deform it. Protect parts which may get in the way with cloth.
- When removing parts with a screw driver or other tool, protect parts by wrapping them with vinyl or tape.
- Keep removed parts protected with cloth.
- If a clip is deformed or damaged, replace it.
- If a non-reuseable part is removed, replace it with a new one.
- Tighten bolts and nuts firmly to the specified torque.
- After re-assembly has been completed, make sure each part functions correctly.
- Remove stains in the following manner:

| Water-Soluble stains | Oil stains |
|---|---|
| Dip a cloth in warm water, and squeeze tightly. After wiping the stain, wipe with a soft dry cloth. | Dissolve a synthetic detergent in warm water (density of 2 to 3% or less), dip the cloth, then clean off the stain with the cloth. Next, dip the cloth in fresh water, then squeeze tightly. Clean off detergent completely, then wipe entire area with a soft dry cloth. |
| Do not use any organic solvent, such as a thinner or benzine to remove stains | |

Precautions Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000004394020

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit. If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

PRECAUTIONS

[WITH SINGLE PANEL SUNROOF]

< PRECAUTION >

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.
NOTE:
Supply power using jumper cables if battery is discharged.
2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

PREPARATION

< PREPARATION >

[WITH SINGLE PANEL SUNROOF]

PREPARATION



PREPARATION

Special Service Tools

INFOID:000000003898684

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.



| Tool number (Kent-Moore No.) Tool name | Description |
|--|------------------------------|
| (J-39570) Chassis ear | Locating the noise |
| (J-43980) NISSAN Squeak and Rattle Kit | Repairing the cause of noise |

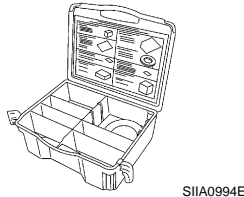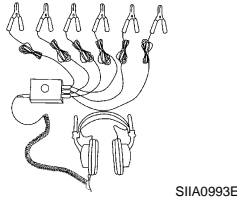

Commercial Service Tools

INFOID:000000003898685

| Tool name (Kent-Moore No.) | Description |
|-------------------------------|----------------------------------|
| Engine ear (J-39565) | Locating the noise |
| Power tools | Loosening bolts, nuts and screws |

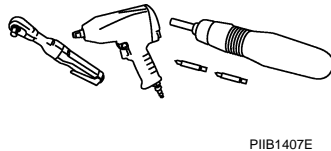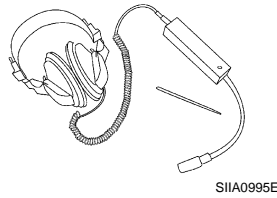

SUNROOF UNIT ASSEMBLY

< ON-VEHICLE REPAIR >

[WITH SINGLE PANEL SUNROOF]

ON-VEHICLE REPAIR


SUNROOF UNIT ASSEMBLY

Inspection


INFOID:000000003898686

WIND DEFLECTOR

1. Open glass lid assembly fully.
2. Visually check for proper installation, damaged/deteriorated components, or foreign objects within mechanism. Correct as required for smooth operation.
3. Check for grease at the wind deflector arm (1) and pivot areas. If necessary, apply a sufficient amount of grease for non-binding operation.
←:Vehicle front

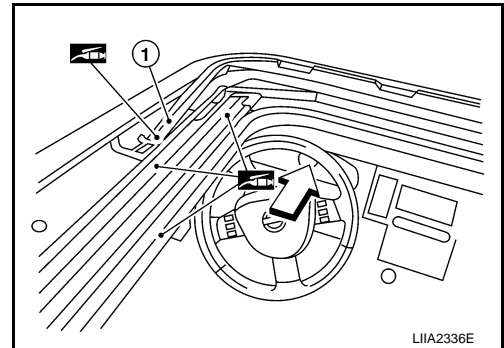

4. Check that the wind deflector (1) moves freely within the sunroof unit assembly while manually pressing down and releasing. If a malfunction is detected, remove the sunroof unit assembly and visually inspect; refer to [RF-81, "Inspection"](#). If damage is found, replace either wind deflector (1) or sunroof unit assembly as required.
←:Vehicle front

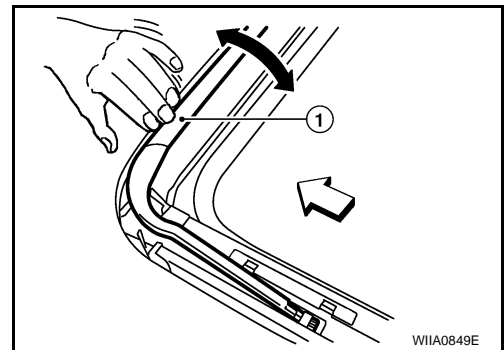

LINK AND WIRE ASSEMBLY

NOTE:

Before replacing a suspect part, make sure it is the source of noise being experienced.

1. Check link to determine if coating film has peeled off excessively enough that substrate is visible. Check also to determine if link is the source of noise. Replace as necessary.
2. Visually check to determine if a sufficient amount of grease has been applied to wire or rail groove. If not, add grease as required.
3. Check wire for any damage or deterioration. If any damage is found, replace sunroof unit assembly.

WEATHERSTRIP


1. Visually check weatherstrip for damage, deterioration, or deformation.
 - Open glass lid assembly partially to inspect front edge of weatherstrip.
 - Tilt up glass lid assembly fully to inspect sides and rear edge of weatherstrip.If any area of the weatherstrip is found to be damaged, replace the glass lid assembly. Refer to [RF-85, "Removal and Installation"](#).
2. Check for leakage around glass lid assembly.
 - Close glass lid assembly.
 - Pour water around surface to determine area of concern.
 - For gaps or misalignment, adjust glass lid assembly to specifications. Refer to [RF-81, "Inspection"](#).
 - For damaged sealing surfaces, either replace glass lid assembly [RF-85, "Removal and Installation"](#), or repair the panel.

DRAIN HOSES

SUNROOF UNIT ASSEMBLY

< ON-VEHICLE REPAIR >

[WITH SINGLE PANEL SUNROOF]

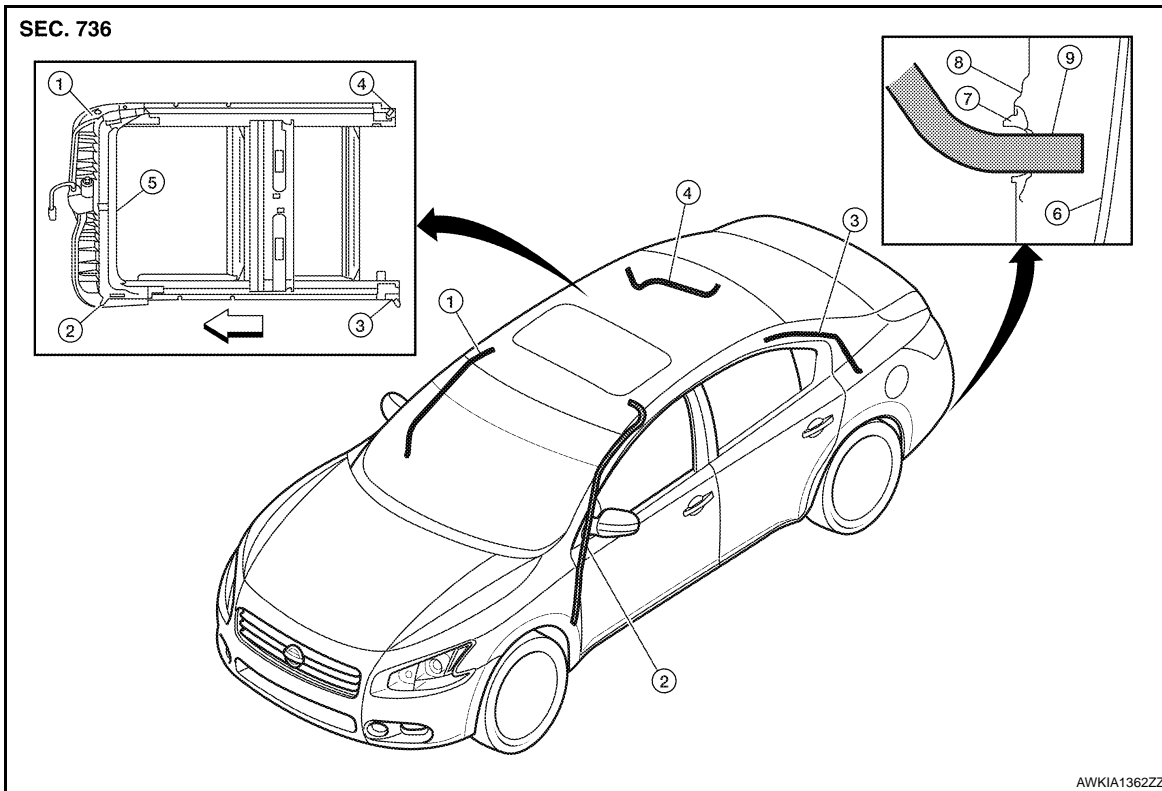

- | | | |
|------------------------|--------------------------|-----------------------|
| 1. Drain hose front RH | 2. Drain hose front LH | 3. Drain hose rear LH |
| 4. Drain hose rear RH | 5. Sunroof unit assembly | 6. Fascia |
| 7. Seal | 8. Fender | 9. Drain hose |
- ← Vehicle front

1. Remove the headlining. Refer to [INT-32, "Removal and Installation"](#).
2. Visually check drain hoses for:
 - Proper connection at sunroof unit assembly drain hose connector(s).
 - Damage, pinch, cracks, deterioration.
 - Proper fastening and routing on body panels.
3. Pour water through drain hoses to determine watertight performance.
If damaged or leaking portions in any drain hose is found, replace entire drain hose as necessary.

ADJUSTMENT

CAUTION:

- Always work with a helper.
- Handle glass lid assembly with care to prevent damage.


NOTE:

- For easier and more accurate installation, always mark each point before removal.
- After any adjustment, check sunroof operation and glass lid assembly alignment.

SUNROOF UNIT ASSEMBLY

< ON-VEHICLE REPAIR >

[WITH SINGLE PANEL SUNROOF]

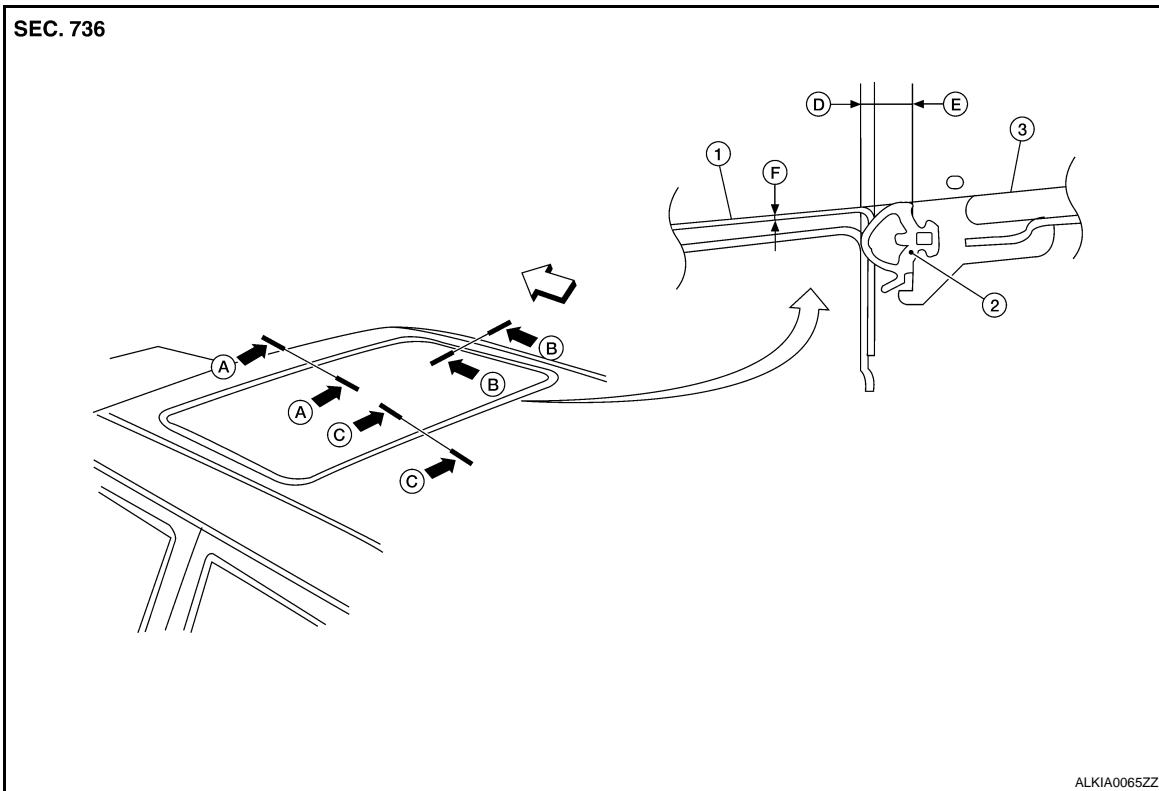

- | | | |
|-----------------------------------|---------------------------------|---|
| 1. Roof | 2. Weatherstrip | 3. Glass lid assembly |
| A. Front edge specifications | B. Side edge specifications | C. Rear edge specifications |
| D. Weatherstrip overlap tolerance | E. Weatherstrip width dimension | F. Surface flushness tolerance (Glass lid below roof line) |

← Vehicle front

Unit: mm (in)

| | A-A | B-B | C-C |
|----|---------------------------|---------------------------|---------------------------|
| D. | 1.4 ± 0.45 (0.06 ± 0.02) | 1.4 ± 0.45 (0.06 ± 0.02) | 1.4 ± 0.45 (0.06 ± 0.02) |
| E. | 5.8 ± (0.23) | 5.8 ± (0.23) | 5.8 ± (0.23) |
| F. | -0.8 ± 1.5 (-0.03 ± 0.06) | -0.8 ± 1.5 (-0.03 ± 0.06) | -0.8 ± 1.5 (-0.03 ± 0.06) |

Gap adjustment (A-A, C-C)

- Open sunshade assembly (1).
- Tilt glass lid assembly up, then release side trim cover (2) and set aside.
- Loosen glass lid assembly bolts (A) (2 each on left and right sides), then tilt glass lid assembly down.
- Manually adjust glass lid assembly from outside of vehicle so gaps A-A and C-C are within specifications.

NOTE:


Temporarily snug glass lid assembly bolts to prevent movement between each adjustment.

- Tilt glass lid assembly up and down several times using sunroof switch to check that it operates smoothly.
- Tilt glass lid assembly up and tighten bolts to specification.

NOTE:

First tighten left front bolt, then right rear bolt on glass lid assembly to prevent uneven torque while tightening remaining bolts.

- Attach side trim cover, then tilt glass lid assembly down.

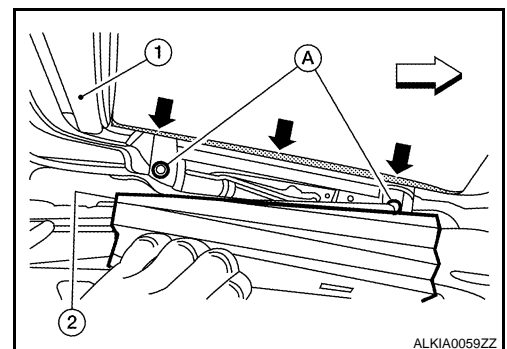

SUNROOF UNIT ASSEMBLY

[WITH SINGLE PANEL SUNROOF]

< ON-VEHICLE REPAIR >

Gap Adjustment (B-B)

1. Remove headlining. Refer to [INT-32, "Removal and Installation"](#).
2. Loosen sunroof unit assembly and sunroof side bracket bolts.
3. Carefully slide sunroof unit assembly side to side or add shims until gap is within specifications.
NOTE:
Temporarily snug sunroof unit assembly bolts to prevent movement between each adjustment.
4. Tilt glass lid assembly up and down several times using sunroof switch to check that it operates smoothly.
5. Tighten sunroof unit assembly and sunroof side bracket bolts.
NOTE:
First tighten left front sunroof unit assembly bolt, then right rear to prevent uneven torque while tightening remaining bolts.
6. Install headlining. Refer to [INT-32, "Removal and Installation"](#).

Height Adjustment

1. Tilt glass lid assembly up and down several times using sunroof switch to check that it operates smoothly.
2. Check height difference between roof surface and glass lid assembly surface, then compare to specifications.
3. If necessary, adjust height difference by using the following procedure.
 - Loosen glass lid assembly bolts.
 - Manually raise/lower glass lid assembly until height difference is within specification.
NOTE:
If necessary, shims may be added between sunroof unit assembly and roof to increase adjustment range. Refer to [RF-81, "Inspection"](#).
Temporarily snug sunroof unit assembly bolts to prevent movement between each adjustment.
 - Tilt glass lid assembly up and down several times using sunroof switch to check that it operates smoothly.
 - Tighten glass lid assembly and sunroof side bracket bolts.
NOTE:
First tighten left front bolt, then right rear bolt on glass lid assembly to prevent uneven torque while tightening remaining bolts.
 - After any adjustment, check sunroof operation and glass lid assembly alignment.


SUNROOF UNIT ASSEMBLY

< ON-VEHICLE REPAIR >

[WITH SINGLE PANEL SUNROOF]

Exploded View

INFOID:000000003898687

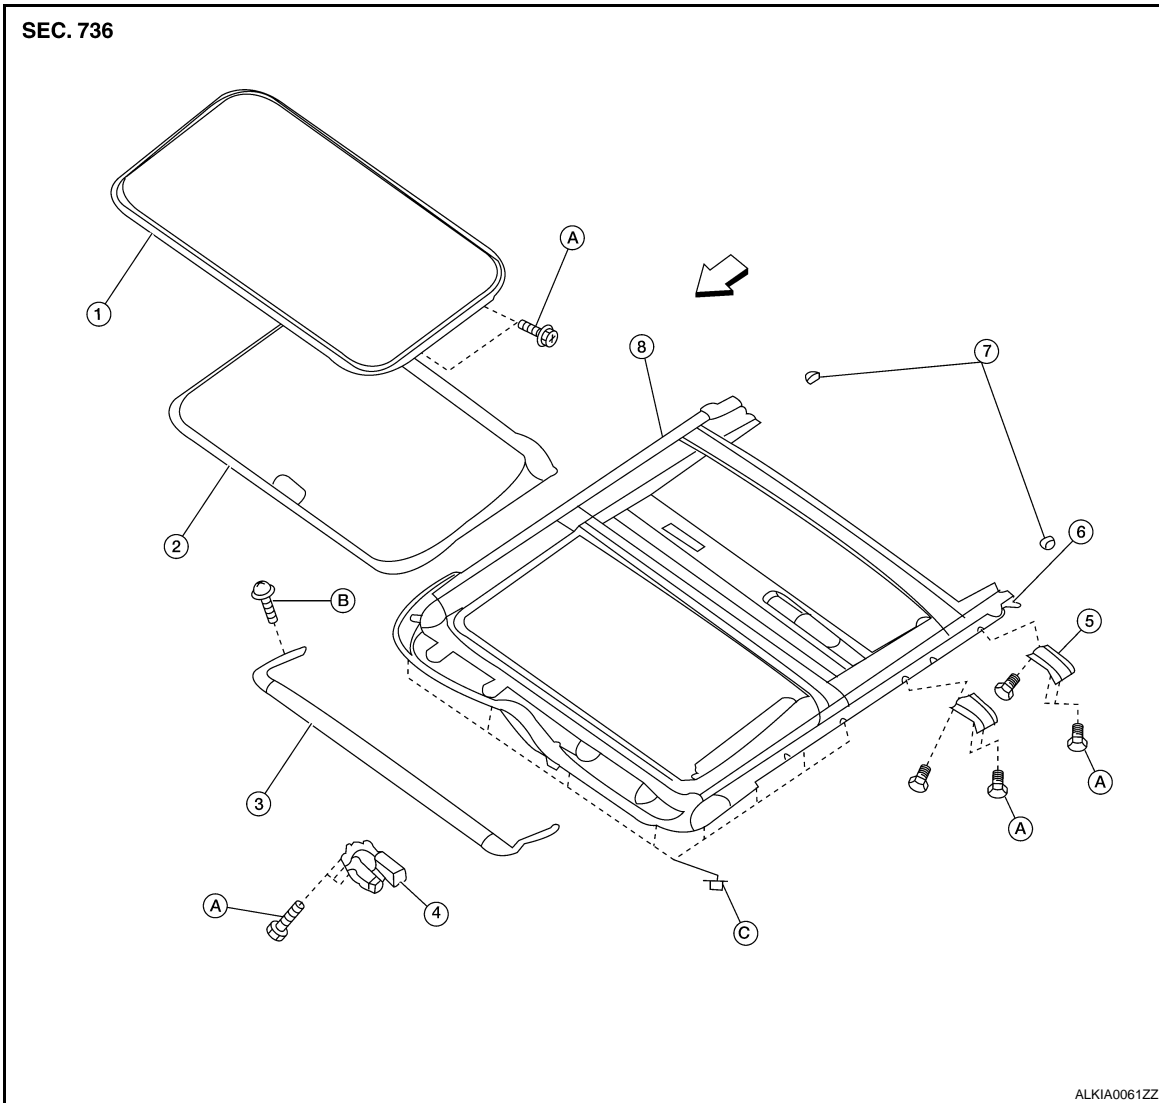

- | | | |
|---------------------------|--------------------------|-------------------------|
| 1. Glass lid assembly | 2. Sunshade | 3. Wind deflector |
| 4. Sunroof motor assembly | 5. Sunroof side bracket | 6. Drain hose connector |
| 7. Sunshade stopper | 8. Sunroof unit assembly | A. Bolt |
| B. Screw | C. Nut | ⇐ Vehicle front |

Removal and Installation

INFOID:000000003898688

CAUTION:

- After installing either sunroof unit assembly or glass lid assembly, check gap/height adjustments and operation to make sure there is no malfunction.
- Always work with a helper.
- Handle glass lid assembly with care to prevent damage.
- When taking sunroof unit out, use shop cloths to protect the seats and trim from damage.

SUNROOF UNIT ASSEMBLY

Removal


1. Close glass lid assembly.
2. Remove headlining. Refer to [INT-32. "Removal and Installation"](#).
3. Disconnect drain hoses.

SUNROOF UNIT ASSEMBLY


< ON-VEHICLE REPAIR >

[WITH SINGLE PANEL SUNROOF]

4. Remove screws (A), then pull sunroof switch bracket (1) away from sunroof unit assembly (2).
↳ Vehicle front
5. Disconnect sunroof motor harness connector.

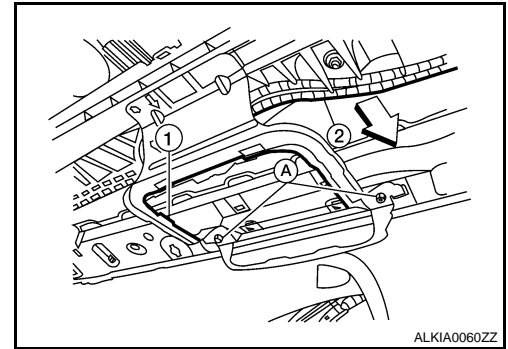

6. Remove bolts on the front end and side rails of the sunroof unit assembly.
7. Remove front sunroof side bracket bolts.
8. Remove rear sunroof side bracket bolts and remove sunroof unit assembly from roof panel.
9. Remove sunroof unit assembly through the passenger compartment while being careful not to damage the seats and trim.

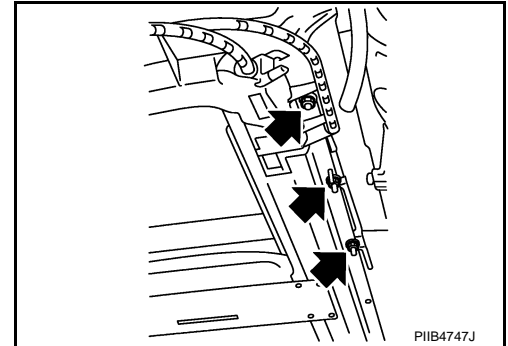


Installation

1. Loosely tighten the rear sunroof side bracket bolts to the sunroof unit assembly side rails.
2. Bring sunroof unit into passenger compartment and loosely tighten rear sunroof side bracket bolts to roof panel while supporting front.
3. Align the sunroof unit assembly front end rail and side rails with the locator pins, then loosely tighten the bolts.
4. Install remaining sunroof side brackets and loosely tighten bolts.
5. Tighten the sunroof unit assembly front end and side rail bolts diagonally to the specified torque.
6. Tighten the front sunroof side bracket bolts at the vehicle side first, then at the side rail end.
7. Tighten the rear sunroof side bracket bolts at the vehicle side first, then at the side rail end.
8. Connect sunroof motor harness connector.
9. Install sunroof switch bracket.
10. Connect drain hoses.
11. Install headlining. Refer to [INT-32. "Removal and Installation"](#).

GLASS LID ASSEMBLY

Removal

1. Open sunshade (1), then close glass lid assembly.
↳ Vehicle front
2. Slide the side trim covers (2) RH/LH inward, then release them from the glass lid assembly inside edge and set aside.
3. Remove the bolts (A) and glass lid assembly from sunroof unit assembly.

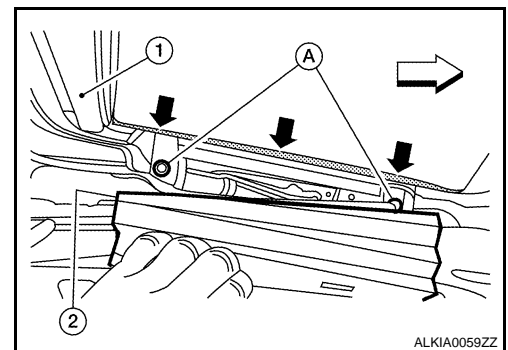

Installation

1. Position glass lid assembly to sunroof unit assembly.
2. Tighten glass lid assembly bolts to specification.

NOTE:

SUNROOF UNIT ASSEMBLY

[WITH SINGLE PANEL SUNROOF]

< ON-VEHICLE REPAIR >


First tighten left front bolt, then right rear bolt on glass lid assembly to prevent uneven torque while tightening remaining bolts.

3. Slide side trim covers onto inside edge of glass lid assembly.
4. After installation, check sunroof operation and glass lid assembly alignment. Refer to [RF-81, "Inspection"](#).

SUNSHADE

Removal

1. Remove sunroof unit assembly. Refer to [RF-85, "Exploded View"](#).
2. Remove glass lid assembly. Refer to [RF-85, "Removal and Installation"](#).
3. Remove the sunshade stoppers (1) RH/LH from the sunroof unit assembly side rails (2).
← Vehicle front
4. Slide sunshade rearward past sunroof unit assembly side rail ends to remove.

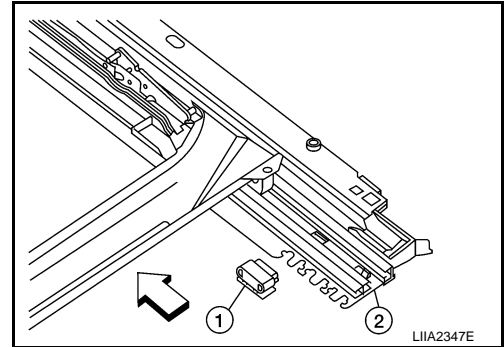


Installation

Installation is in the reverse order of removal.

SUNROOF MOTOR

Removal

1. Close glass lid assembly.
2. Disconnect the negative and positive battery cables.
3. Remove map lamp assembly from headliner (4). Refer to [INT-32, "Removal and Installation"](#).
← Vehicle front
4. Remove sunroof motor screws (A).
5. Disconnect harness connector (2) and remove sunroof motor (1) from sunroof unit assembly front end rail.

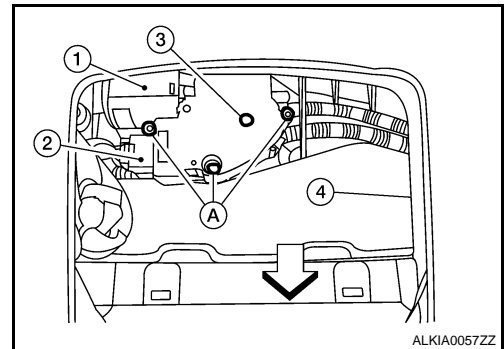

CAUTION:

Never run the removed sunroof motor as a single unit.

Installation

1. Move sunroof motor laterally little by little so that the gear is completely engaged into the wire on the sunroof unit assembly, and the mounting surfaces become parallel. Install the sunroof motor screws, and tighten to the specified torque.

CAUTION:

Before installing the motor, be sure to place the link and wire assembly in the symmetrical and fully closed position.

NOTE:

If necessary, insert a suitable tool into the drive key (3) and rotate right or left slightly to assist in complete sunroof motor gear alignment.

Remainder of installation is in the reverse order of removal.

2. Connect battery positive and negative terminals.
3. Synchronize sunroof motor with sunroof unit assembly. Refer to [RF-7, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

WorkFlow

INFOID:000000004392550

DETAILED FLOW

1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings the vehicle in.

>> GO TO 2.

2.REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3.

3.IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4.

4.IDENTIFY THE MALFUNCTIONING PARTS WITH "COMPONENT DIAGNOSIS"

Perform the diagnosis with "Component diagnosis" of the applicable system.

>> GO TO 5.

5.REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6.

6.FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> Inspection End.

NO >> GO TO 3.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITH DUAL PANEL SUNROOF]

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000004392551

Initialization of system should be conducted after the following conditions.

- When the sunroof motor or sunshade motor is changed.
- When the sunroof or sunshade does not operate normally (incomplete initialization conditions).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000004392552

INITIALIZATION PROCEDURE

If the sunroof or sunshade does not close or open automatically, use the following procedure to return sunroof or sunshade operation to normal.

1. Close the sunroof and sunshade, then release the sunroof switch once.
2. Press and hold the sunroof switch CLOSE (1st or 2nd) again (for approx. 10 seconds), then sunroof will move to forward and it will be stopped mechanically.
3. Release the sunroof switch, and press and hold the sunroof switch CLOSE (1st or 2nd) again, then sunroof and sunshade will automatically move to fully closed⇒fully open⇒fully closed.
4. Release sunroof switch, after the sunroof is fully closed.
5. Check sunroof and sunshade operation.

CHECK ANTI-PINCH FUNCTION

1. Full open the sunroof.
2. Place a piece of wood near fully closed position.
3. Close the sunroof completely with auto-slide close.
4. Check that sunroof lowers for approximately 150 mm (5.91 in) or 2 seconds without pinching a piece of wood and stop.
5. Full open the sunshade.
6. Place a piece of wood near fully closed position.
7. Close the sunroof completely with auto-slide close.
8. Check that sunroof lowers for approximately 150 mm (5.91 in) or 2 seconds without pinching a piece of wood and stop.

CAUTION:

- Do not check with hands and other part of body because they may be pinched. Do not get pinched.
- Depending on environment and driving conditions, if a similar impact or load is applied to the sunroof it may lower.
- Check that auto-slide operates before inspection when system initialization is performed.
- Perform initial setting when auto-slide operation or anti-pinch function does not operate normally.


FUNCTION DIAGNOSIS

SUNROOF SYSTEM

System Diagram

INFOID:000000004392553

SUNROOF

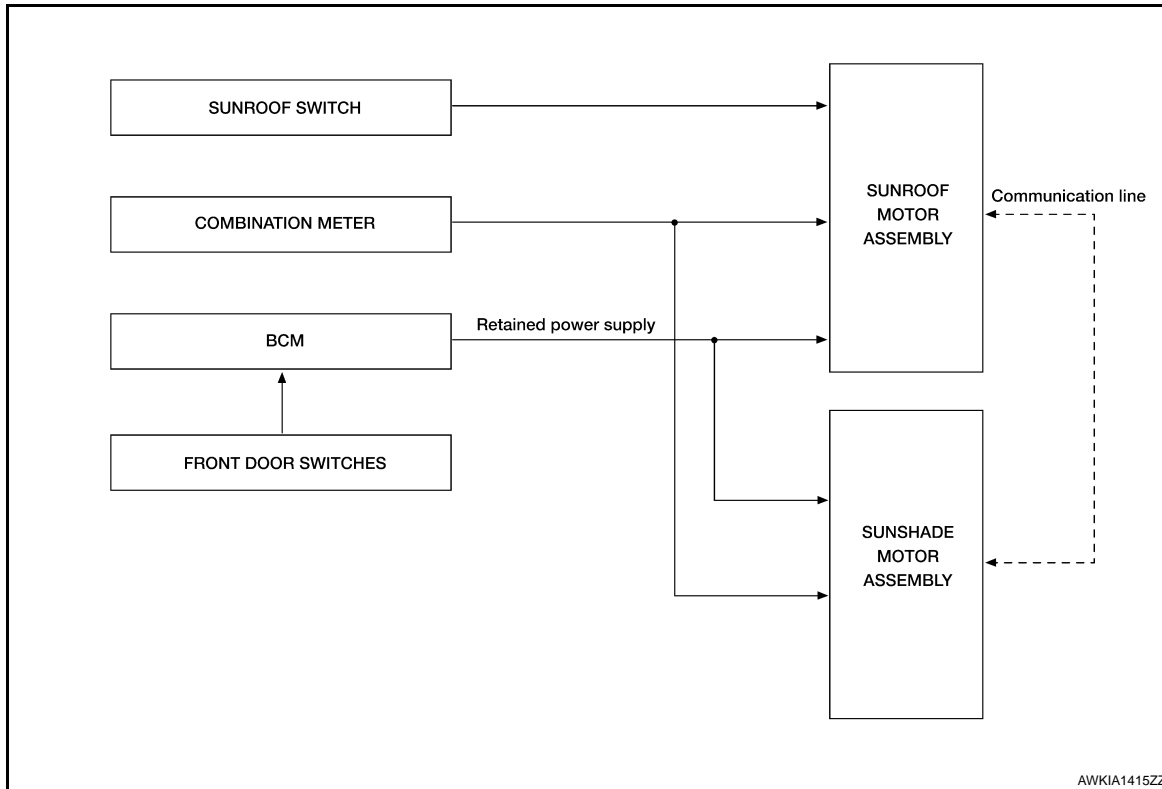

AWKIA1415ZZ


System Description

INFOID:000000004392554

DESCRIPTION

- Sunroof motor assembly and sunshade motor assembly operate with the power supplied from BCM while ignition switch is ON or retained power is operating.
- Sunroof motor assembly receives an operation signal from sunroof switch, and sends the signal to sunshade motor by communication line.
- Sunroof motor assembly and sunshade motor assembly receive a vehicle speed signal from combination meter and controls the sunroof motor and sunshade motor torque at the time of high speed operation.
- The sunroof switch can be operated in the directions of push/tilt, open (1st, 2nd) and close (1st, 2nd). It can operate the sunroof and sunshade by one switch.

- (1) OPEN
- (2) CLOSE
- (3) PUSH/TILT

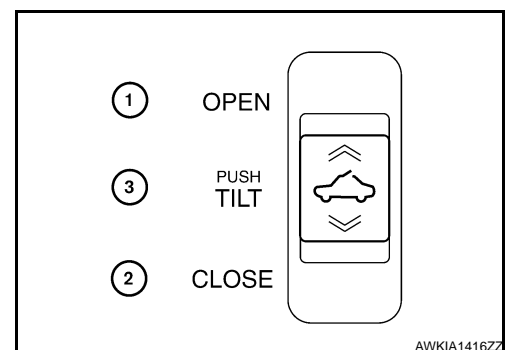

AWKIA1416ZZ


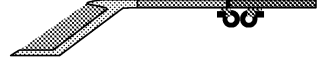










OPERATION DESCRIPTION

The sunroof and sunshade operate to the following condition by the sunroof switch operation.

SUNROOF SYSTEM

< FUNCTION DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]





| Before Operation | Switch condition | Roof and sunshade operation | After Operation |
|--|------------------|---|--|
|  <p>JMKIA1885ZZ</p> | OPEN: 1st | Open the shade |  <p>JMKIA1884ZZ</p> |
|  <p>JMKIA1885ZZ</p> | OPEN: 2nd | Open the glass and shade (AUTO) |  <p>JMKIA1887ZZ</p> |
|  <p>JMKIA1885ZZ</p> | PUSH | Tilt up and open the shade at the same time |  <p>JMKIA1886ZZ</p> |
|  <p>JMKIA1886ZZ</p> | PUSH | Tilt down |  <p>JMKIA1884ZZ</p> |
|  <p>JMKIA1886ZZ</p> | CLOSE: 1st | |  <p>JMKIA1884ZZ</p> |
|  <p>JMKIA1886ZZ</p> | CLOSE: 2nd | Tilt down and close the shade at the same time (AUTO) |  <p>JMKIA1885ZZ</p> |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

SUNROOF SYSTEM

< FUNCTION DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| Before Operation | Switch condition | Roof and sunshade operation | After Operation |
|---|------------------|---|---|
| | PUSH | Tilt up |  <small>JMKIA1886ZZ</small> |
|  <small>JMKIA1887ZZ</small> | CLOSE: 1st | Close the glass |  <small>JMKIA1884ZZ</small> |
| | CLOSE: 2nd | Close the glass and shade at the same time (AUTO) |  <small>JMKIA1885ZZ</small> |

AUTO OPERATION

The sunroof or sunshade operate automatically to the fully-open or fully-close position by operating the sunroof switch to the OPEN (2nd) or CLOSE (2nd) position.

RETAINED POWER OPERATION

Retained power operation is an additional power supply function that enables the sunroof system to operate for 45 seconds after ignition switch is turned OFF.

Retained power function cancel conditions

- Front door CLOSE (door switch OFF)→OPEN (door switch ON)
- Ignition switch is ON again.
- Timer passed (45 seconds)

ANTI-PINCH FUNCTION

CAUTION:

There are some small distances immediately before the closed position which cannot be detected.

- The CPU of sunroof motor assembly monitors the sunroof condition by the signals from sunroof motor. When sunroof motor assembly detects an interruption during auto operation (close or tilt down operation), sunroof motor will tilt up or open [150 mm (5.91 in) or more] sunroof.
- The CPU of sunshade motor assembly monitors the sunshade condition by the signals from sunshade motor. When sunshade motor assembly detects an interruption during auto close operation, sunroof motor will open [150 mm (5.91 in) or more] sunshade.


Component Parts Location

INFOID:000000004392555

SUNROOF SYSTEM

< FUNCTION DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

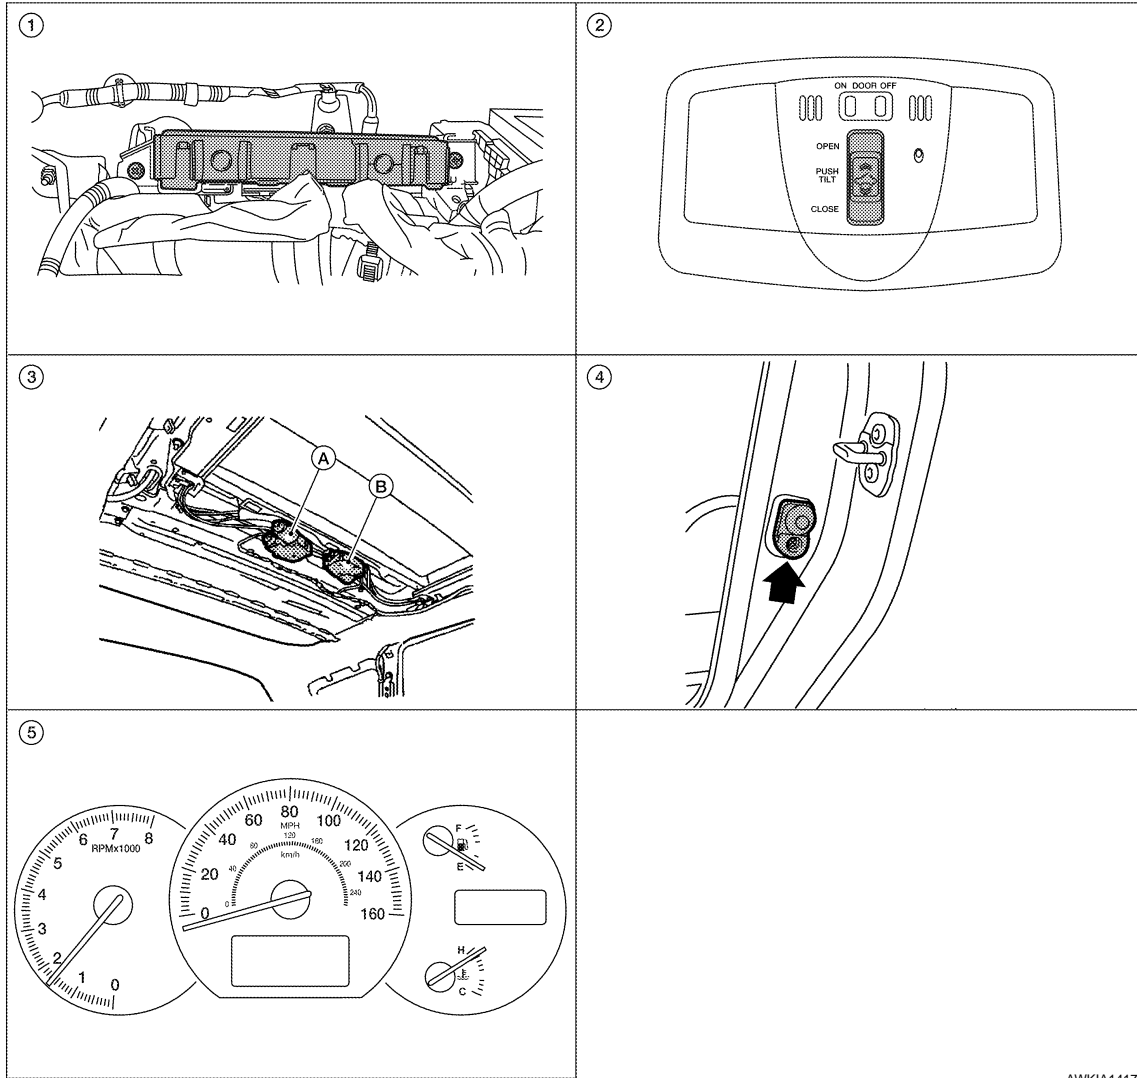

1. BCM M16, M17, M18 (view with instrument panel removed)
2. Sunroof switch R14
3. A: Sunroof motor assembly R101
B: Sunshade motor assembly R102 (view with headlining removed)
4. Front door switch LH B8, RH B108
5. Combination meter M24

AWKIA1417ZZ

Component Description

INFOID:000000004392556

| Component | Function |
|-------------------------|--|
| BCM | Supplies power to sunroof motor assembly and sunshade motor assembly. |
| Combination meter | Transmits vehicle speed signal to sunroof motor assembly and sunshade motor assembly. |
| Sunroof motor assembly | It is sunroof motor and CPU integrated type that enables tilt up/down & slide open/close sunroof by sunroof switch operation. And sends sunroof switch operation signal to sunshade motor assembly via communication line. |
| Sunshade motor assembly | It is sunshade motor and CPU integrated type that enables open/close sunshade by sunroof switch operation. |
| Sunroof switch | Transmits switch operation signal to sunroof motor assembly. |
| Front door switches | Detects door open/close condition and transmits to BCM. |

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : Diagnosis Description

INFOID:000000004399696

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

| Diagnosis mode | Function Description |
|-----------------------|--|
| WORK SUPPORT | Changes the setting for each system function. |
| SELF-DIAG RESULTS | Displays the diagnosis results judged by BCM. |
| CAN DIAG SUPPORT MNTR | Monitors the reception status of CAN communication viewed from BCM. |
| DATA MONITOR | The BCM input/output signals are displayed. |
| ACTIVE TEST | The signals used to activate each device are forcibly supplied from BCM. |
| ECU IDENTIFICATION | The BCM part number is displayed. |
| CONFIGURATION | This function is not used even though it is displayed. |

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

| System | Sub system selection item | Diagnosis mode | | |
|--------------------------------------|---------------------------|----------------|--------------|-------------|
| | | WORK SUPPORT | DATA MONITOR | ACTIVE TEST |
| Door lock | DOOR LOCK | × | × | × |
| Rear window defogger | REAR DEFOGGER | | × | × |
| Warning chime | BUZZER | | × | × |
| Interior room lamp timer | INT LAMP | × | × | × |
| Exterior lamp | HEADLAMP | × | × | × |
| Wiper and washer | WIPER | × | × | × |
| Turn signal and hazard warning lamps | FLASHER | × | × | × |
| Air conditioner | AIR CONDITONER | | × | |
| Intelligent Key system | INTELLIGENT KEY | × | × | × |
| Combination switch | COMB SW | | × | |
| BCM | BCM | × | | |
| Immobilizer | IMMU | | × | × |
| Interior room lamp battery saver | BATTERY SAVER | × | × | × |
| Trunk open | TRUNK | | × | |
| Vehicle security system | THEFT ALM | × | × | × |
| RAP system | RETAINED PWR | | × | |
| Signal buffer system | SIGNAL BUFFER | | × | × |
| TPMS | AIR PRESSURE MONITOR | × | × | |

COMMON ITEM : CONSULT-III Function

INFOID:000000004399697

ECU IDENTIFICATION

Displays the BCM part No.

SELF-DIAG RESULT

Refer to [BCS-82, "DTC Index"](#).

RETAINED PWR

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)

INFOID:000000004399698

Data monitor

| Monitor Item [Unit] | Description |
|------------------------|--|
| DOOR SW-DR [ON/OFF] | Indicates condition of front door switch LH. |
| DOOR SW-AS [ON/OFF] | Indicates condition of front door switch RH. |

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

COMPONENT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:000000004392568

1. CHECK FUSE AND FUSIBLE LINK

Check if the following BCM fuses or fusible link are blown.

| Terminal No. | Signal name | Fuse and fusible link No. |
|--------------|----------------------|---------------------------|
| 1 | Battery power supply | H |
| 11 | | 10 |
| 24 | | 7 |

Is the fuse or fusible link blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
 NO >> GO TO 2


2. CHECK POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM.
- Check voltage between BCM harness connector and ground.

| Terminals | | Voltage (Approx.) |
|-----------|----------|-------------------|
| (+) | (-) | |
| BCM | | Battery voltage |
| Connector | Terminal | |
| M16 (A) | 1 | |
| M17 (B) | 11 | |
| M18 (C) | 24 | |

Is the measurement normal?

- YES >> GO TO 3
 NO >> Repair or replace harness.

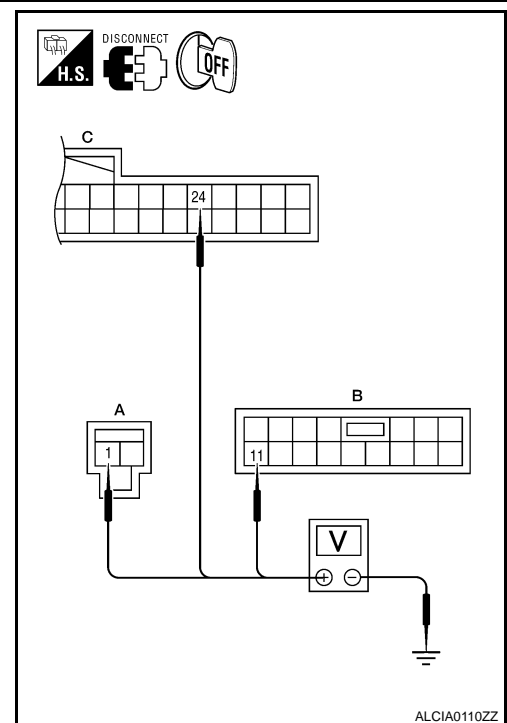


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | | |
| M17 | 13 | | Yes |

Does continuity exist?

- YES >> Inspection End.
 NO >> Repair or replace harness.

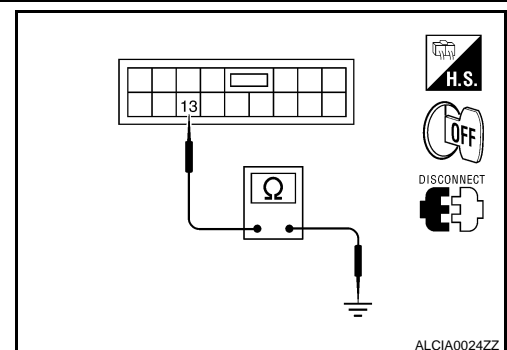

POWER SUPPLY AND GROUND CIRCUIT

[WITH DUAL PANEL SUNROOF]

< COMPONENT DIAGNOSIS >

BCM : Special Repair Requirement

INFOID:000000004392569

1. REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to [BCS-6, "CONFIGURATION \(BCM\) : Special Repair Requirement"](#).

>> Work End.

SUNROOF MOTOR ASSEMBLY


SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure

INFOID:000000004392561

1. CHECK POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly connector.
3. Turn ignition switch ON.
4. Check voltage between sunroof motor assembly harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| Connector | Terminal | | |
| R101 | 3 | Ground | Battery voltage |
| | 6 | | |

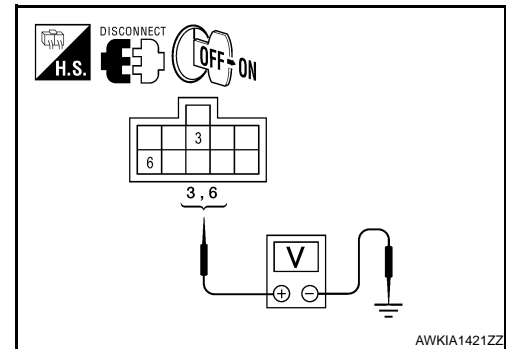

Is the inspection result normal?


YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between sunroof motor assembly harness connector and ground.

| Sunroof motor assembly | | Ground | Continuity |
|------------------------|----------|--------|------------|
| Connector | Terminal | | |
| R101 | 1 | | Yes |
| | 2 | | |

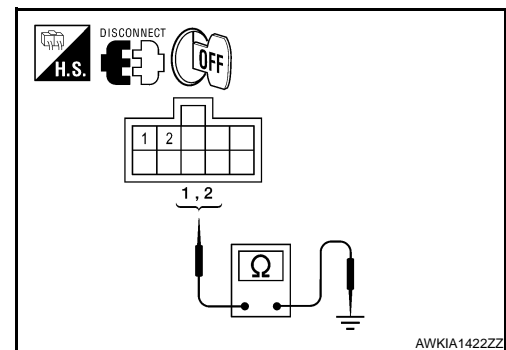

Is the inspection result normal?


YES >> GO TO 4.

NO >> Repair or replace the harness.

3. CHECK SUNROOF MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector (A) and sunroof motor assembly harness connector (B).

| BCM (A) | | Sunroof motor assembly (B) | | Continuity |
|-----------|----------|----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M118 | 2 | R101 | 6 | Yes |
| | 3 | | 3 | |

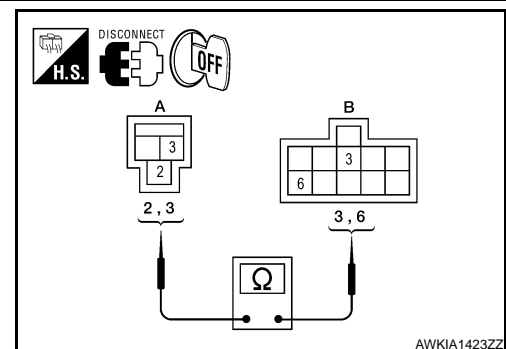


4. Check continuity between BCM harness connector and ground.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

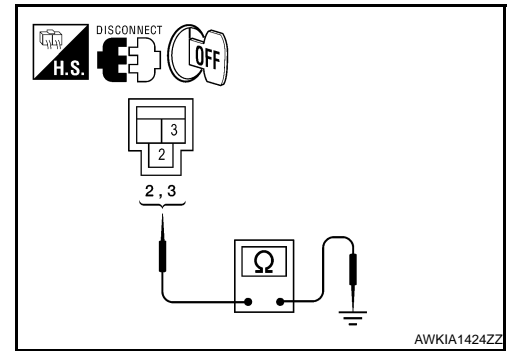

| BCM | | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | | |
| M118 | 2 | | No |
| | 3 | | |

Is the inspection result normal?

YES >> Replace the BCM. Refer to [BCS-87, "Removal and Installation"](#).

NO >> Repair or replace the harness.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> Inspection End.

SUNSHADE MOTOR ASSEMBLY


SUNSHADE MOTOR ASSEMBLY : Diagnosis Procedure

INFOID:000000004392562

1.CHECK POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect sunshade motor assembly connector.
3. Turn ignition switch ON.
4. Check voltage between sunshade motor assembly harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| Connector | Terminal | | |
| R102 | 6 | Ground | Battery voltage |

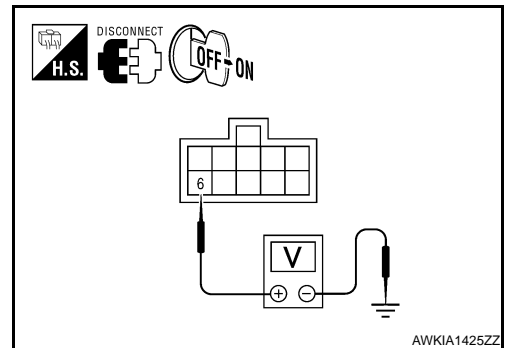

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Check continuity between sunshade motor assembly harness connector and ground.

| Sunshade motor assembly | | Ground | Continuity |
|-------------------------|----------|--------|------------|
| Connector | Terminal | | |
| R102 | 1 | | Yes |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the harness.

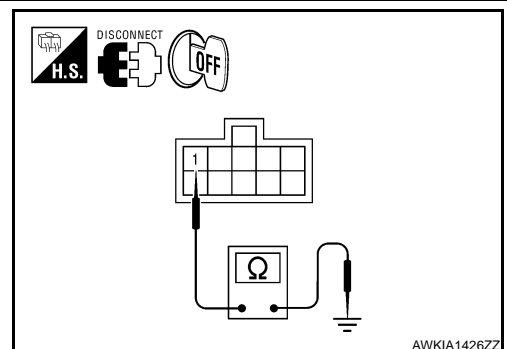

POWER SUPPLY AND GROUND CIRCUIT


[WITH DUAL PANEL SUNROOF]

< COMPONENT DIAGNOSIS >

3. CHECK SUNSHADE MOTOR CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector (A) and sunshade motor assembly harness connector (B).

| BCM (A) | | Sunshade motor assembly (B) | | Continuity |
|-----------|----------|-----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M118 | 2 | R102 | 6 | Yes |

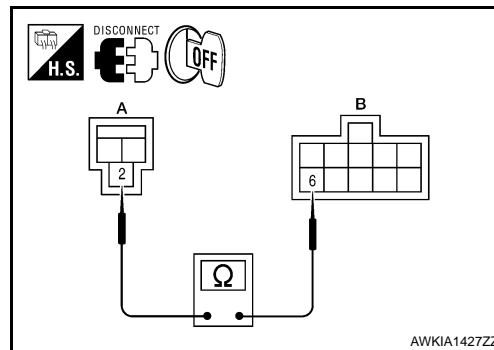

4. Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | | |
| M118 | 2 | | No |

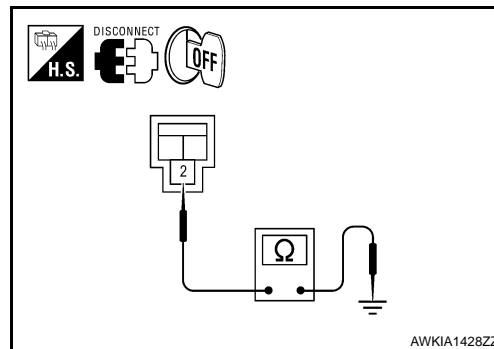

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-87, "Removal and Installation"](#).
- NO >> Repair or replace the harness.

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> Inspection End.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

COMMUNICATION SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

COMMUNICATION SIGNAL CIRCUIT

Description

INFOID:000000004392570


Detects door open/close condition.

Diagnosis Procedure

INFOID:000000004392571

1. CHECK FRONT DOOR SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect sunshade motor assembly connector.
3. Turn ignition switch ON.
4. Check signal between sunshade motor assembly harness connector and ground with oscilloscope.
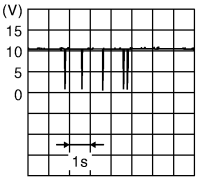
| (+) | | (-) | Voltage (V) (Approx.) |
|-------------------------|----------|--------|---|
| Sunshade motor assembly | | | |
| Connector | Terminal | | |
| R102 | 7 | Ground |  <p style="text-align: right;">JMkia1869ZZ</p> |


Is the inspection result normal?

- YES >> Inspection End.
NO >> GO TO 2.

2. CHECK COMMUNICATION SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly connector.
3. Check continuity between sunshade motor assembly harness connector (A) and sunroof motor assembly harness connector (B).

| Sunshade motor assembly (A) | | Sunroof motor assembly (B) | | Continuity |
|-----------------------------|----------|----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| R102 | 7 | R101 | 7 | Yes |

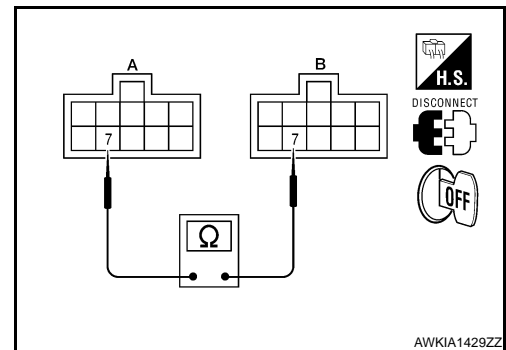


4. Check continuity between sunshade motor assembly harness connector and ground.

| Sunshade motor assembly | | Ground | Continuity |
|-------------------------|----------|--------|------------|
| Connector | Terminal | | No |
| R102 | 7 | | No |

Is the inspection result normal?

- YES >> Replace sunshade motor assembly. Refer to [RF-186](#), "[Removal and Installation](#)".
NO >> Repair or replace harness.

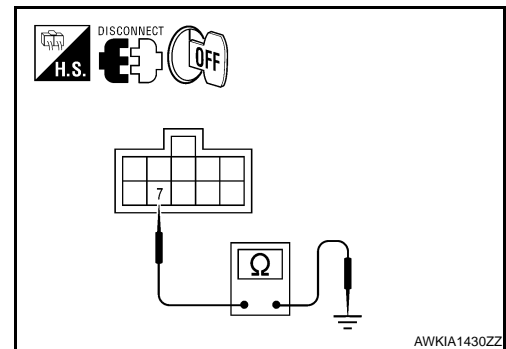

SUNROOF SWITCH

< COMPONENT DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

SUNROOF SWITCH

Description

INFOID:000000004392572

Transmits switch operation signal to sunroof motor assembly.


Diagnosis Procedure

INFOID:000000004392573

1. CHECK SUNROOF SWITCH INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between sunroof motor assembly harness connector and ground.

| (+) | | (-) | Condition | Voltage (V) |
|------------------------|-----------|--------|--|-----------------|
| Sunroof motor assembly | | | | |
| Connector | Terminals | | | |
| R101 | 4 | Ground | Sunroof switch is operated PUSH | 0 |
| | | | Other than above | Battery voltage |
| | 5 | | Sunroof switch is operated OPEN (1st or 2nd) | 0 |
| | | | Other than above | Battery voltage |
| | 9 | | Sunroof switch is operated OPEN (2nd) or CLOSE (2nd) | 0 |
| | | | Other than above | Battery voltage |
| | 10 | | Sunroof switch is operated CLOSE (1st or 2nd) | 0 |
| | | | Other than above | Battery voltage |

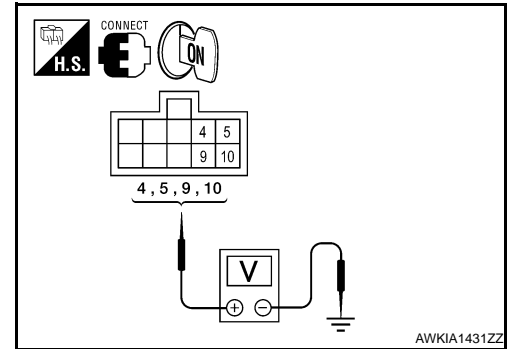


Is the inspection result normal?

- YES >> Replace sunroof motor. Refer to [RF-185, "Removal and Installation"](#).
 NO >> GO TO 2.

2. CHECK SUNROOF SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly connector and sunroof switch connector.
3. Check continuity between sunroof motor assembly harness connector (A) and sunroof switch harness connector (B).

| Sunroof motor assembly (A) | | Sunroof switch (B) | | Continuity |
|----------------------------|----------|--------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| R101 | 4 | R14 | 5 | Yes |
| | 5 | | 3 | |
| | 9 | | 2 | |
| | 10 | | 4 | |

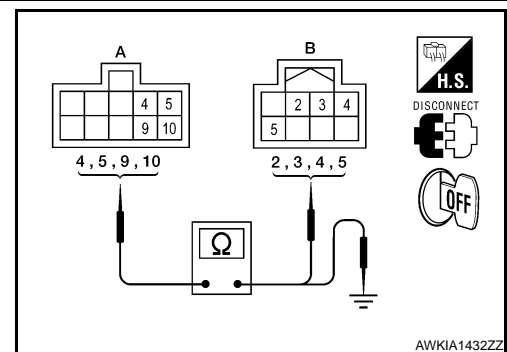


SUNROOF SWITCH

< COMPONENT DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

- Check continuity between sunroof motor assembly harness connector and ground.

| Sunroof motor assembly | | Ground | Continuity |
|------------------------|----------|--------|------------|
| Connector | Terminal | | |
| R101 | 4 | Ground | No |
| | 5 | | |
| | 9 | | |
| | 10 | | |

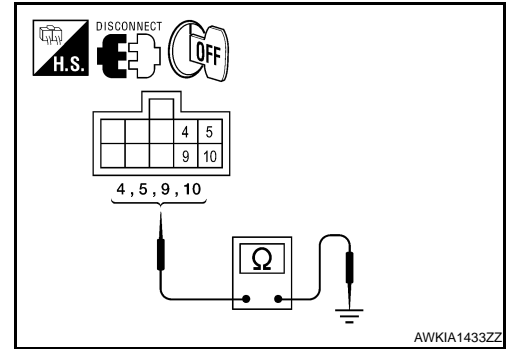


Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or the replace harness.

3.CHECK SUNROOF SWITCH GROUND CIRCUIT

Check continuity between sunroof switch harness connector and ground.

| Sunroof switch | | Ground | Continuity |
|----------------|----------|--------|------------|
| Connector | Terminal | | |
| R14 | 1 | Ground | Yes |
| | | | |

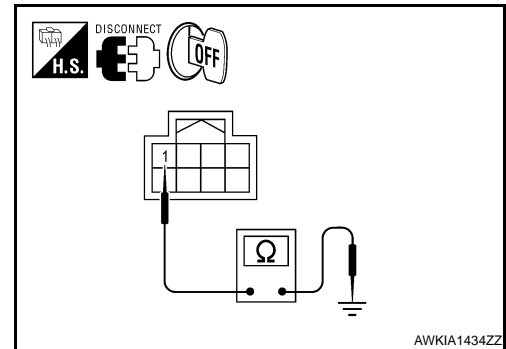

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace the harness.

4.CHECK SUNROOF SWITCH

Check sunroof switch.

Refer to [RF-102. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Replace sunroof switch. Refer to [RF-189. "Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-39. "Intermittent Incident"](#).

>> Inspection End.

Component Inspection


INFOID:000000004392574

SUNROOF SWITCH

1.CHECK SUNROOF SWITCH

- Turn ignition switch OFF.
- Disconnect sunroof switch connector.
- Check continuity sunroof switch terminals.

| Terminals | Condition | Continuity |
|-----------|-----------|------------|
| | | |

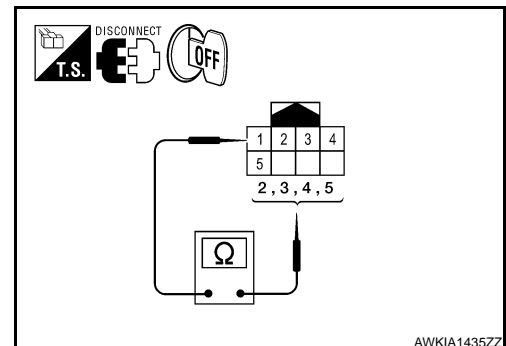

SUNROOF SWITCH

< COMPONENT DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| | | | |
|---|---|---|-----|
| 2 | 1 | Sunroof switch is operated OPEN (2nd) or CLOSE (2nd) | Yes |
| | | Other than above | No |
| 3 | | Sunroof switch is operated OPEN (1st) or OPEN (2nd) | Yes |
| | | Other than above | No |
| 4 | | Sunroof switch is operated CLOSE (1st) or CLOSE (2nd) | Yes |
| | | Other than above | No |
| 5 | | Sunroof switch is operated PUSH | Yes |
| | | Other than above | No |

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace sunroof switch. Refer to [RF-189. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

DOOR SWITCH

< COMPONENT DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

DOOR SWITCH

Description

INFOID:000000004392575

Detects door open/close condition.

Component Function Check

INFOID:000000004392576

1.CHECK FUNCTION

With CONSULT-III

Check door switches DOOR SW-DR, DOOR SW-AS in Data Monitor mode with CONSULT-III.

| Monitor item | Condition |
|--------------|------------------------|
| DOOR SW-DR | CLOSE → OPEN: OFF → ON |
| DOOR SW-AS | |

Is the inspection result normal?


- YES >> Door switch is OK.
- NO >> Refer to [RF-104, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000004392577

1.CHECK DOOR SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Check signal between BCM connector and ground with oscilloscope.

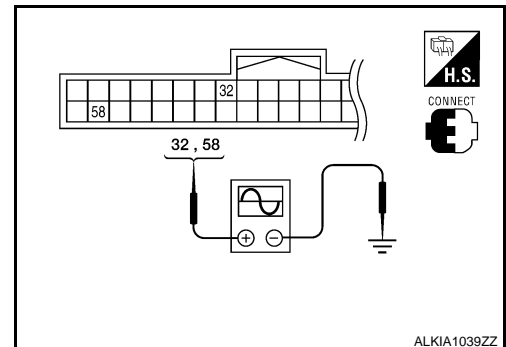

DOOR SWITCH

< COMPONENT DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| Terminals | | (-) | Door condition | | Voltage (V) (Approx.) |
|---------------|----------|--------|----------------|-------|--------------------------|
| (+) | | | | | |
| BCM connector | Terminal | | | | |
| A: M18 | 58 | Ground | Driver side | OPEN | 0 |
| | | | | CLOSE | |
| | 32 | | Passenger side | OPEN | 0 |
| | | | | CLOSE | |

Is the inspection result normal?

- YES >> GO TO 4
- NO >> GO TO 2

2. CHECK DOOR SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM connector and door switch connector.

| BCM connector | Terminal | Door switch connector | Terminal | Continuity |
|---------------|----------|--------------------------|----------|------------|
| A: M18 | 58 | C: B8 (Driver side) | 2 | Yes |
| | 32 | C: B108 (Passenger side) | | |

3. Check continuity between BCM connector and ground.

| BCM connector | Terminal | Ground | Continuity |
|---------------|----------|--------|------------|
| A: M18 | 58 | | |
| | 32 | | |

Is the inspection result normal?

- YES >> GO TO 3
- NO >> Repair or replace harness between BCM and door switch.

3. CHECK DOOR SWITCH


Refer to [RF-106, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4
- NO >> Replace malfunctioning door switch.

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

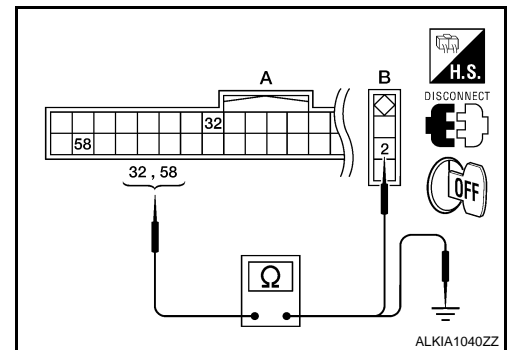

DOOR SWITCH

< COMPONENT DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

>> Inspection End.

Component Inspection

INFOID:000000004392578


1. CHECK DOOR SWITCH

1. Turn ignition switch OFF.
2. Disconnect door switch connector.
3. Check door switch.

| Terminal | | Door switch condition | Continuity |
|-------------|----------------------------|-----------------------|------------|
| Door switch | | | |
| 2 | Ground part of door switch | Pressed | No |
| | | Released | Yes |

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace malfunctioning door switch.

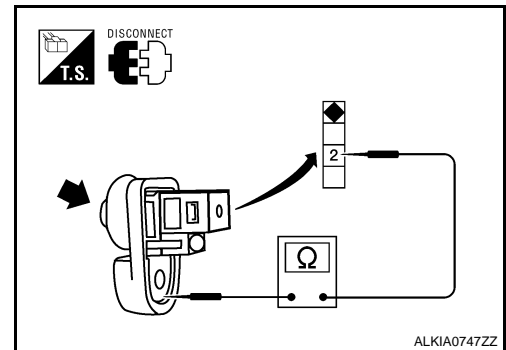

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000004392579

VALUES ON THE DIAGNOSIS TOOL

| Monitor Item | Condition | Value/Status |
|----------------|---|----------------------------------|
| FR WIPER HI | Other than front wiper switch HI | OFF |
| | Front wiper switch HI | ON |
| FR WIPER LOW | Other than front wiper switch LO | OFF |
| | Front wiper switch LO | ON |
| FR WASHER SW | Front washer switch OFF | OFF |
| | Front washer switch ON | ON |
| FR WIPER INT | Other than front wiper switch INT | OFF |
| | Front wiper switch INT | ON |
| FR WIPER STOP | Front wiper is not in STOP position | OFF |
| | Front wiper is in STOP position | ON |
| INT VOLUME | Wiper intermittent dial is in a dial position 1 - 7 | Wiper intermittent dial position |
| TURN SIGNAL R | Other than turn signal switch RH | OFF |
| | Turn signal switch RH | ON |
| TURN SIGNAL L | Other than turn signal switch LH | OFF |
| | Turn signal switch LH | ON |
| TAIL LAMP SW | Other than lighting switch 1ST and 2ND | OFF |
| | Lighting switch 1ST or 2ND | ON |
| HI BEAM SW | Other than lighting switch HI | OFF |
| | Lighting switch HI | ON |
| HEAD LAMP SW 1 | Other than lighting switch 2ND | OFF |
| | Lighting switch 2ND | ON |
| HEAD LAMP SW 2 | Other than lighting switch 2ND | OFF |
| | Lighting switch 2ND | ON |
| PASSING SW | Other than lighting switch PASS | OFF |
| | Lighting switch PASS | ON |
| AUTO LIGHT SW | Other than lighting switch AUTO | OFF |
| | Lighting switch AUTO | ON |
| FR FOG SW | Front fog lamp switch OFF | OFF |
| | Front fog lamp switch ON | ON |
| DOOR SW-DR | Driver door closed | OFF |
| | Driver door opened | ON |
| DOOR SW-AS | Passenger door closed | OFF |
| | Passenger door opened | ON |
| DOOR SW-RR | Rear door RH closed | OFF |
| | Rear door RH opened | ON |
| DOOR SW-RL | Rear door LH closed | OFF |
| | Rear door LH opened | ON |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| Monitor Item | Condition | Value/Status |
|----------------|---|--------------|
| DOOR SW-BK | NOTE: This item is displayed, but cannot be monitored. | OFF |
| CDL LOCK SW | Other than power door lock switch LOCK | OFF |
| | Power door lock switch LOCK | ON |
| CDL UNLOCK SW | Other than power door lock switch UNLOCK | OFF |
| | Power door lock switch UNLOCK | ON |
| KEY CYL LK-SW | Other than driver door key cylinder LOCK position | OFF |
| | Driver door key cylinder LOCK position | ON |
| KEY CYL UN-SW | Other than driver door key cylinder UNLOCK position | OFF |
| | Driver door key cylinder UNLOCK position | ON |
| KEY CYL SW-TR | NOTE: This item is displayed, but cannot be monitored. | OFF |
| HAZARD SW | When hazard switch is not pressed | OFF |
| | When hazard switch is pressed | ON |
| REAR DEF SW | When rear window defogger switch is pressed | ON |
| TR CANCEL SW | Trunk lid opener cancel switch OFF | OFF |
| | Trunk lid opener cancel switch ON | ON |
| TR/BD OPEN SW | Trunk lid opener switch OFF | OFF |
| | While the trunk lid opener switch is turned ON | ON |
| TRNK/HAT MNTR | Trunk lid closed | OFF |
| | Trunk lid opened | ON |
| RKE-LOCK | When LOCK button of Intelligent Key is not pressed | OFF |
| | When LOCK button of Intelligent Key is pressed | ON |
| RKE-UNLOCK | When UNLOCK button of Intelligent Key is not pressed | OFF |
| | When UNLOCK button of Intelligent Key is pressed | ON |
| RKE-TR/BD | When TRUNK OPEN button of Intelligent Key is not pressed | OFF |
| | When TRUNK OPEN button of Intelligent Key is pressed | ON |
| RKE-PANIC | When PANIC button of Intelligent Key is not pressed | OFF |
| | When PANIC button of Intelligent Key is pressed | ON |
| RKE-P/W OPEN | When UNLOCK button of Intelligent Key is not pressed and held | OFF |
| | When UNLOCK button of Intelligent Key is pressed and held | ON |
| RKE-MODE CHG | When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously | OFF |
| | When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously | ON |
| OPTICAL SENSOR | When outside of the vehicle is bright | Close to 5 V |
| | When outside of the vehicle is dark | Close to 0 V |
| REQ SW-DR | When front door request switch is not pressed (driver side) | OFF |
| | When front door request switch is pressed (driver side) | ON |
| REQ SW-AS | When front door request switch is not pressed (passenger side) | OFF |
| | When front door request switch is pressed (passenger side) | ON |
| REQ SW-RL | When rear door request switch is not pressed (driver side) | OFF |
| | When rear door request switch is pressed (driver side) | ON |
| REQ SW-RR | When rear door request switch is not pressed (passenger side) | OFF |
| | When rear door request switch is pressed (passenger side) | ON |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| Monitor Item | Condition | Value/Status | |
|----------------|--|--------------|----|
| REQ SW-BD/TR | When trunk request switch is not pressed | OFF | A |
| | When trunk request switch is pressed | ON | |
| PUSH SW | When engine switch (push switch) is not pressed | OFF | B |
| | When engine switch (push switch) is pressed | ON | |
| IGN RLY 2-F/B | Ignition switch OFF or ACC | OFF | C |
| | Ignition switch ON | ON | |
| ACC RLY-F/B | Ignition switch OFF | OFF | D |
| | Ignition switch ACC or ON | ON | |
| CLUTCH SW | NOTE: This item is displayed, but cannot be monitored. | OFF | E |
| BRAKE SW 1 | When the brake pedal is not depressed | ON | |
| | When the brake pedal is depressed | OFF | |
| DETE/CANCL SW | When selector lever is in P position | OFF | F |
| | When selector lever is in any position other than P | ON | |
| SFT PN/N SW | When selector lever is in any position other than P or N | OFF | G |
| | When selector lever is in P or N position | ON | |
| S/L-LOCK | Electronic steering column lock LOCK status | OFF | H |
| | Electronic steering column lock UNLOCK status | ON | |
| S/L-UNLOCK | Electronic steering column lock UNLOCK status | OFF | I |
| | Electronic steering column lock LOCK status | ON | |
| S/L RELAY-F/B | Ignition switch OFF or ACC | OFF | J |
| | Ignition switch ON | ON | |
| UNLK SEN-DR | Driver door UNLOCK status | OFF | |
| | Driver door LOCK status | ON | |
| PUSH SW-IPDM | When engine switch (push switch) is not pressed | OFF | RF |
| | When engine switch (push switch) is pressed | ON | |
| IGN RLY1 F/B | Ignition switch OFF or ACC | OFF | |
| | Ignition switch ON | ON | |
| DETE SW -IPDM | When selector lever is in P position | OFF | L |
| | When selector lever is in any position other than P | ON | |
| SFT PN -IPDM | When selector lever is in any position other than P or N | OFF | M |
| | When selector lever is in P or N position | ON | |
| SFT P-MET | When selector lever is in any position other than P | OFF | N |
| | When selector lever is in P position | ON | |
| SFT N-MET | When selector lever is in any position other than N | OFF | O |
| | When selector lever is in N position | ON | |
| ENGINE STATE | Engine stopped | STOP | |
| | While the engine stalls | STALL | |
| | At engine cranking | CRANK | P |
| | Engine running | RUN | |
| S/L LOCK-IPDM | Electronic steering column lock LOCK status | OFF | |
| | Electronic steering column lock UNLOCK status | ON | |
| S/L UNLCK-IPDM | Electronic steering column lock UNLOCK status | OFF | |
| | Electronic steering column lock LOCK status | ON | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| Monitor Item | Condition | Value/Status |
|----------------|---|--|
| S/L RELAY-REQ | Ignition switch OFF or ACC | OFF |
| | Ignition switch ON | ON |
| VEH SPEED 1 | While driving | Equivalent to speedometer reading |
| VEH SPEED 2 | While driving | Equivalent to speedometer reading |
| DOOR STAT-DR | Driver door LOCK status | LOCK |
| | Wait with selective UNLOCK operation (5 seconds) | READY |
| | Driver door UNLOCK status | UNLK |
| DOOR STAT-AS | Passenger door LOCK status | LOCK |
| | Wait with selective UNLOCK operation (5 seconds) | READY |
| | Passenger door UNLOCK status | UNLK |
| ID OK FLAG | Ignition switch ACC or ON | RESET |
| | Ignition switch OFF | SET |
| PRMT ENG STAT | When the engine start is prohibited | RESET |
| | When the engine start is permitted | SET |
| PRMT RKE STAT | NOTE: This item is displayed, but cannot be monitored. | RESET |
| KEY SW -SLOT | When Intelligent Key is not inserted into key slot | OFF |
| | When Intelligent Key is inserted into key slot | ON |
| RKE OPE COUN1 | During the operation of Intelligent Key | Operation frequency of Intelligent Key |
| RKE OPE COUN2 | NOTE: This item is displayed, but cannot be monitored. | Operation frequency of Intelligent Key |
| CONFIRM ID ALL | The key ID that the key slot receives does not accord with any key ID registered to BCM. | YET |
| | The key ID that the key slot receives accords with any key ID registered to BCM. | DONE |
| CONFIRM ID4 | The key ID that the key slot receives does not accord with the fourth key ID registered to BCM. | YET |
| | The key ID that the key slot receives accords with the fourth key ID registered to BCM. | DONE |
| CONFIRM ID3 | The key ID that the key slot receives does not accord with the third key ID registered to BCM. | YET |
| | The key ID that the key slot receives accords with the third key ID registered to BCM. | DONE |
| CONFIRM ID2 | The key ID that the key slot receives does not accord with the second key ID registered to BCM. | YET |
| | The key ID that the key slot receives accords with the second key ID registered to BCM. | DONE |
| CONFIRM ID1 | The key ID that the key slot receives does not accord with the first key ID registered to BCM. | YET |
| | The key ID that the key slot receives accords with the first key ID registered to BCM. | DONE |
| TP 4 | The ID of fourth key is not registered to BCM | YET |
| | The ID of fourth key is registered to BCM | DONE |
| TP 3 | The ID of third key is not registered to BCM | YET |
| | The ID of third key is registered to BCM | DONE |
| TP 2 | The ID of second key is not registered to BCM | YET |
| | The ID of second key is registered to BCM | DONE |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| Monitor Item | Condition | Value/Status |
|--------------|--|-------------------------------|
| TP 1 | The ID of first key is not registered to BCM | YET |
| | The ID of first key is registered to BCM | DONE |
| AIR PRESS FL | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of front LH tire |
| AIR PRESS FR | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of front RH tire |
| AIR PRESS RR | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of rear RH tire |
| AIR PRESS RL | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of rear LH tire |
| ID REGST FL1 | When ID of front LH tire transmitter is registered | DONE |
| | When ID of front LH tire transmitter is not registered | YET |
| ID REGST FR1 | When ID of front RH tire transmitter is registered | DONE |
| | When ID of front RH tire transmitter is not registered | YET |
| ID REGST RR1 | When ID of rear RH tire transmitter is registered | DONE |
| | When ID of rear RH tire transmitter is not registered | YET |
| ID REGST RL1 | When ID of rear LH tire transmitter is registered | DONE |
| | When ID of rear LH tire transmitter is not registered | YET |
| WARNING LAMP | Tire pressure indicator OFF | OFF |
| | Tire pressure indicator ON | ON |
| BUZZER | Tire pressure warning alarm is not sounding | OFF |
| | Tire pressure warning alarm is sounding | ON |

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF


BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >

Terminal Layout

INFOID:000000004392580

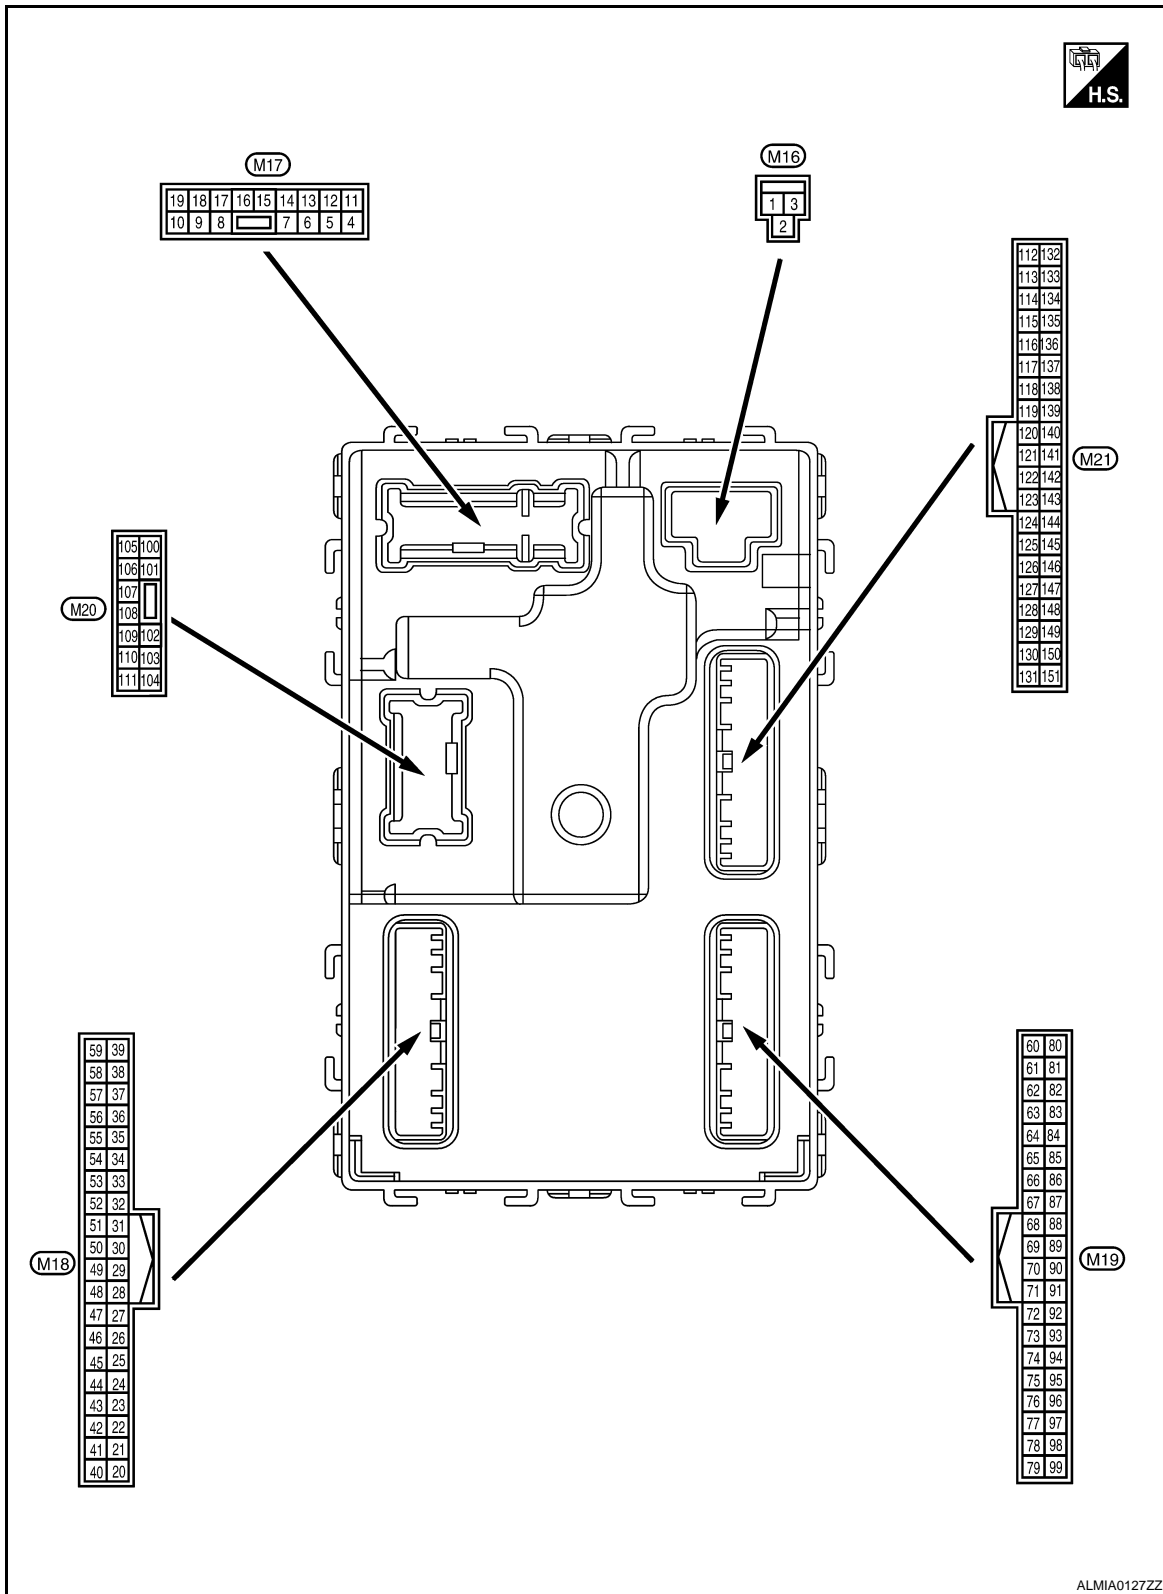


Physical Values

INFOID:000000004392581

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]



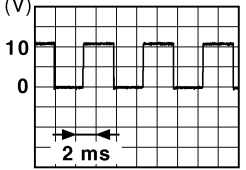
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|--|---|--|
| | | Signal name | Input/ Output | | | |
| (+) | (-) | | | | | |
| 1 (W/B) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 2 (R/Y) | Ground | Battery power supply output | Output | Ignition switch OFF | | Battery voltage |
| 3 (L/W) | Ground | Ignition power supply output | Output | Ignition switch ON | | Battery voltage |
| 4 (P/W) | Ground | Interior room lamp power supply | Output | After passing the interior room lamp battery saver operation time | | 0V |
| | | | | Any other time after passing the interior room lamp battery saver operation time | | Battery voltage |
| 5 (G) | Ground | Front door RH UNLOCK | Output | Front door RH | UNLOCK (actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (actuator is not activated) | 0V |
| 7 (R/W) | Ground | Step lamp | Output | Step lamp | ON | 0V |
| | | | | | OFF | Battery voltage |
| 8 (V) | Ground | All doors LOCK | Output | All doors | LOCK (actuator is activated) | Battery voltage |
| | | | | | Other than LOCK (actuator is not activated) | 0V |
| 9 (L) | Ground | Front door LH UNLOCK | Output | Front door LH | UNLOCK (actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (actuator is not activated) | 0V |
| 10 (G) | Ground | Rear door RH and rear door LH UNLOCK | Output | Rear door RH and rear door LH | UNLOCK (actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (actuator is not activated) | 0V |
| 11 (Y/R) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 13 (B) | Ground | Ground | — | Ignition switch ON | | 0V |
| 14 (GR/W) | Ground | Engine switch (push switch) illumination ground | Input | Tail lamp | OFF | 0V |
| | | | | | ON | <p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p> |
| 15 (Y/L) | Ground | ACC indicator lamp | Output | Ignition switch | OFF | Battery voltage |
| | | | | | ACC or ON | 0V |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >




[WITH DUAL PANEL SUNROOF]
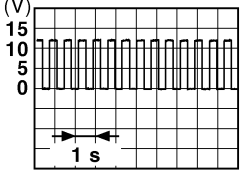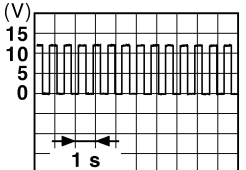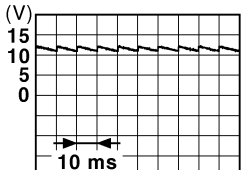
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|--|--|--|
| (+) | (-) | Signal name | Input/ Output | | | |
| 17 (G/B) | Ground | Turn signal (RH) | Output | Ignition switch ON | Turn signal switch OFF | 0V |
| | | | | | Turn signal switch RH |  <p style="text-align: center;">6.5 V</p> |
| 18 (G/Y) | Ground | Turn signal (LH) | Output | Ignition switch ON | Turn signal switch OFF | 0V |
| | | | | | Turn signal switch LH |  <p style="text-align: center;">6.5 V</p> |
| 19 (Y) | Ground | Room lamp timer control | Output | Interior room lamp | OFF | Battery voltage |
| | | | | | ON | 0V |
| 21 (P/B) | Ground | Optical sensor signal | Input | Ignition switch ON | When outside of the vehi- cle is bright | Close to 5V |
| | | | | | When outside of the vehi- cle is dark | Close to 0V |
| 24 (R/W) | Ground | Stop lamp switch 1 | Input | — | Battery voltage | |
| 26 (O/L) | Ground | Stop lamp switch 2 | Input | Stop lamp switch | OFF (brake pedal is not de- pressed) | 0V |
| | | | | | ON (brake pedal is de- pressed) | Battery voltage |
| 27 (O) | Ground | Front door lock as- sembly LH (unlock sensor) | Input | Front door LH | LOCK status |  <p style="text-align: center;">11.8V</p> |
| | | | | | UNLOCK status | 0V |
| 29 (Y) | Ground | Key slot switch | Input | When Intelligent Key is inserted into key slot | Battery voltage | |
| | | | | When Intelligent Key is not inserted into key slot | 0V | |
| 30 (V/Y) | Ground | ACC feedback signal | Input | Ignition switch | OFF | 0 |
| | | | | | ACC or ON | Battery voltage |
| 31 (G) | Ground | Rear window defog- ger feedback signal | Input | Rear window de- fogger switch | OFF | 0V |
| | | | | | ON | Battery voltage |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

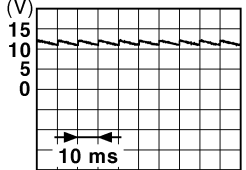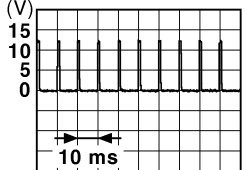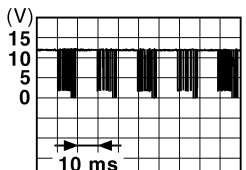

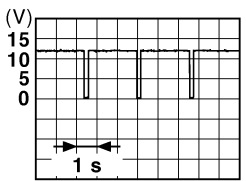
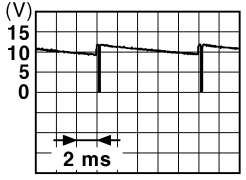
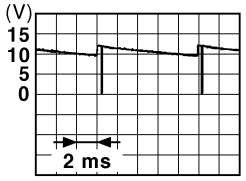
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|--|--|
| | | Signal name | Input/ Output | | |
| (+) | (-) | | | | |
| 32 (R/B) | Ground | Front door RH switch | Input | Front door RH switch | OFF (when front door RH closes)  <small>JPMIA0011GB</small> 11.8 V |
| | | | | ON (when front door RH opens) | 0V |
| 37 (O) | Ground | Trunk lid opener cancel switch | Input | Trunk lid opener cancel switch | CANCEL  <small>JPMIA0012GB</small> 1.1V |
| | | | | ON | 0V |
| 38 (GR/W) | Ground | Rear window defogger ON signal | Input | Rear window defogger switch | OFF ON |
| | | | | 5V 0V | |
| 40 (Y/G) | Ground | Power window serial link | Input/ Output | Ignition switch ON |  <small>JPMIA0013GB</small> 10.2V |
| | | | | Ignition switch OFF or ACC | 0V |
| 41 (W) | Ground | Engine switch (push switch) illumination | Output | Engine switch (push switch) illumination | ON OFF |
| | | | | 5.5V 0V | |
| 42 (R) | Ground | LOCK indicator lamp | Output | LOCK indicator lamp | ON OFF |
| | | | | 0V Battery voltage | |
| 45 (P) | Ground | Receiver & sensor ground | Input | Ignition switch ON | 0V |
| 46 (V/W) | Ground | Receiver & sensor power supply output | Output | Ignition switch | OFF ACC or ON |
| | | | | 0V 5.0V | |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >
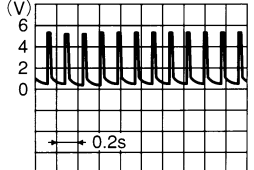
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|------------------------------------|------------------|--|--|
| | | Signal name | Input/ Output | | |
| (+) | (-) | | | | |
| 47 (G/O) | Ground | Tire pressure receiver signal | Input/ Output | Ignition switch ON | Standby state  OCC3881D |
| | | | | When receiving the signal from the transmitter  OCC3880D | |
| 48 (R/G) | Ground | Selector lever P/N position signal | Input | Selector lever | P or N position 12.0V |
| | | | | Except P and N positions 0V | |
| 49 (L/O) | Ground | Security indicator signal | Output | Security indicator | ON 0V |
| | | | | Blinking  11.3V JPMIA0014GB | |
| 50 (LG/B) | Ground | Combination switch OUTPUT 5 | Output | Combination switch (Wiper intermittent dial 4) | All switch OFF 0V |
| | | | | Lighting switch 1ST |  10.7V JPMIA0031GB |
| | | | | Lighting switch high-beam | |
| | | | | Lighting switch 2ND | |
| Turn signal switch RH | | | | | |
| 51 (L/W) | Ground | Combination switch OUTPUT 1 | Output | Combination switch | All switch OFF (Wiper intermittent dial 4) 0V |
| | | | | Front wiper switch HI (Wiper intermittent dial 4) |  10.7V JPMIA0032GB |
| | | | | Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7 | |

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >







| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | | |
|------------------------------|--------|---|------------------|---|--|---|--|
| | | Signal name | Input/ Output | | | | |
| (+) | (-) | | | | | | |
| 52 (G/B) | Ground | Combination switch OUTPUT 2 | Output | Combination switch | All switch OFF (Wiper intermittent dial 4) | 0V | |
| | | | | | Front washer switch ON (Wiper intermittent dial 4) | <p style="text-align: right; font-size: small;">JPMIA0033GB</p> | |
| | | | | | Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 | | |
| | | | | | | | |
| 53 (LG/ R) | Ground | Combination switch OUTPUT 3 | Output | Combination switch (Wiper intermit- tent dial 4) | All switch OFF | 0V | |
| | | | | | Front wiper switch INT | <p style="text-align: right; font-size: small;">JPMIA0034GB</p> | |
| | | | | | Front wiper switch LO | | |
| | | | | | Lighting switch AUTO | | |
| 54 (G/Y) | Ground | Combination switch OUTPUT 4 | Output | Combination switch (Wiper intermit- tent dial 4) | All switch OFF | 0V | |
| | | | | | Front fog lamp switch ON | <p style="text-align: right; font-size: small;">JPMIA0035GB</p> | |
| | | | | | Lighting switch 2ND | | |
| | | | | | Lighting switch flash-to- pass | | |
| | | | | Turn signal switch LH | | | |
| 57 (W) | Ground | Tire pressure warn- ing check switch | Input | — | 5V | | |
| 58 (SB) | Ground | Front door LH switch | Input | Front door LH switch | OFF (front door LH CLOSE) | <p style="text-align: right; font-size: small;">JPMIA0011GB</p> | |
| | | | | | ON (front door LH OPEN) | 0V | |
| 59 (G/R) | Ground | Rear window defog- ger relay | Output | Rear window de- fogger | Active | Battery voltage | |
| | | | | | Not activated | 0V | |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >







[WITH DUAL PANEL SUNROOF]
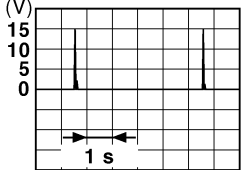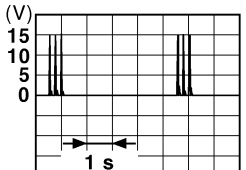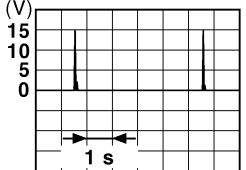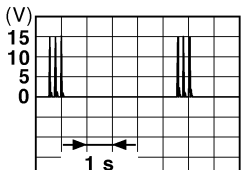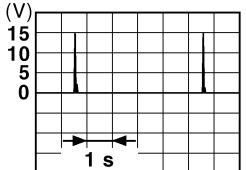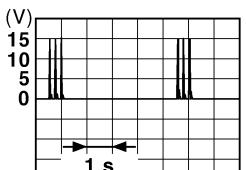
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------------|------------------|--|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 60 (B/R) | Ground | Front console antenna 2 (-) | Output | Ignition switch OFF |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 61 (W/R) | Ground | Center console antenna 2 (+) | Output | Ignition switch OFF |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 62 (V) | Ground | Front outside handle RH antenna (-) | Output | When the front door RH request switch is operated with ignition switch OFF |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]
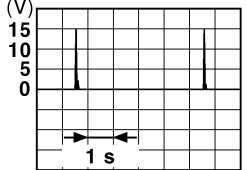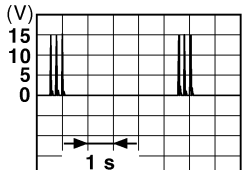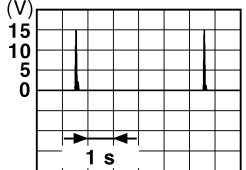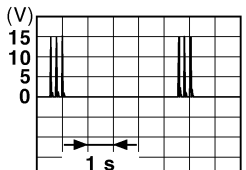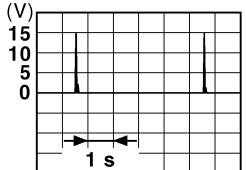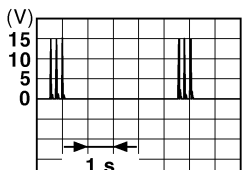
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|--|--|
| (+) | (-) | Signal name | Input/ Output | | |
| 63 (P) | Ground | Front outside handle RH antenna (+) | Output | When the front door RH request switch is operat- ed with ignition switch OFF | When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the antenna detection area |  <small>JMKIA0063GB</small> |
| 64 (V) | Ground | Front outside handle LH antenna (-) | Output | When the front door LH request switch is operat- ed with ignition switch OFF | When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the antenna detection area |  <small>JMKIA0063GB</small> |
| 65 (P) | Ground | Front outside handle LH antenna (+) | Output | When the front door LH request switch is operat- ed with ignition switch OFF | When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the antenna detection area |  <small>JMKIA0063GB</small> |





A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]
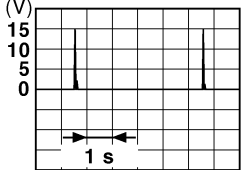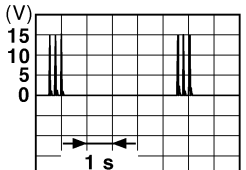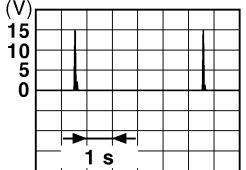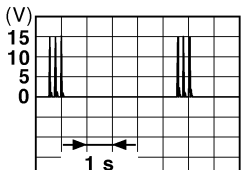
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--------------------------------------|------------------|----------------------------|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 66 (R) | Ground | Instrument panel antenna (-) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compartment  <small>JMKIA0062GB</small> |
| | | | | Ignition switch ON | When Intelligent Key is not in the passenger compartment  <small>JMKIA0063GB</small> |
| 67 (G) | Ground | Instrument panel antenna (+) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compartment  <small>JMKIA0062GB</small> |
| | | | | Ignition switch ON | When Intelligent Key is not in the passenger compartment  <small>JMKIA0063GB</small> |
| 68 (G/O) | Ground | NATS antenna amp (built in key slot) | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. Just after pressing ignition switch. Pointer of tester should move. |
| 69 (O) | Ground | NATS antenna amp (built in key slot) | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. Just after pressing ignition switch. Pointer of tester should move. |
| 70 (R/B) | Ground | Ignition relay-2 control | Output | Ignition switch OFF or ACC | 0V |
| | | | | Ignition switch ON | Battery voltage |

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >



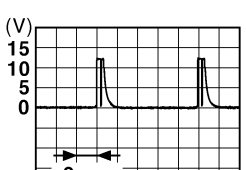
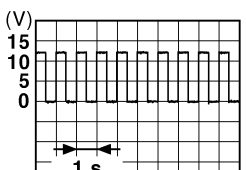
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|---|------------------|---|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 71 (L/O) | Ground | Remote keyless entry receiver signal | Input/ Output | During waiting | <p style="text-align: right;">JMKIA0064GB</p> |
| | | | | When operating either button on Intelligent Key | <p style="text-align: right;">JMKIA0065GB</p> |
| 75 (R/Y) | Ground | Combination switch INPUT 5 | Input | Combination switch | <p>All switch OFF (Wiper intermittent dial 4)</p> <p style="text-align: right;">JPMIA0041GB</p> <p style="text-align: center;">1.4V</p> |
| | | | | Combination switch | <p>Front fog lamp switch ON (Wiper intermittent dial 4)</p> <p style="text-align: right;">JPMIA0037GB</p> <p style="text-align: center;">1.3V</p> |
| | | | | Combination switch | <p>Any of the conditions below with all switch OFF</p> <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 <p style="text-align: right;">JPMIA0040GB</p> <p style="text-align: center;">1.3V</p> |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >
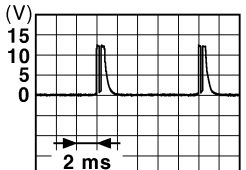
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--------------------------------|------------------|---|---|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 76 (R/G) | Ground | Combination switch INPUT 3 | Input | | | Combination switch |
| | | | | Lighting switch high-beam (Wiper intermittent dial 4) |  <small>JPMIA0036GB</small> 1.3V | |
| | | | | Lighting switch 2ND (Wiper intermittent dial 4) |  <small>JPMIA0037GB</small> 1.3V | |
| | | | | Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 |  <small>JPMIA0040GB</small> 1.3V | |
| 77 (BR) | Ground | Engine switch (push switch) | Input | Engine switch (push switch) | Pressed | 0V |
| | | | | | Not pressed | Battery voltage |
| 78 (P) | Ground | CAN-L | Input/ Output | — | — | |
| 79 (L) | Ground | CAN-H | Input/ Output | — | — | |
| 80 (R/L) | Ground | Key slot illumination | Output | Key slot illumina- tion | OFF | 0V |
| | | | | | Blinking |  <small>JPMIA0015GB</small> 6.5V |
| | | | | | ON | Battery voltage |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]


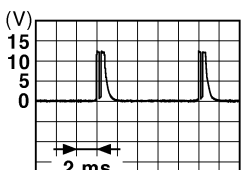
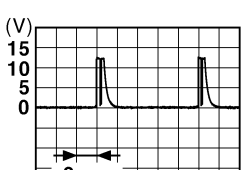
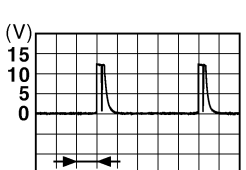
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---------------------------------|---------------------------|--|
| | | Signal name | Input/ Output | | | |
| (+) | (-) | | | | | |
| 81 (Y/L) | Ground | ON indicator lamp | Output | Ignition switch | OFF or ACC | 0V |
| | | | | | ON | Battery voltage |
| 83 (L) | Ground | ACC relay control | Output | Ignition switch | OFF | 0V |
| | | | | | ACC or ON | Battery voltage |
| 84 (Y/R) | Ground | A/T device | Output | — | | Battery voltage |
| 85 (L/O) | Ground | Electronic steering column lock condition No. 1 | Input | Electronic steering column lock | Lock status | 0V |
| | | | | | Unlock status | Battery voltage |
| 86 (G/R) | Ground | Electronic steering column lock condition No. 2 | Input | Electronic steering column lock | Lock status | Battery voltage |
| | | | | | Unlock status | 0V |
| 87 (G/B) | Ground | Selector lever P position switch | Input | Selector lever | P position | 0V |
| | | | | | Any position other than P | Battery voltage |
| 88 (R) | Ground | Front door RH request switch | Input | Front door RH request switch | ON (pressed) | 0V |
| | | | | | OFF (not pressed) | <p style="text-align: right; font-size: small;">JPMIA0016GB 1.0V</p> |
| 89 (R) | Ground | Front door LH request switch | Input | Front door LH request switch | ON (pressed) | 0V |
| | | | | | OFF (not pressed) | <p style="text-align: right; font-size: small;">JPMIA0016GB 1.0V</p> |
| 90 (Y) | Ground | Blower fan motor relay control | Output | Ignition switch | OFF or ACC | 0V |
| | | | | | ON | Battery voltage |
| 91 (L/R) | Ground | Remote keyless entry receiver power supply | Output | Ignition switch OFF | | Battery voltage |
| 94 (G/Y) | Ground | Steering wheel lock unit power supply | Output | Ignition switch | OFF or ACC | Battery voltage |
| | | | | | ON | 0V |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]





< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|------------------------|--|
| (+) | (-) | Signal name | Input/ Output | | |
| 95 (R/W) | Ground | Combination switch INPUT 1 | Input | | |
| | | | | Turn signal switch LH |  <p style="text-align: right;">1.3V</p> |
| | | | | Turn signal switch RH |  <p style="text-align: right;">1.3V</p> |
| | | | | Front wiper switch LO |  <p style="text-align: right;">1.3V</p> |
| | | | | Front washer switch ON |  <p style="text-align: right;">1.3V</p> |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]
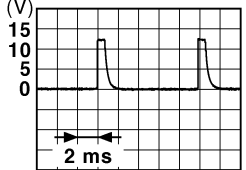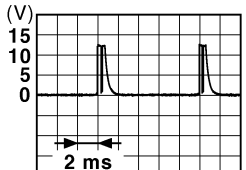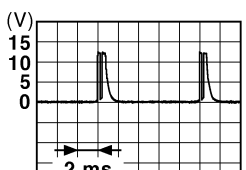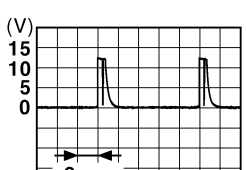
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|---|--|
| (+) | (-) | Signal name | Input/ Output | | |
| 96 (P/B) | Ground | Combination switch INPUT 4 | Input | Combination switch | All switch OFF (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0041GB</p> <p style="margin: 0;">1.4V</p> </div> |
| | | | | Lighting switch AUTO (Wiper intermittent dial 4) | <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0038GB</p> <p style="margin: 0;">1.3V</p> </div> |
| | | | | Lighting switch 1ST (Wiper intermittent dial 4) | <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0036GB</p> <p style="margin: 0;">1.3V</p> </div> |
| | | | | Any of the conditions below with all switch OFF | <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0039GB</p> <p style="margin: 0;">1.3V</p> </div> |


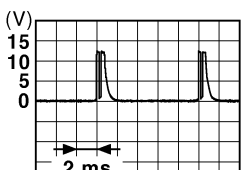
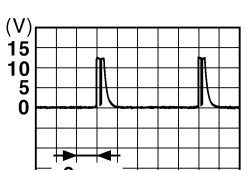
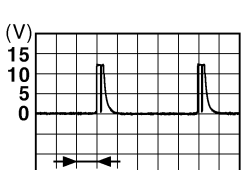
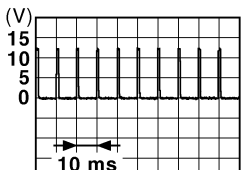
A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]




< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|-------------------------------|---|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 97 (R/B) | Ground | Combination switch INPUT 2 | Input | | | Combination switch (Wiper intermittent dial 4) |
| | | | | Lighting switch flash-to-pass |  <small>JPMIA0037GB</small> 1.3V | |
| | | | | Lighting switch 2ND |  <small>JPMIA0036GB</small> 1.3V | |
| | | | | Front wiper switch INT |  <small>JPMIA0038GB</small> 1.3V | |
| | | | | Front wiper switch HI |  <small>JPMIA0040GB</small> 1.3V | |
| | | | | Pressed | 0 V | |
| 98 (G/O) | Ground | Hazard switch | Input | Hazard switch | Not pressed |  <small>JPMIA0012GB</small> 1.1V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]



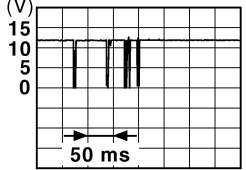
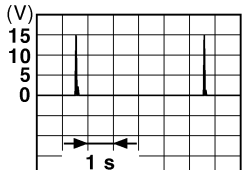
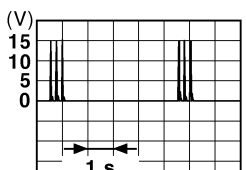
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--|------------------|--------------------------------------|--|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 99 (L/Y) | Ground | Electronic steering column lock unit com- munication | Input/ Output | Electronic steer- ing column lock | LOCK status | Battery voltage |
| | | | | | LOCK or UNLOCK |  <p style="text-align: right; font-size: small;">JMKIA0066GB</p> |
| | | | | | For 15 seconds after UN- LOCK | Battery voltage |
| | | | | | 15 seconds or later after UNLOCK | 0V |
| 103 (V) | Ground | Trunk lid opening. | Output | Trunk lid | Open (trunk lid opener ac- tuator is activated) | Battery voltage |
| | | | | | Close (trunk lid opener ac- tuator is not activated) | 0V |
| 110 (V/W) | Ground | Trunk room lamp | Output | Trunk room lamp | ON | 0V |
| | | | | | OFF | Battery voltage |
| 114 (B) | Ground | Trunk room antenna 1 (-) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | | When Intelligent Key is not in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >




[WITH DUAL PANEL SUNROOF]
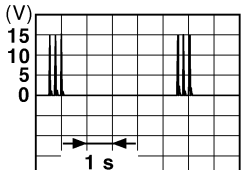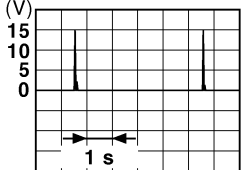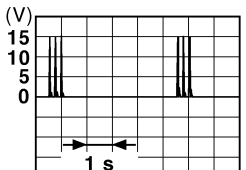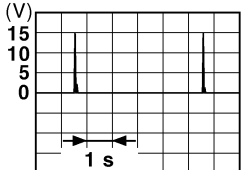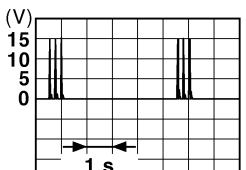
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|------------------------------|------------------|--|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 115 (W) | Ground | Trunk room antenna 1 (+) | Output | | |
| | | | | When Intelligent Key is not in the passenger compart- ment  <small>JMKIA0063GB</small> | |
| 118 (L/O) | Ground | Rear bumper anten- na (-) | Output | When the trunk lid request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the antenna detection area  <small>JMKIA0063GB</small> | |
| 119 (BR/ W) | Ground | Rear bumper anten- na (+) | Output | When the trunk lid request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the antenna detection area  <small>JMKIA0063GB</small> | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]
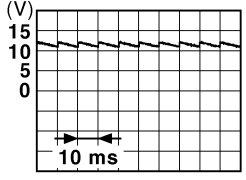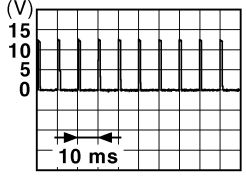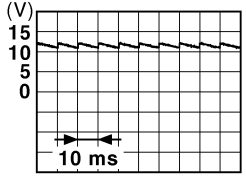
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--------------------------------------|------------------|--|--|---|
| | | Signal name | Input/ Output | | | |
| (+) | (-) | | | | | |
| 127 (BR/ W) | Ground | Ignition relay (IPDM E/R) control | Output | Ignition switch | OFF or ACC | Battery voltage |
| | | | | | ON | 0V |
| 130 (W) | Ground | Trunk room lamp switch | Input | Trunk room lamp switch | OFF (trunk is closed) |  <p style="text-align: right; margin-right: 50px;">11.8V</p> |
| | | | | | ON (trunk is open) | 0V |
| 132 (R) | Ground | Starter motor relay control | Output | Ignition switch OFF (M/T vehi- cle) | When the clutch pedal is depressed | Battery voltage |
| | | | | | When the clutch pedal is not depressed | 0V |
| | | | | Ignition switch ON (other than M/ T vehicle) | When selector lever is in P or N position and the brake is depressed | Battery voltage |
| | | | | | When selector lever is in P or N position and the brake is not depressed | 0V |
| 141 (BR) | Ground | Trunk request switch | Input | Trunk request switch | ON (pressed) | 0V |
| | | | | | OFF (not pressed) |  <p style="text-align: right; margin-right: 50px;">1.0V</p> |
| 144 (GR) | Ground | Request switch buzz- er | Output | Request switch buzzer | Sounding | 0V |
| | | | | | Not sounding | Battery voltage |
| 147 (L/R) | Ground | Trunk lid opener switch | Input | Trunk lid opener switch | Pressed | 0V |
| | | | | | Not pressed | Battery voltage |
| 148 (R/W) | Ground | Rear door RH switch | Input | Rear door RH switch | OFF (when rear door RH closes) |  <p style="text-align: right; margin-right: 50px;">11.8V</p> |
| | | | | | ON (when rear door RH opens) | 0V |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|---------------------|------------------|------------------------------|--------------------------------|
| (+) | (-) | Signal name | Input/ Output | | |
| 149 (R/B) | Ground | Rear door LH switch | Input | Rear door LH switch | OFF (when rear door LH closes) |
| | | | | ON (when rear door LH opens) | 0V |

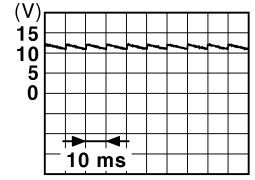

JPMIA0011GB


11.8V

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >

— : DATA LINE

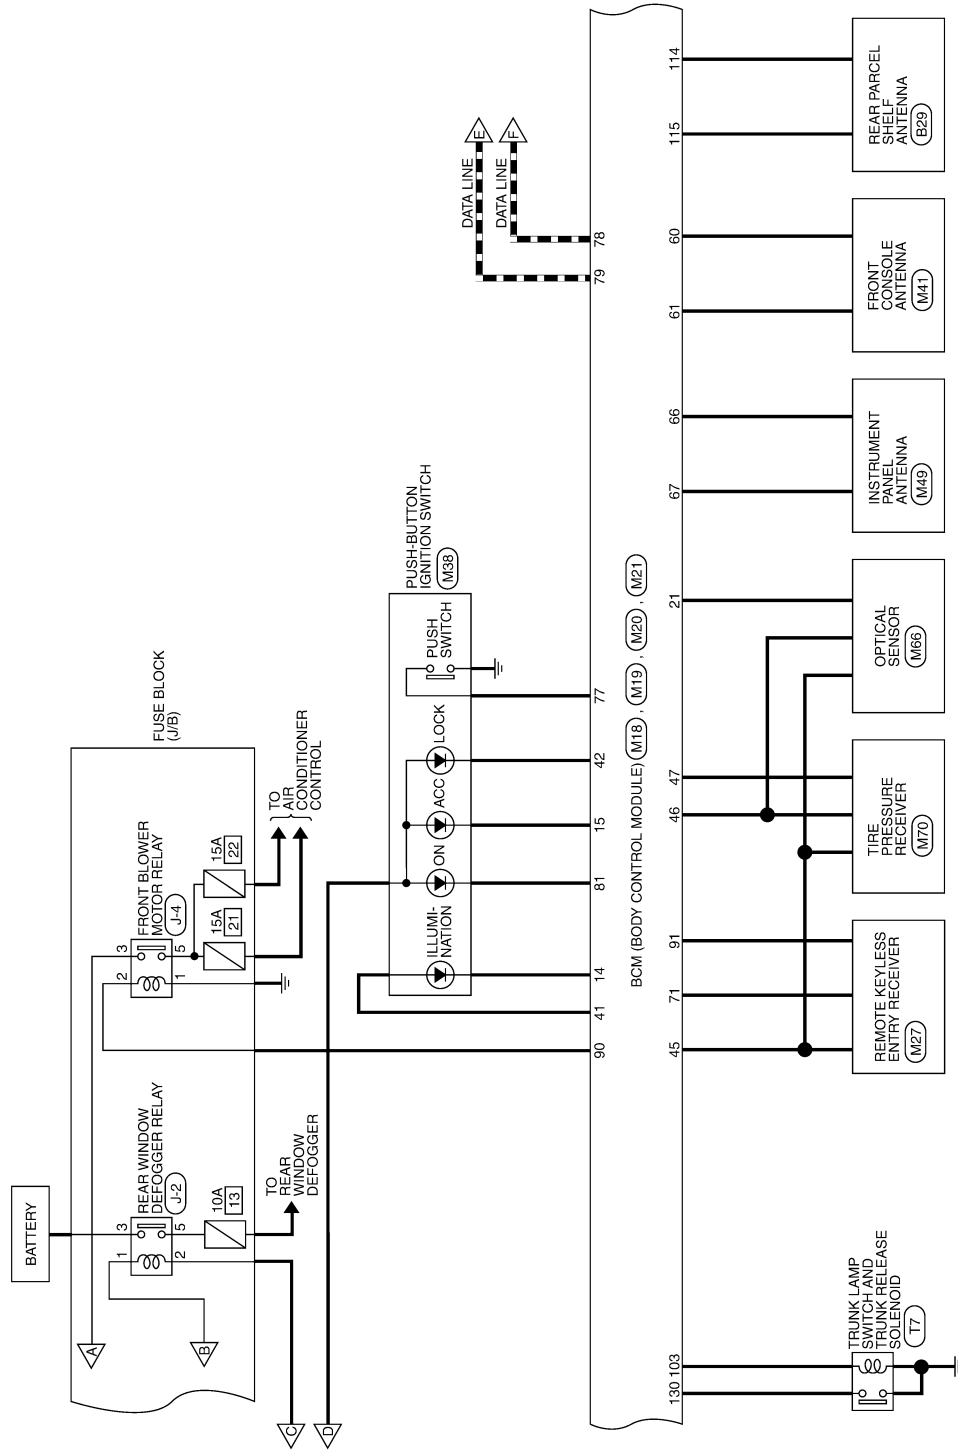


ABMWA0078GI

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >

- - - : DATA LINE
 <AD> : WITH AUTOMATIC DRIVE POSITIONER
 <EN> : WITHOUT NAVI
 <NV> : WITH NAVI

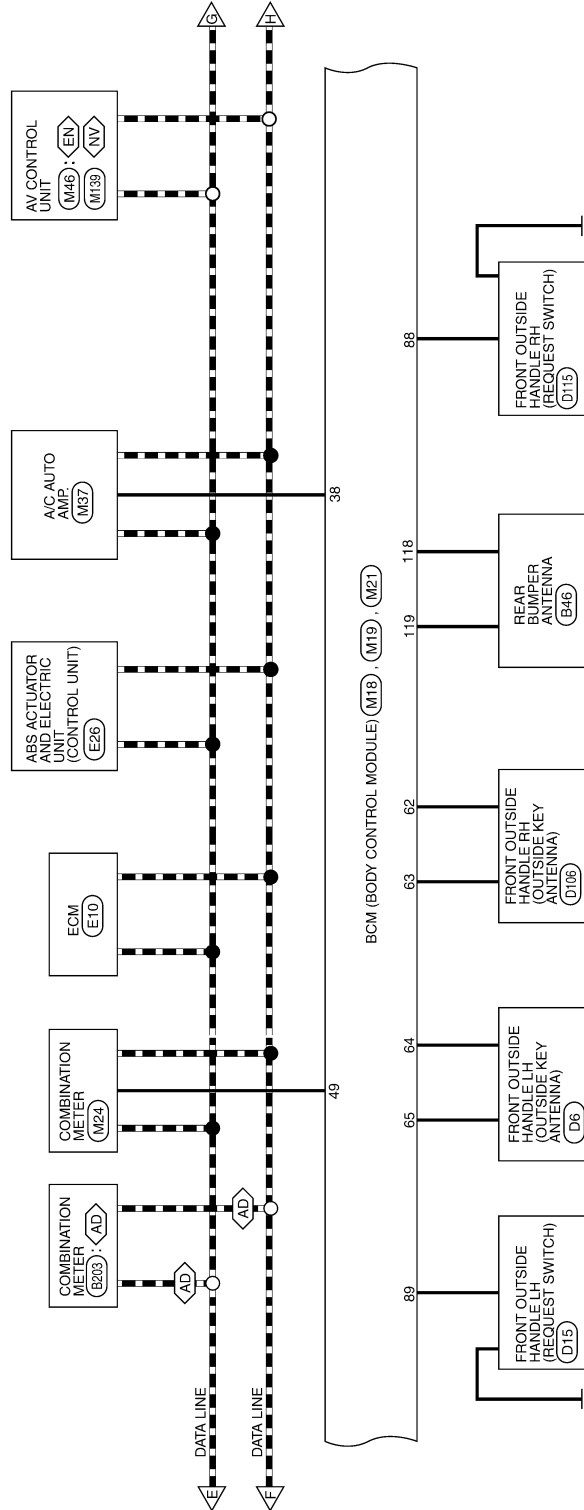

ABMWA0079GI


A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >

--- : DATA LINE

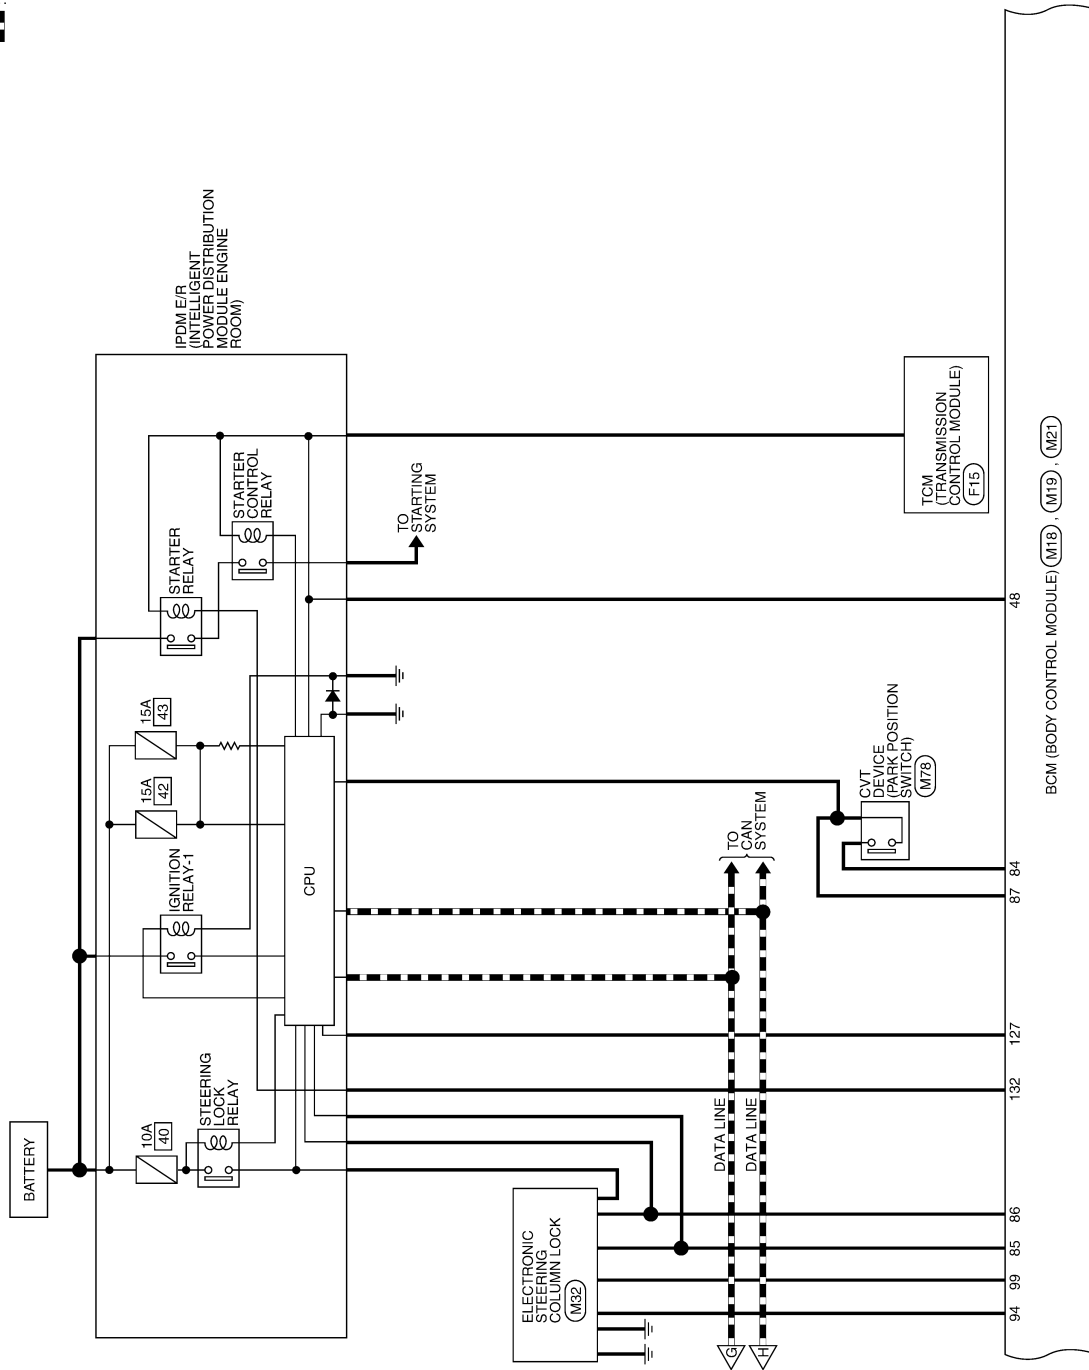


ABMWA0080GI

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >

- $\langle A2 \rangle$: WITH LEFT AND RIGHT FRONT POWER WINDOW ANTI-PINCH SYSTEM
- $\langle A3 \rangle$: WITH FRONT AND REAR POWER WINDOW ANTI-PINCH SYSTEM
- $\langle DP \rangle$: WITH DUAL PANEL SUNROOF
- $\langle DW \rangle$: WITHOUT DUAL PANEL SUNROOF

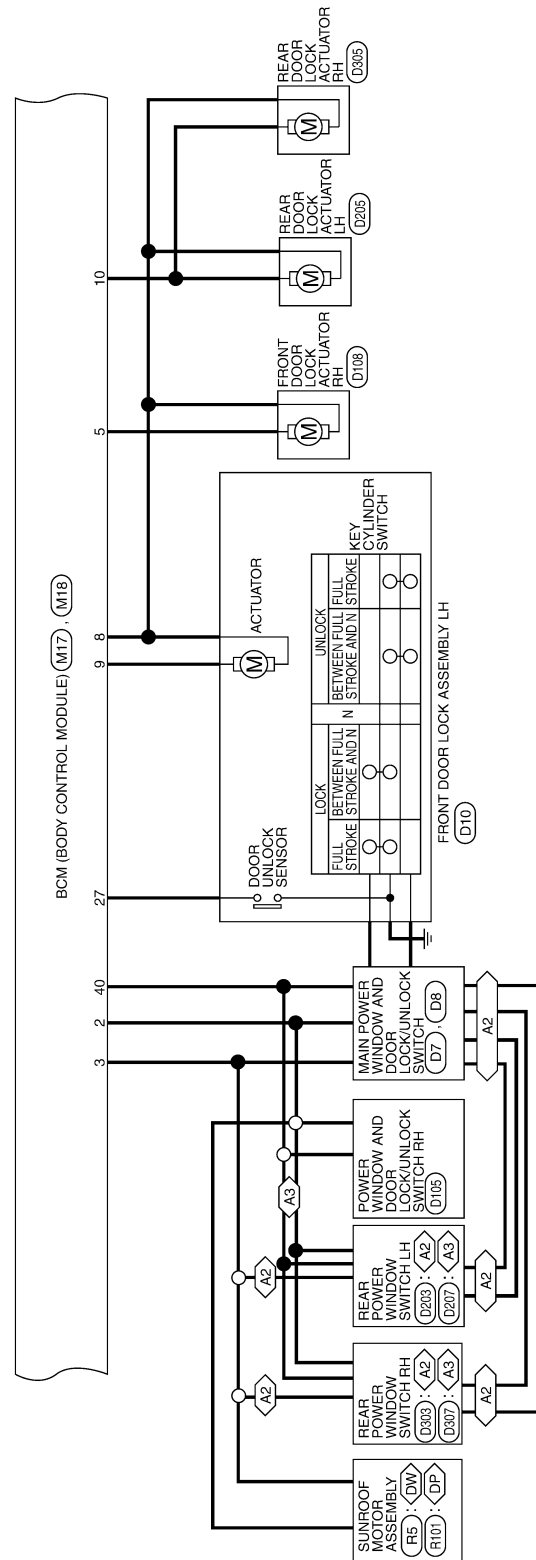

ABMWA0081G1


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

RF

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

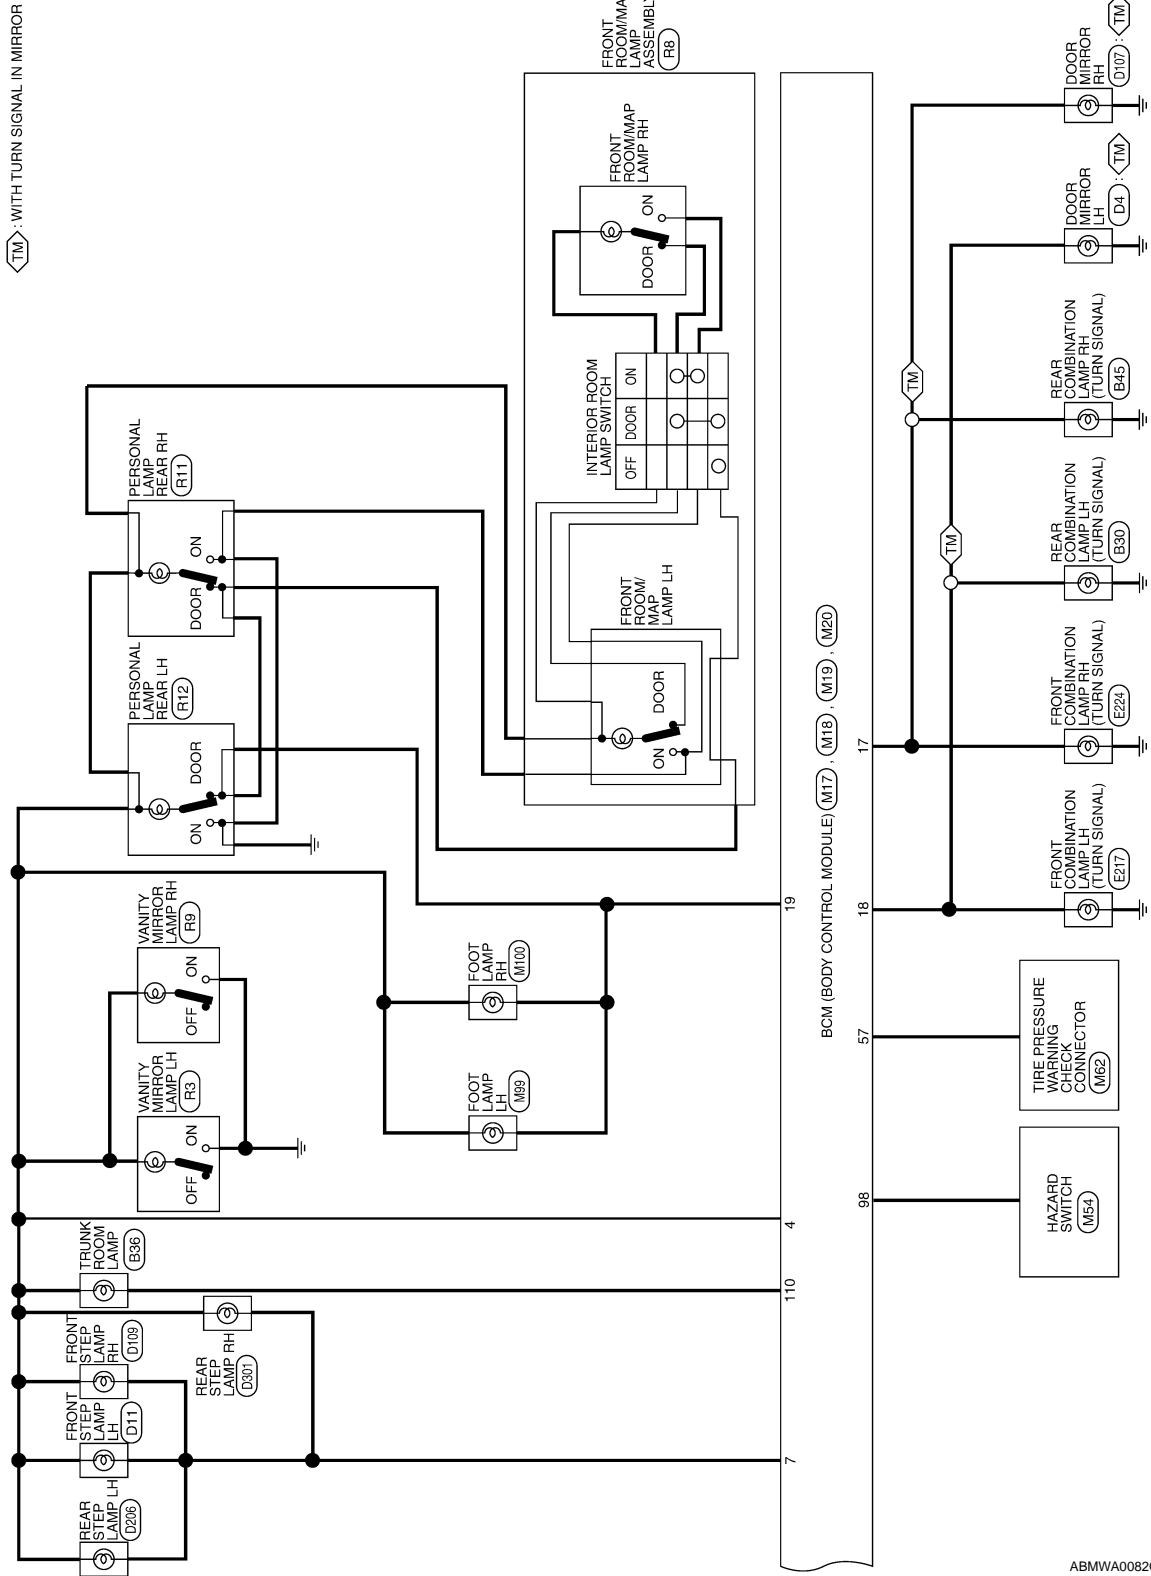

ABMWA0082GI

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >


BCM (BODY CONTROL MODULE) CONNECTORS

| | |
|-----------------|---------------------------|
| Connector No. | M16 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | BLACK |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------------|
| 1 | W/B | BAT POWER F/L |
| 2 | R/Y | P/W POWER SUPPLY PERM |
| 3 | L/W | P/W POWER SUPPLY IGN |

| | |
|-----------------|---------------------------|
| Connector No. | M17 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|----------------------------|
| 4 | P/W | R/L POWER SUPPLY |
| 5 | G | DOOR UNLOCK OUTPUT AS |
| 6 | - | - |
| 7 | R/W | STEP LAMP CONT |
| 8 | V | DOOR UNLOCK OUTPUT ALL |
| 9 | L | DOOR UNLOCK OUTPUT (DR/FL) |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|----------------------------|
| 10 | G | DOOR UNLOCK OUTPUT (RR/RL) |
| 11 | Y/R | BAT BCM FUSE |
| 12 | - | - |
| 13 | B | GND1 |
| 14 | GR/W | LOW SIDE PUSH LED |
| 15 | Y/L | ACC LED |
| 16 | - | - |
| 17 | G/B | FR FLASHER |
| 18 | G/Y | FL FLASHER |
| 19 | Y | ROOM LAMP CONT |

| | |
|-----------------|---------------------------|
| Connector No. | M18 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | GREEN |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------------|
| 20 | - | - |
| 21 | P/B | A/L SIGNAL TYPE 1 |
| 22 | - | - |
| 23 | - | - |
| 24 | R/W | BRAKE SW1 |
| 25 | - | - |
| 26 | O/L | BRAKE SW2 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|---------------------|
| 27 | O | DOOR LOCK STATUS DR |
| 28 | - | - |
| 29 | Y | FOB IN SW 1 |
| 30 | V/Y | ACC F/B |
| 31 | G | IGN F/B |
| 32 | R/B | AS DOOR SW 1 |
| 33 | - | - |
| 34 | - | - |
| 35 | - | - |
| 36 | - | - |
| 37 | O | TRUNK CANCEL SW |
| 38 | GR/W | REAR DEFOGGER SW |
| 39 | - | - |
| 40 | Y/G | PW K-LINE |
| 41 | W | PUSH LED |
| 42 | R | S/L LOCK LED |
| 43 | - | - |
| 44 | - | - |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------------------------|
| 45 | P | GND RF2 A/L |
| 46 | V/W | A/L POWER SUPPLY 5V |
| 47 | G/O | RF2 TUNER SIGNAL |
| 48 | R/G | SHIFT N/R/NEUTRAL SW |
| 49 | L/O | IMMO LED (SECURITY INDICATOR) |
| 50 | LG/B | COMBI SW OUT 5 |
| 51 | L/W | COMBI SW OUT 1 |
| 52 | G/B | COMBI SW OUT 2 |
| 53 | LG/R | COMBI SW OUT 3 |
| 53 | G/Y | COMBI SW OUT 4 |
| 54 | - | - |
| 55 | - | - |
| 56 | W | TPMS MODE |
| 58 | SB | DR DOOR SW |
| 59 | G/R | REAR DEFOGGER |

ABMIA0177GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| | |
|-----------------|---------------------------|
| Connector No. | M19 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | BLACK |



| | | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 79 | 78 | 77 | 76 | 75 | 74 | 73 | 72 | 71 | 70 | 69 | 68 | 67 | 66 | 65 | 64 | 63 | 62 | 61 | 60 |
| 59 | 58 | 57 | 56 | 55 | 54 | 53 | 52 | 51 | 50 | 49 | 48 | 47 | 46 | 45 | 44 | 43 | 42 | 41 | 40 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|---------------|
| 60 | B/R | ROOM ANT 2 B |
| 61 | W/R | ROOM ANT 2 A |
| 62 | V | AS DOOR ANT B |
| 63 | P | AS DOOR ANT A |
| 64 | V | DR DOOR ANT B |
| 65 | P | DR DOOR ANT A |
| 66 | R | ROOM ANT 1 B |



| | | | | | | |
|-----|-----|-----|-----|-----|-----|-----|
| 100 | 101 | 102 | 103 | 104 | | |
| 105 | 106 | 107 | 108 | 109 | 110 | 111 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|----------------|
| 100 | - | - |
| 101 | - | - |
| 102 | - | - |
| 103 | V | CDL BACK TRUNK |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------------|
| 67 | G | ROOM ANT 1 A |
| 68 | G/O | FOB READER CLOCK |
| 69 | O | FOB READER DATA |
| 70 | R/B | IGN REL OUTPUT 2 |
| 71 | L/O | RF1 TUNER SIGNAL |
| 72 | - | - |
| 73 | - | - |
| 74 | - | - |
| 75 | R/Y | COMBI SW IN 5 |
| 76 | R/G | COMBI SW IN 3 |
| 77 | BR | ENG START SW |
| 78 | P | CAN-L |
| 79 | L | CAN-H |
| 80 | R/L | FOB SLOT ILLUMINATION |
| 81 | Y/L | IGN ON LED |
| 82 | - | - |
| 83 | L | ACC CONT |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|------------------------|
| 84 | Y/R | AT DEVICE OUT |
| 85 | L/O | S/L CONDITION 1 |
| 86 | G/R | S/L CONDITION 2 |
| 87 | G/B | SHIFT P/ASCD CANCEL SW |
| 88 | R | AS REQUEST SW |
| 89 | R | DR REQUEST SW |
| 90 | Y | BLOWER FAN RELAY |
| 91 | L/R | RF POWER SUPPLY 12V |
| 92 | - | - |
| 93 | - | - |
| 94 | G/Y | S/L POWER SUPPLY 12V |
| 95 | RW | COMBI SW IN 1 |
| 96 | P/B | COMBI SW IN 4 |
| 97 | R/B | COMBI SW IN 2 |
| 98 | G/O | HAZARD SW |
| 99 | L/Y | S/L K-LINE |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------|
| 104 | - | - |
| 105 | - | - |
| 106 | - | - |
| 107 | - | - |
| 108 | - | - |
| 109 | - | - |
| 110 | V/W | TRUNK LAMP CONT |
| 111 | - | - |

| | |
|-----------------|---------------------------|
| Connector No. | M20 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE |

ABMIA0178GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------------|
| 136 | - | - |
| 137 | - | - |
| 138 | - | - |
| 139 | - | - |
| 140 | - | - |
| 141 | BR | TRUNK REQUEST SW |
| 142 | - | - |
| 143 | - | - |
| 144 | GR | BUZZER |
| 145 | - | - |
| 146 | - | - |
| 147 | L/R | BACK TRUNK OPENER |
| 148 | R/W | RR DOOR SW |
| 149 | R/B | RL DOOR SW |
| 150 | - | - |
| 151 | - | - |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|------------------|
| 119 | BR/W | BACK DOOR ANT A |
| 120 | - | - |
| 121 | - | - |
| 122 | - | - |
| 123 | - | - |
| 124 | - | - |
| 125 | - | - |
| 126 | - | - |
| 127 | BR/W | IGN RELAY OUTPUT |
| 128 | - | - |
| 129 | - | - |
| 130 | W | TRUNK SW |
| 131 | - | - |
| 132 | R | ST RELAY OUTPUT |
| 133 | - | - |
| 134 | - | - |
| 135 | - | - |

| | |
|-----------------|---------------------------|
| Connector No. | M21 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | GRAY |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------|
| 112 | - | - |
| 113 | - | - |
| 114 | B | TRUNK ANT 1 B |
| 115 | W | TRUNK ANT 1 A |
| 116 | - | - |
| 117 | - | - |
| 118 | L/O | BACK DOOR ANT B |

Fail Safe

ABMIA0179GB

INFOID:000000004392583

| Display contents of CONSULT | Fail-safe | Cancellation |
|-----------------------------|-------------------------|--------------|
| B2013: ID DISCORD BCM-S/L | Inhibit engine cranking | Erase DTC |
| B2014: CHAIN OF S/L-BCM | Inhibit engine cranking | Erase DTC |
| B2190: NATS ANTENNA AMP | Inhibit engine cranking | Erase DTC |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >

| Display contents of CONSULT | Fail-safe | Cancellation |
|-----------------------------|--|--|
| B2191: DIFFERENCE OF KEY | Inhibit engine cranking | Erase DTC |
| B2192: ID DISCORD BCM-ECM | Inhibit engine cranking | Erase DTC |
| B2193: CHAIN OF BCM-ECM | Inhibit engine cranking | Erase DTC |
| B2195: ANTI-SCANNING | Inhibit engine cranking | Erase DTC |
| B2557: VEHICLE SPEED | Inhibit electronic steering column lock | When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms |
| B2560: STARTER CONT RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal |
| B2562: LO VOLTAGE | <ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit electronic steering column lock | 100 ms after the power supply voltage increases to more than 8.8 V |
| B2601: SHIFT POSITION | Inhibit electronic steering column lock | 500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN) |
| B2602: SHIFT POSITION | Inhibit electronic steering column lock | 5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h or more |
| B2603: SHIFT POSI STATUS | Inhibit electronic steering column lock | 500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V) |
| B2604: PNP SW | Inhibit electronic steering column lock | 500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF |
| B2605: PNP SW | Inhibit electronic steering column lock | 500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position <ul style="list-style-type: none"> - Power position: IGN - Selector lever P/N position signal: Except P and N positions (0 V) - Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON |
| B2606: S/L RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Electronic steering column lock relay signal (Request signal) • Electronic steering column lock relay signal (Condition signal) |
| B2607: S/L RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Electronic steering column lock relay signal (Request signal) • Electronic steering column lock relay signal (Condition signal) |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| Display contents of CONSULT | Fail-safe | Cancellation |
|-----------------------------|--|--|
| B2608: STARTER RELAY | Inhibit engine cranking | 500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN) |
| B2609: S/L STATUS | <ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit electronic steering column lock | When the following electronic steering column lock conditions agree <ul style="list-style-type: none"> • BCM electronic steering column lock control status • Electronic steering column lock condition No. 1 signal status • Electronic steering column lock condition No. 2 signal status |
| B260A: IGNITION RELAY | Inhibit engine cranking | 500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal) |
| B260F: ENG STATE SIG LOST | Maintains the power supply position attained at the time of DTC detection | When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN) |
| B2612: S/L STATUS | <ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit electronic steering column lock | When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Electronic steering column lock unit status signal (CAN) is received normally • The BCM electronic steering column lock control status matches the electronic steering column lock status recognized by the electronic steering column lock unit status signal (CAN from IPDM E/R) |
| B2617: STARTER RELAY CIRC | Inhibit engine cranking | 1 second after the starter motor relay control inside BCM becomes normal |
| B2618: BCM | Inhibit engine cranking | 1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal |
| B2619: BCM | Inhibit engine cranking | 1 second after the electronic steering column lock unit power supply output control inside BCM becomes normal |
| B26E1: ENG STATE NO RECIV | Inhibit engine cranking | When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN) |

DTC Inspection Priority Chart

INFOID:000000004392584

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | DTC |
|----------|---|
| 1 | <ul style="list-style-type: none"> • B2562: LO VOLTAGE |
| 2 | <ul style="list-style-type: none"> • U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN) |
| 3 | <ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| Priority | DTC |
|----------|--|
| 4 | <ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2612: S/L STATUS • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B26E1: ENG STATE NO RECIV • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG |
| 5 | <ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1712: [CHECKSUM ERR] FL • C1713: [CHECKSUM ERR] FR • C1714: [CHECKSUM ERR] RR • C1715: [CHECKSUM ERR] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1720: [CODE ERR] FL • C1721: [CODE ERR] FR • C1722: [CODE ERR] RR • C1723: [CODE ERR] RL • C1724: [BATT VOLT LOW] FL • C1725: [BATT VOLT LOW] FR • C1726: [BATT VOLT LOW] RR • C1727: [BATT VOLT LOW] RL • C1734: CONTROL UNIT |
| 6 | <ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA |

DTC Index

INFOID:000000004392585

NOTE:

BCM (BODY CONTROL MODULE)

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >

Details of time display

- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

| CONSULT display | Fail-safe | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Reference page |
|--|-----------|---------------------------------|---------------------------------------|------------------------|
| No DTC is detected. further testing may be required. | — | — | — | — |
| U1000: CAN COMM CIRCUIT | — | — | — | BCS-37 |
| U1010: CONTROL UNIT (CAN) | — | — | — | BCS-38 |
| U0415: VEHICLE SPEED SIG | — | — | — | BCS-39 |
| B2013: ID DISCORD BCM-S/L | × | — | — | SEC-30 |
| B2014: CHAIN OF S/L-BCM | × | — | — | SEC-31 |
| B2190: NATS ANTENNA AMP | × | — | — | SEC-34 |
| B2191: DIFFERENCE OF KEY | × | — | — | SEC-37 |
| B2192: ID DISCORD BCM-ECM | × | — | — | SEC-38 |
| B2193: CHAIN OF BCM-ECM | × | — | — | SEC-39 |
| B2553: IGNITION RELAY | — | — | — | PCS-54 |
| B2555: STOP LAMP | — | — | — | SEC-40 |
| B2556: PUSH-BTN IGN SW | — | × | — | SEC-42 |
| B2557: VEHICLE SPEED | × | × | — | SEC-44 |
| B2560: STARTER CONT RELAY | × | × | — | SEC-45 |
| B2562: LOW VOLTAGE | — | — | — | BCS-40 |
| B2601: SHIFT POSITION | × | × | — | SEC-46 |
| B2602: SHIFT POSITION | × | × | — | SEC-49 |
| B2603: SHIFT POSI STATUS | × | × | — | SEC-51 |
| B2604: PNP SW | × | × | — | SEC-54 |
| B2605: PNP SW | × | × | — | SEC-56 |
| B2606: S/L RELAY | × | × | — | SEC-58 |
| B2607: S/L RELAY | × | × | — | SEC-59 |
| B2608: STARTER RELAY | × | × | — | SEC-61 |
| B2609: S/L STATUS | × | × | — | SEC-63 |
| B260A: IGNITION RELAY | × | × | — | PCS-56 |
| B260B: STEERING LOCK UNIT | — | × | — | SEC-67 |
| B260C: STEERING LOCK UNIT | — | × | — | SEC-68 |
| B260D: STEERING LOCK UNIT | — | × | — | SEC-69 |
| B260F: ENG STATE SIG LOST | × | × | — | SEC-70 |
| B2612: S/L STATUS | × | × | — | SEC-72 |
| B2614: ACC RELAY CIRC | — | × | — | PCS-58 |
| B2615: BLOWER RELAY CIRC | — | × | — | PCS-61 |
| B2616: IGN RELAY CIRC | — | × | — | PCS-64 |
| B2617: STARTER RELAY CIRC | × | × | — | PCS-64 |
| B2618: BCM | × | × | — | PCS-67 |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

| CONSULT display | Fail-safe | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Reference page |
|---------------------------|-----------|------------------------------------|---|------------------------|
| B2619: BCM | × | × | — | SEC-78 |
| B261A: PUSH-BTN IGN SW | — | × | — | SEC-79 |
| B2621: INSIDE ANTENNA | — | — | — | DLK-57 |
| B2622: INSIDE ANTENNA | — | — | — | DLK-60 |
| B2623: INSIDE ANTENNA | — | — | — | DLK-63 |
| B26E1: ENG STATE NO RES | × | × | — | SEC-71 |
| C1704: LOW PRESSURE FL | — | — | × | WT-48 |
| C1705: LOW PRESSURE FR | — | — | × | WT-48 |
| C1706: LOW PRESSURE RR | — | — | × | WT-48 |
| C1707: LOW PRESSURE RL | — | — | × | WT-48 |
| C1708: [NO DATA] FL | — | — | × | WT-13 |
| C1709: [NO DATA] FR | — | — | × | WT-13 |
| C1710: [NO DATA] RR | — | — | × | WT-13 |
| C1711: [NO DATA] RL | — | — | × | WT-13 |
| C1712: [CHECKSUM ERR] FL | — | — | × | WT-15 |
| C1713: [CHECKSUM ERR] FR | — | — | × | WT-15 |
| C1714: [CHECKSUM ERR] RR | — | — | × | WT-15 |
| C1715: [CHECKSUM ERR] RL | — | — | × | WT-15 |
| C1716: [PRESSDATA ERR] FL | — | — | × | WT-17 |
| C1717: [PRESSDATA ERR] FR | — | — | × | WT-17 |
| C1718: [PRESSDATA ERR] RR | — | — | × | WT-17 |
| C1719: [PRESSDATA ERR] RL | — | — | × | WT-17 |
| C1720: [CODE ERR] FL | — | — | × | WT-15 |
| C1721: [CODE ERR] FR | — | — | × | WT-15 |
| C1722: [CODE ERR] RR | — | — | × | WT-15 |
| C1723: [CODE ERR] RL | — | — | × | WT-15 |
| C1724: [BATT VOLT LOW] FL | — | — | × | WT-15 |
| C1725: [BATT VOLT LOW] FR | — | — | × | WT-15 |
| C1726: [BATT VOLT LOW] RR | — | — | × | WT-15 |
| C1727: [BATT VOLT LOW] RL | — | — | × | WT-15 |
| C1729: VHCL SPEED SIG ERR | — | — | × | WT-18 |
| C1734: CONTROL UNIT | — | — | × | WT-19 |

SUNROOF MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]


< ECU DIAGNOSIS >

SUNROOF MOTOR ASSEMBLY

Reference Value

INFOID:000000004392586

TERMINAL LAYOUT

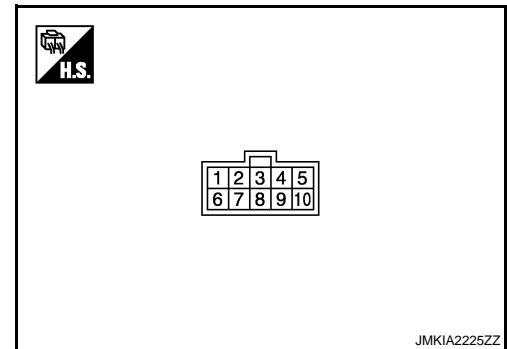

PHYSICAL VALUES


| Terminal No. (Wire color) | | Description | | Condition | Voltage (V) (Approx.) |
|------------------------------|--------|------------------------------|------------------|--|--|
| + | - | Signal name | Input/ Output | | |
| 1 (B) | Ground | Ground | — | — | 0 |
| 2 (O) | Ground | Ground | — | — | 0 |
| 3 (R) | Ground | RAP signal | Input | Ignition switch ON | Battery voltage |
| | | | | Within 45 second after ignition switch is turned to OFF. | Battery voltage |
| | | | | When driver side or passenger side door is opened during retained power operation or retained power operation is finished. | 0 |
| 4 (Y) | Ground | Sunroof switch signal (PUSH) | Input | Sunroof switch | PUSH 0 Other than above Battery voltage |
| | | | | Sunroof switch | OPEN (1st and 2nd) 0 Other than above Battery voltage |
| 5 (LG) | Ground | Sunroof switch signal (OPEN) | Input | Sunroof switch | OPEN (1st and 2nd) 0 Other than above Battery voltage |
| 6 (L) | Ground | Battery voltage | — | — | Battery voltage |
| 7 (P) | Ground | Communication line | Input/ Output | Ignition switch ON | |

JMKIA1869ZZ

SUNROOF MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >
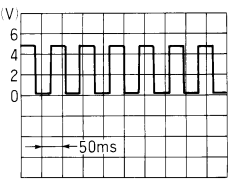
| Terminal No. (Wire color) | | Description | | Condition | Voltage (V) (Approx.) |
|------------------------------|--------|-----------------------------------|------------------|--|--|
| + | - | Signal name | Input/ Output | | |
| 8 (BR) | Ground | Vehicle speed signal (2-pulse) | Input | Speed meter operated [When vehicle speed is approx. 40km/h (25MPH)] |  <p style="text-align: right; font-size: small;">ELF1080D</p> |
| 9 (W) | Ground | Sunroof switch signal (2nd) | Input | Sunroof switch | OPEN or CLOSE (2nd) 0 |
| | | | | | Other than above Battery voltage |
| 10 (V) | Ground | Sunroof switch signal (CLOSE) | Input | Sunroof switch | CLOSE (1st and 2nd) 0 |
| | | | | | Other than above Battery voltage |

SUNROOF MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]


< ECU DIAGNOSIS >

Wiring Diagram

INFOID:000000004375866

DJ : DUAL PANEL SUNROOF WITH POWER SUNSHADE

DUAL PANEL SUNROOF

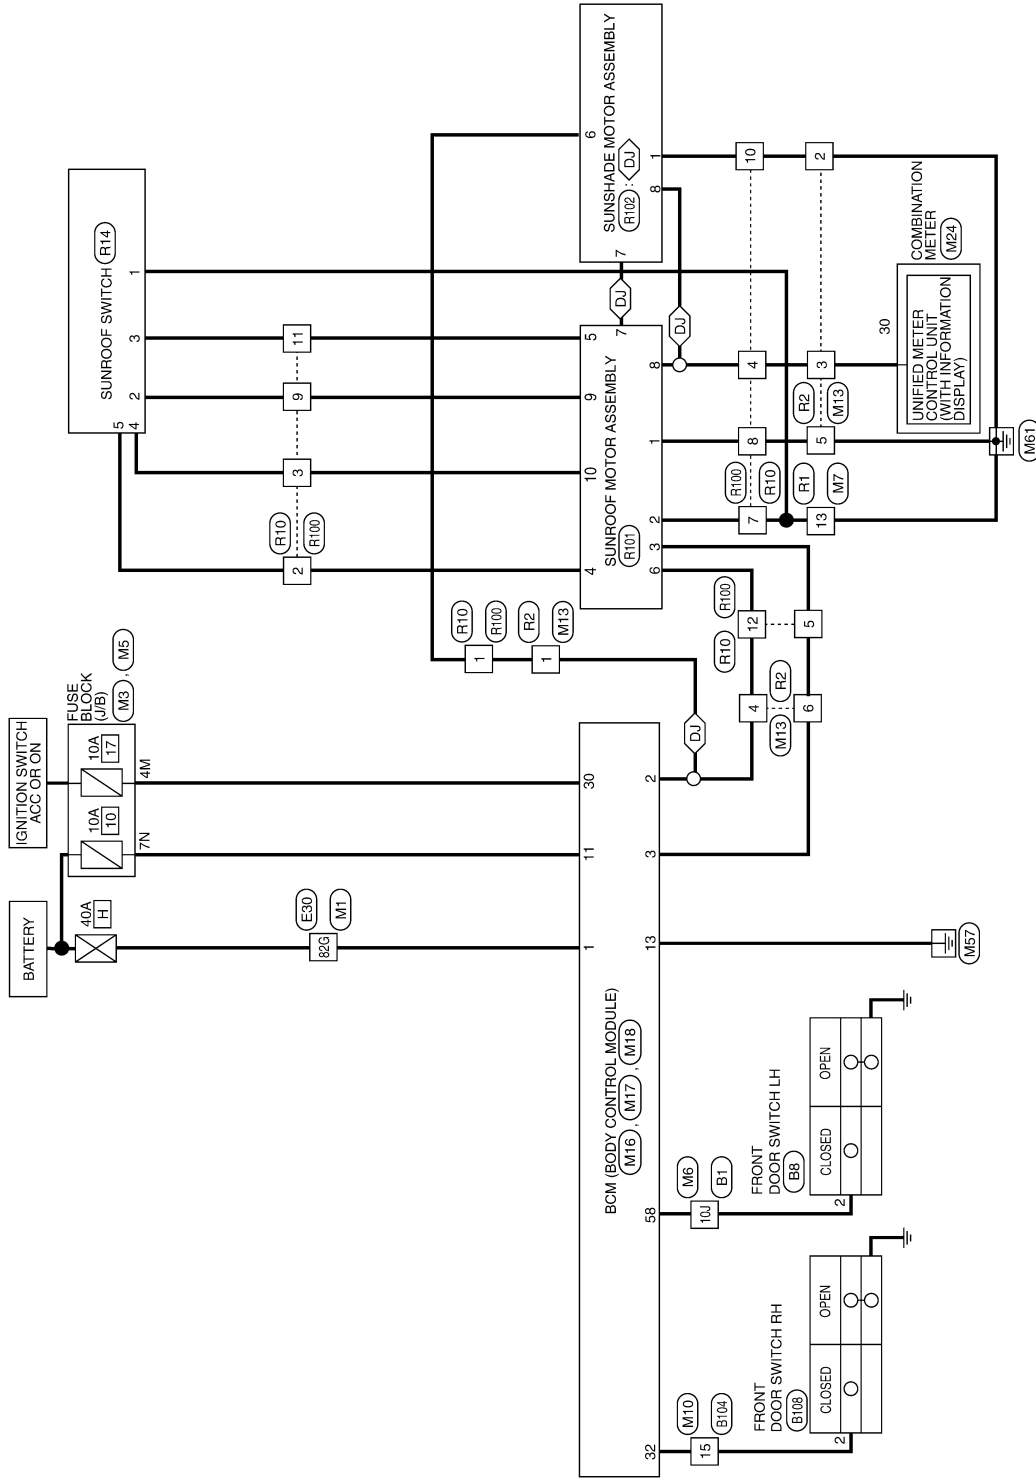

ABKWA0130GE

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P


SUNROOF MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >


DUAL PANEL SUNROOF CONNECTORS

| | |
|-----------------|--------------|
| Connector No. | M1 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

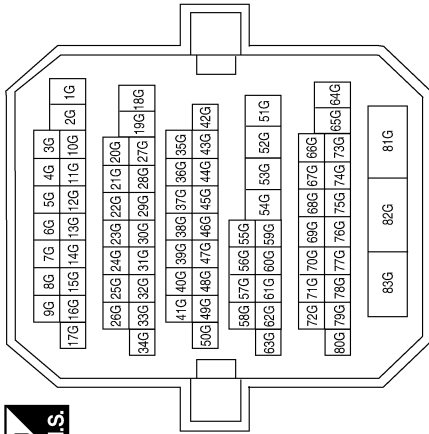

| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 82G | W/B | - |

| | |
|-----------------|------------------|
| Connector No. | M3 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Color | WHITE |



| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 7N | Y/R | - |

| | |
|-----------------|------------------|
| Connector No. | M5 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Color | WHITE |



| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 4M | V/Y | - |


ABKIA0424GB

SUNROOF MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]


< ECU DIAGNOSIS >

| | |
|-----------------|--------------|
| Connector No. | M6 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

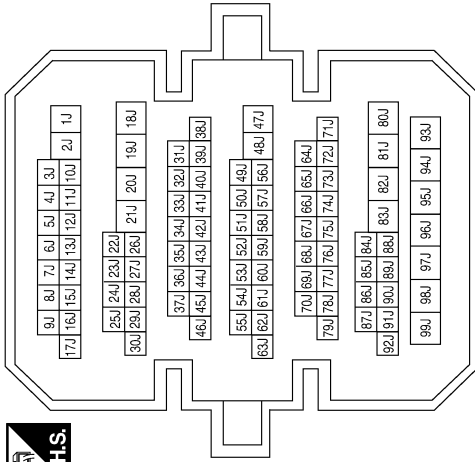


| | | | | | |
|--------------|-----|---------------|----|-------------|---|
| Terminal No. | 10J | Color of Wire | SB | Signal Name | - |
|--------------|-----|---------------|----|-------------|---|

| | |
|-----------------|--------------|
| Connector No. | M7 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |




| | | | | | |
|--------------|----|---------------|---|-------------|---|
| Terminal No. | 13 | Color of Wire | B | Signal Name | - |
|--------------|----|---------------|---|-------------|---|

| | |
|-----------------|--------------|
| Connector No. | M10 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| | | | | | |
|--------------|----|---------------|-----|-------------|---|
| Terminal No. | 15 | Color of Wire | R/B | Signal Name | - |
|--------------|----|---------------|-----|-------------|---|

| | |
|-----------------|--------------|
| Connector No. | M13 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| | | | | | |
|--------------|---|---------------|-----|-------------|---|
| Terminal No. | 1 | Color of Wire | R/Y | Signal Name | - |
| 2 | | B | | - | |
| 3 | | L/B | | - | |
| 4 | | R/Y | | - | |
| 5 | | B | | - | |
| 6 | | L/W | | - | |

| | |
|-----------------|---------------------------|
| Connector No. | M16 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | BLACK |



| | | | | | |
|--------------|---|---------------|-----|-----------------------|---------------|
| Terminal No. | 1 | Color of Wire | W/B | Signal Name | BAT POWER F/L |
| 2 | | R/Y | | P/W POWER SUPPLY PERM | |
| 3 | | L/W | | P/W POWER SUPPLY IGN | |


A B C D E F G H I J L M N O P RF

SUNROOF MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >

| | |
|-----------------|---------------------------|
| Connector No. | M17 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|--------------|
| 11 | Y/R | BAT BCM FUSE |
| 13 | B | GND1 |

| | |
|-----------------|---------------------------|
| Connector No. | M18 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | GREEN |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 30 | V/Y | ACC F/B |
| 32 | R/B | AS DOOR SW |
| 58 | SB | DR DOOR SW |

| | |
|-----------------|-------------------|
| Connector No. | M24 |
| Connector Name | COMBINATION METER |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 30 | L/B | 2P/R OUT |

| | |
|-----------------|--------------|
| Connector No. | E30 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 82G | LG | - |

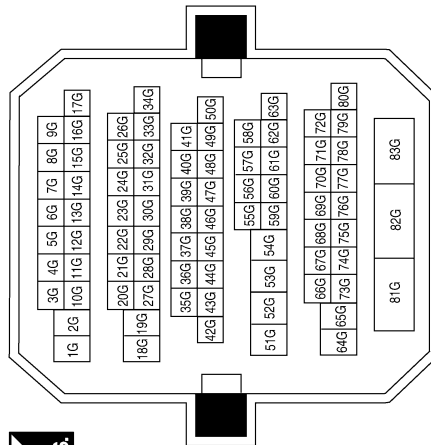

ABKIA0426GB

SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]


| | |
|-----------------|----------------------|
| Connector No. | B8 |
| Connector Name | FRONT DOOR SWITCH LH |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2 | SB | - |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10J | SB | - |

| | |
|-----------------|--------------|
| Connector No. | B1 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

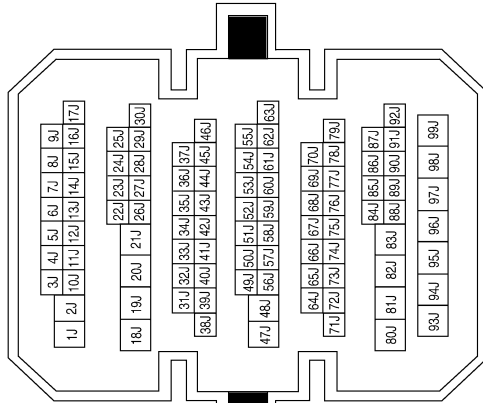

| | |
|-----------------|--------------|
| Connector No. | R1 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 13 | B | - |

| | |
|-----------------|----------------------|
| Connector No. | B108 |
| Connector Name | FRONT DOOR SWITCH RH |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2 | GR | - |

| | |
|-----------------|--------------|
| Connector No. | B104 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 15 | GR | - |

ABKIA0427GB


A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

SUNROOF MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]


< ECU DIAGNOSIS >

| | |
|-----------------|--|
| Connector No. | R14 |
| Connector Name | SUNROOF SWITCH (WITH DUAL PANEL SUNROOF) |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------|
| 1 | B | GND |
| 2 | G | AUTO 2nd |
| 3 | Y | OPEN SLIDE 1st |
| 4 | LG | CLOSE SLIDE 1st |
| 5 | W/R | PUSH |

| | |
|-----------------|--------------|
| Connector No. | R10 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | R | - |
| 2 | W/R | - |
| 3 | LG | - |
| 4 | L/B | - |
| 5 | L/W | - |
| 7 | B | - |
| 8 | B | - |
| 9 | G | - |
| 10 | B/L | - |
| 11 | Y | - |
| 12 | R/Y | - |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 8 | B | - |
| 9 | W | - |
| 10 | B | - |
| 11 | LG | - |
| 12 | L | - |

| | |
|-----------------|--------------|
| Connector No. | R2 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | R | - |
| 2 | B/L | - |
| 3 | L/B | - |
| 4 | R/Y | - |
| 5 | B | - |
| 6 | L/W | - |

| | |
|-----------------|--------------|
| Connector No. | R100 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | G | - |
| 2 | Y | - |
| 3 | V | - |
| 4 | BR | - |
| 5 | R | - |
| 7 | O | - |


ABKIA0428GB

SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS >


[WITH DUAL PANEL SUNROOF]

| | |
|-----------------|-------------------------|
| Connector No. | R102 |
| Connector Name | SUNSHADE MOTOR ASSEMBLY |
| Connector Color | GRAY |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | B | GND2 |
| 6 | G | BATT 2 |
| 7 | P | SERIAL |
| 8 | BR | SPEED (2P) |

| | |
|-----------------|--|
| Connector No. | R101 |
| Connector Name | SUNROOF MOTOR ASSEMBLY (WITH DUAL PANEL SUNROOF) |
| Connector Color | GRAY |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|--------------|
| 1 | B | GND |
| 2 | O | - |
| 3 | R | IGN |
| 4 | Y | PUSH SW |
| 5 | LG | OPEN SW |
| 6 | L | BATT |
| 7 | P | SERIAL |
| 8 | BR | SPEED(2P) |
| 9 | W | 2ND CLICK SW |
| 10 | V | CLOSE SW |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

ABKIA0429GB

SUNSHADE MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]


< ECU DIAGNOSIS >

SUNSHADE MOTOR ASSEMBLY

Reference Value

INFOID:000000004392587

TERMINAL LAYOUT

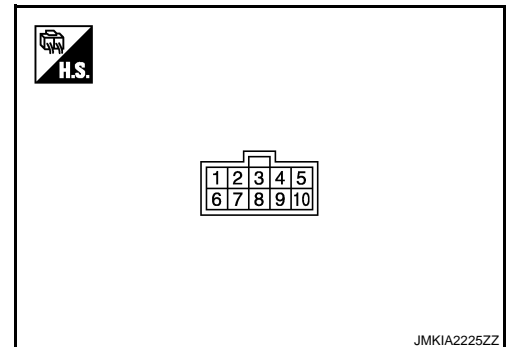

PHYSICAL VALUES

| Terminal No. (Wire color) | | Description | | Condition | Voltage (V) (Approx.) |
|------------------------------|--------|--------------------------------|------------------|---|---|
| + | - | Signal name | Input/ Output | | |
| 1 (B) | Ground | Ground | — | — | 0 |
| 6 (G) | Ground | Battery voltage | — | — | Battery voltage |
| 7 (P) | Ground | Communication line | Input/ Output | Ignition switch ON | <p style="text-align: right; font-size: small;">JMKIA1869ZZ</p> |
| 8 (BR) | Ground | Vehicle speed signal (2-pulse) | Input | Speed meter operated [When vehicle speed is approx. 40km/h (25MPH)] | <p style="text-align: right; font-size: small;">ELF1080D</p> |

SUNSHADE MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]


< ECU DIAGNOSIS >

Wiring Diagram

INFOID:000000004394001

DUAL PANEL SUNROOF

 : DUAL PANEL SUNROOF WITH POWER SUNSHADE

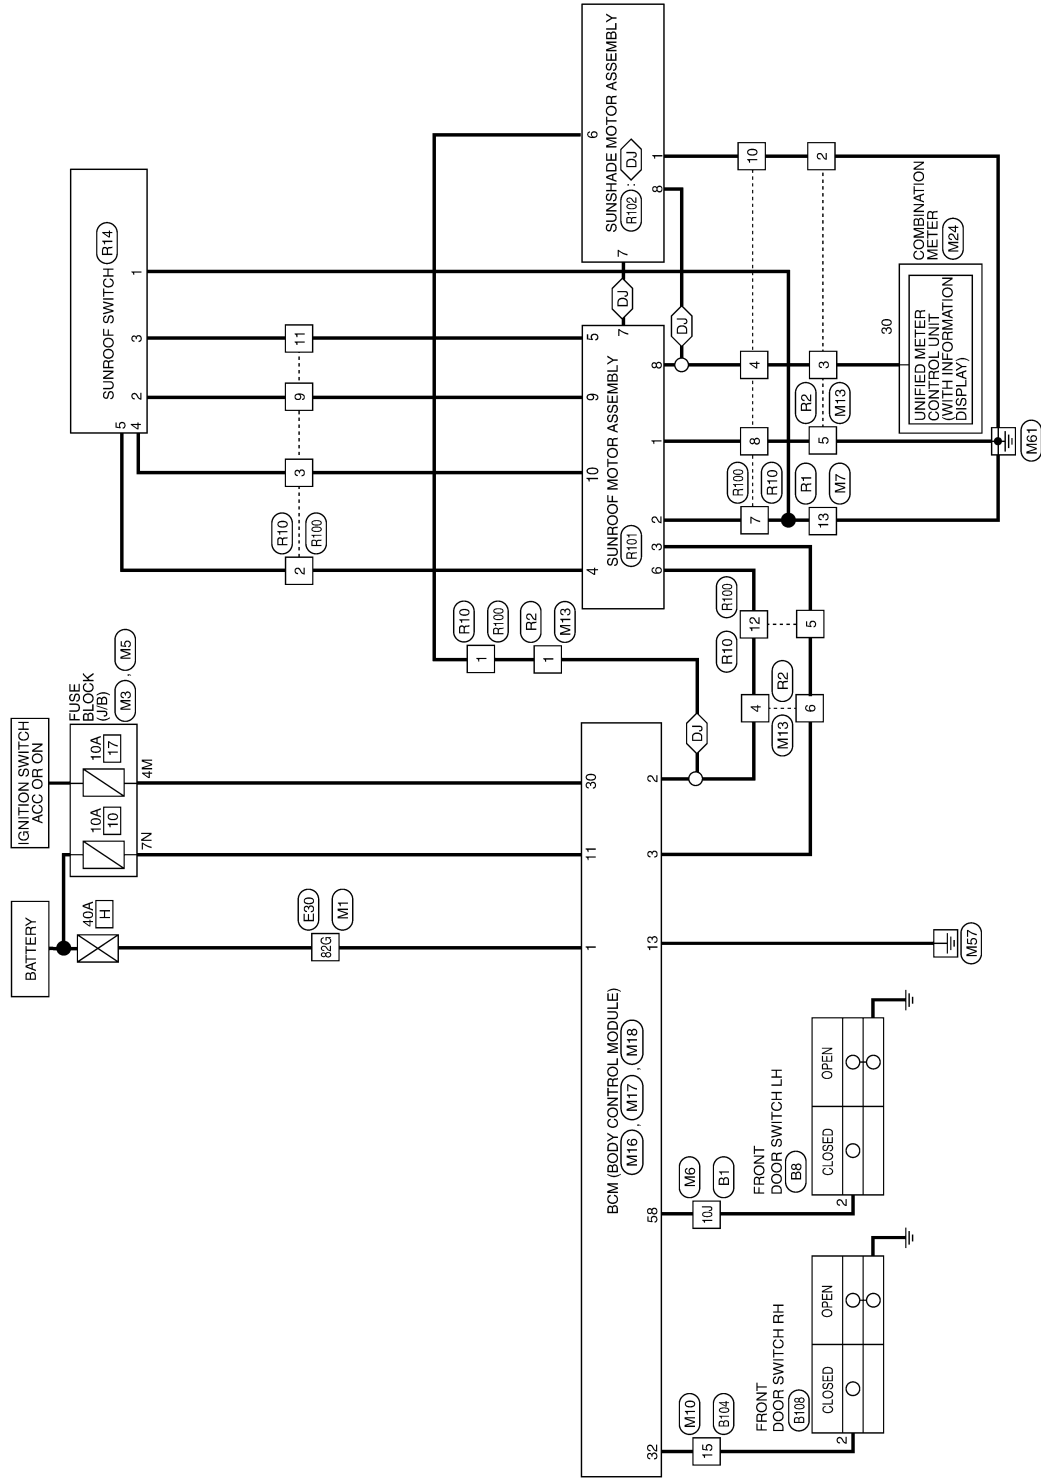

ABKWA0130GE

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P


SUNSHADE MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]

< ECU DIAGNOSIS >


DUAL PANEL SUNROOF CONNECTORS

| | |
|-----------------|--------------|
| Connector No. | M1 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

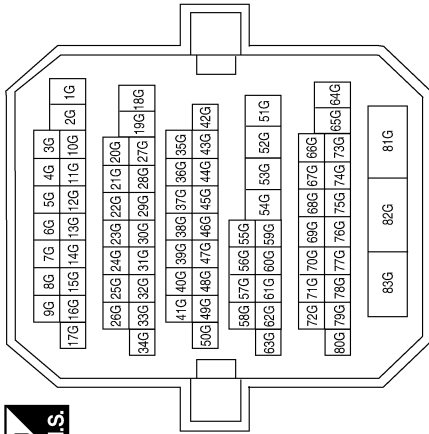

| | | | | | |
|--------------|-----|---------------|-----|-------------|---|
| Terminal No. | 82G | Color of Wire | W/B | Signal Name | - |
|--------------|-----|---------------|-----|-------------|---|

| | |
|-----------------|------------------|
| Connector No. | M3 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Color | WHITE |



| | | | | | |
|--------------|----|---------------|-----|-------------|---|
| Terminal No. | 7N | Color of Wire | Y/R | Signal Name | - |
|--------------|----|---------------|-----|-------------|---|

| | |
|-----------------|------------------|
| Connector No. | M5 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Color | WHITE |



| | | | | | |
|--------------|----|---------------|-----|-------------|---|
| Terminal No. | 4M | Color of Wire | V/Y | Signal Name | - |
|--------------|----|---------------|-----|-------------|---|


ABKIA0424GB

SUNSHADE MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]


< ECU DIAGNOSIS >

| | |
|-----------------|--------------|
| Connector No. | M6 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

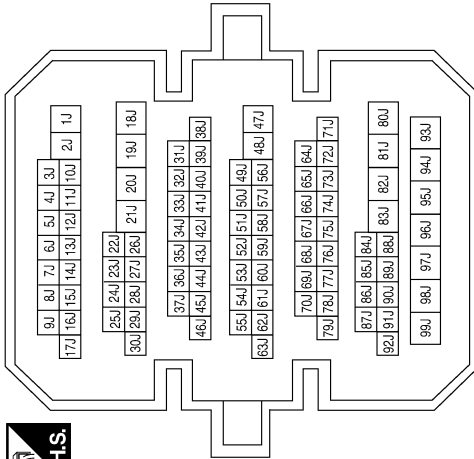


| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 10J | SB | - |

| | |
|-----------------|--------------|
| Connector No. | M7 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |




| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 13 | B | - |

| | |
|-----------------|--------------|
| Connector No. | M10 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 15 | R/B | - |

| | |
|-----------------|--------------|
| Connector No. | M13 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 1 | R/Y | - |
| 2 | B | - |
| 3 | L/B | - |
| 4 | R/Y | - |
| 5 | B | - |
| 6 | L/W | - |

| | |
|-----------------|---------------------------|
| Connector No. | M16 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | BLACK |



| | | |
|--------------|---------------|-----------------------|
| Terminal No. | Color of Wire | Signal Name |
| 1 | W/B | BAT POWER F/L |
| 2 | R/Y | P/W POWER SUPPLY PERM |
| 3 | L/W | P/W POWER SUPPLY IGN |


A B C D E F G H I J L M N O P RF

SUNSHADE MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]


< ECU DIAGNOSIS >

| | |
|-----------------|---------------------------|
| Connector No. | M17 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|--------------|
| 11 | Y/R | BAT BCM FUSE |
| 13 | B | GND1 |

| | |
|-----------------|---------------------------|
| Connector No. | M18 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | GREEN |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 30 | V/Y | ACC F/B |
| 32 | R/B | AS DOOR SW |
| 58 | SB | DR DOOR SW |

| | |
|-----------------|-------------------|
| Connector No. | M24 |
| Connector Name | COMBINATION METER |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 30 | L/B | 2P/R OUT |

| | |
|-----------------|--------------|
| Connector No. | E30 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

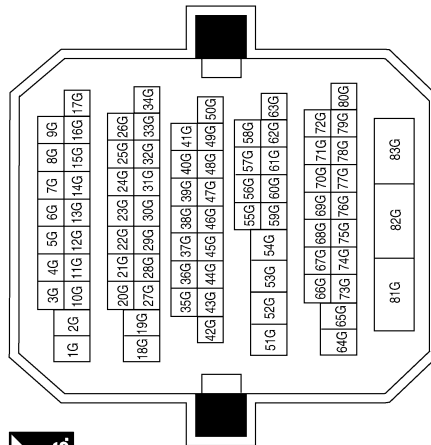

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 82G | LG | - |

ABKIA0426GB

SUNSHADE MOTOR ASSEMBLY

< ECU DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]


| | |
|-----------------|----------------------|
| Connector No. | B8 |
| Connector Name | FRONT DOOR SWITCH LH |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2 | SB | - |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10J | SB | - |

| | |
|-----------------|--------------|
| Connector No. | B1 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

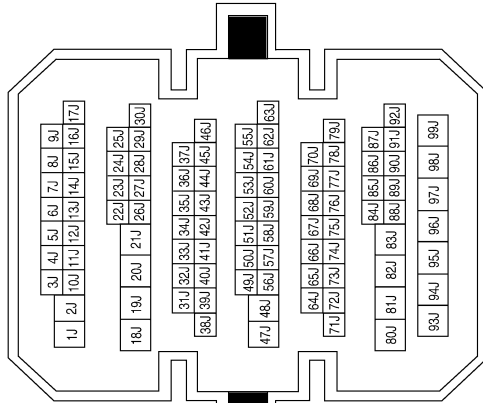

| | |
|-----------------|--------------|
| Connector No. | R1 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 13 | B | - |

| | |
|-----------------|----------------------|
| Connector No. | B108 |
| Connector Name | FRONT DOOR SWITCH RH |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2 | GR | - |

| | |
|-----------------|--------------|
| Connector No. | B104 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 15 | GR | - |

ABKIA0427GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

SUNSHADE MOTOR ASSEMBLY

[WITH DUAL PANEL SUNROOF]


< ECU DIAGNOSIS >

| | |
|-----------------|--------------|
| Connector No. | R2 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | R | - |
| 2 | B/L | - |
| 3 | L/B | - |
| 4 | R/Y | - |
| 5 | B | - |
| 6 | L/W | - |

| | |
|-----------------|--------------|
| Connector No. | R10 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | R | - |
| 2 | W/R | - |
| 3 | LG | - |
| 4 | L/B | - |
| 5 | L/W | - |
| 7 | B | - |
| 8 | B | - |
| 9 | G | - |
| 10 | B/L | - |
| 11 | Y | - |
| 12 | R/Y | - |

| | |
|-----------------|--|
| Connector No. | R14 |
| Connector Name | SUNROOF SWITCH (WITH DUAL PANEL SUNROOF) |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------|
| 1 | B | GND |
| 2 | G | AUTO 2nd |
| 3 | Y | OPEN SLIDE 1st |
| 4 | LG | CLOSE SLIDE 1st |
| 5 | W/R | PUSH |

| | |
|-----------------|--------------|
| Connector No. | R100 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | G | - |
| 2 | Y | - |
| 3 | V | - |
| 4 | BR | - |
| 5 | R | - |
| 7 | O | - |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 8 | B | - |
| 9 | W | - |
| 10 | B | - |
| 11 | LG | - |
| 12 | L | - |


ABKIA0428GB

SUNSHADE MOTOR ASSEMBLY

< ECU DIAGNOSIS >


[WITH DUAL PANEL SUNROOF]

| | |
|-----------------|-------------------------|
| Connector No. | R102 |
| Connector Name | SUNSHADE MOTOR ASSEMBLY |
| Connector Color | GRAY |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | B | GND2 |
| 6 | G | BATT 2 |
| 7 | P | SERIAL |
| 8 | BR | SPEED (2P) |

| | |
|-----------------|--|
| Connector No. | R101 |
| Connector Name | SUNROOF MOTOR ASSEMBLY (WITH DUAL PANEL SUNROOF) |
| Connector Color | GRAY |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|--------------|
| 1 | B | GND |
| 2 | O | - |
| 3 | R | IGN |
| 4 | Y | PUSH SW |
| 5 | LG | OPEN SW |
| 6 | L | BATT |
| 7 | P | SERIAL |
| 8 | BR | SPEED(2P) |
| 9 | W | 2ND CLICK SW |
| 10 | V | CLOSE SW |

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

ABKIA0429GB

SUNROOF DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

SYMPTOM DIAGNOSIS

SUNROOF DOES NOT OPERATE PROPERLY

Diagnosis Procedure

INFOID:000000004392590

1.CHECK SUNROOF MECHANISM

Check the following.

- Operation malfunction caused by sunroof mechanism deformation, pinched harness or other foreign materials
- Operation malfunction and interference with other parts by poor installation

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK SUNROOF MOTOR ASSEMBLY POWER SUPPLY AND GROUND CIRCUIT

Check sunroof motor assembly power supply and ground circuit.

Refer to [RF-97, "SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure"](#)

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK SUNROOF SWITCH

Check sunroof switch.

Refer to [RF-101, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> GO TO 1.

SUNSHADE SYSTEM DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

SUNSHADE SYSTEM DOES NOT OPERATE PROPERLY

Diagnosis Procedure

INFOID:000000004392591

1.CHECK SUNSHADE MECHANISM

Check the following.

- Operation malfunction caused by sunshade mechanism deformation, pinched harness or other foreign materials
- Operation malfunction and interference with other parts by poor installation

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK SUNSHADE MOTOR ASSEMBLY POWER SUPPLY AND GROUND CIRCUIT

Check sunshade motor assembly power supply and ground circuit.

Refer to [RF-98. "SUNSHADE MOTOR ASSEMBLY : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK COMMUNICATION CIRCUIT

Check communication circuit.

Refer to [RF-100. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the harness.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39. "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

AUTO OPERATION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

AUTO OPERATION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000004392592

1.PERFORM INITIALIZATION PROCEDURE

Initialization procedure is executed and operation is confirmed.

Refer to [RF-89, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Sunroof and sunshade system is normal.

NO >> GO TO 2.

2.CHECK SUNROOF SWITCH

Check sunroof switch.

Refer to [RF-101, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> GO TO 1.

RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

Diagnosis Procedure

INFOID:000000004392593

1.CHECK FRONT DOOR SWITCH

Check front door switch.

Refer to [DLK-68, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P

ANTI-PINCH FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

ANTI-PINCH FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000004392594

1.CHECK SUNROOF AND SUNSHADE MECHANISM

Check the following.

- Operation malfunction caused by sunroof and sunshade mechanism deformation, pinched harness or other foreign materials
- Operation malfunction and interference with other parts by poor installation

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.PERFORM INITIALIZATION

Perform initialization procedure.

Refer to [RF-89. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Sunroof and sunshade system is normal.

NO >> GO TO 1.

SQUEAK AND RATTLE TROUBLE DIAGNOSES


< SYMPTOM DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

SQUEAK AND RATTLE TROUBLE DIAGNOSES

Work Flow

INFOID:000000004375872

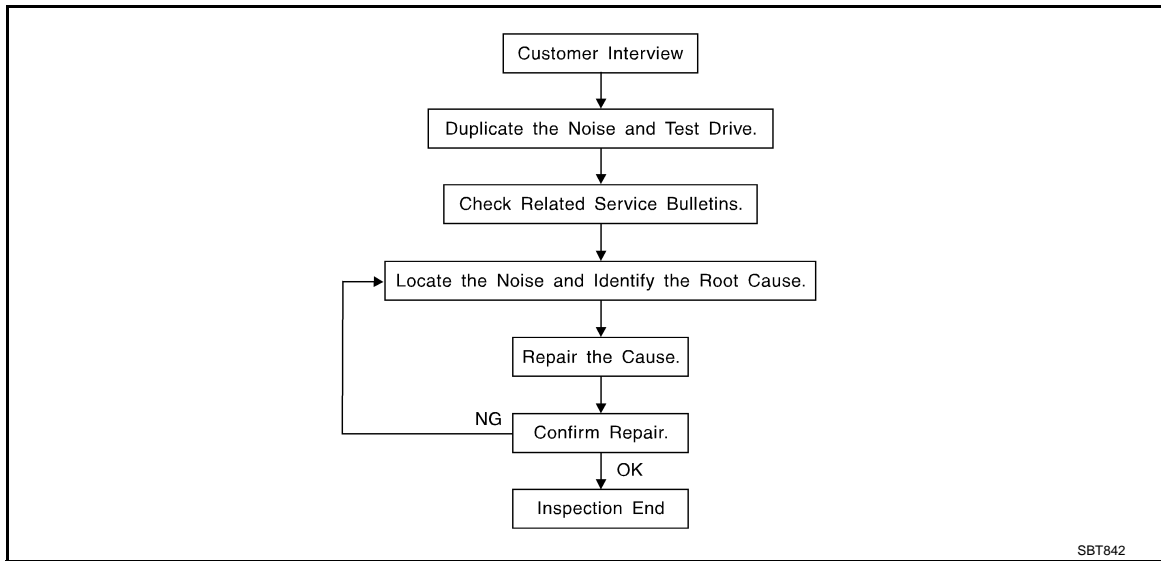

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [RF-171, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces=higher pitch noise/softer surfaces=lower pitch noises/edge to surface=chirping
- Creak—(Like walking on an old wooden floor)
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

[WITH DUAL PANEL SUNROOF]

< SYMPTOM DIAGNOSIS >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
 - 2) Tap or push/pull around the area where the noise appears to be coming from.
 - 3) Rev the engine.
 - 4) Use a floor jack to recreate vehicle "twist".
 - 5) At idle, apply engine load (electrical load, half-clutch on M/T model, drive position on A/T model).
 - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
 - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear: J-39565, and mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - removing the components in the area that you suspect the noise is coming from.
Do not use too much force when removing clips and fasteners, otherwise clips and fastener can be broken or lost during the repair, resulting in the creation of new noise.
 - tapping or pushing/pulling the component that you suspect is causing the noise.
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
 - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
 - placing a piece of paper between components that you suspect are causing the noise.
 - looking for loose components and contact marks.
Refer to [RF-169, "Inspection Procedure"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - separate components by repositioning or loosening and retightening the component, if possible.
 - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A Nissan Squeak and Rattle Kit (J-43980) is available through your authorized Nissan Parts Department.

CAUTION:

Do not use excessive force as many components are constructed of plastic and may be damaged.

NOTE:

Always check with the Parts Department for the latest parts information.

The following materials are contained in the Nissan Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100 × 135 mm (3.94 × 5.31 in)/76884-71L01: 60 × 85 mm (2.36 × 3.35 in)/76884-

71L02: 15 × 25 mm (0.59 × 0.98 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50 × 50 mm (1.97 × 1.97 in)/73982-

50Y00: 10 mm (0.39 in) thick, 50 × 50 mm (1.97 × 1.97 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30 × 50 mm (1.18 × 1.97 in)

FELT CLOTHTAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15 × 25 mm (0.59 × 0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll

The following materials, not found in the kit, can also be used to repair squeaks and rattles.

UHMW (TEFLON) TAPE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

[WITH DUAL PANEL SUNROOF]

< SYMPTOM DIAGNOSIS >

Insulates where slight movement is present. Ideal for instrument panel applications.

SILICONE GREASE

Used in place of UHMW tape that will be visible or not fit. Will only last a few months.

SILICONE SPRAY

Use when grease cannot be applied.

DUCT TAPE

Use to eliminate movement.

CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Inspection Procedure

INFOID:000000004375873

Refer to Table of Contents for specific component removal and installation information.

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.

CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the Nissan Squeak and Rattle Kit (J-43980) to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid dumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sunvisor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

Diagnostic Worksheet

INFOID:000000004375874





Dear Customer:

We are concerned about your satisfaction with your vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your vehicle right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

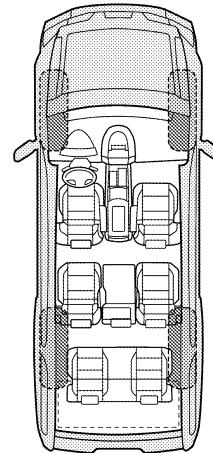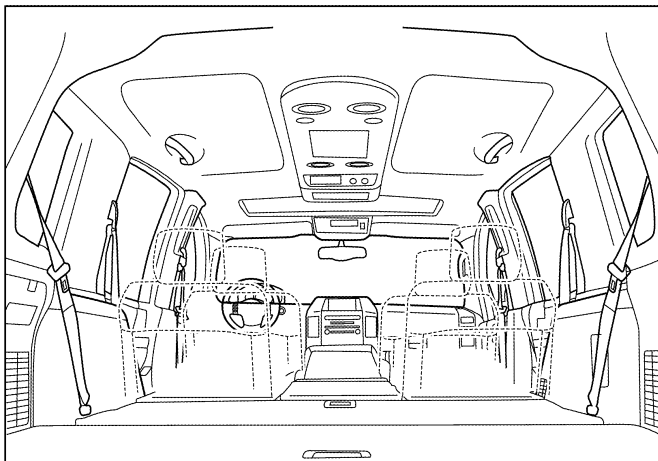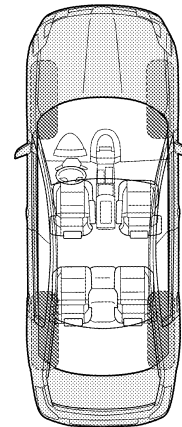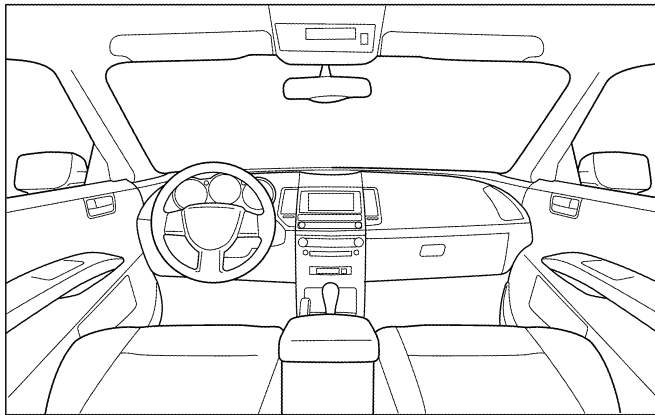

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

[WITH DUAL PANEL SUNROOF]

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- | | |
|---|--|
| <input type="checkbox"/> Anytime | <input type="checkbox"/> After sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning | <input type="checkbox"/> When it is raining or wet |
| <input type="checkbox"/> Only when it is cold outside | <input type="checkbox"/> Dry or dusty conditions |
| <input type="checkbox"/> Only when it is hot outside | <input type="checkbox"/> Other: |

III. WHEN DRIVING:

- Through driveways
- Over rough roads
- Over speed bumps
- Only about ____ mph
- On acceleration
- Coming to a stop
- On turns: left, right or either (circle)
- With passengers or cargo
- Other: _____
- After driving ____ miles or ____ minutes

IV. WHAT TYPE OF NOISE

- Squeak (like tennis shoes on a clean floor)
- Creak (like walking on an old wooden floor)
- Rattle (like shaking a baby rattle)
- Knock (like a knock at the door)
- Tick (like a clock second hand)
- Thump (heavy muffled knock noise)
- Buzz (like a bumble bee)

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

| | YES | NO | Initials of person performing |
|--|--------------------------|--------------------------|-------------------------------|
| Vehicle test driven with customer | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Noise verified on test drive | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Noise source located and repaired | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Follow up test drive performed to confirm repair | <input type="checkbox"/> | <input type="checkbox"/> | _____ |

VIN: _____ Customer Name _____

W.O.# _____ Date: _____

This form must be attached to Work Order

LAI0071E

PRECAUTION

PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000004375875

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions

INFOID:000000004375876

- After removing and installing any opening/closing parts, make sure to perform all adjustments for proper operation.
- Check the lubrication level, damage, and wear of each part. If necessary, grease or replace it.
- When removing or disassembling any part, be careful not to damage or deform it. Protect parts which may get in the way with cloth.
- When removing parts with a screw driver or other tool, protect parts by wrapping them with vinyl or tape.
- Keep removed parts protected with cloth.
- If a clip is deformed or damaged, replace it.
- If a non-reuseable part is removed, replace it with a new one.
- Tighten bolts and nuts firmly to the specified torque.
- After re-assembly has been completed, make sure each part functions correctly.
- Remove stains in the following manner:

| Water-Soluble stains | Oil stains |
|---|---|
| Dip a cloth in warm water, and squeeze tightly. After wiping the stain, wipe with a soft dry cloth. | Dissolve a synthetic detergent in warm water (density of 2 to 3% or less), dip the cloth, then clean off the stain with the cloth. Next, dip the cloth in fresh water, then squeeze tightly. Clean off detergent completely, then wipe entire area with a soft dry cloth. |
| Do not use any organic solvent, such as a thinner or benzine to remove stains | |

Precautions Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000004394022

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit. If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

PRECAUTIONS

[WITH DUAL PANEL SUNROOF]

< PRECAUTION >

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Carry the Intelligent Key or insert it into the key slot and turn the push-button ignition switch to ACC position.
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

PREPARATION

< PREPARATION >

[WITH DUAL PANEL SUNROOF]

PREPARATION


PREPARATION

Special Service Tools


INFOID:000000004335476

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

| Tool number (Kent-Moore No.) Tool name | Description |
|--|------------------------------|
| — (J39570) Chassis ear | Locating the noise |
| — (J43980) NISSAN Squeak and Rattle Kit | Repairing the cause of noise |

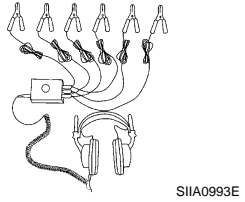

SIIA0993E

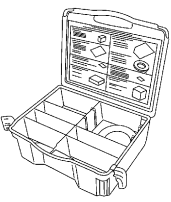


SIIA0994E


Commercial Service Tools

INFOID:000000004335477

| Tool name (Kent-Moore No.) | Description |
|-------------------------------|---|
| Engine ear (J-39565) | Locating the noise |
| Remover tools (—) | Removing the clips, pawls and metal clips |

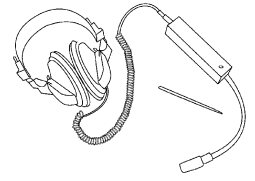

SIIA0995E

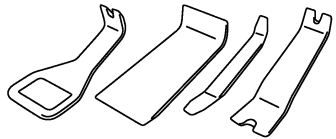

PIIB7923J

ON-VEHICLE REPAIR

SUNROOF UNIT ASSEMBLY


Inspection and Adjustment

INFOID:000000004335544


INSPECTION

Wind Deflector

1. Open glass lid assembly fully.
2. Visually check for proper installation, damaged/deteriorated components, or foreign objects within mechanism. Correct as required for smooth operation.
3. Check for grease at the wind deflector arm (1) and pivot areas. If necessary, apply a sufficient amount of grease for non-binding operation.
←:Vehicle front

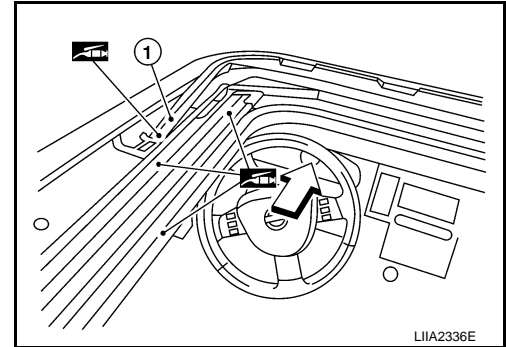

4. Check that the wind deflector (1) moves freely within the sunroof unit assembly while manually pressing down and releasing. If a malfunction is detected, remove the sunroof unit assembly and visually inspect; refer to [RF-176. "Inspection and Adjustment"](#). If damage is found, replace either wind deflector (1) or sunroof unit assembly as required.
←:Vehicle front

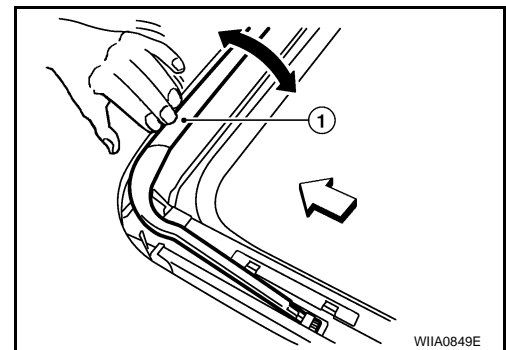

Link And Wire Assembly

NOTE:

Before replacing a suspect part, make sure it is the source of noise being experienced.

1. Check link to determine if coating film has peeled off excessively enough that substrate is visible. Check also to determine if link is the source of noise. Replace as necessary.
2. Visually check to determine if a sufficient amount of grease has been applied to wire or rail groove. If not, add grease as required.
3. Check wire for any damage or deterioration. If any damage is found, replace sunroof unit assembly.

Weatherstrip

1. Visually check weatherstrip for damage, deterioration, or deformation.
 - Open glass lid partially to inspect front edge of weatherstrip.
 - Tilt up glass lid fully to inspect sides and rear edge of weatherstrip.
 If any area of the weatherstrip is found to be damaged, replace as required.
2. Check for leakage around glass lid assembly.
 - Close glass lid assembly.
 - Pour water around surface to determine area of concern.
 - For gaps or misalignment, adjust glass lid to specifications. Refer to [RF-176. "Inspection and Adjustment"](#).
 - For damaged sealing surfaces, either replace glass lid weatherstrip, or repair the sealing panel.

ADJUSTMENT

CAUTION:

SUNROOF UNIT ASSEMBLY

[WITH DUAL PANEL SUNROOF]


< ON-VEHICLE REPAIR >

- Always work with a helper.
- Handle glass lid assembly with care to prevent damage.

NOTE:

- For easier and more accurate installation, always mark each point before removal.
- After any adjustment, check sunroof operation and glass lid assembly alignment.

SEC. 736

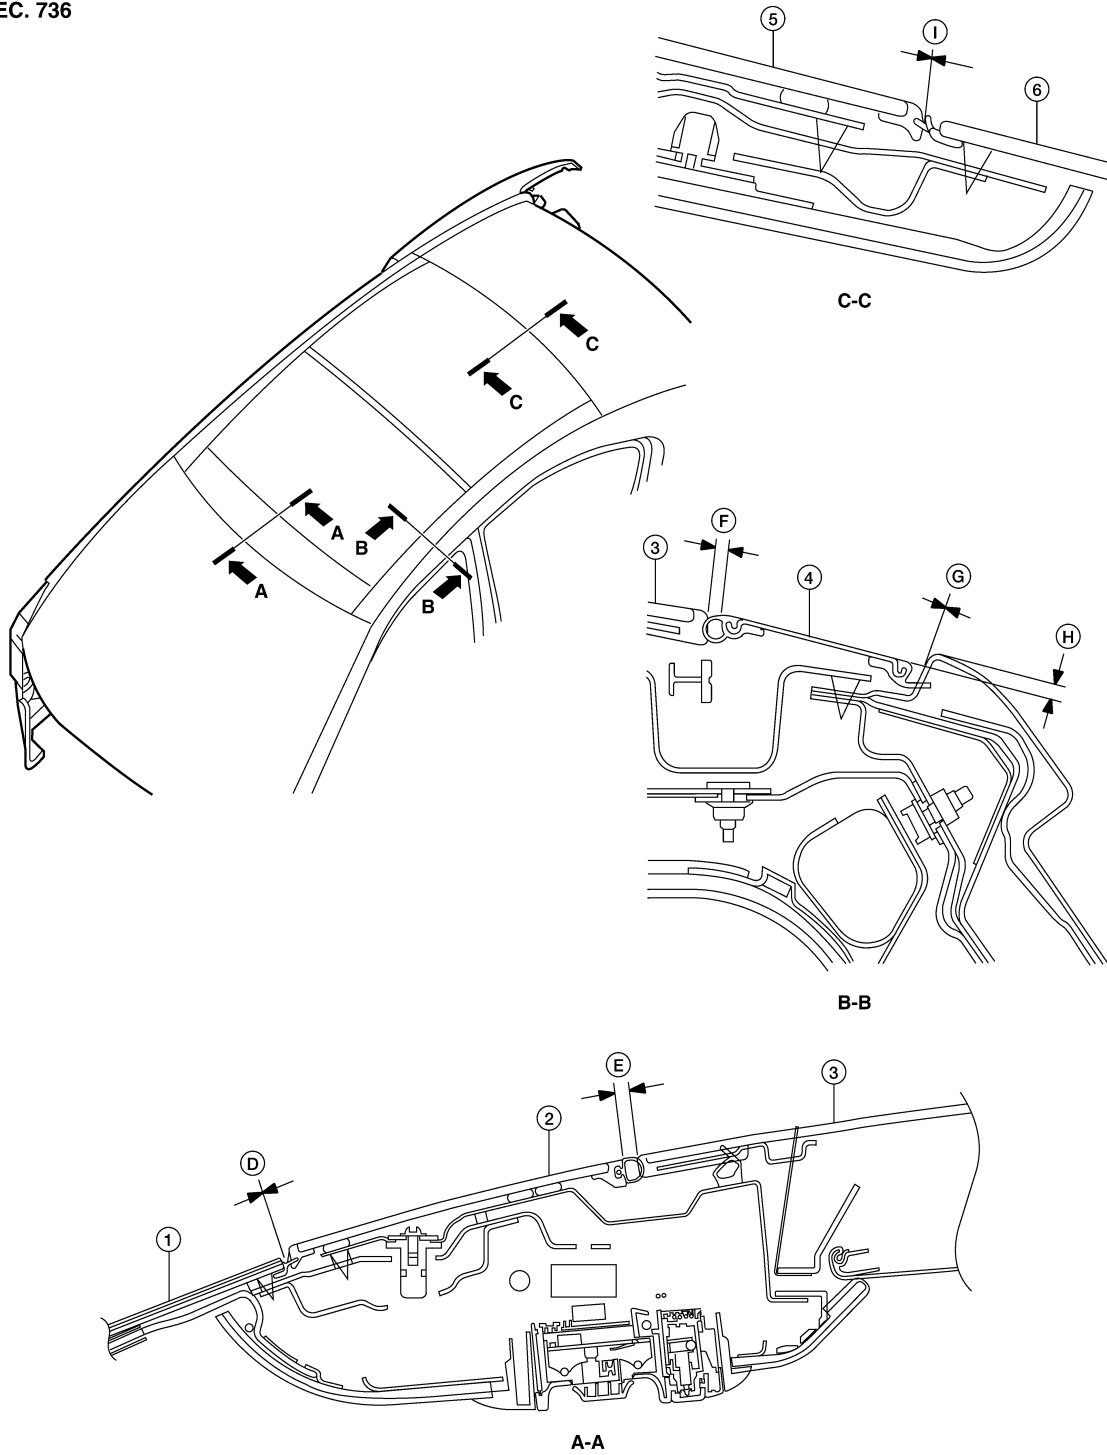

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

RF

- | | | |
|-----------------------|----------------------|----------------------|
| 1. Windshield | 2. Front glass panel | 3. Glass lid |
| 4. Roof side finisher | 5. Rear glass panel | 6. Rear window glass |

ALKIA1643ZZ

Unit: mm (in)

SUNROOF UNIT ASSEMBLY

< ON-VEHICLE REPAIR >

[WITH DUAL PANEL SUNROOF]

| | | |
|-----------------------|--|---|
| D. 0.0 (No clearance) | E. 1.4 ± 0.45 (0.055 ± 0.018) | F. 1.4 ± 0.45 (0.055 ± 0.018) |
| G. 0.0 (No clearance) | H. $5.5 (+2.5, -1.5)$ [$0.217 (+0.098, -0.059)$] | I. (0.0 No clearance) |

1. Open sunshade assembly.
2. Tilt glass lid up, then slide rearward to expose all the glass lid bolts.
3. Loosen glass lid bolts (4 each on left and right sides), then fully close glass lid.
4. Manually adjust glass lid from outside of vehicle so gaps A-A and B-B are within specifications.

NOTE:


Temporarily snug glass lid bolts to prevent movement between each adjustment.

5. Tilt glass lid up and down several times using sunroof switch to check that it operates smoothly.
6. Open glass lid up and tighten bolts to specification.

NOTE:

First tighten left front bolt, then right rear bolt on glass lid to prevent uneven torque while tightening remaining bolts.

7. Perform initialization procedure to make sure the closing operation is accurate and synchronized properly. Refer to [RF-89, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).
8. Perform water leak test.

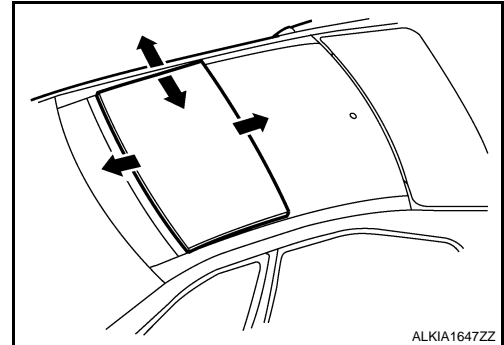


SUNROOF UNIT ASSEMBLY

< ON-VEHICLE REPAIR >

[WITH DUAL PANEL SUNROOF]

Exploded View

INFOID:000000004335485

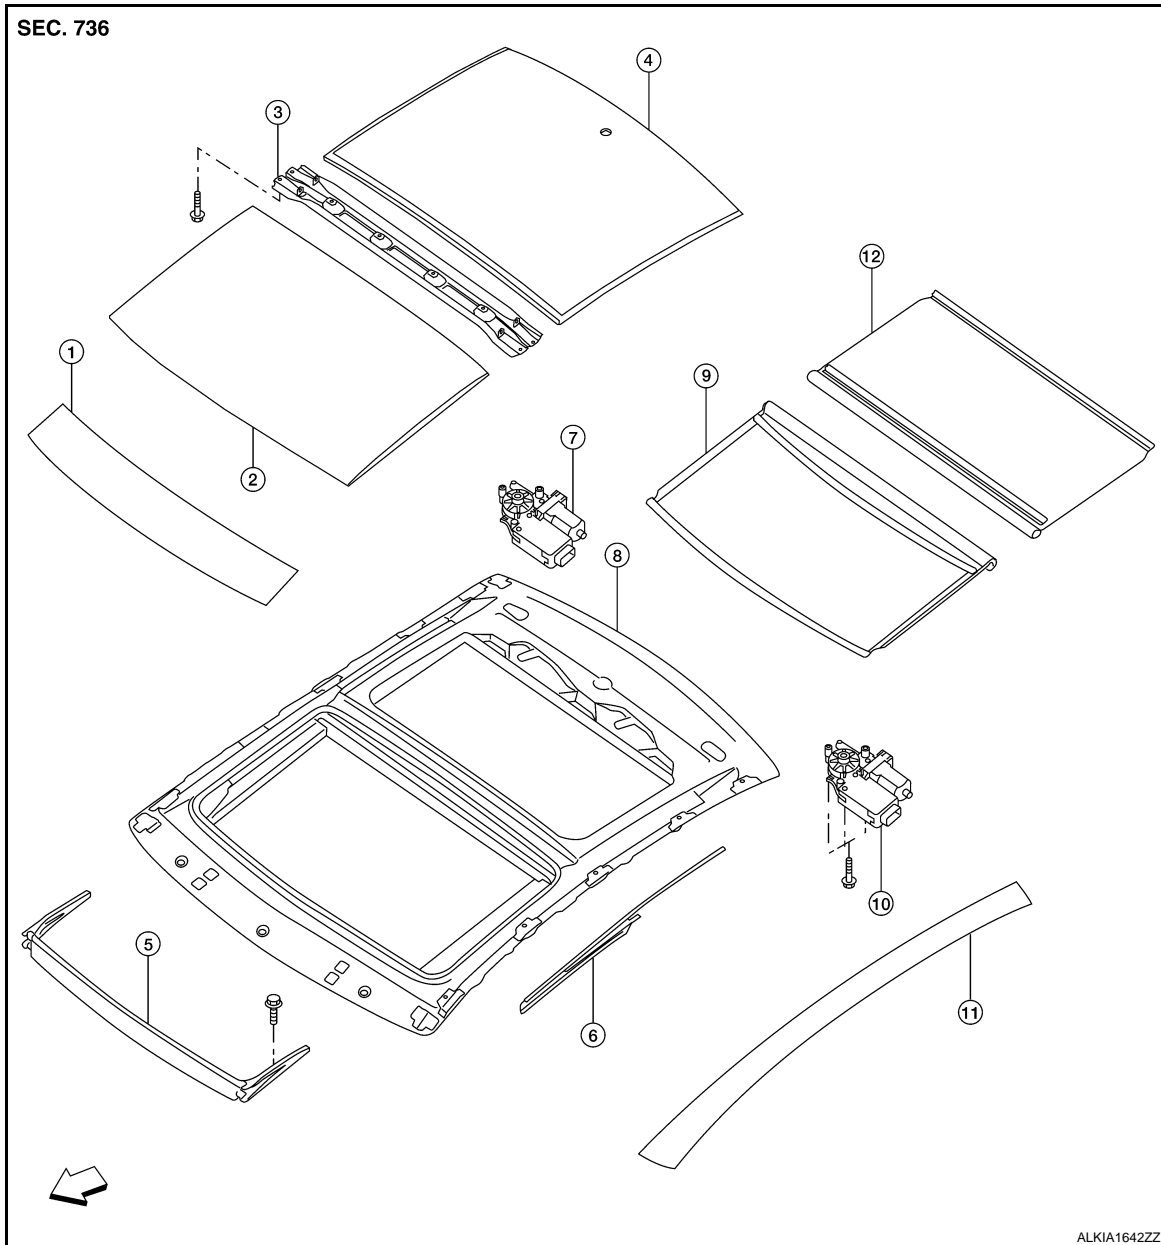

- | | | |
|----------------------------|--------------------------|-------------------|
| 1. Front glass panel | 2. Glass lid | 3. Center bracket |
| 4. Rear glass panel | 5. Wind deflector | 6. Inner blind |
| 7. Sunshade motor assembly | 8. Sunroof unit assembly | 9. Front sunshade |
| 10. Sunroof motor assembly | 11. Roof side finisher | 12. Rear sunshade |
- ← Vehicle front

Removal and Installation

INFOID:000000004335486

REMOVAL

WARNING:

Disconnect the negative and positive battery terminals, then wait at least three minutes.

CAUTION:

- Always work with a helper.
- When taking sunroof unit assembly out, use cloths to protect the seats and trim from damage.
- Do not reuse the front or rear sunroof glass panels which have been removed once.


A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

SUNROOF UNIT ASSEMBLY

< ON-VEHICLE REPAIR >

[WITH DUAL PANEL SUNROOF]

1. Disconnect the negative and positive battery terminals, then wait at least three minutes.
2. Remove the headlining, and disconnect harness connectors. Refer to [INT-32, "Removal and Installation"](#).
3. Remove the glass lid. Refer to [RF-183, "Removal and Installation"](#).
4. Remove the wind deflector. Refer to [RF-187, "Removal and Installation"](#).
5. Disconnect sunshade ends from carrier, then remove both front and rear sunshades. Refer to [RF-188, "Removal and Installation"](#).
6. Disconnect the sunroof motor assembly and sunshade motor assembly harness connectors.
7. Remove side bracket nuts and bolts, then remove the side brackets (1).
8. Remove the front nuts (A), and the rear nuts (B) from the dual panel sunroof.
9. Apply protective tape around the roof panel to protect the surface from damage.
10. Cut adhesive.
 - Pass piano wire through the adhesive with a wire pierce.
 - Tie piano wire on both ends to assist in wire grip.
 - Pull piano wire with sawing motion to cut through adhesive, working around entire circumference.
11. Using a helper, carefully lift each side and remove sunroof unit assembly from vehicle.

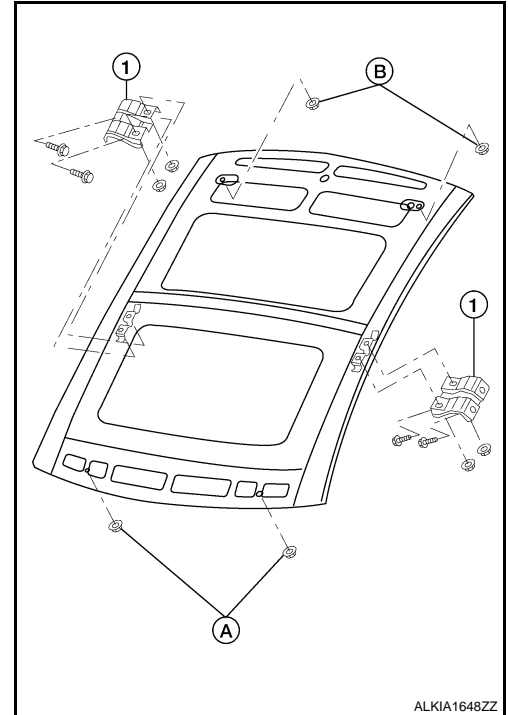

INSTALLATION

WARNING:

- Keep heat and open flames away as primers and adhesive are flammable.
- The materials contained in the kit are harmful if swallowed, and may irritate skin and eyes. Never let them contact the skin or eyes.
- Use in an open, well ventilated location. Never breathe the vapors. They may be harmful if inhaled. Move immediately to an area with fresh air if affected by vapor inhalation.

CAUTION:

After installing the sunroof unit assembly and glass lid, perform the leak test and check that there is no air or water intrusion.


NOTE:

- Use a genuine Nissan Urethane Adhesive Kit (if available) or an equivalent and follow the instructions furnished with it.
- Inform the customer that the vehicle should remain stationary until the urethane adhesive has completely cured (approximately 24 hours). Curing time varies with temperature and humidity.

1. Using a knife or spatula, trim the adhesive (sealant) remaining on body down to approximately 2 mm thick (a) so that the contour becomes smooth.

CAUTION:

If bonded area on body is scratched, be sure to repair it with a 2-component urethane. Do not use lacquer.

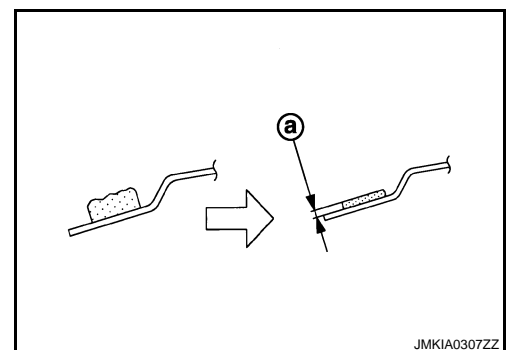


SUNROOF UNIT ASSEMBLY

[WITH DUAL PANEL SUNROOF]

< ON-VEHICLE REPAIR >

- When installing new sunroof unit assembly frame, mount the roof frame dry (no adhesive) first onto the vehicle and paint mating marks on body and sunroof frame, then remove sunroof frame again.
- Thoroughly clean bonding area on sunroof frame and body with isopropyl alcohol or equivalent.
- Apply adhesive along the entire circumference of the sunroof unit assembly frame contact area of body within the time specified in the instructions for the adhesive.
 - Open adhesive by cutting off the nozzle tip and set it in a sealant gun.
 - Form a continuous bead of adhesive resembling the measurements in applied thickness (A), and in applied width (B) on the body panel.

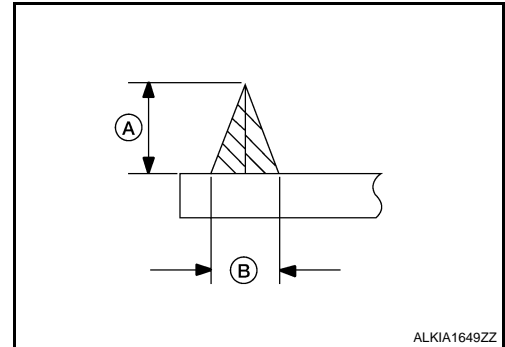

Adhesive applied thickness (A) : 10 mm ± 1 mm (0.39 in ± 0.039 in)


Adhesive applied width (B) : 8 mm ± 1 mm (0.31 in ± 0.039)

- Using a helper, position the sunroof unit assembly frame over the body, visually aligning the paint mating marks. Then, lower the studs at each corner through the body panel holes, carefully installing the sunroof unit assembly to the body.
- Press down lightly by hand only on the front and rear glass panels evenly to expand the adhesive contact completely so that it resembles a compressed thickness (A), and a compressed width (B) between the sunroof unit assembly frame and the body.

Adhesive compressed thickness (A) : 5mm (+2, -1mm)[0.20 in (+0.079, -0.039 in)]

**Adhesive compressed width (B) : Front edge 15 mm (0.59 in)
: Side edge 21 mm (0.83 in)
: Rear edge 15 mm (0.59 in)**

- Using a suitable tool, remove any adhesive overflow, or work into pocket voids so as to make the surface edge smooth.
- Remove protective tape.

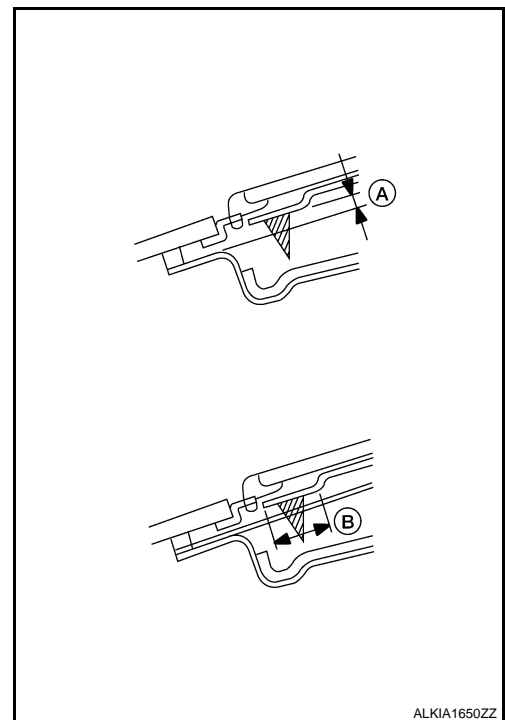

SUNROOF UNIT ASSEMBLY

< ON-VEHICLE REPAIR >

[WITH DUAL PANEL SUNROOF]

9. Install and tighten the sunroof unit assembly nuts in the order shown within five minutes.

Sunroof unit assembly nuts : 17 N·m (1.7kg·m, 13 ft·lb)


10. Install side bracket bolts and nuts to the sunroof bracket and body, then tighten to the specified torque.

Side bracket bolts and nuts : 7 N·m (0.7 kg·m, 62 in·lb)

11. Connect the sunroof motor assembly and sunshade motor assembly harness connectors.
12. Install front and rear sunshades, then connect sunshade ends to carrier.
13. Install wind deflector. Refer to [RF-187, "Removal and Installation"](#).
14. Install the glass lid. Refer to [RF-183, "Removal and Installation"](#).
- NOTE:**
After installation, carry out fitting adjustment. Refer to [RF-176, "Inspection and Adjustment"](#).
15. Install the headlining. Refer to [INT-32, "Removal and Installation"](#).
16. Check for water leaks.

NOTE:

- Perform the water leakage check more than 2 hours after sunroof unit assembly installation.
- After glass lid fitting adjustment, carry out water leakage check by spreading water over entire roof surface.

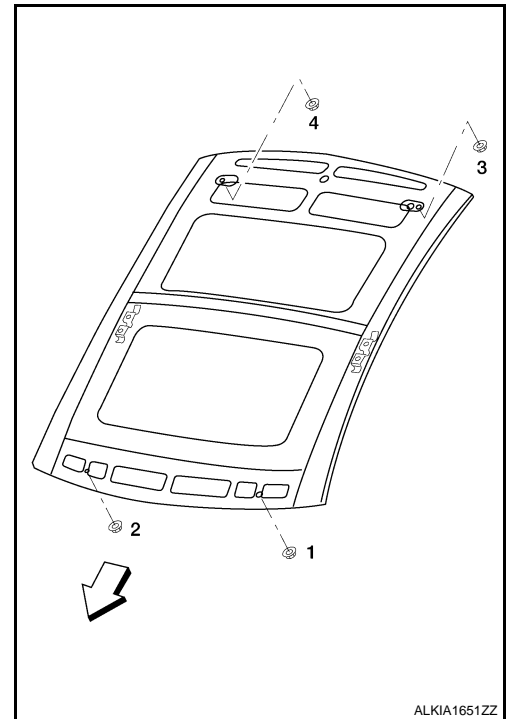

GLASS LID

Removal and Installation

INFOID:000000004335479

REMOVAL


CAUTION:

- Always work with a helper.
- Handle glass lid with care to prevent damage.


NOTE:

For easier and more accurate installation, always mark each point before removal.


1. Open sunshade assembly.
2. Tilt glass lid up, then slide rearward to expose all the glass lid bolts.
3. Release the slide clip, then remove inner blind (1) RH/LH from the glass lid (2).

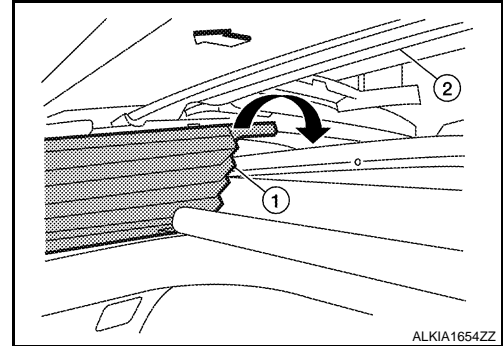

4. Remove the glass lid rear bolts (A), two on both the left and right sides.

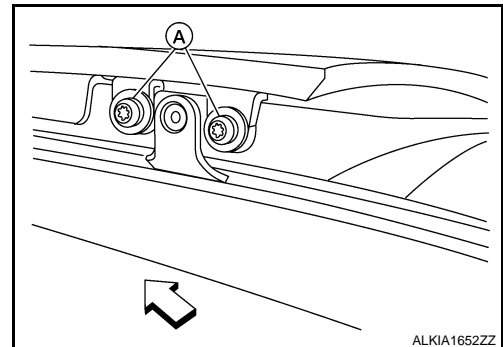

5. Remove the glass lid front bolts (B), two on both the left and right sides.

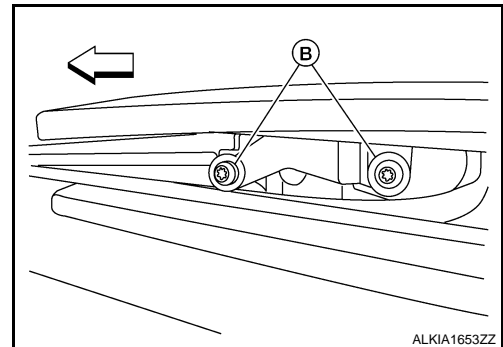

6. Remove the glass lid from the vehicle.

INSTALLATION

CAUTION:

After installing the glass lid, perform the water leak test.

Installation is in the reverse order of removal.

NOTE:

- After installing, perform glass lid adjustment procedure. Refer to [RF-176, "Inspection and Adjustment"](#).

GLASS LID

< ON-VEHICLE REPAIR >

[WITH DUAL PANEL SUNROOF]

-
- After adjustment, always check for proper sunroof operation. If necessary, perform initialization procedure to synchronize entire system. Refer to [RF-89, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

SUNROOF MOTOR ASSEMBLY

< ON-VEHICLE REPAIR >

[WITH DUAL PANEL SUNROOF]

SUNROOF MOTOR ASSEMBLY

Removal and Installation


INFOID:000000004335482

REMOVAL

CAUTION:

- Before removing sunroof motor, check that glass lid is fully closed.
- After removing sunroof motor, do not attempt to rotate sunroof motor assembly as a single unit.

1. Close glass lid.
2. Disconnect the negative and positive battery terminals.
3. Remove the headlining. Refer to [INT-32, "Removal and Installation"](#).
4. Disconnect sunroof motor assembly harness connector (A).
5. Remove sunroof motor assembly screws (B), then remove sunroof motor assembly (1) from sunroof unit assembly frame.

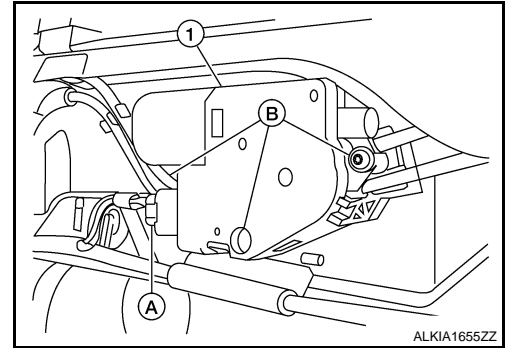

INSTALLATION

CAUTION:

Before installing the sunroof motor assembly, be sure to place the link and wire assembly in the symmetrical and fully closed position.

1. Move the sunroof motor assembly laterally so that the gear is completely engaged into the wire on the sunroof unit assembly frame, and mounting surface becomes parallel.
2. Install and tighten sunroof motor assembly screws.
3. Connect the sunroof motor assembly harness connector.
4. Install the headlining. Refer to [INT-32, "Removal and Installation"](#).
5. Perform initialization procedure. Refer to [RF-89, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

SUNSHADE MOTOR ASSEMBLY

< ON-VEHICLE REPAIR >

[WITH DUAL PANEL SUNROOF]

SUNSHADE MOTOR ASSEMBLY

Removal and Installation


INFOID:000000004335484

REMOVAL

CAUTION:

- Before removing sunshade motor, check that glass lid is fully closed.
- After removing sunshade motor, do not attempt to rotate sunshade motor assembly as a single unit.

1. Close glass lid.
2. Disconnect the negative and positive battery terminals.
3. Remove the headlining. Refer to [INT-32, "Removal and Installation"](#).
4. Disconnect sunshade motor assembly harness connector (A).
5. Remove sunroof motor assembly screws (B), then remove sunroof motor assembly (1) from sunroof unit assembly frame.

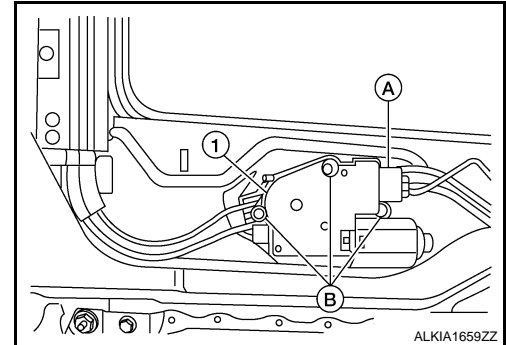

INSTALLATION

CAUTION:

Before installing the sunshade motor assembly, be sure to place the link and wire assembly in the symmetrical and fully closed position.

1. Move the sunshade motor assembly laterally so that the gear is completely engaged into the wire on the sunroof unit assembly frame, and mounting surface becomes parallel.
2. Install and tighten sunshade motor assembly screws.
3. Connect the sunshade motor assembly harness connector.
4. Install the headlining. Refer to [INT-32, "Removal and Installation"](#).
5. Perform initialization procedure. Refer to [RF-89, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

WIND DEFLECTOR

< ON-VEHICLE REPAIR >

[WITH DUAL PANEL SUNROOF]


WIND DEFLECTOR

Removal and Installation


INFOID:000000004335493

REMOVAL


1. Open the glass lid.
2. Remove the side screw (A) to release the wind deflector side arms (1).
⇐ : Vehicle front

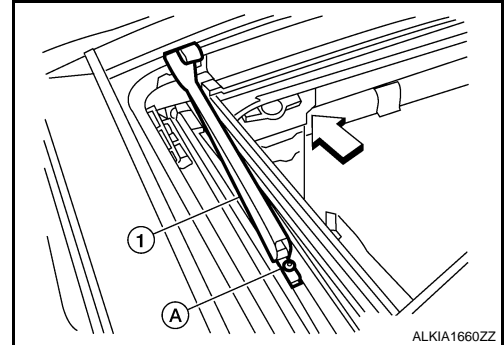

3. Disconnect and release the inner blind (1) slide clip from wind deflector.
⇐ :Vehicle front

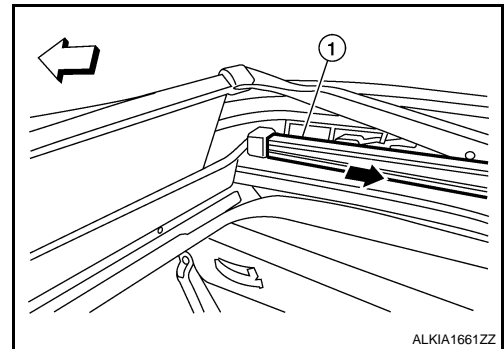

4. Remove the front screws (A), then remove wind deflector from sunroof unit assembly.
⇐ :Vehicle front

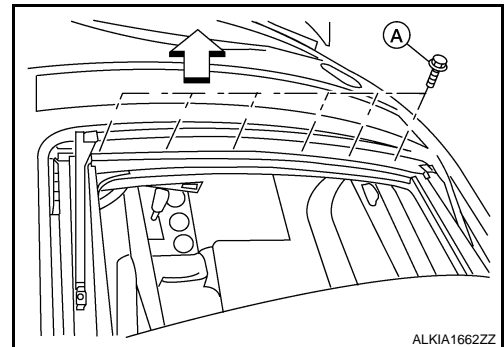

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P

SUNSHADE


< ON-VEHICLE REPAIR >

[WITH DUAL PANEL SUNROOF]

SUNSHADE

Exploded View

INFOID:000000004335494

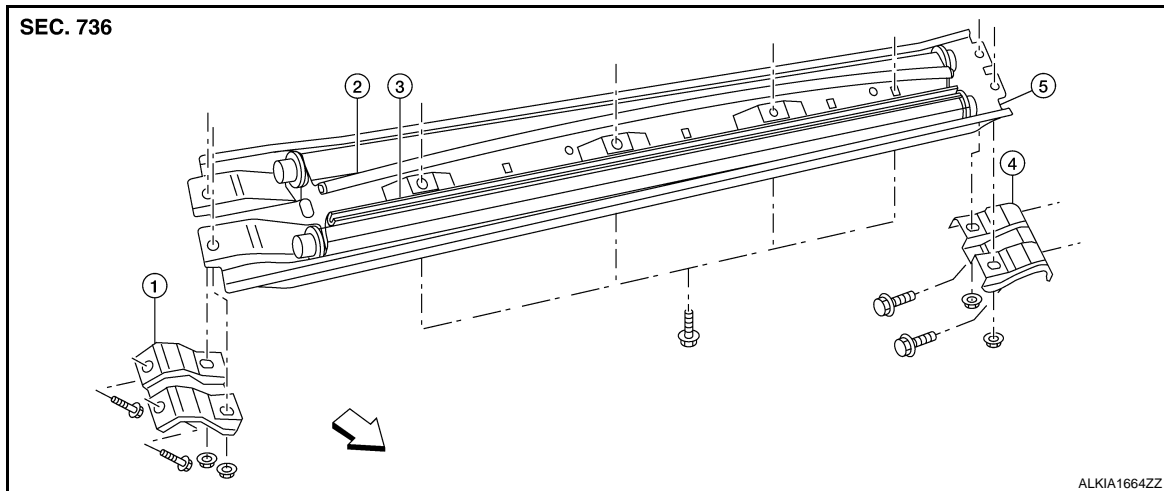


- | | | |
|----------------------|----------------------|-------------------|
| 1. Center bracket RH | 2. Rear sunshade | 3. Front sunshade |
| 4. Center bracket LH | 5. Sunshade assembly | ← Vehicle front |

Removal and Installation

INFOID:000000004335495

REMOVAL

1. Open glass lid and sunshades.
2. Remove the headlining. Refer to [INT-32, "Removal and Installation"](#).
3. Release front sunshade rail (1) from sunshade drive post (2).
←: Vehicle front
4. Repeat sunshade drive post release for the rear sunshade.
5. Remove side curtain air bag module bolts (two on each RH/LH sides) for access.
6. Remove the center bracket nuts and bolts, then remove the center brackets (RH/LH).
7. Remove the sunshade assembly bolts, then lower sunshade assembly and remove from vehicle.

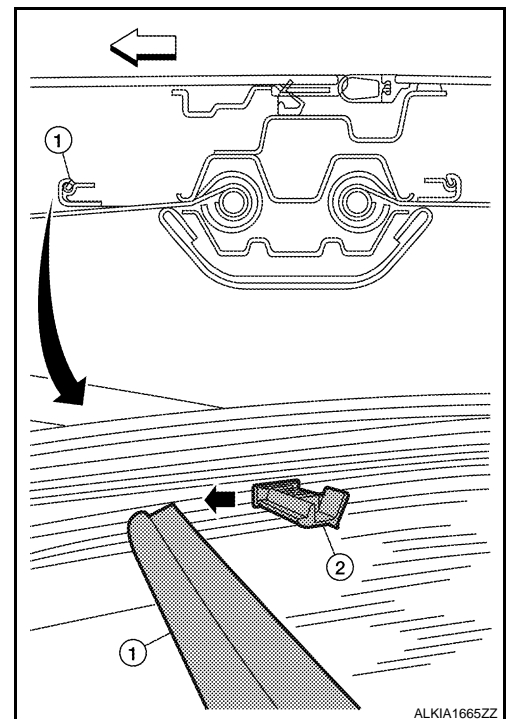

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Be careful not to release the spring when installing the sunshade.

SUNROOF SWITCH

< ON-VEHICLE REPAIR >


[WITH DUAL PANEL SUNROOF]

SUNROOF SWITCH

Removal and Installation

INFOID:000000004335497

The sunroof switch (1) is an integrated part of the overhead console (2), and therefore serviced as an assembly. For overhead console removal and installation procedures, refer to [INT-32. "Removal and Installation"](#).

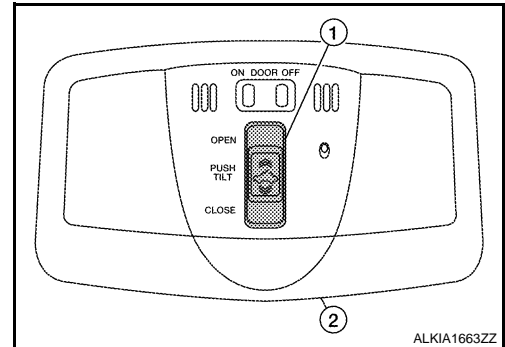

A
B
C
D
E
F
G
H
I
J
RF
L
M
N
O
P